





Installation Guide

1. Hardware Introduction

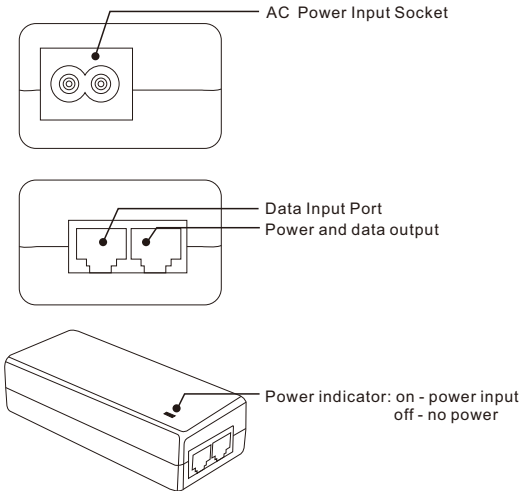


Package Contents: 1×PoE Injector 1×Power Cord 1× Quick Installation Guide

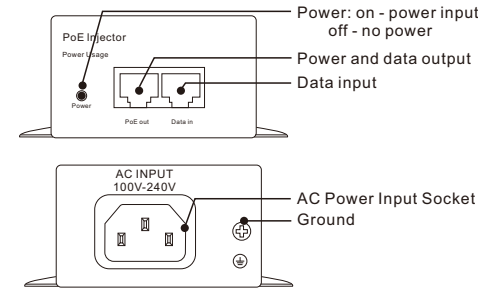

Package Contents: 1×PoE Injector 1×Power Cord 1× Quick Installation Guide

2. Application


2.1 PoE Injector

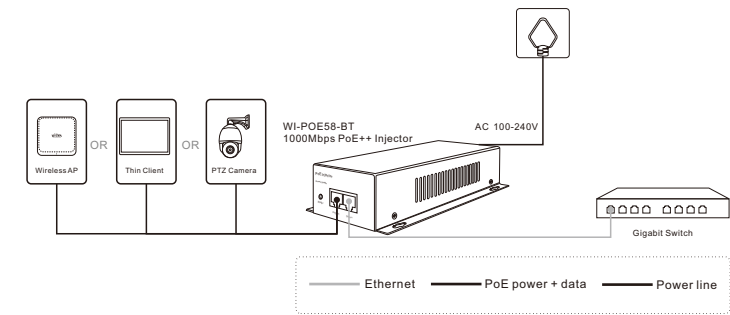

- 1.Connect an Ethernet device to the IN port of the PoE injector.
- 2.Connect a PoE Powered device to the OUT port of the PoE injector.
- 3.Use the power cord to connect the PoE Injector's
4. AC INPUT port.

3. Installation Way

3.1 Wall Mount (Optional)

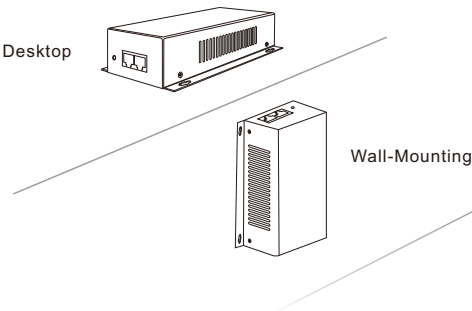

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.