



Wolf Pro Network Camera 5MP Vari-Focal Lens with IR

Quick Setup Guide

Item no.: 0070-08113

Precautions

Fully understand this document before using this device, and strictly observe rules in this document when using this device. If you install this device in public places, provide the tip "You have entered the area of electronic surveillance" in an eye-catching place. Failure to correctly use electrical products may cause fire and severe injuries.

It alerts you to moderate dangers which, if not avoided, may cause minor or moderate injuries.
It alerts you to risks. Neglect of these risks may cause device damage, data loss, device performance deterioration, or unpredictable results.
It provides additional information.

- Ÿ Strictly observe installation requirements when installing the device. The manufacturer shall not be held responsible for device damage caused by users' non-conformance to these requirements.
- Ÿ Strictly conform to local electrical safety standards and use power adapters that are marked with the LPS standard when installing and using this device. Otherwise, this device may be damaged
- ÿ Use accessories delivered with this device. The voltage must meet input voltage requirements for this device.
- Ÿ If this device is installed in places with unsteady voltage, ground this device to discharge high energy such as electrical surges in order to prevent the power supply from burning out.
- ÿ When this device is in use, ensure that no water or any liquid flows into the device. If water or liquid unexpectedly flows into the device, immediately power off the device and disconnect all cables (such as power cables and network cables) from this device

ÿ Do not focus strong light (such as lighted bulbs or sunlight) on

this device. Otherwise, the service life of the image sensor may be shortened

Ÿ If this device is installed in places where thunder and lightning frequently occur, ground the device nearby to discharge high energy such as thunder strikes in order to prevent device damage.

- Ÿ Avoid heavy loads, intensive shakes, and soaking to prevent damages during transportation and storage. The warranty does not cover any device damage that is caused during secondary packaging and transportation after the original packaging is taken anart
- Ÿ Protect this device from fall-down and intensive strikes, keep the device away from magnetic field interference, and do not install the device in places with shaking surfaces or under shocks.
- Ÿ Clean the device with a soft dry cloth. For stubborn dirt, dip the cloth into slight neutral cleanser, gently wipe the dirt with the cloth, and then dry the device.
- ÿ Do not jam the ventilation opening. Follow the installation instructions provided in this document when installing the device. Y Keep the device away from heat sources such as radiators,
- electric heaters, or other heat equipment.
- Y Keep the device away from moist, dusty, extremely hot or cold places, or places with strong electric radiation.
- ÿ If the device is installed outdoors, take insect- and moistureproof measures to avoid circuit board corrosion that can affect monitoring.
- ÿ Remove the power plug if the device is idle for a long time. ^ÿ Before unpacking, check whether the fragile sticker is damaged. If the fragile sticker is damaged, contact customer services or sales personnel. The manufacturer shall not be held responsible for any artificial damage of the fragile sticker.

Open Package Examination

Open the package, check the appearance of product for no obvious damage, and confirm the item list for table 1-1 is consistent

Table 1-1 Packing list

Component	Quantity	Remark
Eyeball Network Camera	1	
Quick Setup Guide	1	
Accessory package	1	
Location sticker	1	

Device Structure

2.1 Device Ports

NOTE

ID Port Name

SD card slot

CVBS video

 
3 Reset button

Fill light settings

out

2

Different devices may have different ports, multi-head cables, and fill lights; Please refer to the actual product.



Description

card may be damaged.

this port to view the analog video.

Install a SD card. **NOTE**

the original settings.

Camera's fill light has four modes, they are intelligent dual light (

current fill light will switch to warm light after an alarm is triggered.

and will switch back to the original fill light for 30s after the alert is released.), warm light, infrared lamp and none (Close the fill light

The different cameras can be set different fill light modes, please

Day mode: It can be used in the scene with sufficient ambient light for 24 hours, do not turn on the fill light, and the image is in color.

Night mode: it can be used in the scene where there is insufficient

ambient light for 24 hours, turn on the fill light (it can be selected

Auto mode: Automatically switch the fill light mode according to

Figure2-2 Multi-head cable 1

3 (Some models may not have

Timing mode: Set the start and end time of the day, this time

and the color of image will stay in previous mode).

set fill light modes according to the actual scene.

according to the four modes of the fill light).

the luminance of the environment.

period is day mode for camera.



Ÿ Before installing a SD card, make sure the

Ÿ Before removing the SD card, make sure

the card not in write protection state. Otherwise, the data may be lost ,or the SD

connect the camera to a TV monitor through

Long press the reset button for 5s to restore

card not in write protection state.

Output an analog video signal. You can

	5 🗄 🛄 📖	(Some models may not have)	
	6		
ID	Core	Table 2-3 Multi-head cable 2 descr Description	Remark
1	Network access interface	Connect to a standard Ethernet cable or PoE. The green light is on, the network connection is normal; The yellow light flashes when the data is transmitted. Some models maybe not have the lights; Please refer to the actual product.	Support PoE supply.
2	Audio output	Connect to an external audio device such as a speaker.	Applied for camera with
3	Audio input port	Receive an analog audio signal from devices such as a sound pickup device.	audio function
4	Power supply (DC 12V)	Connect to a 12V direct current (DC) power supply.	
5	Reset button	Long press the reset button for 5s to restore the original settings.	Applied for some models
6	G	Alarm output COM	Applied for
	OUT	Alarm output	alarm function
	G	Alarm input COM	
	IN	Alarm input	

Table 2-2 Multi-head cable 1 description

power supply.

Reset button Long press the reset button for 5s to

restore the original settings.

Figure 2-3 Multi-head cable 2

Description

Connects to a standard Ethernet cable or

PoE. The green light is on, the network

connection is normal; The yellow light

Some models maybe not have the lights;

flashes when the data is transmitted.

Please refer to the actual product Power supply Connects to a 12V direct current (DC)

Remark

Support

PoF

supply

ID

2

3

Core

Network


interface

(DC 12V)

access

2.2 Camera Dimensions

NOTE Different devices may have different dimensions: Please refer to the actual product

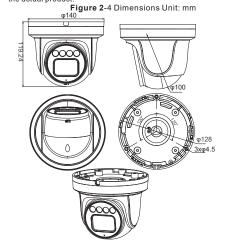

Special Announcement

- Ÿ All complete products sold by the manufacturer are delivered along with nameplates, quick setup guide and accessories after strict inspection. The manufacturer shall not be held responsible for counterfeit products.
- Y The manufacturer will update this manual according to product function enhancement or changes and regularly update the software and hardware described in this manual. Update
- information will be added to new versions of this manual without prior notice.
- Ÿ This manual may contain misprints, technology information that is not accurate enough, or product function and operation description that is slightly inconsistent with the actual product, the final interpretation of company is as a standard.
- Y This manual is only for reference and does not ensure that the
- information is totally consistent with the actual product. For consistency, see the actual product.

NOTE


For more information, please refer to website

Device Installation

Installation Steps:


- Step 1 Open the package, take out the camera, and disassemble camera's base.
- Step 2 Stick the installation location sticker on the ceiling or wall, drill three holes following the marks on the sticker. Push the plastic anchors into the holes, as shown in figure 3-1.

 Figure 3-1 Drill holes



Step 3 Fix the camera mounting base to the ceiling (or wall) by using self-tapping screws.

Step 4 Connected the multi-connector cable. If user want the device be connect to GND, plug ground wire to the GND screw and tighten it, the location of GND as show in figure. Step 5 Fix the eyeball to base, as shown in figure 3-2.

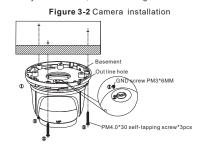


NOTE

You can route cables from the top or from side. If you use the top routing method, drill a hole in the installation surface first. If you use the side routing method, please cut the compression ring outlet as shown in figure 3-2, and route the multi-head cable out from the side gap at the bottom of the camera.

Step 6 Rotate the main body, adjust the position so that the camera faces the monitored area, then tighten the lock steel panel with screws and fix the camera, as shown in figure 3-3.

Figure 3-3 camera installation

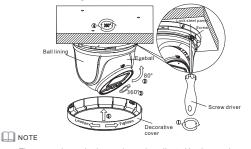

The camera's monitoring angle can be adjusted by three-axis rotation: Horizontal rotation, up and down rotation, axial rotation of the lens, adjust the direction of the camera and aim the lens at the target.

1 Use a Phillips screwdriver to loosen the screw which locks the steel panel:

2 The hemisphere can rotate up and down range of 0 to 80°; 3 the hemisphere can rotate left and right range of 0 to 360°;

4 The ball lining can rotate 360° left and right;

5 After adjusting the angle, tighten the screws on the steel panel, then install the decorative cover to the base along the direction as shown in Figure 3-3.

Quick Configuration(e.g IE) 4

4.1 Login


Step 1 Open the Internet Explorer, enter the IP address of IP camera (default value: 192.168.0.120) in the address box, and press Enter. The login page is displayed as shown in figure 4-1.

Step 2 Input the user name and password.

NOTE

- ÿ The default user name is admin. The default password is admin. Modify the password when user logs into the system for first time to ensure system security.
- Y It is advised to restart the device three minutes later after modifying password to ensure modified successfully
- You can change the system display language on the login page.

 Figure 4-1 Login



Step3 Click Login, the main page is displayed

4.2 Modify IP address

Choose Configuration > Device > Local Network, the Local Network page is displayed.

Enter the IP address in the IP Address box and click Apply as shown in figure 4-2. After the IP address is sett successfully, please use the new IP

address to log in the Web interface.

Figure 4-2 Local Network

Local Network

IP Protocol	Pv4
DHCP	
IP Address	192.168.0.120
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.1
Preferred DNS Server	192.168.0.1
Alternate DNS Server	192.168.0.2
MTU(1280-1500)	1500

4.3 Browsing Video

To ensure the real-time video can be played properly, you must perform the following operation when you log in the web for the first time:

If user can access the web immediately, please ignore the steps of adding trusted sites.


Step 1 the Internet Explorer. Choose Tools > Internet options > Security > Trusted sites > Sites, in the display dialog box, click Add, as shown in figure 4-3.

	tone to view or change security settings			
Inte	net Local intranet Trusted sites	Restricted		
Inte		sites		
1	Trusted sites This zone contains websites that you	Sites		
	trust not to damage your computer or your files.		Trusted sites	
	v level for this zone		You can add and remove websi	
	ed levels for this zone: All		This zone will use the zone's set	unity seconds.
- 1	. Low		Add this website to the zone:	
	 Minimal safeguards and warning Most content is downloaded and 		Add this website to the zone: http://192.168.0.120	
	- All active content can run		1100.0120	
	- Appropriate for sites that you a	bsolutely trust	Websites:	
E	Enable Protected Mode (requires restart	ting Internet Explorer)		Ren
	Ourton level			
	Custom level	. Default level		

Flavore 4 0 A data a structure de la terre

Step 2 In the Internet Explorer, choose Tool > Internet Options > Security > Customer level, and set Download unsigned ActiveX control and initialize and script ActiveX controls not marked as safe for scripting under ActiveX controls and plug-ins to Enable, as shown in figure 4-4.

Figure 4-4 Configuring ActiveX control and plug-in

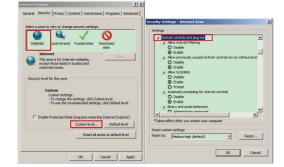

Step 3 Download and install the player control as prompted.

NOTE

If the repair tips displayed when installing the control, please ignore the prompt, and continue the installation, the login page is displayed when the control is loaded.

To browse a real-time video, click Live Video, The Live Video page is displayed, as shown in figure 4-5.



Stream stream 1 💌 💷 📧 🔳 🔜 🐀 🌜 🖉 📾 💷 🖂 🛄 2

1 Personnel Count: User can guery the data of personnel count, through year, month, day. The statistics can be downloaded. The data can be shown by line chart, histogram, list.

2 AI Live video: Click the icon to view the snapshots of human face or license plate (click "Face" or "Plate" to switch). The bottom page will show the captured images of vehicle and human



4.4 Intelligent Analysis

At "Configuration > Intelligent Analysis" interface, user can set the parameters of Perimeter, Single Virtual Fence, Double Virtual Fence, Multi Loiter, Converse and Personnel Count, as shown in figure 4-7 .


F	igure	4-7	Intel	ligent	Ana	lysis
---	-------	-----	-------	--------	-----	-------

CAMERA				
	Live Video	Playback	Personnel Count	Configuration
	2 Perimeter			
vice leto				
an .	2002/01/12/02 01:15/020	and the second se	Enable	00
ice		and the second second	A DECEMBER OF THE OWNER	
rnal Device	A COLORED IN COLORED INCOLORED IN COLORED INCOLORED IN COLORED INCOLORED INCOLOR		Sensitivity	5 •
Eigent Analysis	A A		Output Channel	C1
Perimeter			Alarm Record	
Single Virtual Fence			SMTP	011
Double Virtual Fences	and the owner where the party of the local division of the local d			
Multi Loiter	1 and 1	Contrains	FTP Upload	144
Converse	No. No. of Lot, No.	and a start of the		
Personnel Count	No. of Concession, Name		Clear	
			CHP	
luttiobject	Ela 1			
ice Record	ter El			
acy Masking	Nen [2]			
work Service	Tues 🔯			
Gege Manager	tred 🔯			ne ne pe pe ce ce pe ce
locol	11v 🔯			ur here fight firth
ice Los	Fo 🔯			ee uske sess kees
	Set (53)			
intenance	14 El			

4.5 AI Multi object

At "Configuration > AI Multi object" interface, user can enable face detection, full body detection, vehicle detection, set the other parameters of detection, as shown in figure 4-8.

 Figure 4-8 Al Multi-object



NOTE

For better capture performance, it is recommended to use 6mm focus length lens or above

