
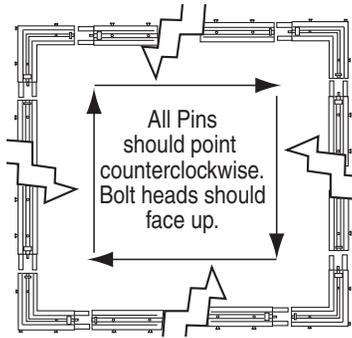


# FocalPoint™ Projection Screen by Draper—Assembly Map

## 90" x 120" (229 x 305 cm) Image Area—4:3 Format

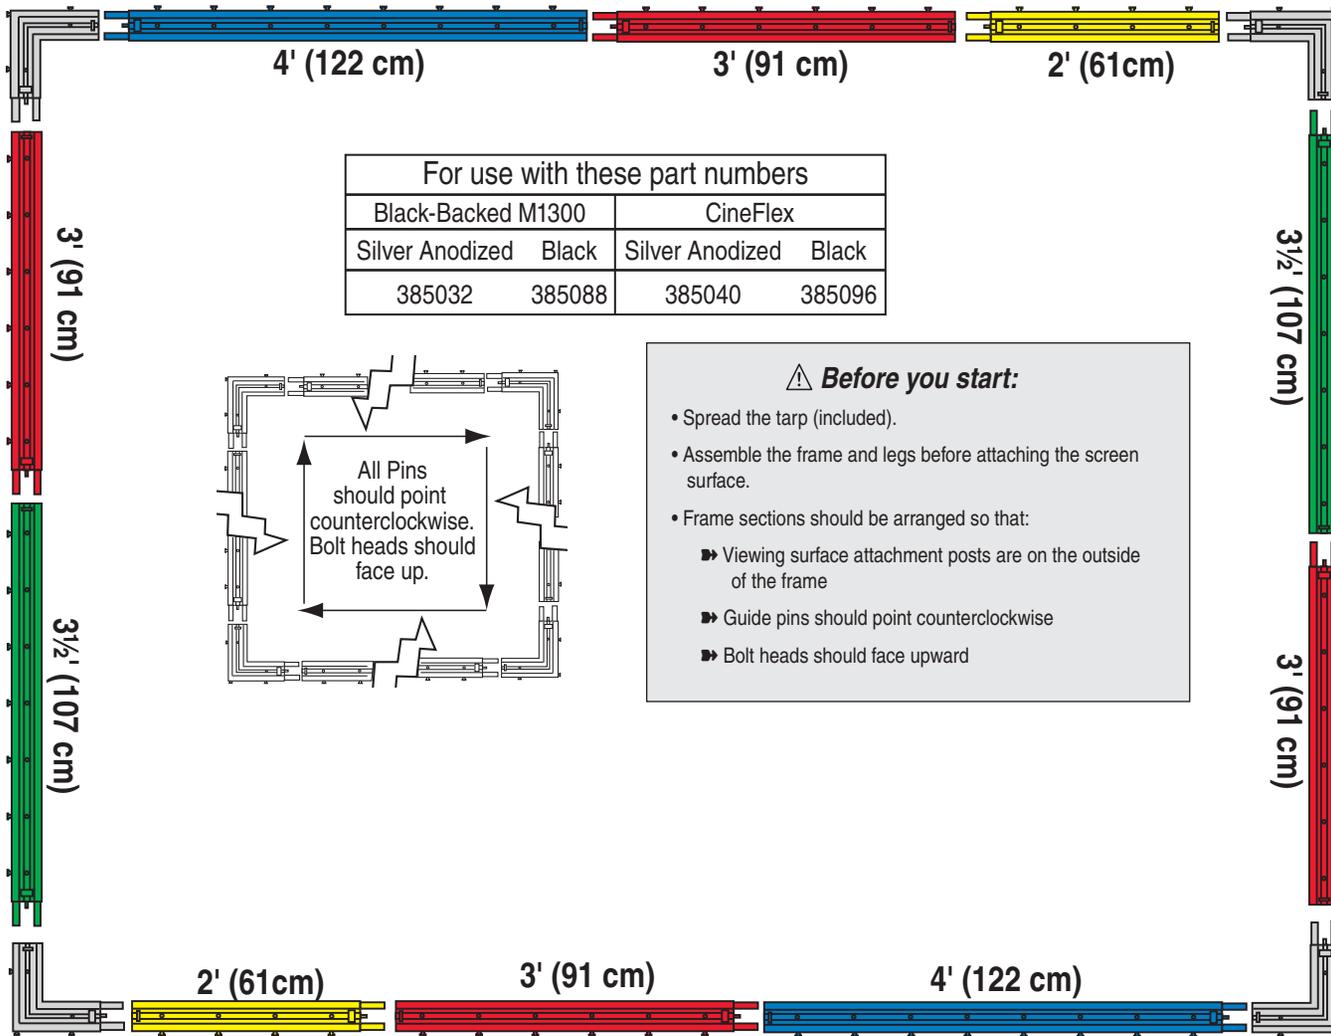


- ⚠ Before you start:**
- Spread the tarp (included).
  - Assemble the frame and legs before attaching the screen surface.
  - Frame sections should be arranged so that:
    - Viewing surface attachment posts are on the outside of the frame
    - Guide pins should point counterclockwise
    - Bolt heads should face upward

### Leg Kit B (two legs per screen)

- Leg Kit A—**  
For use with screens up to 80" high viewing area
- Leg Kit B—**  
For use with screens up to 126" high viewing area
- Leg Kit C—**  
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

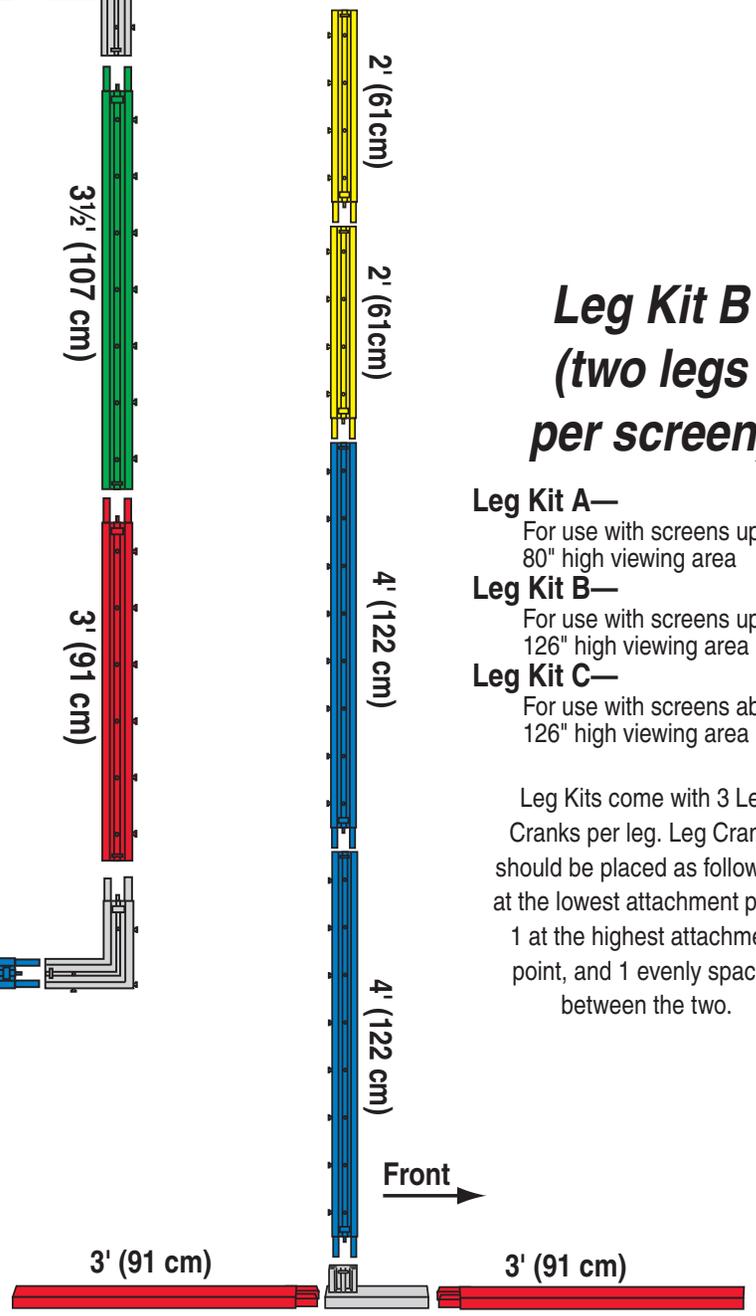

**DRAPER**®

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
www.draperinc.com ■ fax 765-987-7142  
Copyright © 2010 Draper Inc. Form FocalPoint\_90x120\_Assy Printed in U.S.A.



**⚠ Caution:**  
**Beware of pinch points.**