


# FocalPoint™ Projection Screen by Draper—Assembly Map

## 121½" x 216" (309 x 549 cm) Image Area—16:9 HDTV Format

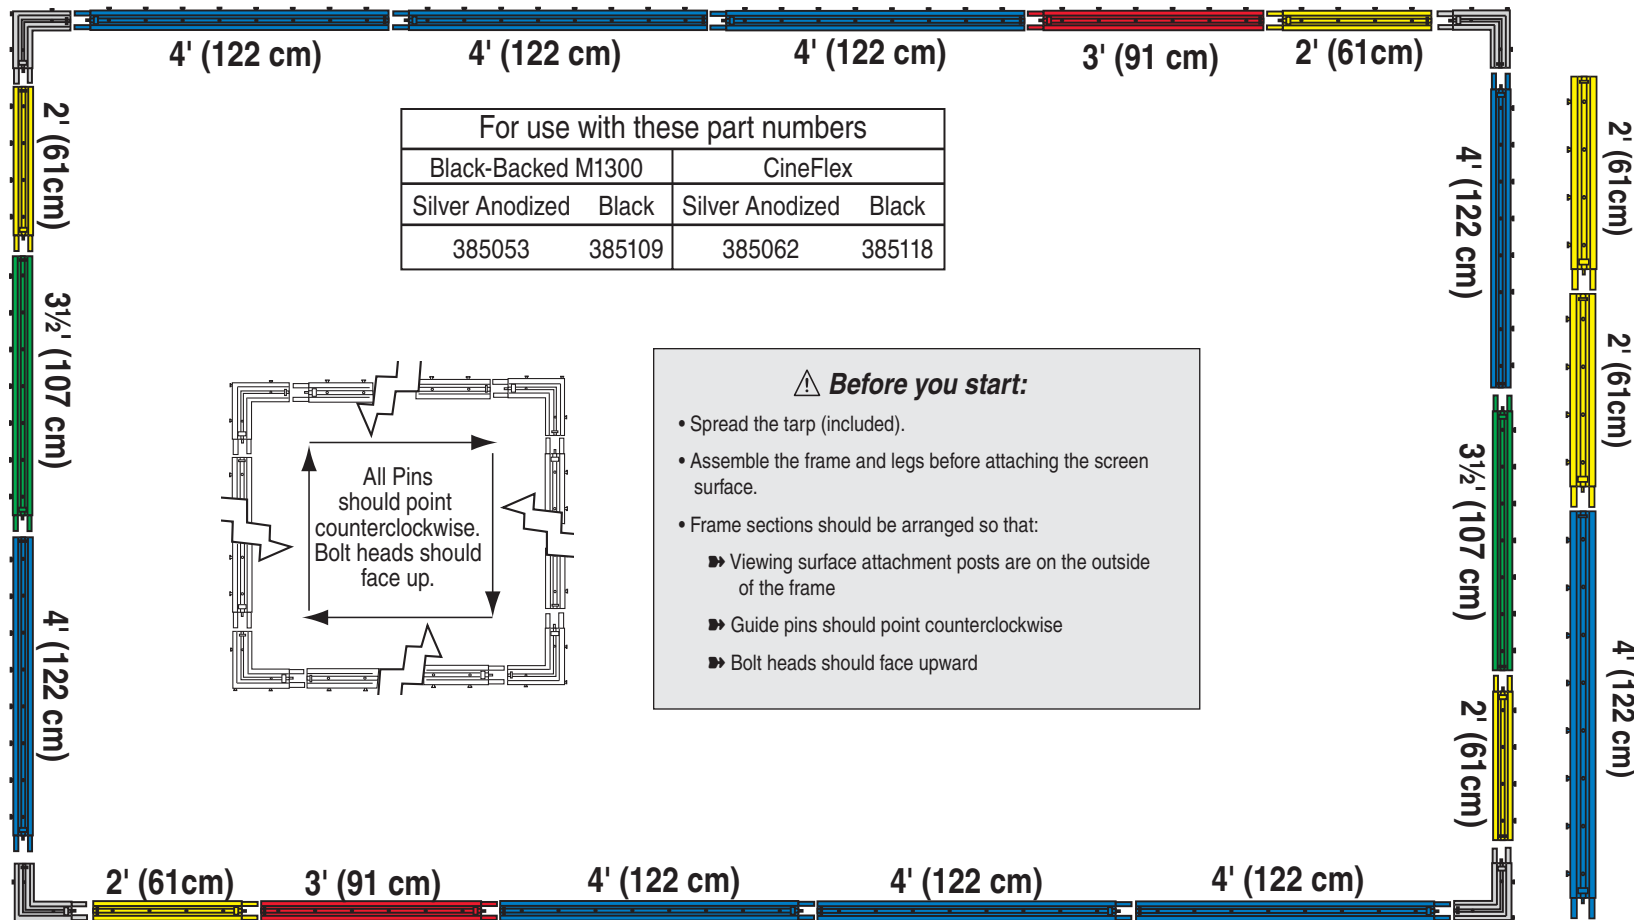

**⚠ Before you start:**

- Spread the tarp (included).
- Assemble the frame and legs before attaching the screen surface.
- Frame sections should be arranged so that:
  - ➡ Viewing surface attachment posts are on the outside of the frame
  - ➡ Guide pins should point counterclockwise
  - ➡ Bolt heads should face upward


### Leg Kit B (two legs per screen)

**Leg Kit A—**  
For use with screens up to 80" high viewing area

**Leg Kit B—**  
For use with screens up to 126" high viewing area

**Leg Kit C—**  
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

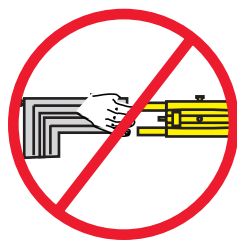

**⚠ Caution:**  
**Beware of pinch points.**

**DRAPER®**

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
www.draperinc.com ■ fax 765-987-7142  
Copyright © 2010 Draper Inc. Form FocalPoint\_121\_1-2x216\_Assy Printed in U.S.A.

