



FocalPoint™ Projection Screen by Draper—Assembly Map


90" x 144" (229 x 366 cm) Image Area—16:10

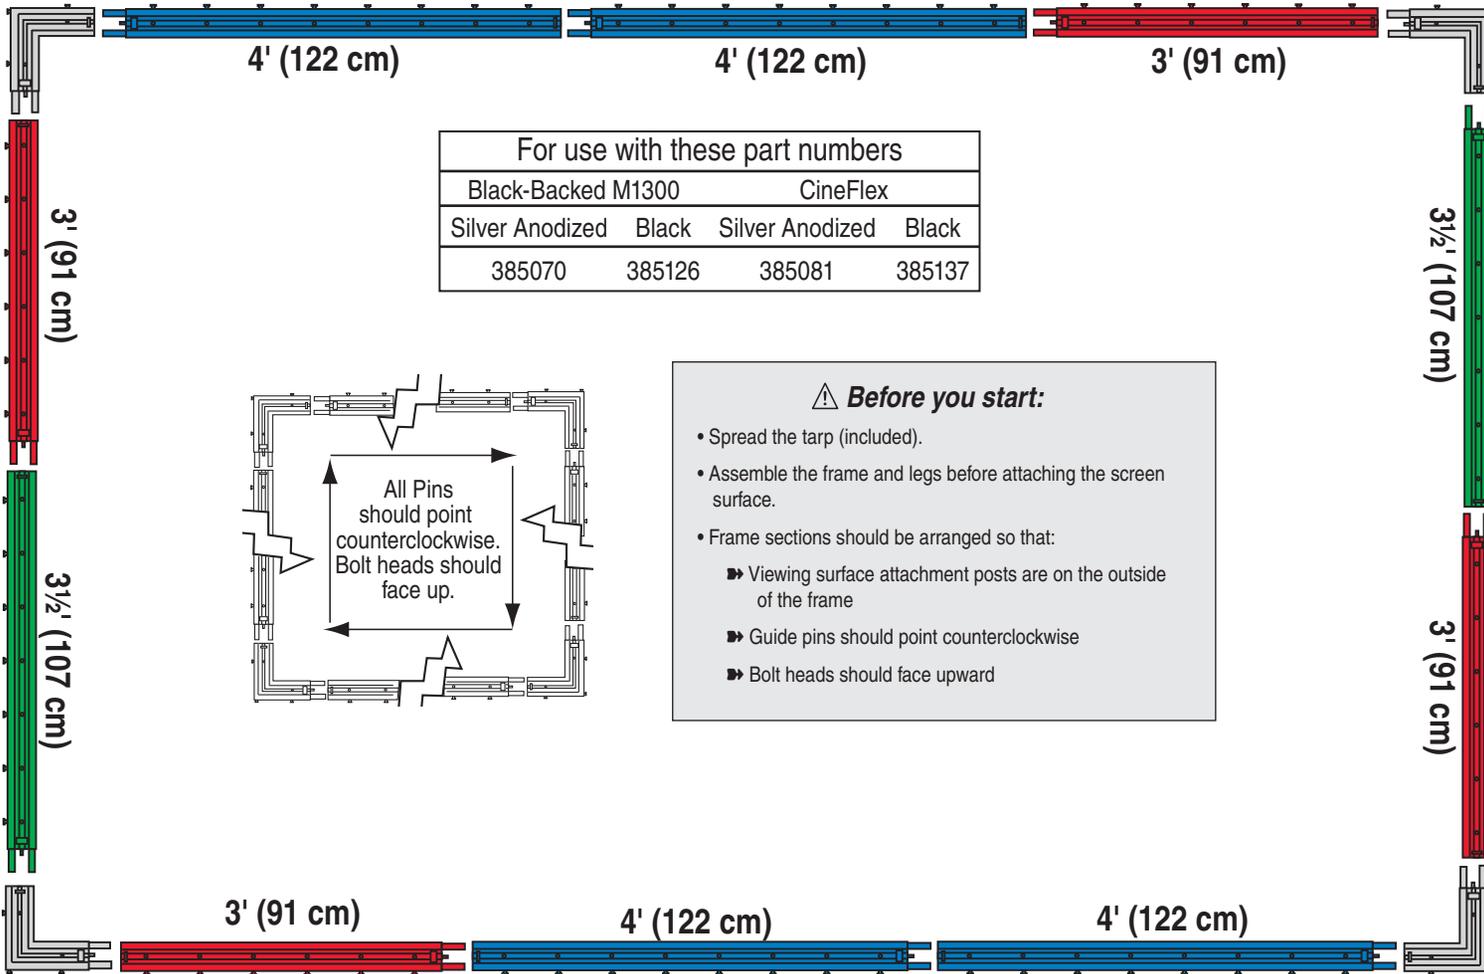

For use with these part numbers			
Black-Backed M1300		CineFlex	
Silver Anodized	Black	Silver Anodized	Black
385070	385126	385081	385137

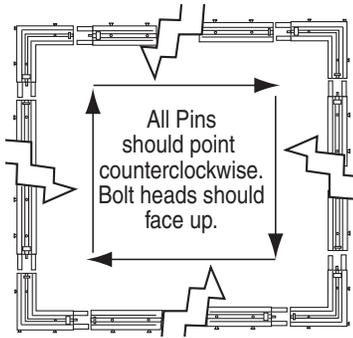

- ⚠ Before you start:**
- Spread the tarp (included).
 - Assemble the frame and legs before attaching the screen surface.
 - Frame sections should be arranged so that:
 - Viewing surface attachment posts are on the outside of the frame
 - Guide pins should point counterclockwise
 - Bolt heads should face upward

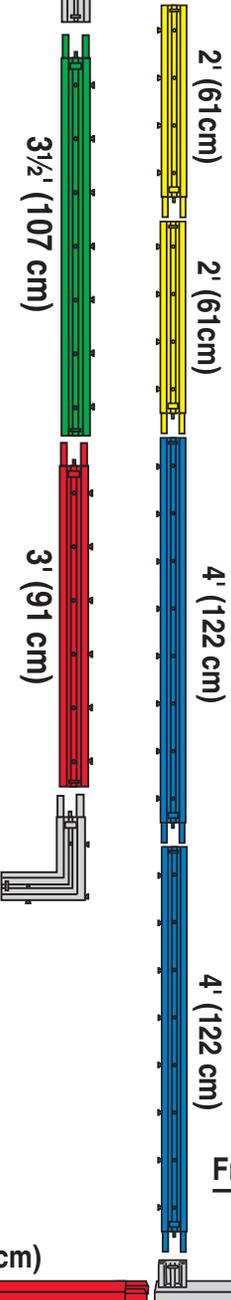

Leg Kit B (two legs per screen)

- Leg Kit A—**
For use with screens up to 80" high viewing area
- Leg Kit B—**
For use with screens up to 126" high viewing area
- Leg Kit C—**
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.



⚠ Caution:
Beware of pinch points.

