


FocalPoint™ Projection Screen by Draper—Assembly Map

180" x 240" (457 x 610 cm) Image Area—4:3 Format

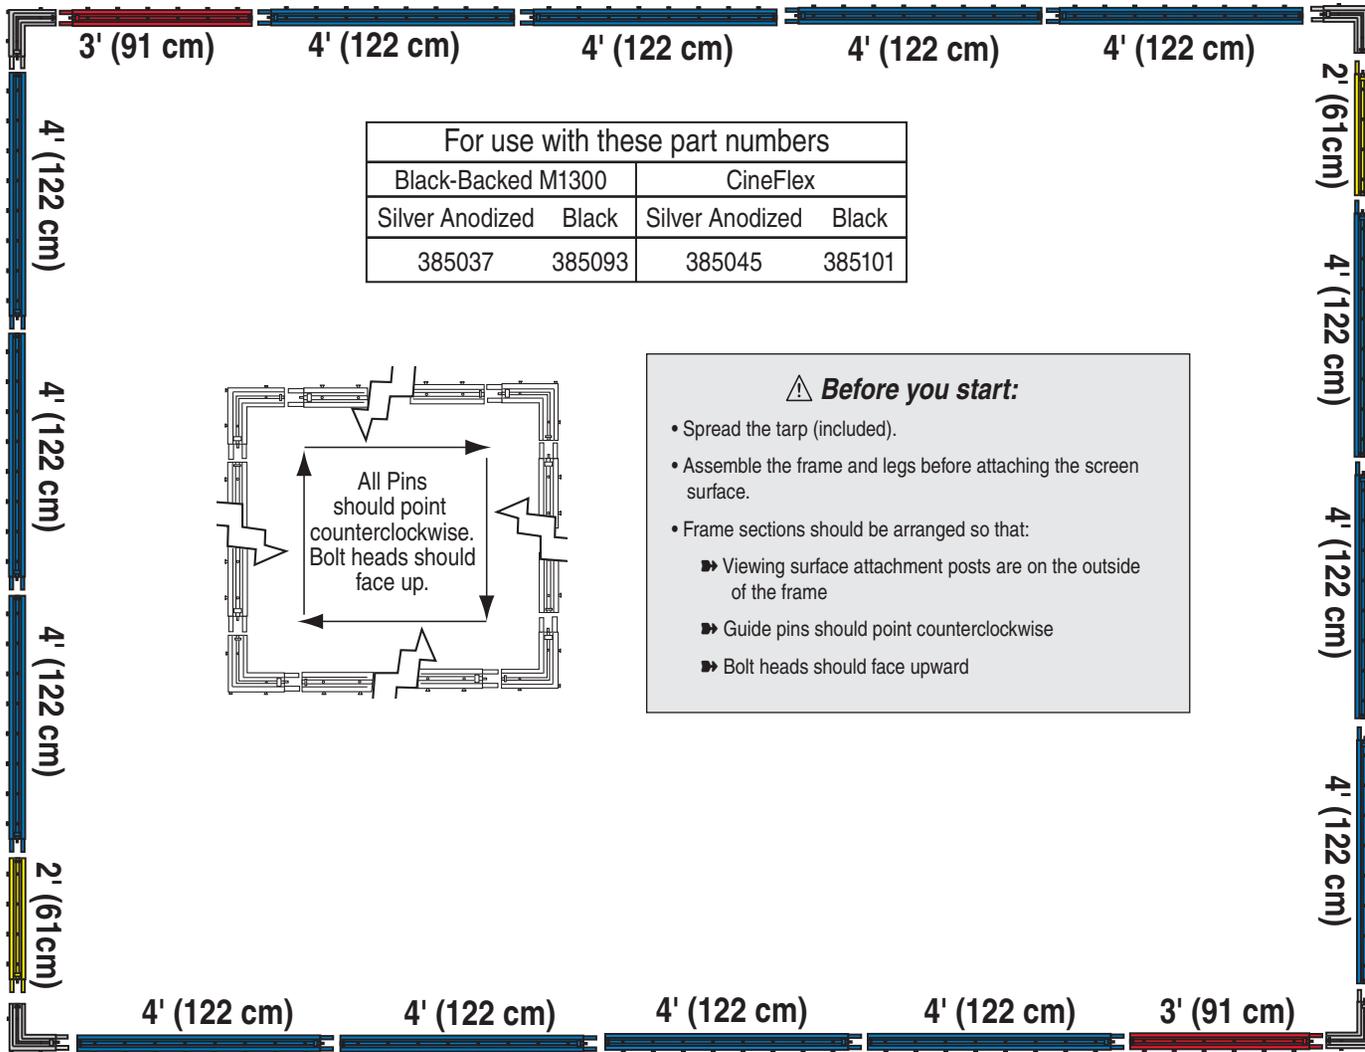

For use with these part numbers

Black-Backed M1300		CineFlex	
Silver Anodized	Black	Silver Anodized	Black
385037	385093	385045	385101


⚠ Before you start:

- Spread the tarp (included).
- Assemble the frame and legs before attaching the screen surface.
- Frame sections should be arranged so that:
 - Viewing surface attachment posts are on the outside of the frame
 - Guide pins should point counterclockwise
 - Bolt heads should face upward

Leg Kit C (two legs per screen)

- Leg Kit A—**
For use with screens up to 80" high viewing area
- Leg Kit B—**
For use with screens up to 126" high viewing area
- Leg Kit C—**
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

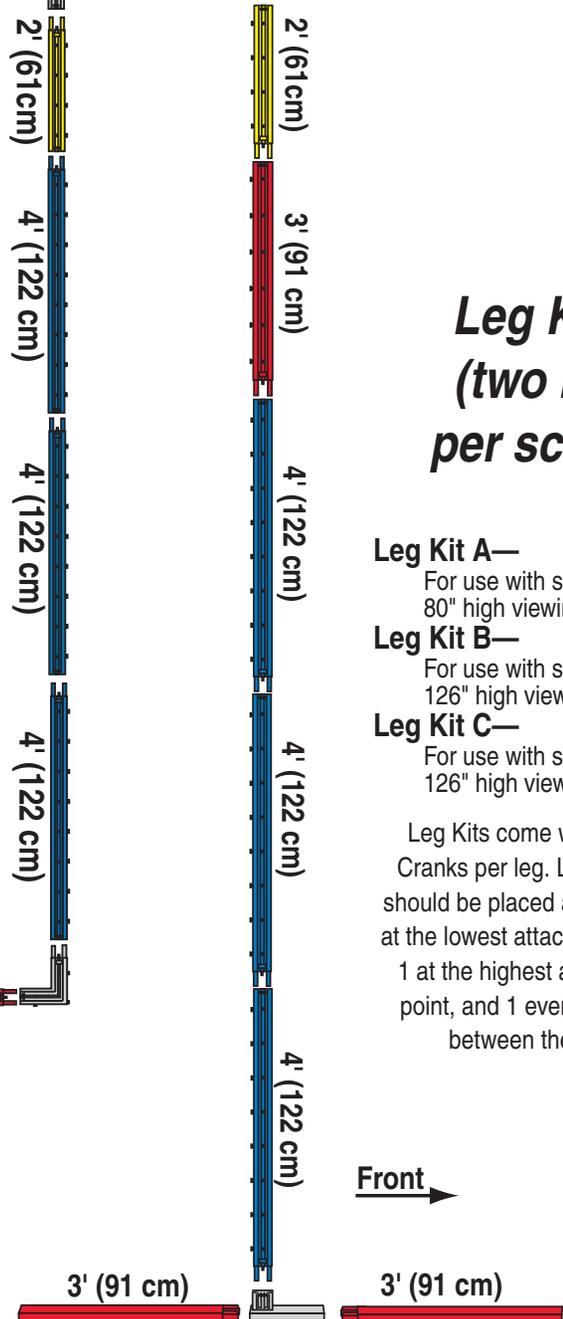

DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999
www.draperinc.com ■ fax 765-987-7142
Copyright © 2010 Draper Inc. Form FocalPoint_180x240_Assy Printed in U.S.A.



⚠ Caution:
Beware of
pinch points.