
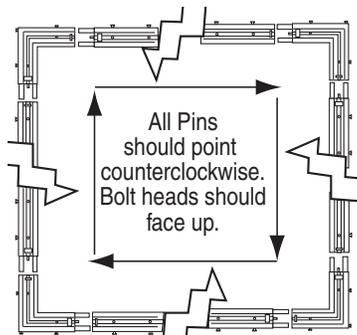


# FocalPoint™ Projection Screen by Draper—Assembly Map

## 50" x 80" (127 x 203 cm) Image Area—16:10 Format

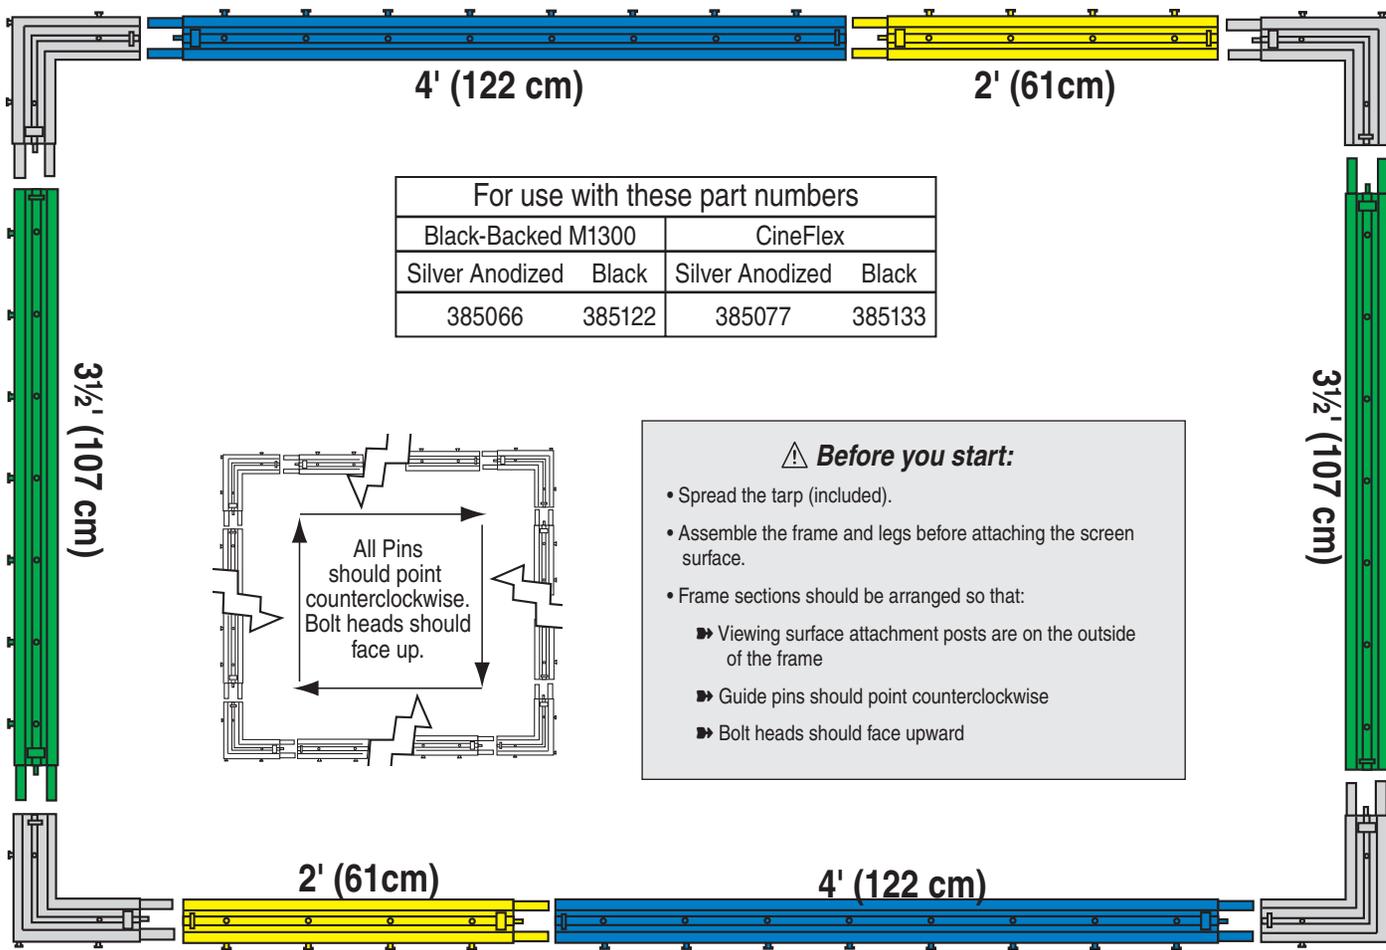


**⚠ Before you start:**

- Spread the tarp (included).
- Assemble the frame and legs before attaching the screen surface.
- Frame sections should be arranged so that:
  - ▶ Viewing surface attachment posts are on the outside of the frame
  - ▶ Guide pins should point counterclockwise
  - ▶ Bolt heads should face upward



**⚠ Caution:**  
**Beware of**  
**pinch points.**

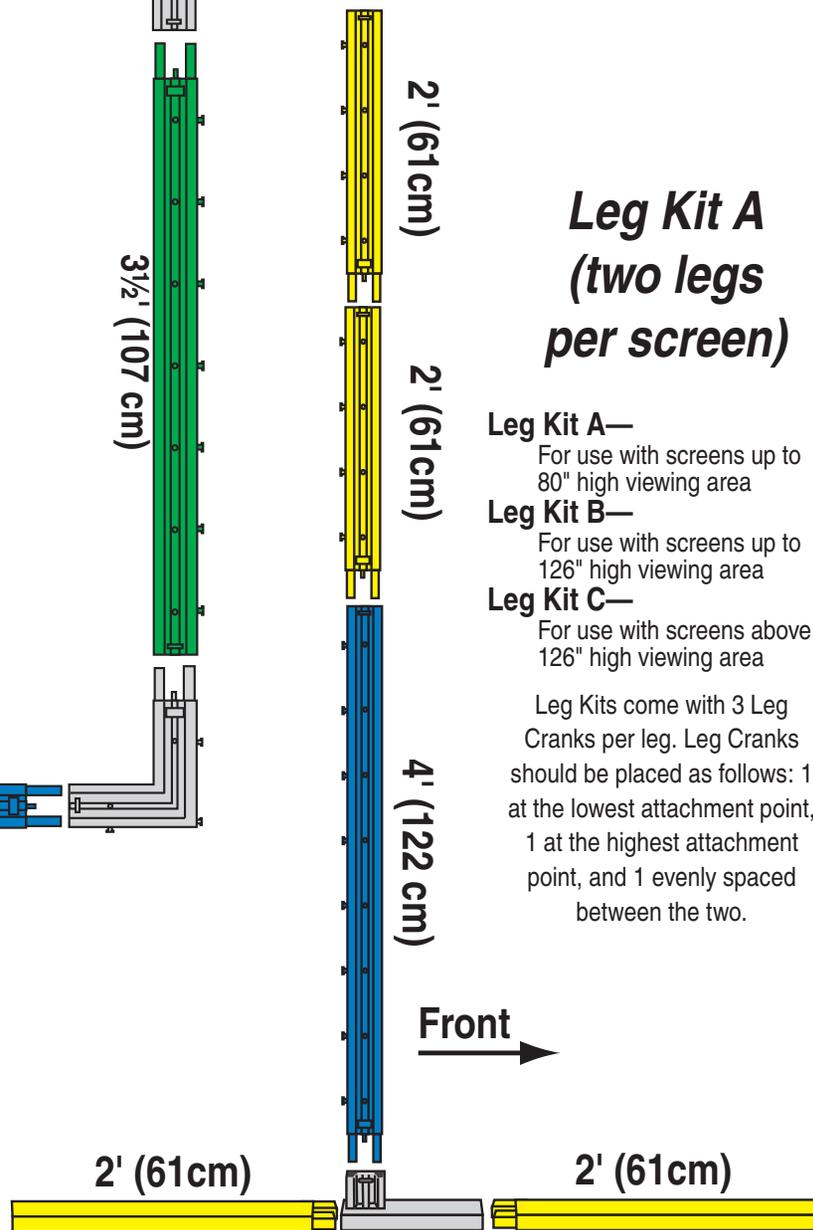

### Leg Kit A (two legs per screen)

- Leg Kit A—**  
For use with screens up to 80" high viewing area
- Leg Kit B—**  
For use with screens up to 126" high viewing area
- Leg Kit C—**  
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

# DRAPER®