



Build Your Story

 
 
 
C1

User Guide





APNX.com



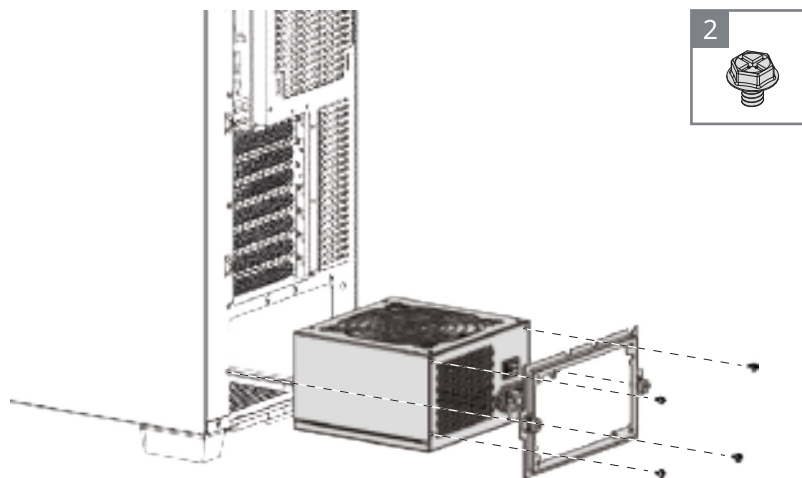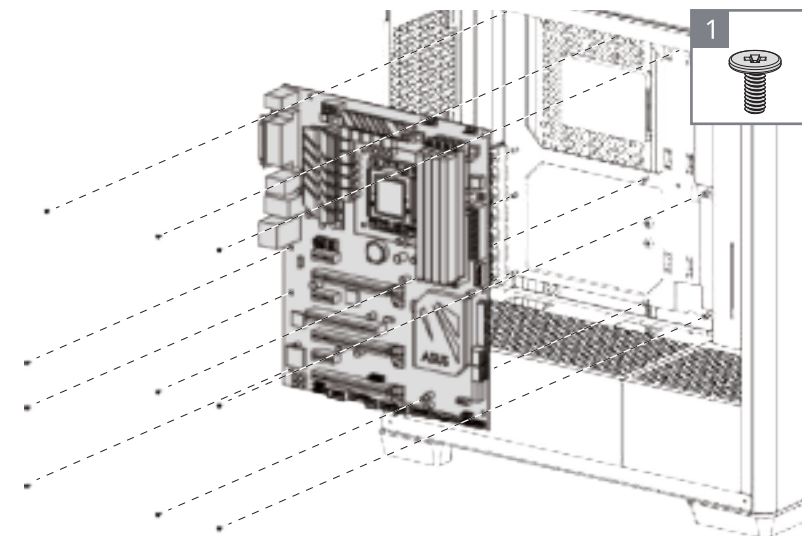


- | | | | | | | | | |
|------------------|--|-----------------|------------------|--|------------------------|------------------|--|-----------|
| 1
x 13 | | MB Screw | 2
x 5 | | PSU Screw
PCI Screw | 3
x 12 | | HDD Screw |
| 4
x 12 | | SSD Screw | 5
x 12 | | SSD / HDD
Dampener | 6
x 10 | | Cable tie |
| 7
x 2 | | Female
Clips | 8
x 1 | | Standoff
Socket | | | |
| 9
x 9 | | | | | | Velcro Straps | | |

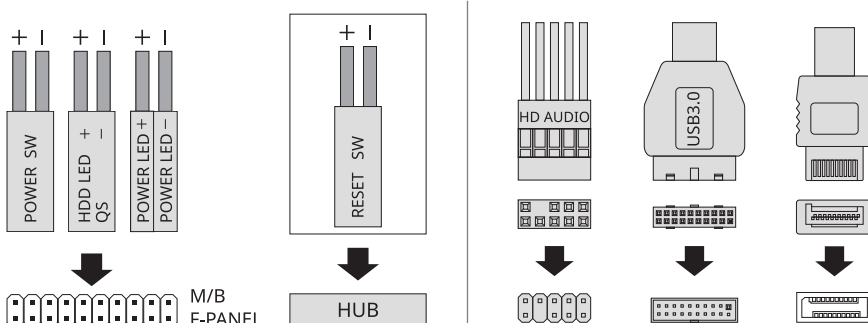  


(Please refer to the motherboard's manual for further instructions).


 
Note :Specifications may vary depending on your region. Contact your local retailer for more information.




1

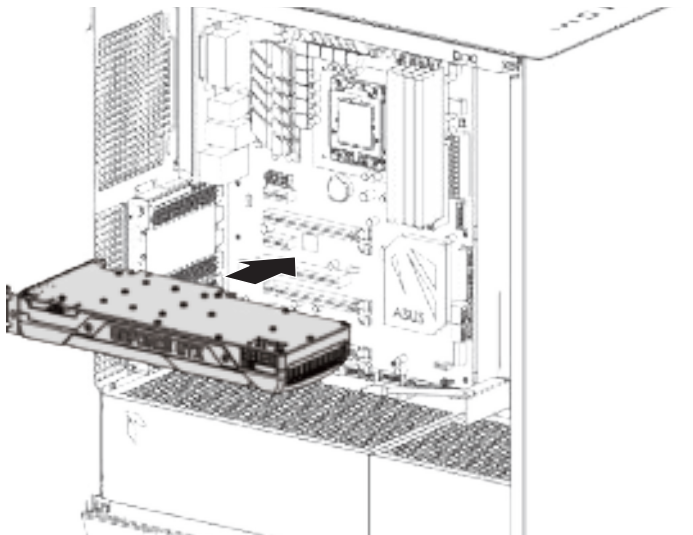 


2

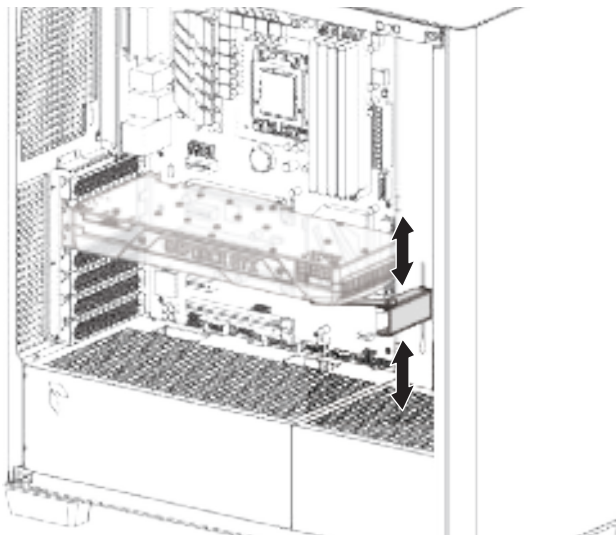  


1


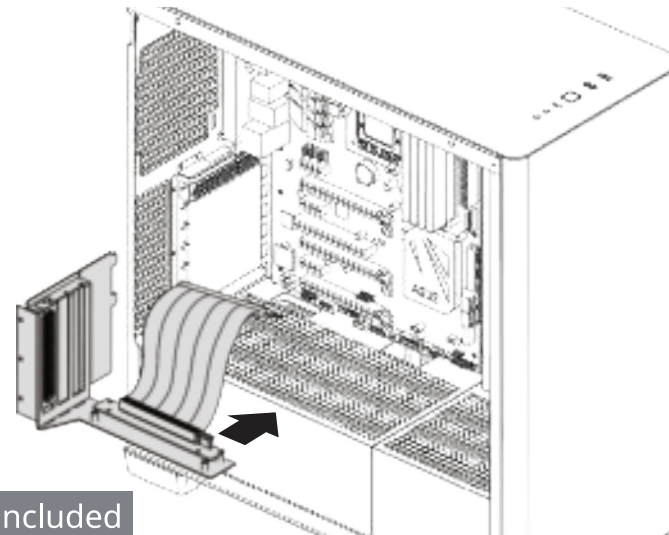 


2

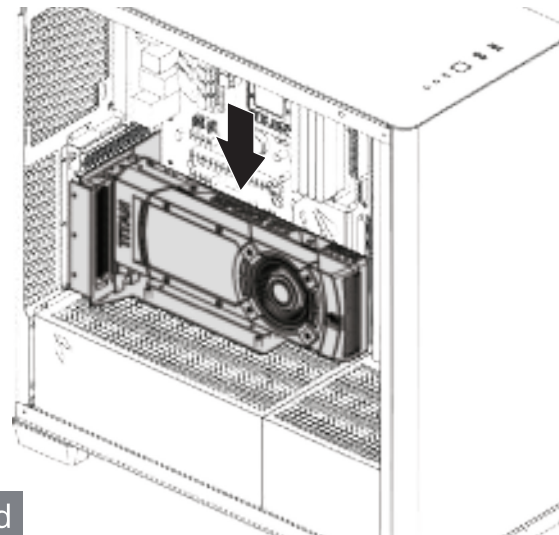 






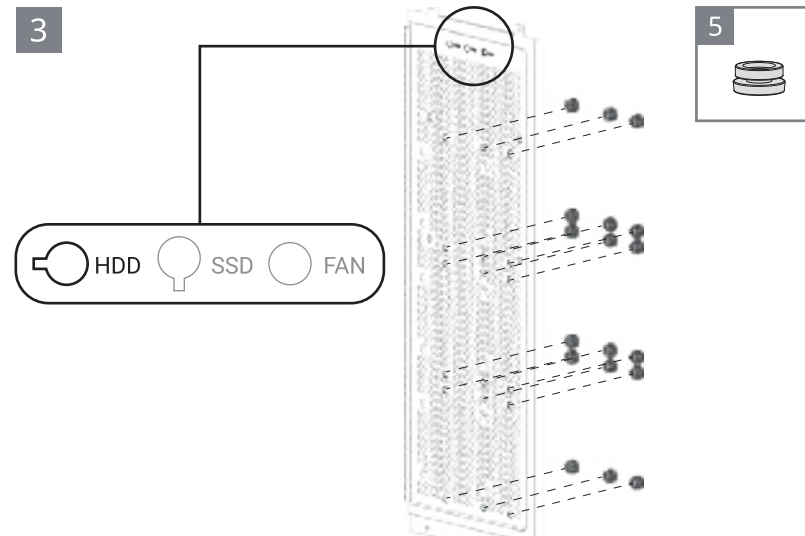 


1

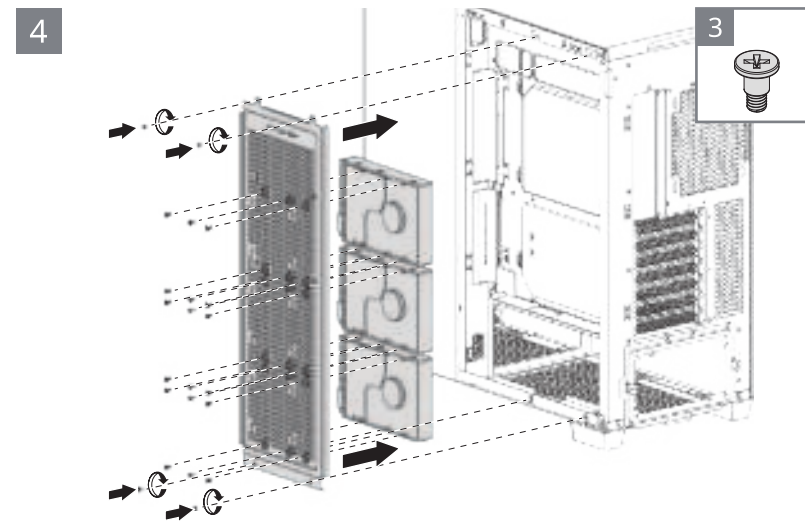 
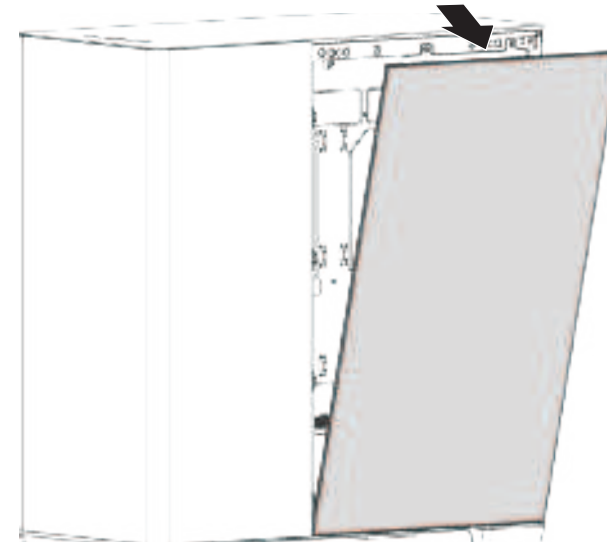 


2

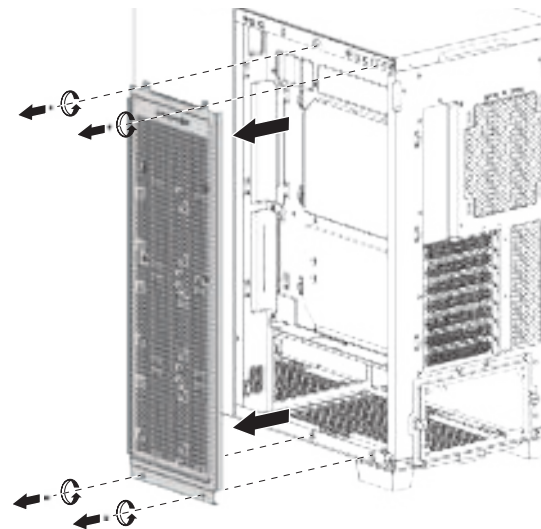 


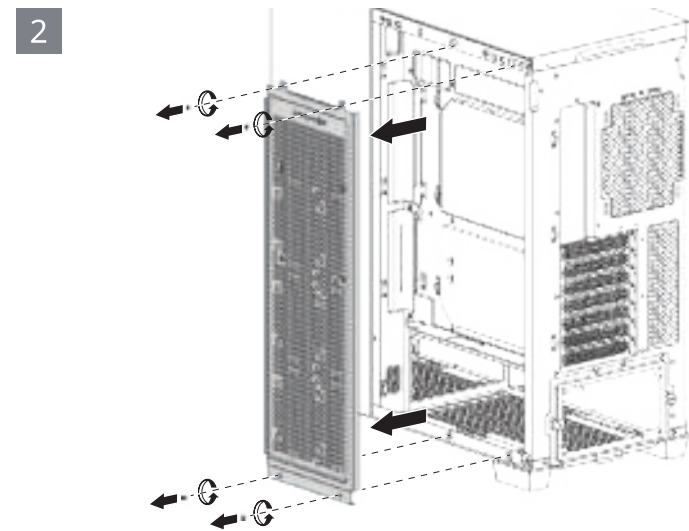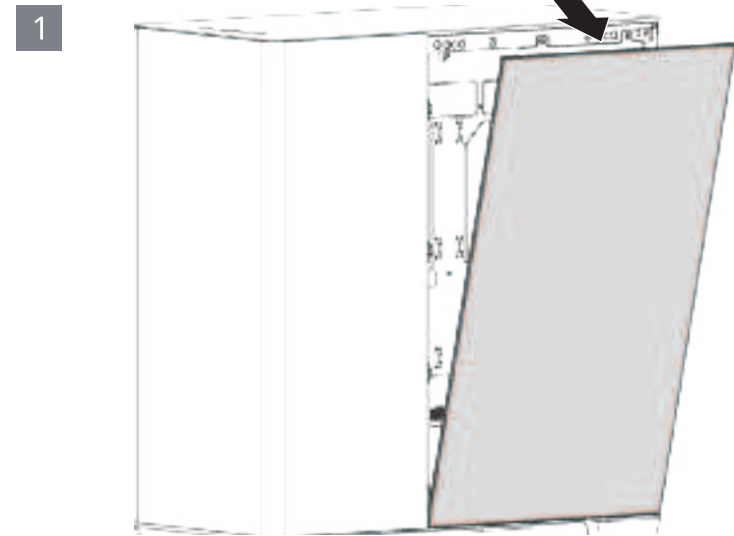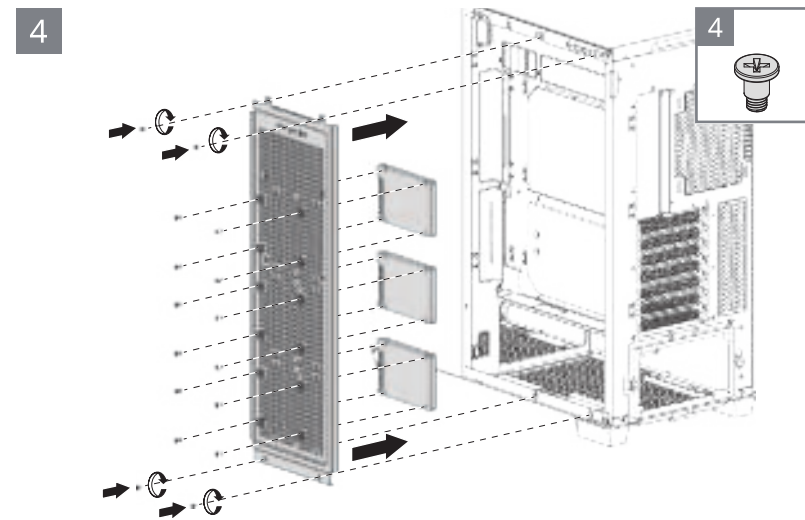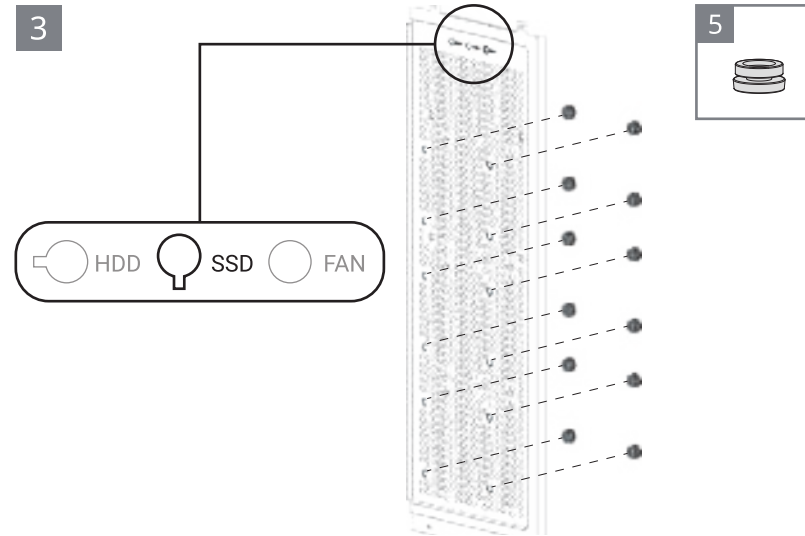     


3A 120mm

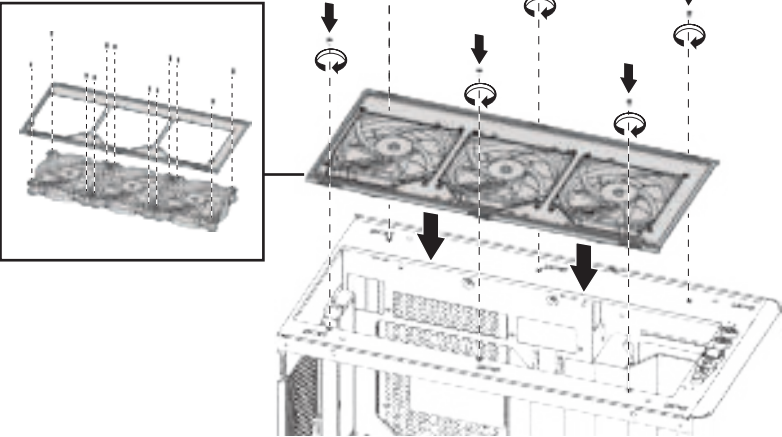  


1

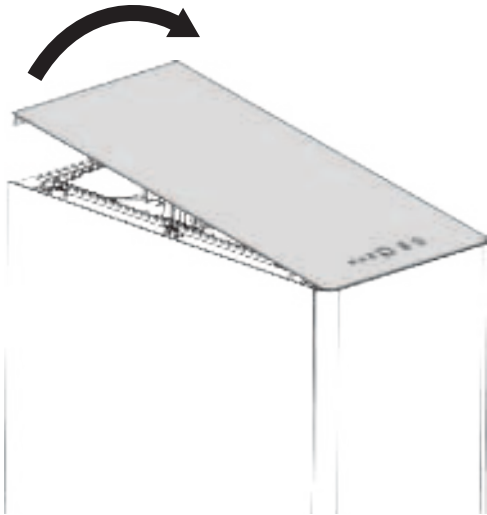 


3B 140mm

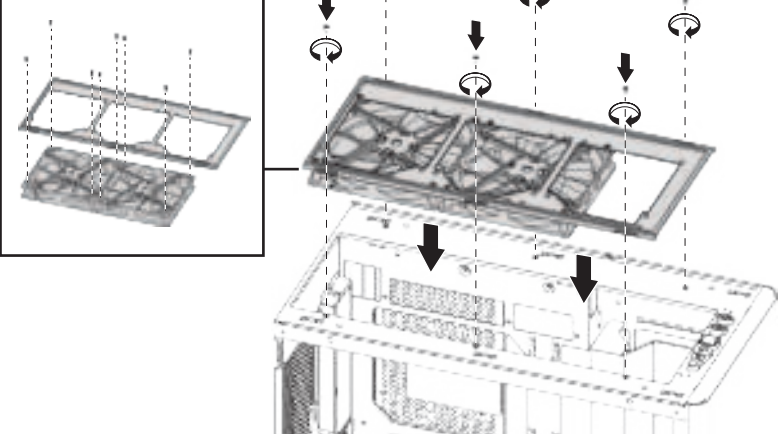 



2

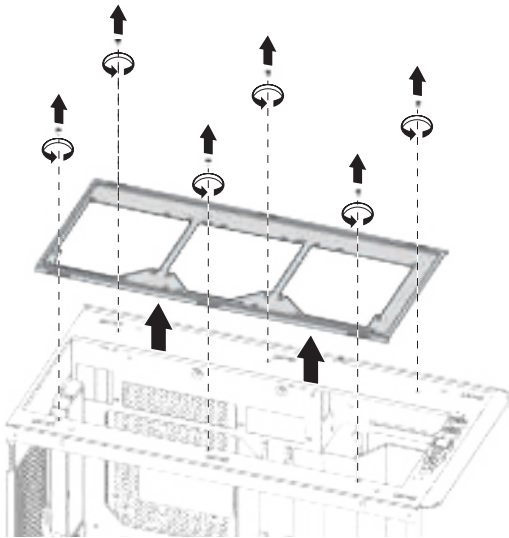 


3 120/140mm

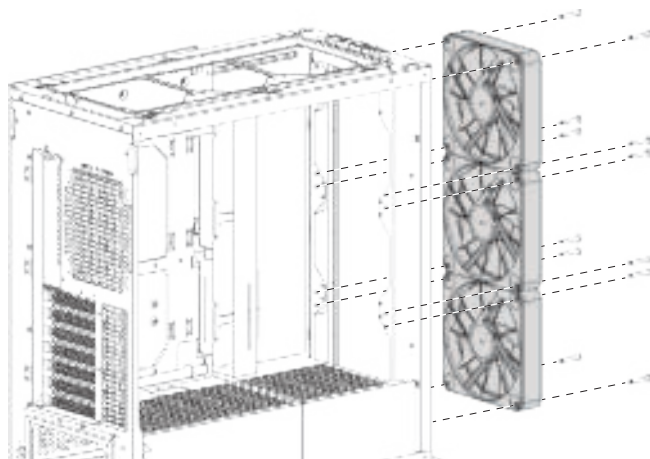 


1 120mm

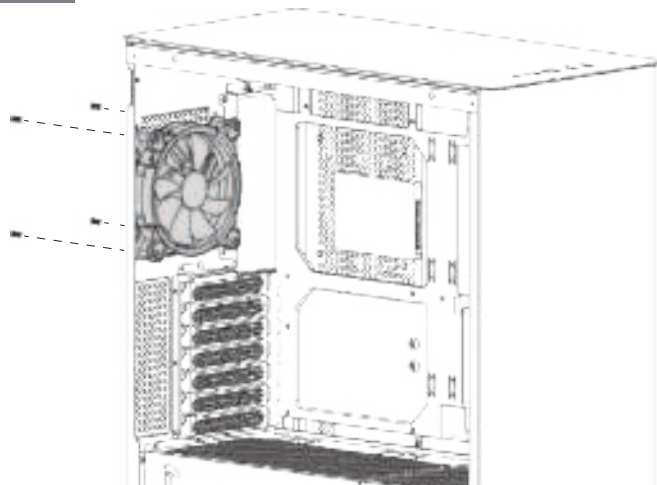  



1

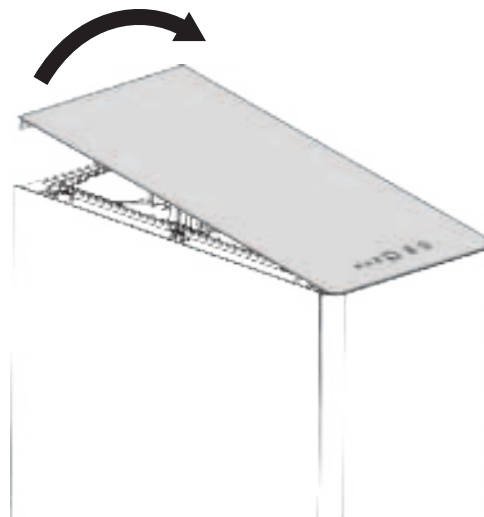 


2

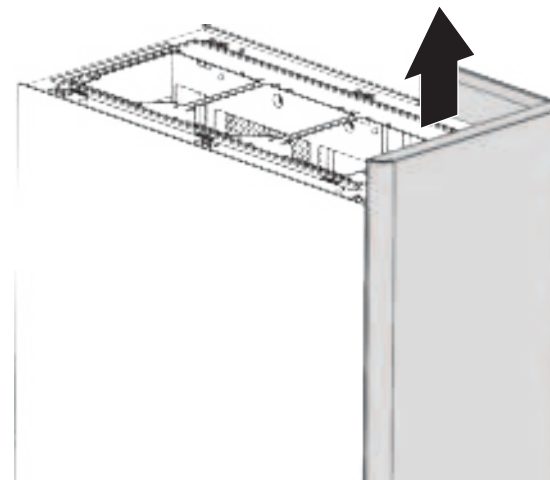 


3

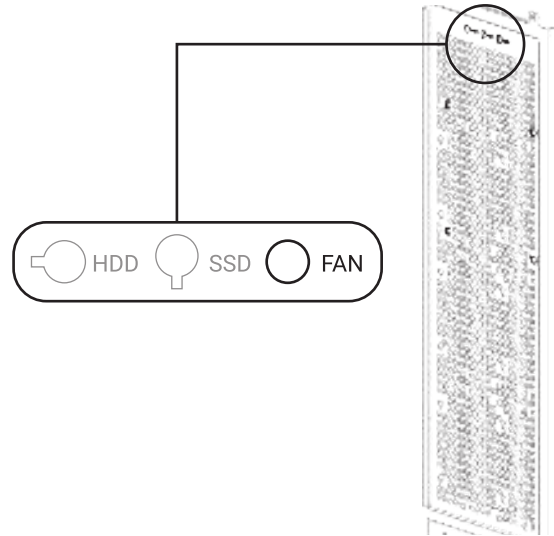  


1





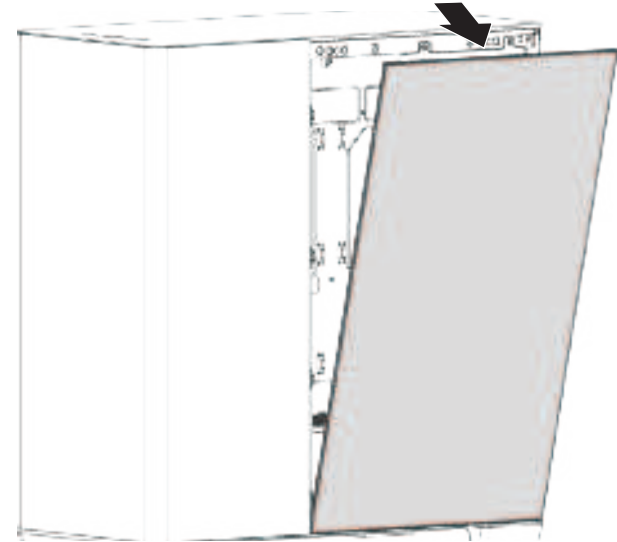 


4 120mm



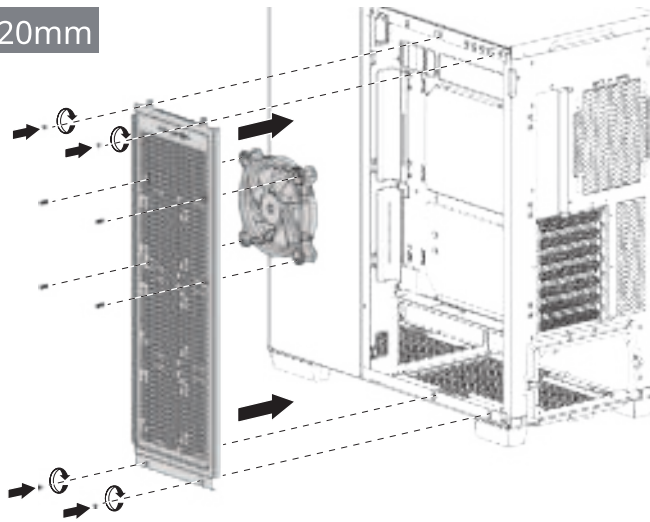 


2

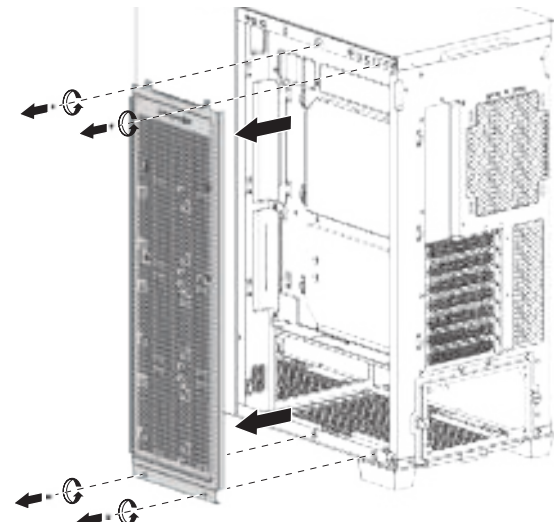 


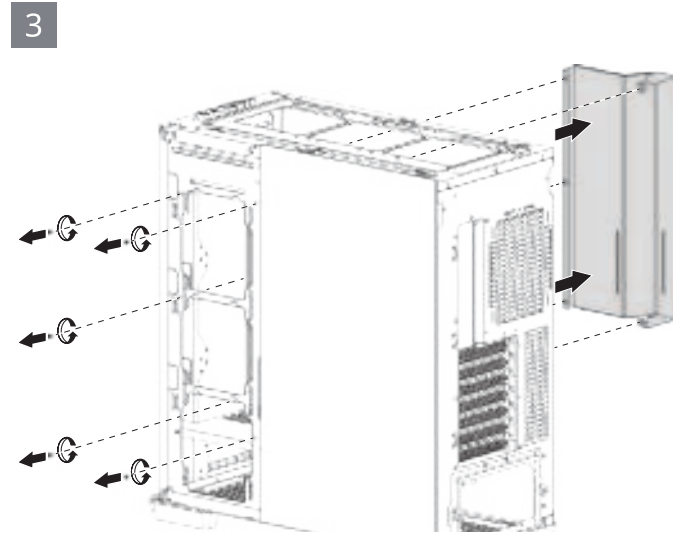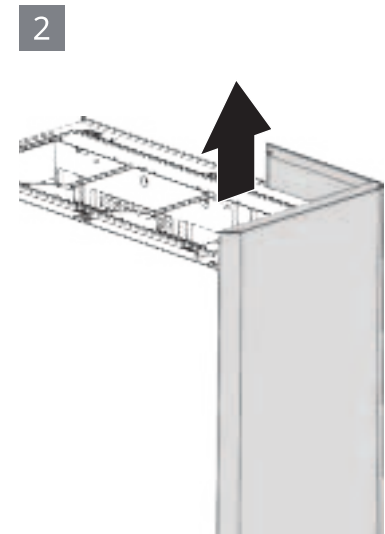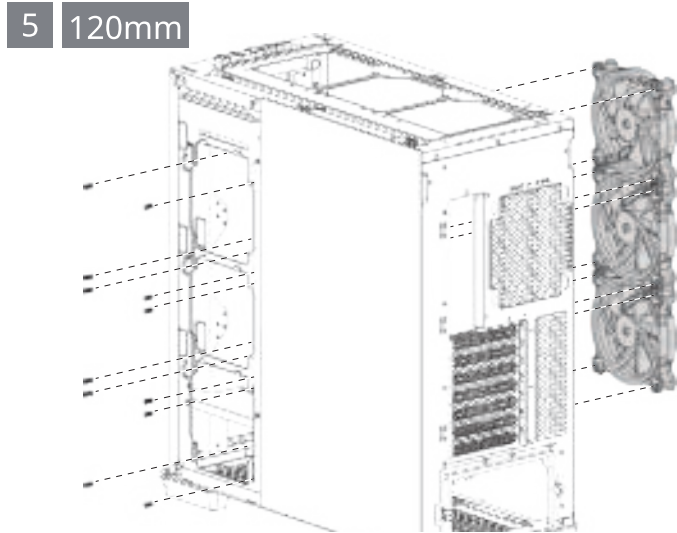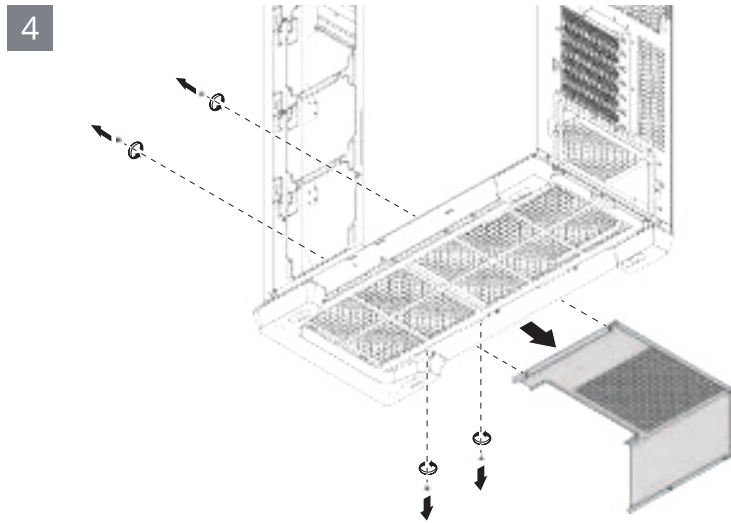     



3A 120/240/360mm

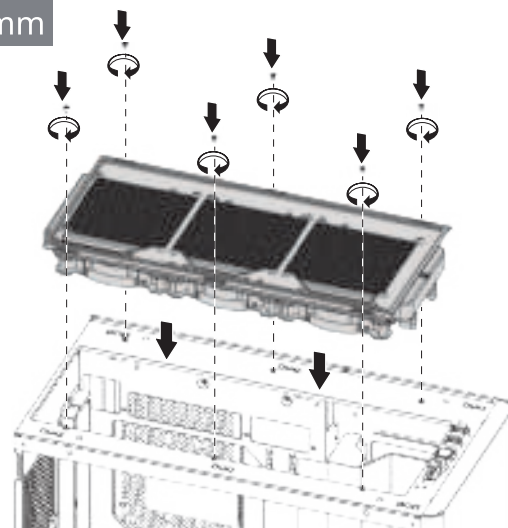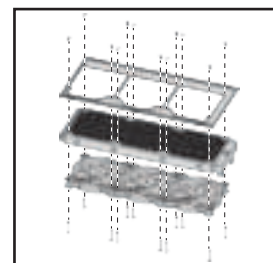   


1

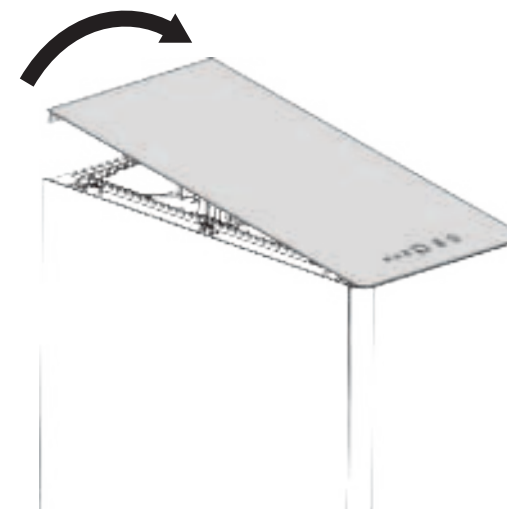 


3B 140/280mm

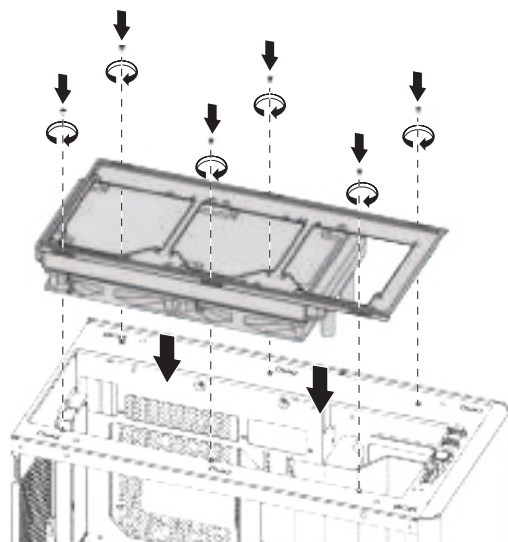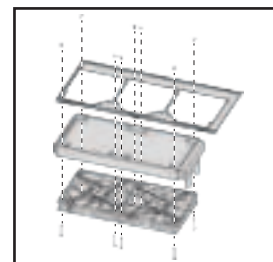  



2

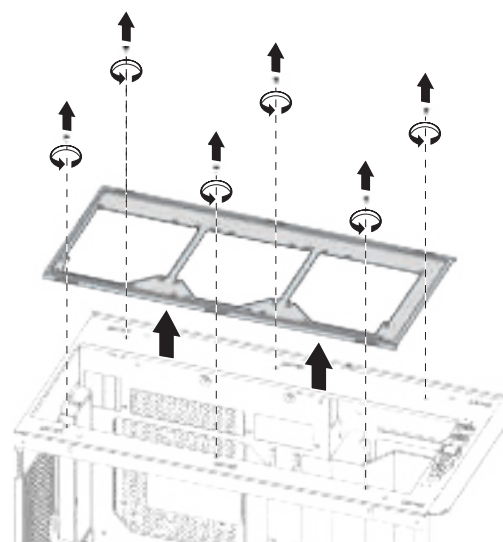 

4

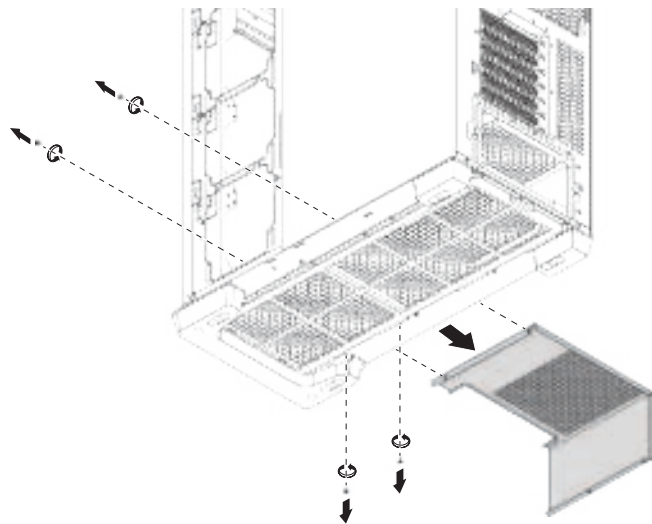 


5 120/240/360mm

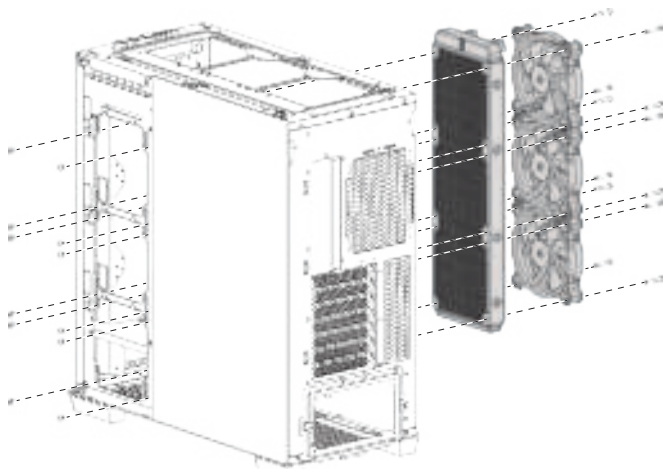  


1




 2

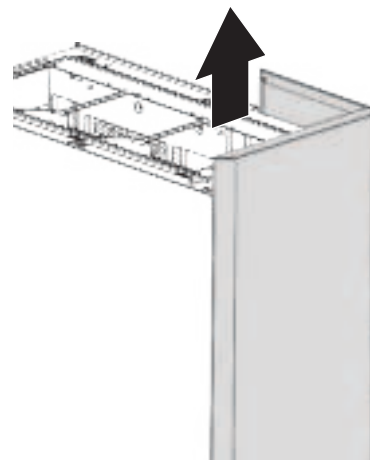

3

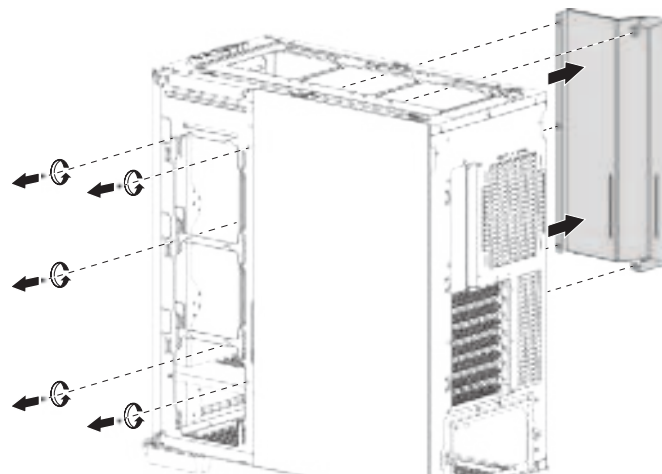 

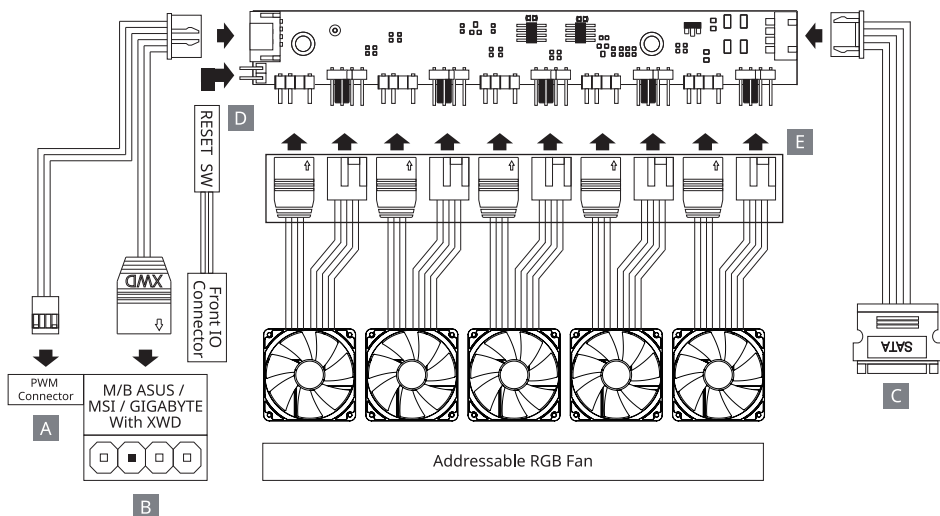 

English

Connection Set Up User Guide
For ASUS Aura Sync, MSI Mystic Light Sync, and GIGABYTE RGB Fusion Motherboards
1. Connect (A) to motherboard's PWM socket
2. Connect (B) to motherboard's Addressable RGB socket

For Non-Addressable RGB Motherboards
Connect (A) to motherboard's PWM socket

Connect the 2-Pin reset switch connector (D) with your hub.
Connect (C) to PSU's SATA connector
Use the RGB fan connectors (E) to connect the Addressable RGB fans with your hub.

Deutsch

Verbindungen herstellen
ASUS Aura Sync, MSI Mystic Light Sync, GIGABYTE RGB Fusion-Motherboards
1. (A) an den PWM-Sockel des Motherboards anschließen
2. (B) an den Addressable-RGB-Sockel des Motherboards anschließen

Motherboards ohne RGB-Adressierung
(A) an den PWM-Sockel des Motherboards anschließen

Schließen Sie den zweipoligen Reset-Verbinder (D) an den Hub an. (C) an den SATA-Anschluss des Netzteils anschließen
Verbinden Sie die adressierbaren RGB-Lüfter über die RGB-Lüfteranschlüsse (E) mit dem Hub.

Español

Guía del usuario: configuración de la conexión
Para placas base con sincronización de iluminación ASUS Aura Sync, MSI Mystic Light Sync, GIGABYTE RGB Fusion
1. Conecte (A) a la toma PWM de la placa base
2. Conecte (B) a la toma RGB direccionable de la placa base

Para placas base RGB no direccionables
Conecte (A) a la toma PWM de la placa base

 
Conecte el conector del interruptor de reinicio de dos clavijas (D) a su concentrador.
Conecte (C) al conector SATA de la PSU
Utilice los conectores del ventilador RGB (E) para conectar los ventiladores de la RGB direccionable con su concentrador.

Français


Guide de configuration de la connexion
Pour la synchronisation des cartes mères ASUS Aura Sync, MSI Mystic Light Sync, GIGABYTE RGB Fusion
1. Connectez (A) à la prise PWM de la carte mère.
2. Connectez (B) à la prise RVB adressable de la carte mère.

Pour les cartes mères RVB non adressables
Connectez (A) à la prise PWM de la carte mère.


Connectez le connecteur du commutateur de réinitialisation avec 2 broches (D) à votre concentrateur.
Connectez (C) au connecteur SATA de l'alimentation.
Utilisez les connecteurs de ventilateur RVB (E) pour connecter les ventilateurs RVB adressables à votre concentrateur.



1 120mm

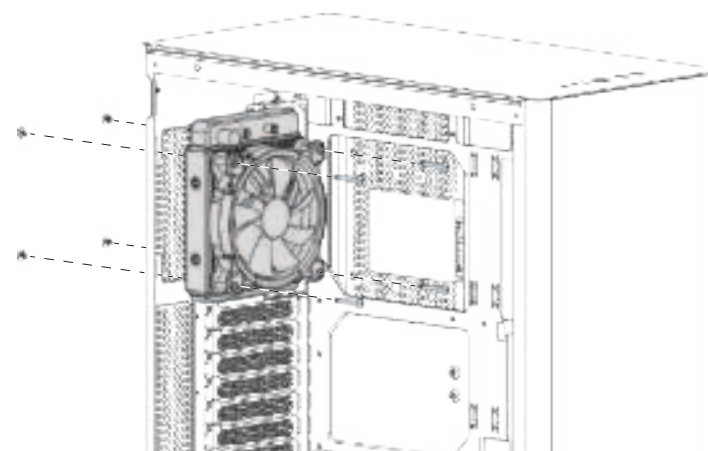 

I/O

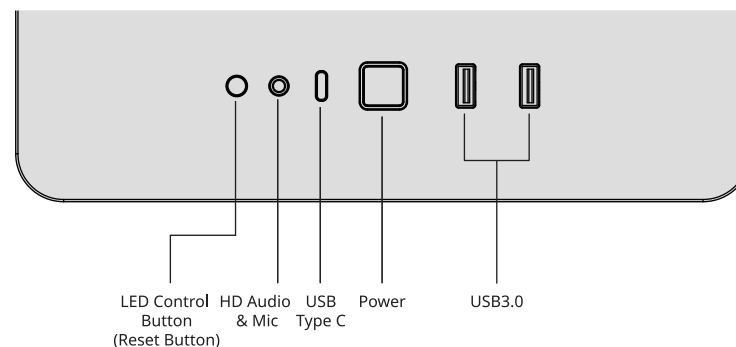 

Hold LED control button for 3 sec to switch between motherboard and button control
Hold LED control button for 6 secs to turn off LED and press once to turn it back on

Note :
Specifications may vary depending on your region Contact your local retailer for more information.
To learn more about how to connect your ARGB, please visit the product page at APNX.com

