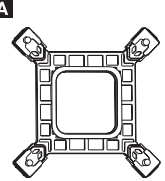 
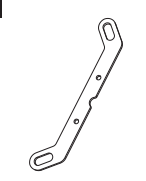 
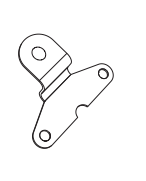 
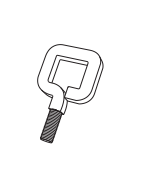 
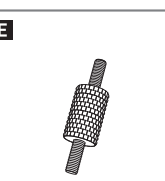 
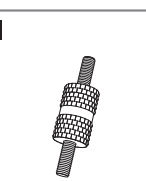 
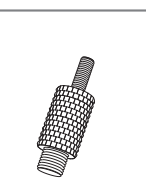 
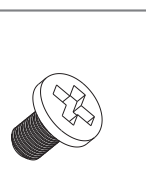 
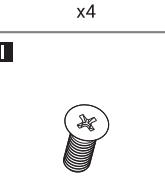 
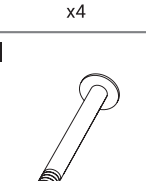 
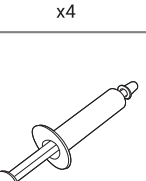 
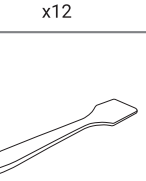 
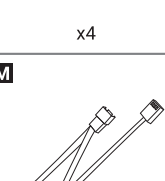 
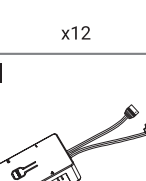 
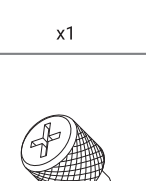 
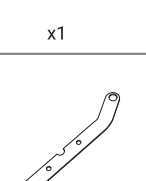 
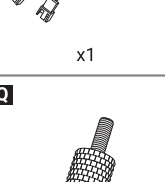 
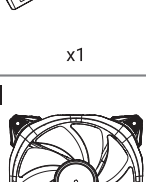 
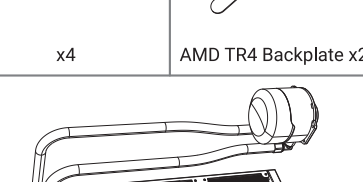 


# VORTEX 360

 
## MANUAL

### ACCESSORIES


<b>A</b>  Intel Backplate x1	<b>B</b>  Intel Backplate x2	<b>C</b>  AMD Backplate x2	<b>D</b>  Backplate x2
<b>E</b>  x4	<b>F</b>  x4	<b>G</b>  x4	<b>H</b>  x12
<b>I</b>  x4	<b>J</b>  x12	<b>K</b>  x1	<b>L</b>  x1
<b>M</b>  x1	<b>N</b>  x1	<b>O</b>  x4	<b>P</b>  AMD TR4 Backplate x2
<b>Q</b>  x4	<b>R</b>  x3	<b>S</b>  x1	

### INTEL PLATFORM INSTALLATION


**Intel 115X / 1200 / 1700**

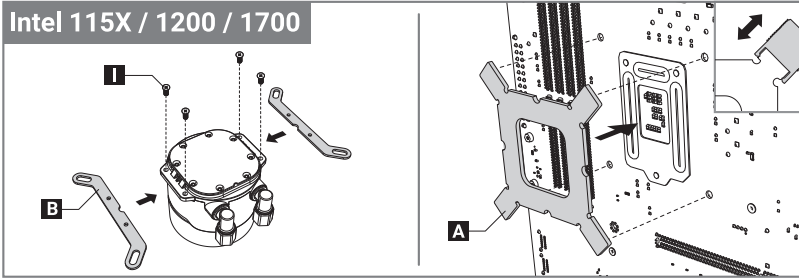


**Intel 115X / 1200**

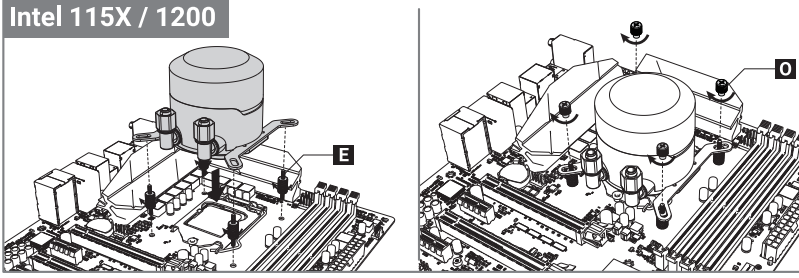 

**Intel 1700**


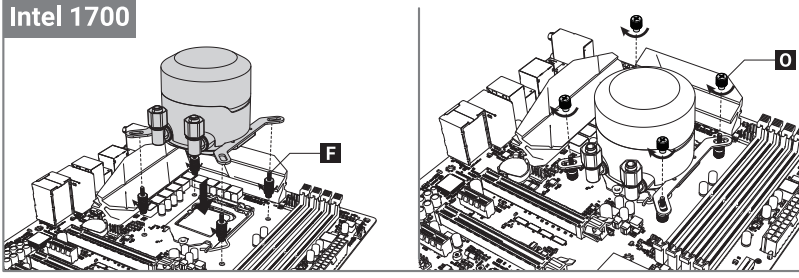 


**Intel 20XX**


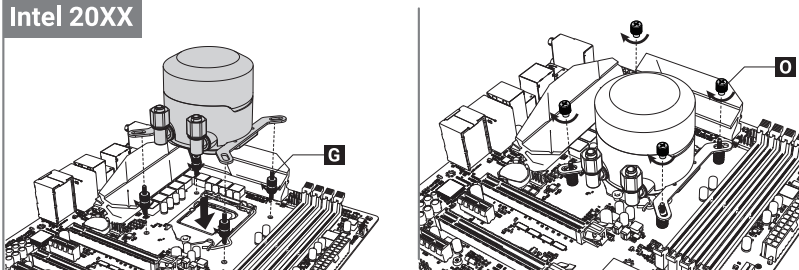 


### AMD PLATFORM INSTALLATION

  **AMD AM3 / AM4 / AM5**

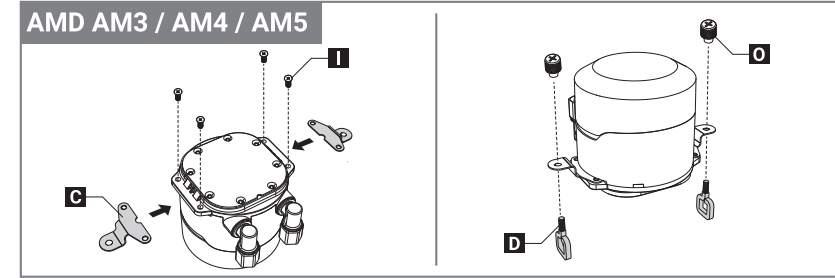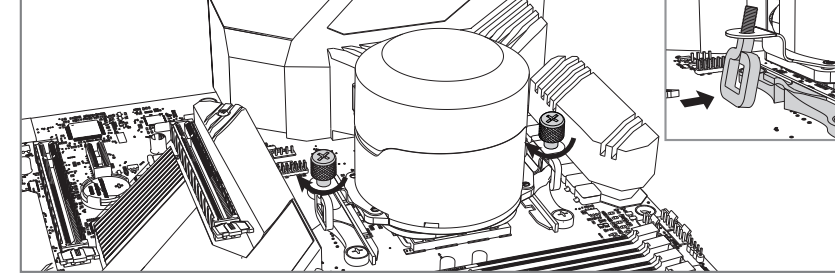



**AMD TR4**

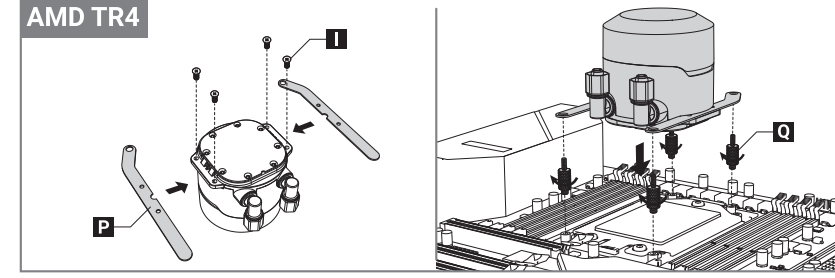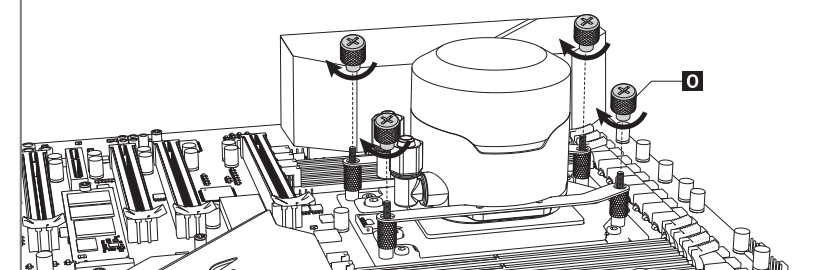  



## INSTALL THE PUMPHEAD & FAN
 
### Install the Pumphead

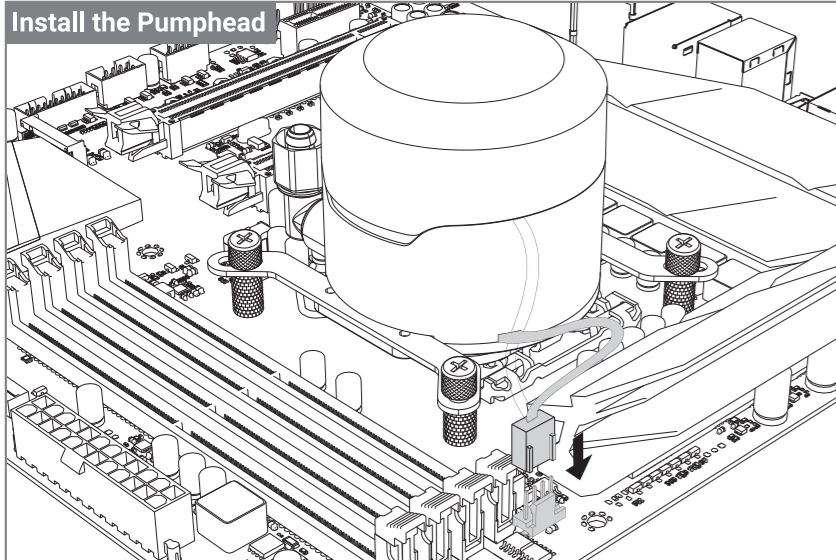


### Connect the Fan to the Motherboard

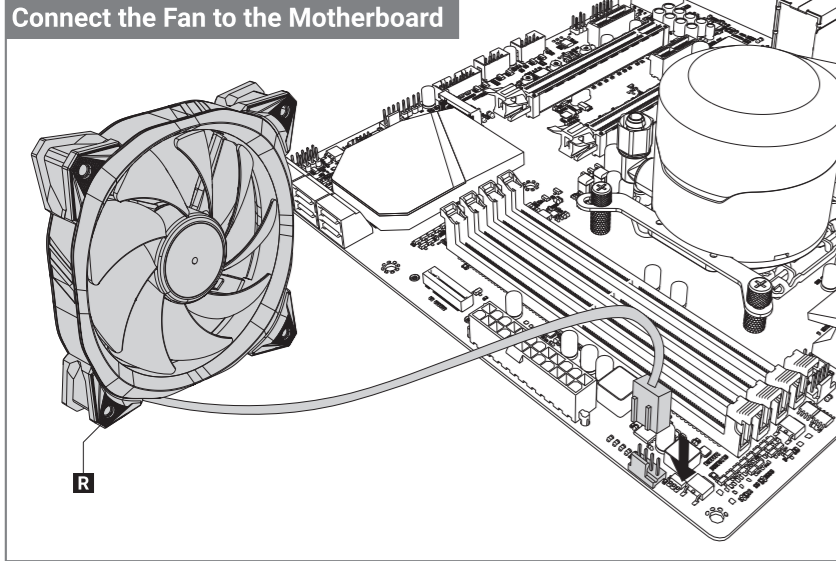 


## RADIATOR INSTALLATION
 
### Fan Installation

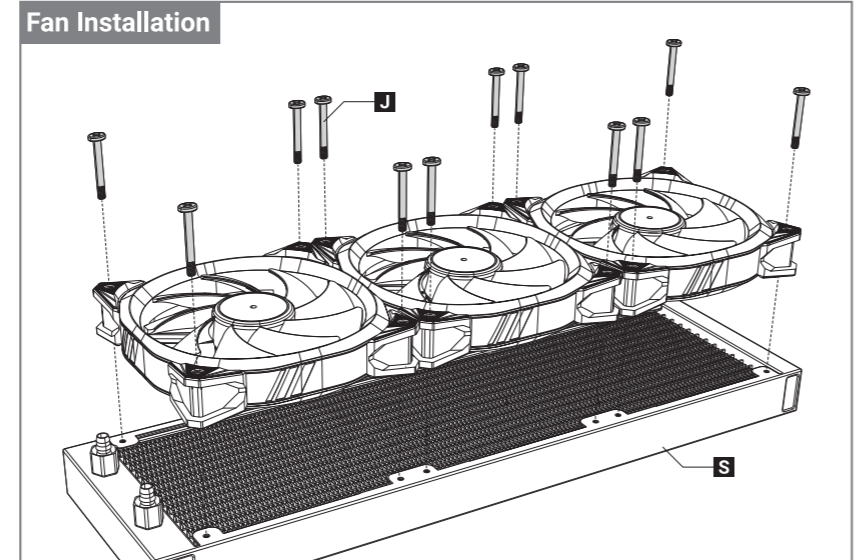


### Radiator Installation

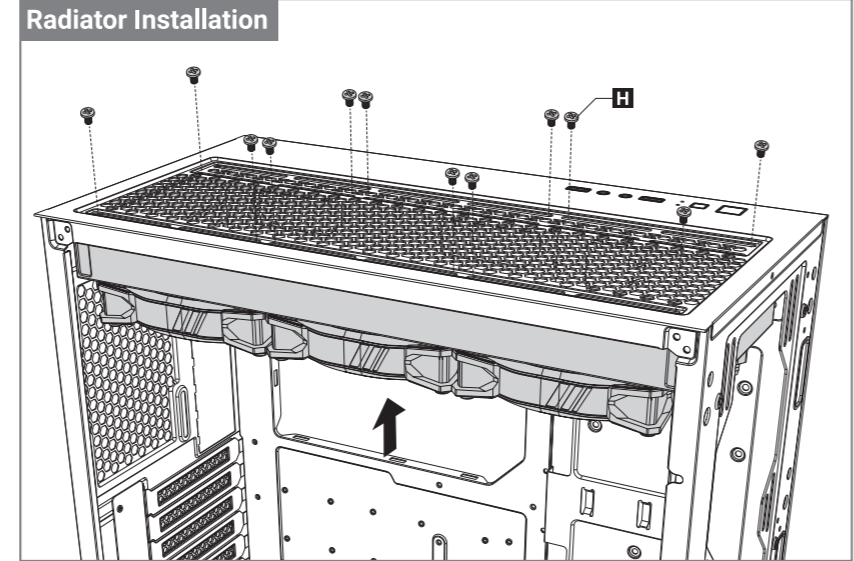 


## CONTROLLER
 
### Controller Description

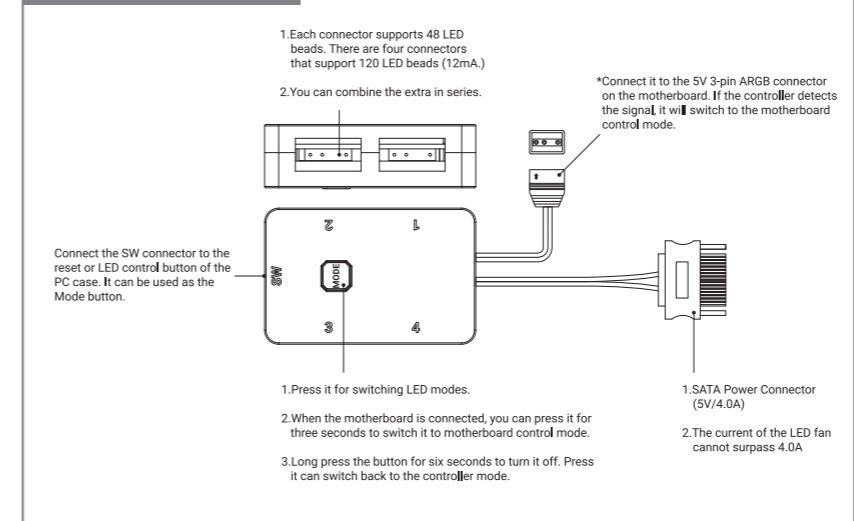

### Controller Installation

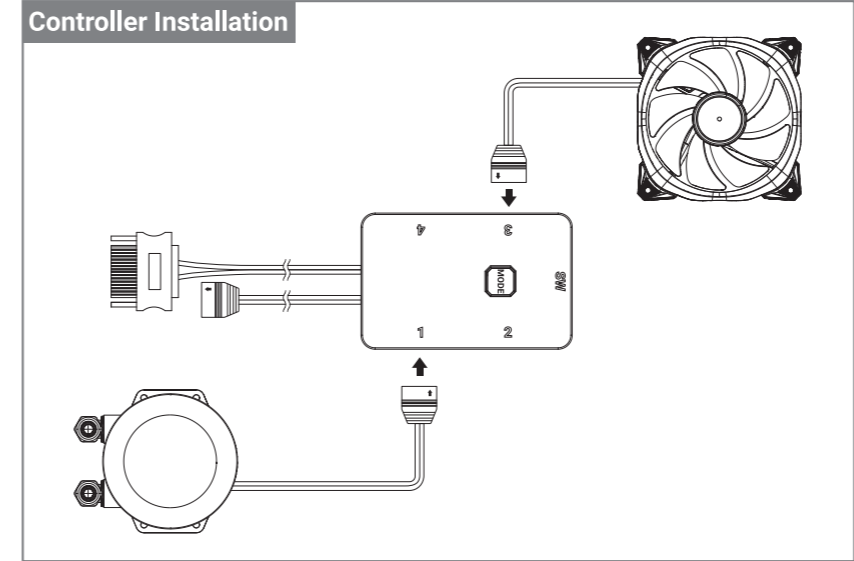 

**Antec**  
BELIEVE IT

[www.Antec.com](http://www.Antec.com)

All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

©1986 – 2022 Antec, Inc. All rights reserved.