


# Latitude 5350/Latitude 5350 2-in-1

## Owner's Manual

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.



<b>Chapter 1: Views of Latitude 5350/Latitude 5350 2-in-1.....</b>	<b>7</b>
Right.....	7
Left.....	8
Top.....	9
Front view of Latitude 5350 laptop.....	10
Front view of Latitude 5350 2-in-1.....	11
Bottom.....	12
Service Tag.....	12
Modes.....	13
Battery charge and status light .....	15
<b>Chapter 2: Set up your Latitude 5350/Latitude 5350 2-in-1.....</b>	<b>16</b>
<b>Chapter 3: Specifications of Latitude 5350/Latitude 5350 2-in-1.....</b>	<b>18</b>
Dimensions and weight.....	18
Processor.....	18
Chipset.....	20
Operating system.....	21
Memory.....	21
External ports.....	21
Internal slots.....	22
Wireless module.....	22
WWAN module.....	23
Audio.....	24
Storage.....	25
Keyboard.....	25
Keyboard function keys.....	25
Camera.....	27
Touchpad.....	27
Power adapter.....	28
Battery.....	29
Display.....	30
Fingerprint reader (optional).....	31
Sensor .....	32
GPU—Integrated.....	32
External display support.....	32
Hardware security.....	32
Smart-card reader.....	33
Contactless smart-card reader.....	33
Contacted smart-card reader.....	36
Operating and storage environment.....	37
Dell support policy.....	38
ComfortView Plus.....	38
Using the privacy shutter.....	38

Dell Optimizer.....	39
<b>Chapter 4: Working inside your computer.....</b>	<b>40</b>
Safety instructions.....	40
Before working inside your computer.....	40
Safety precautions.....	41
Electrostatic discharge—ESD protection.....	41
ESD Field Service kit .....	42
Transporting sensitive components.....	43
After working inside your computer.....	43
BitLocker.....	43
Recommended tools.....	43
Screw list.....	44
Major components of Latitude 5350/Latitude 5350 2-in-1.....	45
<b>Chapter 5: Removing and installing Customer Replaceable Units (CRUs).....</b>	<b>48</b>
SIM card tray.....	48
Removing the SIM card tray.....	48
Installing the SIM card tray.....	49
Base cover.....	50
Removing the base cover.....	50
Installing the base cover.....	53
M.2 solid state drive.....	55
Removing the M.2 2230 solid state drive (SSD).....	55
Installing the M.2 2230 solid state drive (SSD).....	56
Wireless card.....	57
Removing the wireless card.....	57
Installing the wireless card.....	58
Wireless Wide Area Network (WWAN) card.....	60
Removing the WWAN 4G card.....	60
Installing the WWAN 4G card.....	61
Removing the WWAN 5G card.....	63
Installing the WWAN 5G card.....	64
Fan.....	66
Removing the fan.....	66
Installing the fan.....	67
<b>Chapter 6: Removing and installing Field Replaceable Units (FRUs).....</b>	<b>69</b>
Battery.....	69
Removing the battery.....	69
Installing the battery.....	70
Battery cable.....	71
Removing the battery cable.....	71
Installing the battery cable.....	72
Coin-cell battery.....	74
Removing the coin-cell battery.....	74
Installing the coin-cell battery.....	74
Heat sink.....	75
Removing the heat sink.....	75

Installing the heat sink.....	76
System board.....	78
Removing the system board.....	78
Installing the system board.....	80
Speakers.....	84
Removing the speakers.....	84
Installing the speakers.....	85
Power-button board.....	87
Removing the power button.....	87
Installing the power button.....	88
Removing the power button with fingerprint reader.....	89
Installing the power button with fingerprint reader.....	90
Keyboard.....	91
Removing the keyboard.....	91
Installing the keyboard.....	93
Display assembly.....	96
Removing the display assembly.....	96
Installing the display assembly.....	98
Display bezel.....	101
Removing the display bezel (laptop).....	101
Installing the display bezel.....	102
Display hinges.....	103
Removing the display hinges (laptop).....	103
Installing the display hinges (laptop).....	104
Display panel.....	105
Removing the display panel (laptop).....	105
Installing the display panel (laptop).....	109
Display cable.....	111
Removing the display cable (laptop).....	111
Installing the display cable (laptop).....	112
Camera.....	113
Removing the camera (laptop).....	113
Installing the camera (laptop).....	114
Display back cover.....	116
Removing the display back cover (laptop).....	116
Installing the display back-cover (laptop).....	117
Sensor board.....	118
Removing the sensor board (laptop).....	118
Installing the sensor board (laptop).....	119
Smart-card reader.....	120
Removing the smart card reader (optional).....	120
Installing the smart card reader (optional).....	121
Dummy SIM-card slot filler.....	122
Removing the SIM-card slot filler.....	122
Installing the SIM-card slot filler.....	123
Palm-rest assembly.....	124
Removing the palm-rest assembly.....	124
Installing the palm-rest assembly.....	125

**Chapter 7: Software.....127**

Operating system.....	127
Drivers and downloads.....	127
<b>Chapter 8: BIOS Setup.....</b>	<b>128</b>
Entering BIOS setup program.....	128
Navigation keys.....	128
F12 One Time Boot menu.....	128
View Advanced Setup options.....	129
View Service options.....	129
System Setup options.....	129
Updating the BIOS.....	150
Updating the BIOS in Windows.....	150
Updating the BIOS in Linux and Ubuntu.....	150
Updating the BIOS using the USB drive in Windows.....	150
Updating the BIOS from the F12 One-Time boot menu.....	151
System and setup password.....	152
Assigning a System Setup password.....	152
Deleting or changing an existing system setup password.....	152
Clearing CMOS settings.....	153
Clearing BIOS (System Setup) and System passwords.....	153
<b>Chapter 9: Troubleshooting.....</b>	<b>154</b>
Handling swollen rechargeable Li-ion batteries.....	154
Locate the Service Tag or Express Service Code of your Dell computer .....	154
Dell SupportAssist Pre-boot System Performance Check diagnostics.....	155
Running the SupportAssist Pre-Boot System Performance Check.....	155
Built-in self-test (BIST).....	155
M-BIST.....	155
LCD Power rail test (L-BIST).....	156
LCD Built-in Self-Test (BIST).....	156
System-diagnostic lights.....	157
Recovering the operating system.....	158
Real-Time Clock (RTC Reset).....	158
Backup media and recovery options.....	158
Wi-Fi power cycle.....	158
Drain residual flea power (perform hard reset).....	158
<b>Chapter 10: Getting help and contacting Dell.....</b>	<b>160</b>

# Views of Latitude 5350/Latitude 5350 2-in-1

## Right

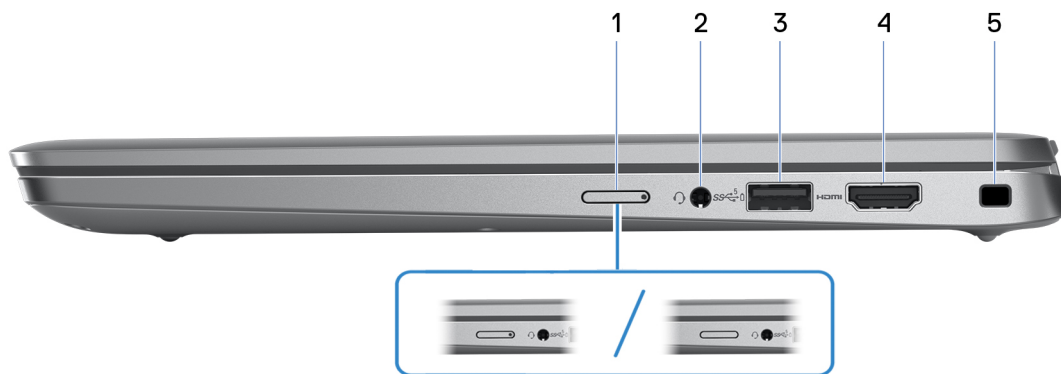


Figure 1. Right view

### 1. Nano-SIM card slot (optional)

Insert a nano-SIM card to connect to a mobile broadband network.

**NOTE:** Availability of the nano-SIM card slot depends on the region and configuration ordered.

### 2. Universal audio port

Connect headphones or a headset (headphone and microphone combo).

### 3. USB 3.2 Gen 1 port with PowerShare

Connect devices such as external storage devices and printers.

Provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.

**NOTE:** If your computer is turned off or in a hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.

**NOTE:** Certain USB devices may not charge when the computer is turned off or in a sleep state. In such cases, turn on the computer to charge the device.

### 4. HDMI 2.1 TMDs port

Connect to a TV, external display, or another HDMI-in enabled device. Provides video and audio output.

### 5. Security-cable slot (wedge-shaped)

Connect a security cable to prevent unauthorized movement of your computer.

# Left

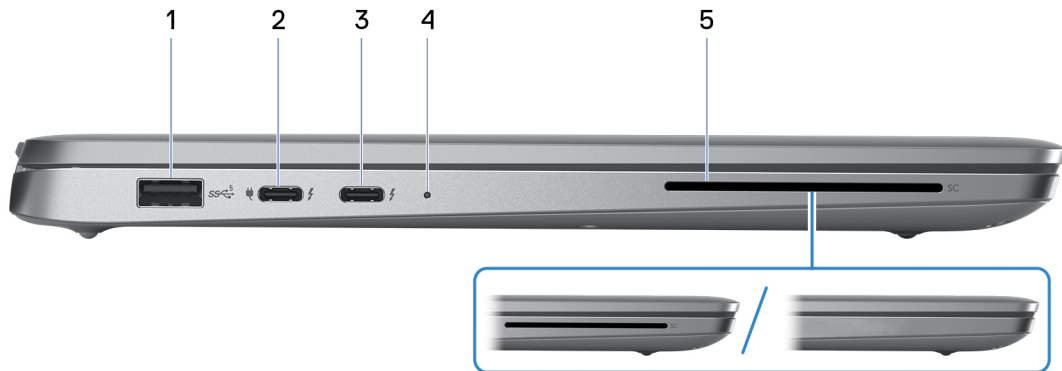


Figure 2. Left view

## 1. USB 3.2 Gen 1 port

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

## 2. Thunderbolt 4.0 with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery

Supports USB4, DisplayPort 2.1, Thunderbolt 4 and also enables you to connect to an external display using a display adapter. Provides data transfer rates of up to 40 Gbps for USB4 and Thunderbolt 4.

**NOTE:** You can connect a Dell Docking Station to the Thunderbolt 4 ports. For more information, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

**NOTE:** A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

**NOTE:** USB4 is backward compatible with USB 3.2, USB 2.0, and Thunderbolt 3.

**NOTE:** Thunderbolt 4 supports two 4K displays or one 8K display.

## 3. Thunderbolt 4.0 with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery

Supports USB4, DisplayPort 2.1, Thunderbolt 4 and also enables you to connect to an external display using a display adapter. Provides data transfer rates of up to 40 Gbps for USB4 and Thunderbolt 4.

**NOTE:** You can connect a Dell Docking Station to the Thunderbolt 4 ports. For more information, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

**NOTE:** A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

**NOTE:** USB4 is backward compatible with USB 3.2, USB 2.0, and Thunderbolt 3.

**NOTE:** Thunderbolt 4 supports two 4K displays or one 8K display.

## 4. Power and battery-status light

Indicates the power state and battery state of the computer.

- Solid white—Power adapter is connected and the battery is charging.
- Solid amber—Battery charge is low or critical.
- Off—Battery is fully charged.

## 5. Smart-card reader slot (optional)

Using smart cards provide authentication in corporate networks.

# Top

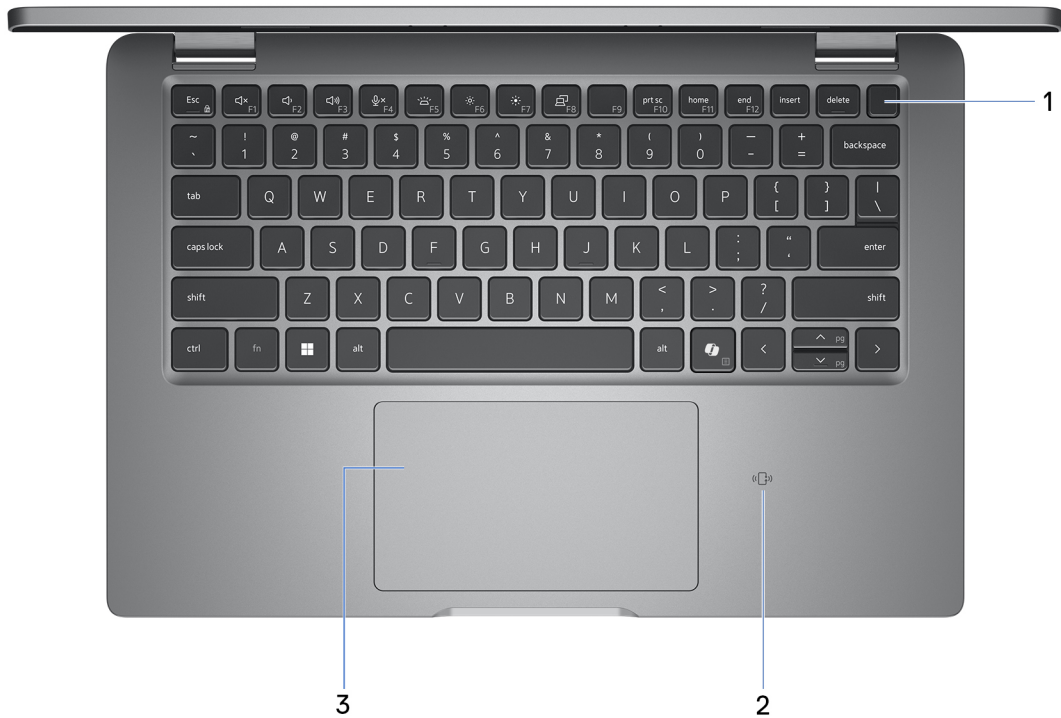


Figure 3. Top view

## 1. Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernating state.

When the computer is turned on, press the power button to put the computer into a sleep state. Press and hold the power button for 10 seconds to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button steadily to log in.

**NOTE:** You can customize the power-button behavior in Windows.

## 2. NFC or Contactless smart card reader (optional)

The NFC or Contactless smart card reader provides contactless access of cards in corporate networks.

## 3. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two fingers tap to right-click.

## Front view of Latitude 5350 laptop



Figure 4. Front view of Latitude 5350 laptop

**1. Left microphone**

Provides digital sound input for audio recording and voice calls.

**2. Camera**

Enables you to video chat, capture photos, and record videos.

**3. Camera shutter**

Slide the privacy shutter to the left to access the camera lens.

**4. Camera-status light**

Turns on when the camera is in use.

**5. Right microphone**

Provides digital sound input for audio recording and voice calls.



# Front view of Latitude 5350 2-in-1



Figure 5. Front view of Latitude 5350 2-in-1

**1. Left microphone**

Provides digital sound input for audio recording and voice calls.

**2. Infrared emitter (optional)**

Emits infrared light, which enables the infrared camera to sense and track motion.

**3. Infrared camera (optional)**

Enhances security when paired with Windows Hello face authentication.

**4. Camera**

Enables you to video chat, capture photos, and record videos.

**5. Camera shutter**

Slide the privacy shutter to the left to access the camera lens.

**6. Camera-status light**

Turns on when the camera is in use.

**7. Ambient-light sensor**

The sensor detects the ambient light and automatically adjusts the display brightness.

**8. Right microphone**

Provides digital sound input for audio recording and voice calls.

# Bottom

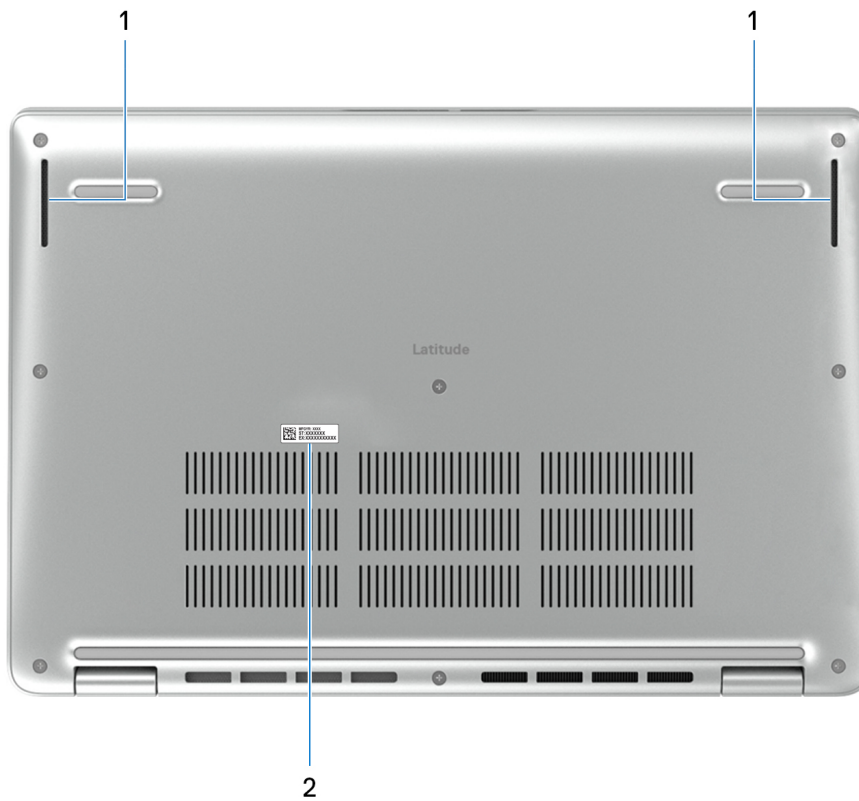


Figure 6. Bottom view

**1. Speakers**

Provide audio output.

**2. Service Tag label**

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

## Service Tag

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

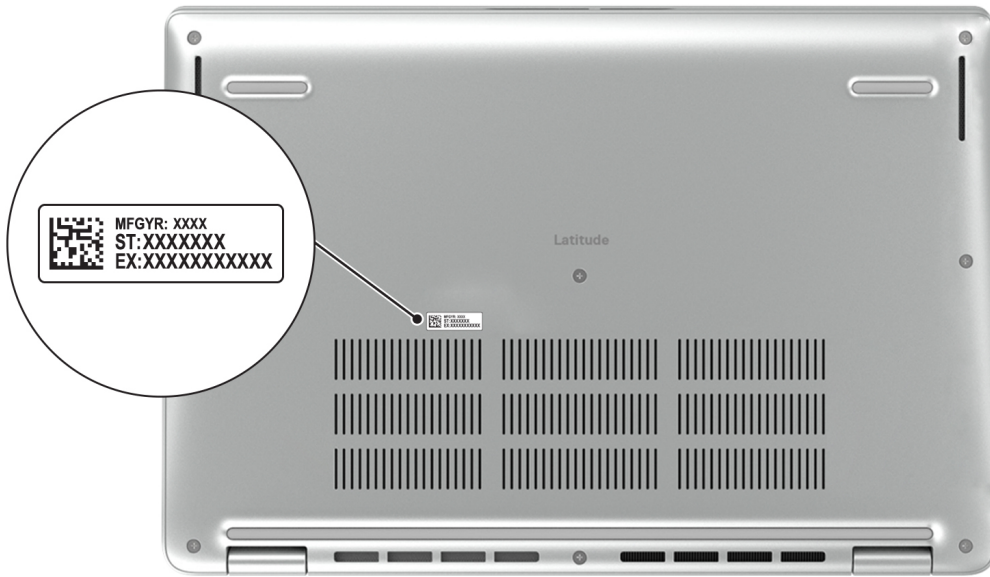


Figure 7. Service Tag location

## Modes

The following modes are applicable for your 2-in-1 computers.

### Notebook



Figure 8. Notebook mode

## Tablet



**Figure 9. Tablet mode**

## Stand



**Figure 10. Stand mode**

## Tent



Figure 11. Tent mode

## Battery charge and status light

The following table lists the battery charge and status light behavior of your Latitude 5350/Latitude 5350 2-in-1.

Table 1. Battery charge and status light behavior

Power Source	LED Behavior	System Power State	Battery Charge Level
AC Adapter	Off	S0 - S5	Fully Charged
AC Adapter	Solid White	S0 - S5	< Fully Charged
Battery	Off	S0 - S5	11-100%
Battery	Solid Amber (590+/-3 nm)	S0 - S5	< 10%

- S0 (ON) - System is turned on.
- S4 (Hibernate) - The system consumes the least power compared to all other sleep states. The system is almost at an OFF state, except for a trickle power. The context data is written to a hard drive.
- S5 (OFF) - The system is in a shutdown state.

# Set up your Latitude 5350/Latitude 5350 2-in-1

## About this task

**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Steps

1. Connect the power adapter and press the power button.



**Figure 12. Connect the power adapter and press the power button**

**NOTE:** The battery may go into power-saving mode during shipment to conserve charge on the battery. Ensure that the power adapter is connected to your computer when it is turned on for the first time.

2. Finish the operating system setup.

### For Ubuntu:

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

**NOTE:** Ubuntu is supported only on Latitude 5350 laptop and not on 2-in-1 configuration.

### For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell Technologies recommends that you:

- Connect to a network for Windows updates.






**NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the Internet, sign in with or create a Microsoft account.
- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended.



**Table 2. Locate Dell apps in Windows**


Resources	Description
	<p><b>Dell Product Registration</b> Register your computer with Dell.</p>
	<p><b>Dell Help &amp; Support</b> Access help and support for your computer.</p>
	<p><b>SupportAssist</b> SupportAssist is the smart technology that keeps your computer running at its best by optimizing settings, detecting issues, removing viruses and notifies when you must make computer updates. SupportAssist proactively checks the health of your computer hardware and software. When an issue is detected, the necessary system state information is sent to Dell to begin troubleshooting. SupportAssist is preinstalled on most of the Dell devices running the Windows operating system. For more information, see <i>SupportAssist for Business PCs manuals</i> at <a href="http://www.dell.com/support/home/product-support/product/supportassist-business-pcs/docs">www.dell.com/support/home/product-support/product/supportassist-business-pcs/docs</a>.</p> <p><b>NOTE:</b> In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p>
	<p><b>Dell Update</b> Updates your computer with critical fixes and latest device drivers as they become available. For more information about using Dell Update, see the product guides and third-party license documents at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>
	<p><b>Dell Digital Delivery</b> Download software applications, which are purchased but not preinstalled on your computer. For more information about using Dell Digital Delivery, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>

# Specifications of Latitude 5350/Latitude 5350 2-in-1

## Dimensions and weight

The following table lists the height, width, depth, and weight of your Latitude 5350/Latitude 5350 2-in-1.

**Table 3. Dimensions and weight**

Description	Values
Height:	
Front height	16.79 mm (0.66 in.)
Rear height	18.44 mm (0.73 in.)
Width	305.70 mm (12.04 in.)
Depth	207.50 mm (8.17 in.)
Weight  <b>NOTE:</b> The weight of your computer depends on the configuration that is ordered and manufacturing variability.	<ul style="list-style-type: none"> <li>Laptop: 1.23 kg (2.72 lb)</li> <li>2-in-1: 1.35 kg (2.98 lb)</li> </ul>

## Processor

The following table lists the details of the processors that are supported for your Latitude 5350/Latitude 5350 2-in-1.



**Table 4. Processor**

Description	Option one	Option two	Option three	Option four
Processor type	13th Gen Intel Core i3-1315U	13th Gen Intel Core i5-1335U	13th Gen Intel Core i5-1345U vPro	13th Gen Intel Core i7-1365U vPro
Processor wattage	15 W	15 W	15 W	15 W
Processor total core count	6	10	10	10
Performance-cores	2	2	2	2
Efficient-cores	8	8	8	8
Processor total thread counts <i>i</i> <b>NOTE:</b> Intel Hyper-Threading Technology is only available on Performance-cores.	8	12	12	12
Processor speed	Up to 4.50 GHz	Up to 4.60 GHz	Up to 4.70 GHz	Up to 5.20 GHz
Performance-cores frequency				
Processor base frequency	1.20 GHz	1.30 GHz	1.60 GHz	1.80 GHz
Maximum turbo frequency	4.50 GHz	4.60 GHz	4.70 GHz	5.20 GHz
Efficient-cores frequency				
Processor base frequency	0.90 GHz	0.90 GHz	1.20 GHz	1.30 GHz
Maximum turbo frequency	3.30 GHz	3.40 GHz	3.50 GHz	3.90 GHz
Processor cache	10 MB	12 MB	12 MB	12 MB
Integrated graphics	Intel UHD Graphics	Intel Iris Xe Graphics	Intel Iris Xe Graphics	Intel Iris Xe Graphics

**Table 5. Processor**

Description	Option five	Option six	Option seven
Processor type	Intel Core Ultra 5 125U	Intel Core Ultra 5 135U vPro	Intel Core Ultra 7 165U vPro
Processor wattage	15 W	15 W	15 W
Processor total core count	12	12	12
Performance-cores	2	2	2
Efficient-cores	<ul style="list-style-type: none"> <li>E-cores: 8</li> <li>LPE-cores: 2</li> </ul>	<ul style="list-style-type: none"> <li>E-cores: 8</li> <li>LPE-cores: 2</li> </ul>	<ul style="list-style-type: none"> <li>E-cores: 8</li> <li>LPE-cores: 2</li> </ul>
Processor total thread counts <i>i</i> <b>NOTE:</b> Intel Hyper-Threading Technology is only available on Performance-cores.	14	14	14
Processor speed	Up to 4.30 GHz	Up to 4.40 GHz	Up to 4.90 GHz
Performance-cores frequency			
Processor base frequency	1.30 GHz	1.60 GHz	1.70 GHz
Maximum turbo frequency	4.30 GHz	4.40 GHz	4.90 GHz
Efficient-cores frequency			
Processor base frequency	800 MHz	1.10 GHz	1.20 GHz
Maximum turbo frequency	3.60 GHz	3.60 GHz	3.80 GHz
Processor cache	12 MB	12 MB	12 MB
Integrated graphics	Intel Graphics	Intel Graphics	Intel Graphics

## Chipset

The following table lists the details of the chipset that is supported for your Latitude 5350/Latitude 5350 2-in-1.

**Table 6. Chipset**

Description	Values
Chipset	Integrated in the processor
Processor	<ul style="list-style-type: none"> <li>13th Gen Intel Core i3/i5/i7</li> <li>Intel Core Ultra 5/7</li> </ul>
DRAM bus width	64-bit
Flash EPROM	<ul style="list-style-type: none"> <li>13th Gen Intel Core i3 processor: 32 MB</li> <li>13th Gen Intel Core i5/i7 processors: 16 MB + 32 MB</li> <li>Intel Core Ultra 5/7 processors: 64 MB</li> </ul>

**Table 6. Chipset (continued)**

Description	Values
PCIe bus	Up to Gen4

## Operating system


Your Latitude 5350/Latitude 5350 2-in-1 supports the following operating systems:

- Windows 11 Pro
- Windows 11 Home
- Ubuntu Linux 22.04 LTS (applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration)

## Memory

The following table lists the memory specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 7. Memory specifications**

Description	Values
Memory slots	Dual-channel on-board memory  <b>NOTE:</b> The memory is integrated on the system board and is not upgradeable.
Memory type	<ul style="list-style-type: none"> <li>• LPDDR5</li> <li>• LPDDR5X</li> </ul>
Memory speed	<ul style="list-style-type: none"> <li>• For computers shipped with 13th Gen Intel Core i3/i5/i7 processors: 4800 MT/s</li> <li>• For computers shipped with Intel Core Ultra 5/7 processors: 6400 MT/s</li> </ul>
Maximum memory configuration	32 GB
Minimum memory configuration	8 GB
Memory configurations supported	For computers shipped with 13th Gen Intel Core i3/i5/i7 processors: <ul style="list-style-type: none"> <li>• 8 GB, LPDDR5, 4800 MT/s, dual-channel</li> <li>• 16 GB, LPDDR5X, 4800 MT/s, dual-channel</li> <li>• 32 GB, LPDDR5X, 4800 MT/s, dual-channel</li> </ul> For computers shipped with Intel Core Ultra 5/7 processors: <ul style="list-style-type: none"> <li>• 16 GB, LPDDR5X, 6400 MT/s, dual-channel</li> <li>• 32 GB, LPDDR5X, 6400 MT/s, dual-channel</li> </ul>

## External ports

The following table lists the external ports of your Latitude 5350/Latitude 5350 2-in-1.

**Table 8. External ports**

Description	Values
Network port	Not supported

**Table 8. External ports (continued)**

Description	Values
USB ports	<ul style="list-style-type: none"> <li>Two Thunderbolt 4 (40 Gbps) with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery</li> </ul> <p><b>NOTE:</b> You can connect a Dell Docking Station to this port. For more information, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p> <ul style="list-style-type: none"> <li>One USB 3.2 Gen 1 port with PowerShare</li> <li>One USB 3.2 Gen 1 port</li> </ul>
Audio port	One Universal audio port
Video port	One HDMI 2.1 TMDS port
Media-card reader	Not supported
Power-adaptor port	USB Type-C power input
Security-cable slot	One wedge-shaped lock slot
SIM-card slot	nano-SIM card slot (optional)

## Internal slots

The following table lists the internal slots of your Latitude 5350/Latitude 5350 2-in-1.

**Table 9. Internal slots**

Description	Values
M.2	<ul style="list-style-type: none"> <li>One M.2 2230 slot for WiFi and Bluetooth combo card</li> <li>One M.2 2230 slot for solid state drive</li> <li>One M.2 3042 slot for WWAN card</li> </ul> <p><b>NOTE:</b> To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>

## Wireless module

The following table lists the Wireless Local Area Network (WLAN) modules that are supported on your Latitude 5350/Latitude 5350 2-in-1.

**Table 10. Wireless module specifications**

Description	Option one	Option two
Model number	Realtek RTL8852BE	Intel AX211
Transfer rate	Up to 1201 Mbps	Up to 2400 Mbps
Frequency bands supported	2.4 GHz/5 GHz	2.4 GHz/5 GHz/6 GHz
Wireless standards	<ul style="list-style-type: none"> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> <li>Wi-Fi 6 (WiFi 802.11ax)</li> </ul>	<ul style="list-style-type: none"> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> </ul>

**Table 10. Wireless module specifications (continued)**

Description	Option one	Option two
		<ul style="list-style-type: none"> <li>Wi-Fi 6E (WiFi 802.11ax)</li> </ul> <p><b>NOTE:</b> Wi-Fi 6 is supported in regions where Wi-Fi 6E is unavailable.</p>
Encryption	<ul style="list-style-type: none"> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul>	<ul style="list-style-type: none"> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul>
Bluetooth wireless card	Bluetooth 5.3	Bluetooth 5.3
	<p><b>NOTE:</b> The version of the Bluetooth wireless card may vary depending on the operating system that is installed on your computer.</p>	

## WWAN module

The following table lists the Wireless Wide Area Network (WWAN) module supported on your Latitude 5350/Latitude 5350 2-in-1.

**Table 11. WWAN module specifications**

Description	Option one	Option two
Model number	Qualcomm Snapdragon SDX12 Advanced (DW5825e), CAT 12	Qualcomm Snapdragon X62 Global 5G Modem (DW5932e)
Form factor	M.2 3042 Key-B	M.2 3042 Key-B
Host interface	USB 3.0/2.0	PCIe Gen3
Network standard	LTE FDD/TDD, WCDMA/HSPA+, GNSS/Beidou, GPS/GLONASS/ Beidou/Galileo	NR FR1 (Sub6) FDD/TDD, LTE FDD/TDD, WCDMA/HSPA+, GPS/GLONASS/ Galileo/Beidou
Transfer data rate	<ul style="list-style-type: none"> <li>Up to 600 Mbps DL (CAT 12)</li> <li>Up to 150 Mbps UL</li> </ul>	<ul style="list-style-type: none"> <li>5G NR: DL 3.5 Gbps/UL 900 Mbps</li> <li>LTE: DL 1.6 Gbps (CAT19)/UL 211 Mbps (CAT18)</li> <li>UMTS: DL DC-HSPA+ Rel8:42 Mbps/UL 5.76 Mbps</li> </ul>
Operating frequency bands	<ul style="list-style-type: none"> <li>LTE(B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B17, B18, B19, B20, B25, B26, B28, B29, B30, B32, B38, B39, B40, B41, B42, B43, B48, B66, B71)</li> <li>HSPA+ (1,2,4,5,6,8,19)</li> </ul>	<ul style="list-style-type: none"> <li>NR(n1, n2, n3, n5, n7, n8, n20, n25, n28, n30, n38, n40, n41, n48, n66, n71, n77, n78, n79)</li> <li>LTE (B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B17, B18, B19, B20, B25, B26, B28, B29, B30, B32, B34, B38, B39, B40, B41, B42, B43, B46, B48, B66, B71*)</li> <li>WCDMA/HSPA+ (1, 2, 4, 5, 8)</li> </ul> <p>*Modem hardware supports but currently disabled</p>
Power supply	DC 3.135 V to 4.40 V, Typical 3.30 V	DC 3.135 V to 3.63 V, Typical 3.30 V
SIM card	Supported through external SIM slot	Supported through external SIM slot
eSIM with dual SIM (DSSA)	Supported	Supported

**Table 11. WWAN module specifications (continued)**

Description	Option one	Option two
	<p><b>i</b> <b>NOTE:</b> The availability of eSIM functionality that is embedded on the module depends the region and specific carrier requirements.</p>	<p><b>i</b> <b>NOTE:</b> The availability of eSIM functionality that is embedded on the module depends the region and specific carrier requirements.</p>
Antenna diversity	Supported	Supported
Radio On/Off	Supported	Supported
Wake on wireless	Supported	Supported
Temperature	<ul style="list-style-type: none"> <li>• Normal operating temperature: -10°C to +55°C</li> <li>• Extended operating temperature: -30°C to +75°C</li> </ul>	<ul style="list-style-type: none"> <li>• Normal operating temperature: -10°C to +55°C</li> <li>• Extended Operating temperature: -30°C to +75°C</li> <li>• Storage temperature: -40°C to +85°C</li> </ul>
Antenna connector	<ul style="list-style-type: none"> <li>• WWAN Main Antenna X 1</li> <li>• WWAN Diversity Antenna X 1</li> </ul>	<ul style="list-style-type: none"> <li>• WWAN Main Antenna X 1</li> <li>• WWAN Diversity Antenna X 1</li> <li>• 4x4 MIMO Antenna x 2</li> </ul>
<p><b>i</b> <b>NOTE:</b> For instructions on how to find your computer's International Mobile Equipment Identity (IMEI) number, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>		

## Audio

The following table lists the audio specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 12. Audio specifications**

Description	Values
Audio controller	Realtek Waves, MaxxAudio 13.0
Stereo conversion	Supported
Internal audio interface	High definition audio interface
External audio interface	Universal audio jack/HDMI 2.1 TMDS port
Number of speakers	2
Internal-speaker amplifier	Supported (audio codec integrated)
External volume controls	Keyboard shortcut controls
Speaker output:	
Average speaker output	2 W
Peak speaker output	2 W
Subwoofer output	Not supported
Microphone	Digital-array microphones in camera assembly

# Storage

This section lists the storage options on your Latitude 5350/Latitude 5350 2-in-1.

Your Latitude 5350/Latitude 5350 2-in-1 supports one M.2 2230 solid state drive

**Table 13. Storage specifications**

Storage type	Interface type	Capacity
M.2 2230 solid state drive	PCIe Gen4 NVMe, up to 64 Gbps	Up to 2 TB
M.2 2230 self-encrypting drive	PCIe Gen4 NVMe, up to 64 Gbps	512 GB

# Keyboard

The following table lists the keyboard specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 14. Keyboard specifications**

Description	Values
Keyboard type	<ul style="list-style-type: none"> <li>Standard backlit AI hotkey keyboard</li> <li>Standard non-backlit AI hotkey keyboard</li> </ul> <p><b>NOTE:</b> Copilot in Windows is available only in approved markets.</p>
Keyboard layout	QWERTY
Number of keys	<ul style="list-style-type: none"> <li>Arabic, English International, English US, Thai, French Canadian, Canada Bilingual (MUI), Chinese Traditional, Greek, Hebrew, Korean, Russian, and Ukrainian: 79 keys</li> <li>Spanish Latin America, Portuguese Brazil, Belgian, Bulgarian, Czech/Slovak (MUI), Estonian, Estonian, French (Canadian) Quebec, French European, German, Hungarian, Icelandic, Italian, Nordic (MUI), Norwegian, Slovenian, Slovenian, Spanish Castilian, Swedish/Finnish, Swiss/European (MUI), Turkish, Turkish (F), and English UK: 80 keys</li> <li>Japanese: 83 keys</li> </ul>
Keyboard size	<p>X=18.05 mm key pitch</p> <p>Y=18.05 mm key pitch</p>
Keyboard shortcuts	<p>Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.</p> <p><b>NOTE:</b> You can define the primary behavior of the function keys (F1–F12) changing <b>Function Key Behavior</b> in BIOS setup program.</p> <p>For more information, see <a href="#">Keyboard shortcuts</a>.</p>

## Keyboard function keys

The **F1-F12** keys at the top of the keyboard are function keys. By default, these keys are used to perform specific functions defined by the software application in use.

**Table 15. List of keyboard shortcuts**

Function key	Primary behavior
F1	Mute audio
F2	Decrease volume
F3	Increase volume
F4	Mute microphone
F5	Keyboard backlight <i>i</i> <b>NOTE:</b> Toggle to cycle the keyboard backlight status through off, low-backlight, and high-backlight.
F6	Decrease brightness
F7	Increase brightness
F8	Switch to external display
F10	Print Screen
F11	Home
F12	End
Copilot	Launch Copilot in Windows <i>i</i> <b>NOTE:</b> If Copilot in Windows is not available on your computer, the Copilot key launches Windows Search. For more information about Copilot in Windows, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a> .

You can run the secondary tasks that are indicated by the symbols on the function keys by pressing the function key with **fn**, for example, **fn** and **F1**. See the table below for the list of secondary tasks and the key combinations to run them.

*i* **NOTE:** Keyboard characters may differ depending on the keyboard language configuration. Keys that are used for tasks remain the same, regardless of the keyboard language.

*i* **NOTE:** You can define the primary behavior of function keys in the **Function Key Behavior** menu of the BIOS setup program.

**Table 16. Secondary tasks of keyboard keys**

Key combination for task	What the task does
<b>fn</b> and <b>F1</b>	Operating system and application-specific F1 behavior
<b>fn</b> and <b>F2</b>	Operating system and application-specific F2 behavior
<b>fn</b> and <b>F3</b>	Operating system and application-specific F3 behavior
<b>fn</b> and <b>F4</b>	Operating system and application-specific F4 behavior
<b>fn</b> and <b>F5</b>	Operating system and application-specific F5 behavior
<b>fn</b> and <b>F6</b>	Operating system and application-specific F6 behavior
<b>fn</b> and <b>F7</b>	Operating system and application-specific F7 behavior
<b>fn</b> and <b>F8</b>	Operating system and application-specific F8 behavior
<b>fn</b> and <b>F9</b>	Operating system and application-specific F9 behavior
<b>fn</b> and <b>F10</b>	Operating system and application-specific F10 behavior
<b>fn</b> and <b>F11</b>	Operating system and application-specific F11 behavior
<b>fn</b> and <b>F12</b>	Operating system and application-specific F12 behavior



## Keys with alternate characters

There are other keys on your keyboard with alternate characters. The symbols that are shown at the bottom of these keys are the main characters that are displayed when the key is pressed; the symbols that are shown at the top of these keys are displayed when the key is pressed with the shift key. For example, if you press **2**, **2** is displayed; if you press **Shift** and **2**, **@** is displayed.

## Camera

The following table lists the camera specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 17. Camera specifications**

Description		Values
Number of cameras		One
Camera type		<ul style="list-style-type: none"> <li>FHD RGB HDR camera</li> <li>FHD RGB-IR HDR camera</li> <li>FHD RGB-IR HDR camera with Ambient Light Sensor, Express Sign-In with Presence Detection and Intelligent Privacy</li> </ul>
Camera location		Front camera
Camera sensor type		CMOS sensor technology
Camera resolution:		
	Still image	2.07 megapixel
	Video	1920 x 1080 (FHD) at 30 fps
Infrared camera resolution:		
	Still image	0.23 megapixel
	Video	640 x 360 at 30 fps
Diagonal viewing angle:		
	Camera	80 degrees
	Infrared camera	86.60 degrees

## Touchpad

The following table lists the touchpad specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 18. Touchpad specifications**

Description		Values
Touchpad resolution:		>=300 dpi
Touchpad dimensions:		
	Horizontal	115.00 mm (4.52 in.)
	Vertical	67.00 mm (2.64 in.)


**Table 18. Touchpad specifications (continued)**

Description	Values
Touchpad gestures	For more information about touchpad gestures are available on: <ul style="list-style-type: none"> <li>Windows, see the Microsoft Knowledge Base article at <a href="https://support.microsoft.com">support.microsoft.com</a>.</li> <li>Ubuntu, see <a href="https://ubuntu.com/support">ubuntu.com/support</a>.</li> </ul>

## Power adapter

The following table lists the power adapter specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 19. Power adapter specifications**

Description	Option one	Option two	Option three	Option four
Type	60 W Ultralight Mini adapter, USB-C	60 W Ultralight Mini adapter, USB-C, 2-pin	65 W EcoDesign adapter, USB-C	100 W adapter, USB-C
Power-adapter dimensions:				
Height	22.00 mm (0.86 in.)	22.00 mm (0.86 in.)	28.00 mm (1.10 in.)	26.5 mm (1.04 in.)
Width	55.00 mm (2.16 in.)	55.00 mm (2.16 in.)	51.00 mm (2.01 in.)	60.00 mm (2.36 in.)
Depth	66.00 mm (2.59 in.)	66.00 mm (2.59 in.)	112.00 mm (4.41 in.)	122.00 mm (4.80 in.)
Input voltage	100 VAC-240 VAC	100 VAC-240 VAC	100 VAC-240 VAC	100 VAC-240 VAC
Input frequency	50 Hz-60 Hz	50 Hz-60 Hz	50 Hz to 60 Hz	50 Hz-60 Hz
Input current (maximum)	1.70 A	1.70 A	1.70 A	1.70 A
Output current (continuous)	<ul style="list-style-type: none"> <li>20 V/3 A (continuous)</li> <li>15 V/3 A (continuous)</li> <li>9 V/3 A (continuous)</li> <li>5 V/3 A (continuous)</li> </ul>	<ul style="list-style-type: none"> <li>20 V/3 A (continuous)</li> <li>15 V/3 A (continuous)</li> <li>9 V/3 A (continuous)</li> <li>5 V/3 A (continuous)</li> </ul>	<ul style="list-style-type: none"> <li>20 V/3.25 A (continuous)</li> <li>15 V/3 A (continuous)</li> <li>9 V/3 A (continuous)</li> <li>5 V/3 A (continuous)</li> </ul>	<ul style="list-style-type: none"> <li>20 V/5 A (continuous)</li> <li>15 V/3 A (continuous)</li> <li>9 V/3 A (continuous)</li> <li>5 V/3 A (continuous)</li> </ul>
Rated output voltage	<ul style="list-style-type: none"> <li>20 VDC</li> <li>15 VDC</li> <li>9 VDC</li> <li>5 VDC</li> </ul>	<ul style="list-style-type: none"> <li>20 VDC</li> <li>15 VDC</li> <li>9 VDC</li> <li>5 VDC</li> </ul>	<ul style="list-style-type: none"> <li>20 VDC</li> <li>15 VDC</li> <li>9 VDC</li> <li>5 VDC</li> </ul>	<ul style="list-style-type: none"> <li>20 VDC</li> <li>15 VDC</li> <li>9 VDC</li> <li>5 VDC</li> </ul>
Temperature range:				
Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)
Storage	-20°C to 70°C (-4°F to 158°F)	-20°C to 70°C (-4°F to 158°F)	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)
 <b>CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</b>				

# Battery

The following table lists the battery specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 20. Battery specifications**

Description	Option one	Option two	Option three	Option four		
Battery type	3 cell, 42 Wh, ExpressCharge, ExpressCharge Boost	3 cell, 42 Wh, Long Cycle Life, ExpressCharge	3 cell, 54 Wh, ExpressCharge, ExpressCharge Boost	3 cell, 54 Wh, Long Cycle Life, ExpressCharge		
Battery voltage	11.40 VDC	11.40 VDC	11.40 VDC	11.40 VDC		
Battery weight (minimum)	0.19 kg (0.41 lb)	0.19 kg (0.41 lb)	0.22 kg (0.48 lb)	0.22 kg (0.48 lb)		
Battery dimensions:						
	Height	5.73 mm (0.22 in.)	5.73 mm (0.22 in.)	5.73 mm (0.22 in.)	5.73 mm (0.22 in.)	
	Width	263 mm (10.35 in.)	263 mm (10.35 in.)	263 mm (10.35 in.)	263 mm (10.35 in.)	
	Depth	68.90 mm (2.71 in.)	68.90 mm (2.71 in.)	68.90 mm (2.71 in.)	68.90 mm (2.71 in.)	
Temperature range:						
	Operating	<ul style="list-style-type: none"> <li>Charge: 0°C to 45°C (32°F to 113°F)</li> <li>Discharge: 0°C to 70°C (32°F to 158°F)</li> </ul>	<ul style="list-style-type: none"> <li>Charge: 0°C to 45°C (32°F to 113°F)</li> <li>Discharge: 0°C to 70°C (32°F to 158°F)</li> </ul>	<ul style="list-style-type: none"> <li>Charge: 0°C to 45°C (32°F to 113°F)</li> <li>Discharge: 0°C to 70°C (32°F to 158°F)</li> </ul>	<ul style="list-style-type: none"> <li>Charge: 0°C to 45°C (32°F to 113°F)</li> <li>Discharge: 0°C to 70°C (32°F to 158°F)</li> </ul>	
	Storage	-20°C to 65°C (-4°F to 149°F)	-20°C to 65°C (-4°F to 149°F)	-20°C to 65°C (-4°F to 149°F)	-20°C to 65°C (-4°F to 149°F)	
Battery operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	
Battery charging time (approximate)	<p><b>Express Charge Method:</b></p> <ul style="list-style-type: none"> <li>0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours</li> <li>16°C to 45°C normal express charge</li> <li>46°C to 50°C maximum allowable charge time from 0% to 100% RSOC is 3 hours</li> </ul> <p><b>Standard Charge/ Predominately AC</b></p>	<p><b>Express Charge Method:</b></p> <ul style="list-style-type: none"> <li>0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours</li> <li>16°C to 50°C maximum allowable charge time from 0% to 100% RSOC is 3 hours</li> </ul>	<p><b>Express Charge Method:</b></p> <ul style="list-style-type: none"> <li>0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours</li> <li>16°C to 45°C normal express charge</li> <li>46°C to 50°C maximum allowable charge time from 0% to 100% RSOC is 3 hours</li> </ul> <p><b>Express Charge Method:</b></p>	<p><b>Standard Charge/ Predominately AC User Charge Method:</b></p> <ul style="list-style-type: none"> <li>0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours</li> <li>16°C to 50°C maximum allowable charge time from 0% to 100% RSOC is 3 hours</li> </ul>		

**Table 20. Battery specifications (continued)**

Description	Option one	Option two	Option three	Option four
	<p><b>User Charge Method:</b></p> <ul style="list-style-type: none"> <li>0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours</li> <li>16°C to 50°C maximum allowable charge time from 0% to 100% RSOC is 3 hours</li> </ul> <p><b>Express Charge Boost Charge Method (Fast Charge for Initial 35%):</b></p> <ul style="list-style-type: none"> <li>16°C to 45°C target charge time from 0% to 35% RSOC is 20 mins for Accelerated Charge</li> </ul>		<ul style="list-style-type: none"> <li>0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours</li> <li>16°C to 50°C maximum allowable charge time from 0% to 100% RSOC is 3 hours</li> </ul> <p><b>Express Charge Boost Charge Method (Fast Charge for Initial 35%):</b></p> <ul style="list-style-type: none"> <li>16°C to 45°C target charge time from 0% to 35% RSOC is 20 mins for Accelerated Charge</li> </ul>	
Coin-cell battery	CR2032	CR2032	CR2032	CR2032
<p><b>⚠ CAUTION:</b> Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</p> <p><b>⚠ CAUTION:</b> Dell recommends that you charge the battery regularly for optimal power consumption. If your battery charge is completely depleted, connect the power adapter, turn on your computer, and then restart your computer to reduce the power consumption.</p>				

## Display

The following table lists the display specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 21. Display specifications**

Description	Option one	Option two	Option three	Option four
Display type	13-inch Full High Definition (FHD)	13-inch Full High Definition (FHD), ComfortView Plus, Low Blue Light, Battery Saving	13-inch Full High Definition (FHD)	13-inch Full High Definition (FHD) <b>NOTE:</b> Applicable for 2-in-1 configuration only.
Display-panel technology	In-Plane Switching (IPS)	In-Plane Switching (IPS)	In-Plane Switching (IPS)	In-Plane Switching (IPS)
Display-panel dimensions (active area):				

**Table 21. Display specifications (continued)**

Description		Option one	Option two	Option three	Option four
	Height	165.24 mm (6.51 in.)	165.24 mm (6.51 in.)	165.24 mm (6.51 in.)	165.24 mm (6.51 in.)
	Width	293.76 mm (11.57 in.)	293.76 mm (11.57 in.)	293.76 mm (11.57 in.)	293.76 mm (11.57 in.)
	Diagonal	337.08 mm (13.27 in.)	337.08 mm (13.27 in.)	337.08 mm (13.27 in.)	337.08 mm (13.27 in.)
Display-panel native resolution		1920 x 1080	1920 x 1080	1920 x 1080	1920 x 1080
Luminance (typical)		250 nits	400 nits	300 nits	300 nits
Megapixels		2.07	2.07	2.07	2.07
Color gamut		45% NTSC	100% sRGB	72% NTSC	72% NTSC
Pixels Per Inch (PPI)		166	166	166	166
Contrast ratio (typical)		800:1	1000:1	700:1	800:1
Response time (maximum)		35 millisecond	35 millisecond	35 millisecond	35 millisecond
Refresh rate		60 Hz	60 Hz	60 Hz	60 Hz
Horizontal view angle		80/80 min. 85/85 typ. +/- degrees	80/80 min. 85/85 typ. +/- degrees	80/80 min. 85/85 typ. +/- degrees	80/80 min. 85/85 typ. +/- degrees
Vertical view angle		80/80 min. 85/85 typ. +/- degrees	80/80 min. 85/85 typ. +/- degrees	80/80 min. 85/85 typ. +/- degrees	80/80 min. 85/85 typ. +/- degrees
Pixel pitch		0.153 x 0.153 mm	0.153 x 0.153 mm	0.153 x 0.153 mm	0.153 x 0.153 mm
Power consumption (maximum)		3.50 W at Mosaic	2.52 W at Mosaic	4.40 W at Mosaic	4.50 W at Mosaic
Anti-glare vs glossy finish		Anti-Glare	Anti-Glare	Anti-Glare	Anti-reflection/Anti-smudge
Touch options		No	No	Yes	Yes

## Fingerprint reader (optional)

The following table lists the specifications of the optional fingerprint-reader of your Latitude 5350/Latitude 5350 2-in-1.

**Table 22. Fingerprint reader specifications**

Description	Values
Fingerprint-reader sensor technology	Capacitive
Fingerprint-reader sensor resolution	500 dpi
Fingerprint-reader sensor pixel size	108 x 88

# Sensor

The following table lists the sensor of your Latitude 5350/Latitude 5350 2-in-1.

**Table 23. Sensor**

Sensor support
Ambient Light Sensor on the hinge-up (optional)
P-sensor on the hinge-up (optional)
Accelerometer in the base (system board)
Accelerometer (Accelerometer + Gyro) in the hinge-up sensor board (Upsell on laptops with Proximity/ALS/IR camera and 100% attached on 2-in-1)

# GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Latitude 5350/Latitude 5350 2-in-1.


**Table 24. GPU—Integrated**

Controller	Memory size	Processor
Intel Iris Xe Graphics	Shared system memory	13th Generation Intel Core i5/i7 processors
Intel UHD Graphics	Shared system memory	13th Generation Intel Core i3 processor
Intel Graphics	Shared system memory	Intel Core Ultra 5/7 processors

# External display support

The following table lists the external display support for your Latitude 5350/Latitude 5350 2-in-1.

**Table 25. External display support**

Graphics card	Supported external displays with laptop display enabled	Supported external displays with laptop display disabled
Intel Iris Xe Graphics	3	4
Intel UHD Graphics	3	4
Intel Graphics	3	4
 <b>NOTE:</b> For more information about external display support, see the External Display Connection Guide on <a href="http://www.dell.com/support">www.dell.com/support</a> .		

# Hardware security

The following table lists the hardware security of your Latitude 5350/Latitude 5350 2-in-1.

**Table 26. Hardware security**

Hardware security
Trusted Platform Module (TPM) 2.0 discrete

**Table 26. Hardware security (continued)**

<b>Hardware security</b>
FIPS 140-2 certification for TPM
TCG Certification for TPM (Trusted Computing Group)
Finger Print Reader in Power Button available with and without ControlVault 3 Plus
ControlVault 3 Plus Advanced Authentication with FIPS 140-3 Level 3 Certification
Contacted Smart Card and ControlVault 3 Plus
Contactless Smart Card, NFC, and ControlVault 3 Plus
SED SSD NVMe, SSD, and hard drive (Opal and non-Opal) per SDL

## Smart-card reader

### Contactless smart-card reader

This section lists the contactless smart-card reader specifications of your Latitude 5350/Latitude 5350 2-in-1. This module is only available in computers shipped with Smart-card readers.

**Table 27. Contactless smart-card reader specifications**

<b>Title</b>	<b>Description</b>	<b>Dell ControlVault 3 Plus Contactless smart-card reader with NFC</b>
Felica Card Support	Reader and software capable of supporting Felica contactless cards	Yes
Prox (Proximity) (125 KHz) Card support	Reader and software capable of supporting Prox /Proximity/125 kHz contactless cards	No
ISO 14443 Type A Card Support	Reader and software capable of supporting ISO 14443 Type A contactless cards	Yes
ISO 14443 Type B Card Support	Reader and software capable of supporting ISO 14443 Type B contactless cards	Yes
ISO/IEC 21481	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO/IEC 18092	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO 15693 Card Support	Reader and software capable of supporting ISO15693 contactless cards	Yes
NFC Tag Support	Supports reading and processing of NFC compliant tag information	Yes
NFC Reader Mode	Support for NFC Forum Defined Reader mode	Yes
NFC Writer Mode	Support for NFC Forum Defined Writer mode	Yes
NFC Peer-to-Peer Mode	Support for NFC Forum Defined Peer to Peer mode	Yes

**Table 27. Contactless smart-card reader specifications (continued)**

Title	Description	Dell ControlVault 3 Plus Contactless smart-card reader with NFC
NFC Proximity OS Interface	Enumerates NFP (Near Field Proximity) device for operating system to utilize	Yes
PC/SC operating system interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for operating system level drivers	Yes
Dell ControlVault support	The device connects to Dell ControlVault for usage and processing	Yes

**NOTE:** 125 KHz proximity cards are not supported.

**Table 28. Contactless card types supported**

Interface	Card type	Supported functionality
NFC Forum (Microsoft Proximity Device)	Type 1 tag	Read/Write NDEF
	Type 2 tag	Read/Write NDEF
	Type 3 tag	Read/Write NDEF
	Type 4 tag	Read/Write NDEF
	Type 5 tag	Read/Write NDEF
	P2P	Exchange NDEF
RFID (Microsoft Smartcard Device)	ISO14443A	Read UUID and APDU Exchange (ISO7816)
	ISO14443B	Read UUID and APDU Exchange (ISO7816)
	Sony FeliCa	Read UUID only
	Legacy iClass (ISO15693)	Read UUID only
	Mifare Classic	Read UUID only
	Low Frequency (125 KHz )	Not supported

**Table 29. Supported cards**

Manufacturer	Card
HID	jCOP readertest3 A card (14443a)
	1430 1L
	DESFire D8H
	DESFIRE 4K Standard - 1450NGGNN
	iClass 16K/16 - 2002PGGMN
	iClass SR 16K/16 - 2002HPGGMN
	iCLASS 2K tag
	iCLASS GP - 2003 PGGMN
	iClass Clamshell - 2080PMSMV



**Table 29. Supported cards (continued)**

Manufacturer	Card
	iClass Prox 16K/16 - 2022BGGMNN
	Mifare M1P 1430 NGGNN
	iclass Prox 2020BGGMNM
	DesFire D8P 1456CSGMN
	iCLASS MIFARE Px GM49Y 2623BNPGGBNAB
	iCLASS MIFARE Px 8M1L
	iClass SEOS JW 5006PGGMN
	Crescendo iCLASS Px G8H
	iCLASS Seos 1Y
	SEOS JMC4 J1Y 5806VNG1NNN4
	SEOS Key FOB 5266PNNA
	SEOS Clamshell 5656PMSAV
	SEOS + Prox 5106RGGMNN
	SEOS + DESFire 5906PNG1ANN7
	SEOS iClass 5006PGGMN7
	Seos Essential + Prox 551PPGGANN
	iCLASS 2K 2000PGGMN
	iCLASS 2K 3000PGGMN
	MIFARE DESFire 3700CPGGAN
	iCLASS DP
	DESFire 1Y
NXP/Mifare	Mifare DESFire 8K White PVC card
	Mifare Classic 1K White PVC card
	NXP Mifare Classic S50 ISO card
	Mifare DESFire 2K
	Mifare Plus S 2K/4K
	Mifare Plus X 4K
G&D	idOnDemand - SCE3.2 144K
	SCE6.0 FIPS 80K Dual + 1K Mifare
	SCE6.0 nonFIPS 80K Dual + 1K Mifare
	SCE6.0 FIPS 144K Dual + 1K Mifare
	SCE6.0 nonFIPS 144K Dual + 1K Mifare
	SCE7.0 FIPS 144K
Oberthur	idOnDemand - OCS5.2 80K
	ID-One Cosmo 64 RSA D V5.4 T = 0 card
	ID-One Cosmo 128K V5.5 card
Gemalto	TOP DL GX4 144K card

**Table 29. Supported cards (continued)**

Manufacturer	Card
Sony	Felica RC-S962
	Felica RC-S965
	Felica RC-S966
PIVKey	C910 PKI
NIST	PIV1
IDENTIV	PIV programmed cards
	uTrust
Transport cards	Oyster (London) MIFARE DESFire
	T-Money (Korea)
	Octopus Card (Hong Kong)
	SUICA (Japan)

**Table 30. Qualified NFC tags**

NFC tag	Supported
Tap and do - NFC Forum Type 1 Tag - Topaz 512 (BCM920203)	Yes
Tap and do - NFC Forum Type 1 Tag - Topaz 512 (BCM20203T512)	Yes
Tap and do - NFC Forum Type 1 Tag - Topaz (BCM20203T96)	Yes
Tap and do - NFC Forum Type 2 Tag - Mifare UltraLight	Yes
Tap and do - NFC Forum Type 2 Tag - Mifare UltraLight C	Yes
Tap and do - NFC Forum Type 2 Tag - NTAG203	Yes
Tap and do - NFC Forum Type 3 Tag - FeliCa Lite RC-S965	Yes
Tap and do - NFC Forum Type 3 Tag - FeliCa RC-S962	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 2K	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 4K	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 8K	Yes
Tap and do - ISO 15693 - Tag-it Plus	Yes
HID I-code ISO card	Yes

## Contacted smart-card reader

The following table lists the contacted smart-card reader specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Table 31. Contacted smart-card reader specifications**

Title	Description	Dell ControlVault 3 Plus Contacted smart-card reader
ISO 7816-3 Class A Card Support	Reader capable of reading 5 V powered smart card	Yes

**Table 31. Contacted smart-card reader specifications (continued)**

Title	Description	Dell ControlVault 3 Plus Contacted smart-card reader
ISO 7816-3 Class B Card Support	Reader capable of reading 3 V powered smart card	Yes
ISO 7816-3 Class C Card support	Reader capable of reading 1.8 V powered smart card	Yes
T = 0 support	Cards support character level transmission	Yes
T = 1 support	Cards support block level transmission	Yes
EMVCo Certified	Formally certified based on EMVCo smart card standards	Yes
PC/SC operating system interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for operating system level drivers	Yes
Windows Certified	Certified by the Windows Hardware Certification program	Yes
FIPS 201 (PIV/HSPD-12) Compliant	Device compliant with FIPS 201/PIV/HSPD-12 requirements	Yes
ISO 7816-1 Compliant	Specification for the physical characteristics of integrated circuit cards with contacts	Yes
ISO 7816-2 Compliant	Specification for the dimensions and location of the contacts	Yes
ISO 7816-3 Compliant	Specification for electrical interface and transmission protocols	Yes
ISO 7816-4 Compliant	Specification for organization, security and commands for interchange	Yes
Dell ControlVault support	Device connects to Dell ControlVault for usage and processing	Yes

## Operating and storage environment


This table lists the operating and storage specifications of your Latitude 5350/Latitude 5350 2-in-1.

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

**Table 32. Computer environment**

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G†

**Table 32. Computer environment (continued)**

Description	Operating	Storage
Altitude range	-15.2 m to 3048 m (-49.87 ft to 10,000 ft)	-15.2 m to 10,668 m (-49.87 ft to 35,000 ft)
 <b>CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</b>		

\* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.

## Dell support policy

For information about Dell support policy, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

## ComfortView Plus

 **WARNING: Prolonged exposure to blue light from the display may lead to long-term effects such as eye strain, eye fatigue, or damage to the eyes.**

Blue light is a color in the light spectrum which has a short wavelength and high energy. Chronic exposure to blue light, particularly from digital sources, may disrupt sleep patterns and cause long-term effects such as eye strain, eye fatigue, or damage to the eyes.

The display on this computer is designed to minimize blue light and complies with TÜV Rheinland's requirement for low blue light displays.

Low blue light mode is enabled at the factory, so no further configuration is necessary.

To reduce the risk of eye strain, it is also recommended that you:

- Position the display at a comfortable viewing distance between 20 and 28 inches (50 cm and 70 cm) from your eyes.
- Blink frequently to moisten your eyes, wet your eyes with water, or apply suitable eye drops.
- Look away from your display, and gaze at a distant object at 20 ft (609.60 cm) away for at least 20 seconds during each break.
- Take an extended break for 20 minutes every two hours.

## Using the privacy shutter

1. Slide the privacy shutter to the left to access the camera lens.
2. Slide the privacy shutter to the right to cover the camera lens.



**Figure 13. Camera shutter**

## Dell Optimizer

This section details the Dell Optimizer specifications of your Latitude 5350/Latitude 5350 2-in-1.

Dell Optimizer is a software application that intelligently optimizes the performance of your computer by using artificial intelligence and machine learning. Dell Optimizer dynamically configures your computer settings to optimize the performance of your applications. It improves the productivity, performance, and user experience through computer usage analysis and learning.

On Latitude 5350/Latitude 5350 2-in-1 with Dell Optimizer, the following features are supported:











- Improves user experience through computer usage analysis and learning
- Faster application launch and seamless application transition
- Intelligent battery run-time extension
- Optimized Audio for best meeting experience
- Locks computer when walks away for enhanced security
- Faster computer wake-on-user approach
- Intelligently shows alerts
- Updates automatically to minimize disruption

For more information about configuring and using these features, search for the Dell Optimizer User Guide at [www.dell.com/support](http://www.dell.com/support).

# Working inside your computer



## Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.

-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that is shipped with the product or at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the ports and the connectors are correctly oriented and aligned.
-  **CAUTION:** Press and eject any installed card from the media-card reader.
-  **CAUTION:** Exercise caution when handling rechargeable Li-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.
-  **NOTE:** The color of your computer and certain components may differ from what is shown in this document.

## Before working inside your computer


### Steps


1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start** >  **Power** > **Shut down**.
  -  **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
3. Disconnect your computer and all attached devices from their electrical outlets.
4. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.

5. Remove any media card and optical disk from your computer, if applicable.
6. Enter the service mode, if you can turn on your computer.


### Service Mode

Service Mode is used to cut off power, without disconnecting the battery cable from the system board prior to conducting repairs in the computer.

 **CAUTION:** If you are unable to turn on the computer to put it into Service Mode, or the computer does not support Service Mode, proceed to disconnect the battery cable. To disconnect the battery cable, follow the steps in [Removing the battery](#).

 **NOTE:** Ensure that your computer is shut down and the AC adapter is disconnected.

- a. Hold the **<B>** key on the keyboard and press the power button for 3 seconds or until the Dell logo appears on the screen.
- b. Press any key to continue.
- c. If the AC adapter is not disconnected, a message prompting you to remove the AC adapter appears on the screen. Remove the AC adapter and then press any key to continue the **Service Mode** process. The **Service Mode** process automatically skips the following step if the **Owner Tag** of the computer is not set up in advance by the user.
- d. When the **ready-to-proceed** message appears on the screen, press any key to proceed. The computer emits three short beeps and shuts down immediately.
- e. Once the computer shuts down, it has successfully entered Service Mode.

 **NOTE:** If you are unable to turn on your computer or unable to enter Service Mode, skip this process.

## Safety precautions

The safety precautions chapter details the primary steps to be taken before performing any disassembly instructions.

Observe the following safety precautions before you perform any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer and all attached peripherals from AC power.
- Disconnect all network cables, telephone, and telecommunications lines from the computer.
- Use an ESD field service kit when working inside any to avoid electrostatic discharge (ESD) damage.
- After removing any computer component, carefully place the removed component on an anti-static mat.
- Wear shoes with non-conductive rubber soles to reduce the chance of getting electrocuted.
- Unplugging, pressing, and holding the power button for 15 seconds should discharge residual power in the system board.

## Standby power

Dell products with standby power must be unplugged before you open the case. Systems that incorporate standby power are powered while turned off. The internal power enables the computer to be remotely turned on (Wake-on-LAN) and suspended into a sleep mode and has other advanced power management features.

## Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. The wrist strap should be secure and in full contact with your skin, and ensure that you remove all jewelry such as watches, bracelets, or rings prior to bonding yourself and the equipment.

## Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. Slight charges can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.



Due to the increased density of semiconductors used in recent Dell products, the sensitivity to static damage is now higher than in previous Dell products. For this reason, some previously approved methods of handling parts are no longer applicable.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory DIMM that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The DIMM receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.

The more difficult type of damage to recognize and troubleshoot is the intermittent (also called latent or "walking wounded") failure.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, ensure that you discharge static electricity from your body.
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

## ESD Field Service kit

The unmonitored Field Service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

### Components of an ESD field service kit

The components of an ESD field service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the mat. ESD-sensitive items are safe in your hand, on the ESD mat, in the computer, or inside an ESD bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the ESD mat is not required, or connected to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the ESD mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, mat, and bonding wire. Never use wireless wrist straps. Always be aware that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap prior to each service call, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. If you do not have your own wrist strap tester, check with your regional office to find out if they have one. To perform the test, plug the bonding-wire of wrist-strap into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.
- **Insulator Elements** – It is critical to keep ESD sensitive devices, such as plastic heat sink casings, away from internal parts that are insulators and often highly charged.
- **Working Environment** – Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as Styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.



- **ESD Packaging** – All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged part using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the ESD mat, in the computer, or inside an anti-static bag.
- **Transporting Sensitive Components** – When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

## ESD protection summary


It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while performing service and use anti-static bags for transporting sensitive components.

## Transporting sensitive components


When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

## After working inside your computer


### About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.

### Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other parts that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
  -  **NOTE:** To exit service mode, ensure to connect the AC adapter to the power-adapter port on your computer.
5. Press the power button to turn on the computer. Your computer will automatically return to normal functioning mode.

## BitLocker

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the system will ask for the recovery key on each reboot. If the recovery key is not known, this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, see [Knowledge Article: updating the BIOS on Dell systems with BitLocker enabled](#).

The installation of the following components triggers BitLocker:

- Hard disk drive or solid-state drive
- System board

## Recommended tools
















The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Plastic scribe








# Screw list

- i NOTE:** When removing screws from a component, it is recommended to note the screw type, and the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.
- i NOTE:** Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.
- i NOTE:** Screw color may vary with the configuration ordered.

**Table 33. Screw list**

Component	Screw type	Quantity	Screw image
Base cover	M2.5x6 (captive screw)	8	
Battery	M2x4.5, OD4.6, T0.8 (captive screw)	5	
M.2 2230 SSD	M2x2.5	2	
4G WWAN bracket	M2x3.5	1	
5G WWAN bracket	M2x3.5	1	
5G WWAN thermal shield	M2x3	2	
Fan	M2x3	3	
Fingerprint-reader bracket	M2x3	1	
eDP bracket	M2x4	1	
USB Type-C bracket	M2x5	3	
System board	M2x4	1	
	M2x3	4	
Power button	M2x2	1	
Power button with fingerprint reader	M2x2	1	
Keyboard bracket	M2x2	18	

**Table 33. Screw list (continued)**

Component	Screw type	Quantity	Screw image
Keyboard	M2x2	2	
Left hinge (display hinge to system board)	M2.5x4	2	
Right hinge (display hinge to system board)	M2.5x4	2	
Left hinge (display hinge to display back cover)	M2.5x3	3	
Right hinge (display hinge to display back cover)	M2.5x3	3	
Display panel	M2x2.5	2	
Smart card reader	M2x2	2	

## Major components of Latitude 5350/Latitude 5350 2-in-1

The following image shows the major components of Latitude 5350/Latitude 5350 2-in-1.

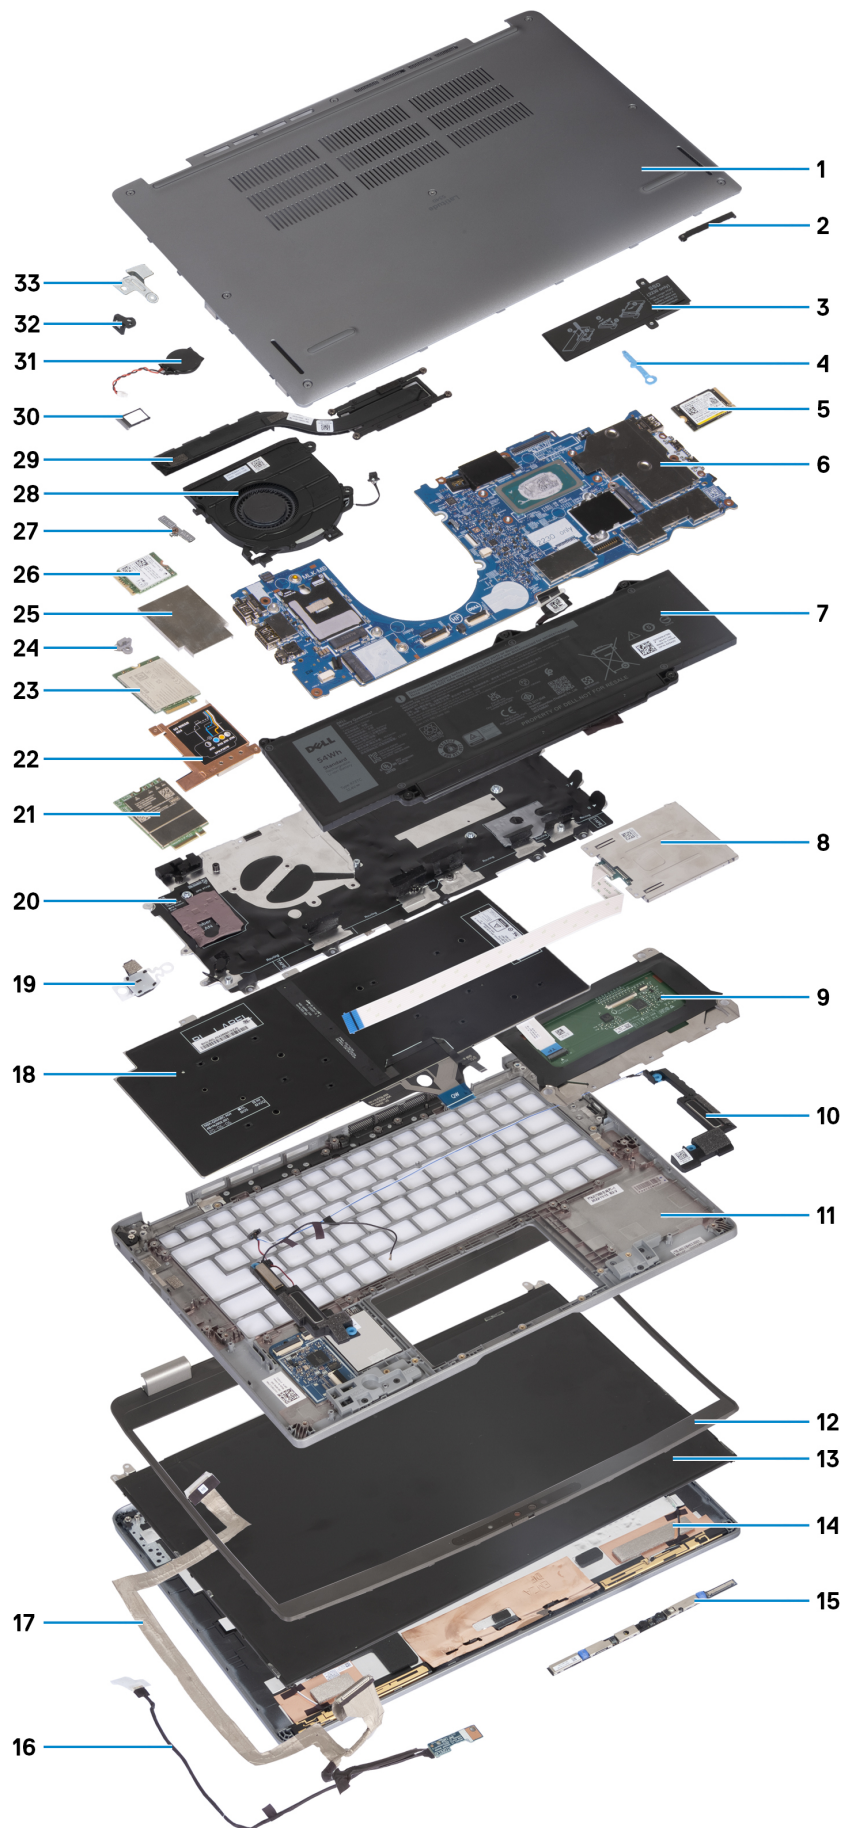



Figure 14. Major components of Latitude 5350/Latitude 5350 2-in-1


1. Base cover
2. eDP bracket
3. Solid state drive thermal plate
4. Solid state drive holder
5. M.2 2230 solid state drive
6. System board
7. Battery
8. Smart-card reader
9. Touchpad
10. Speakers
11. Palm-rest assembly
12. Display bezel
13. Display panel
14. Display back cover
15. Camera
16. Display cable
17. Camera cable
18. Keyboard assembly
19. Power button
20. WWAN card slot
21. WWAN 5G card
22. WWAN 5G thermal shield
23. WWAN 4G card
24. WWAN card holder
25. WWAN 4G thermal shield
26. Wireless card
27. Wireless-card bracket
28. Fan
29. Heat sink
30. SIM card tray
31. Coin-cell battery
32. N-lock bracket
33. Fingerprint-reader bracket

 **NOTE:** Dell provides a list of components and their part numbers for the original computer configuration purchased. These parts are available according to warranty coverage purchased by the customer. Contact your Dell sales representative for purchase options.

# Removing and installing Customer Replaceable Units (CRUs)

The replaceable components in this chapter are Customer Replaceable Units (CRUs).

 **CAUTION:** Customers can replace only the Customer Replaceable Units (CRUs) following the safety precautions and replacement procedures.

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## SIM card tray


### Removing the SIM card tray

#### Prerequisites

Follow the procedure in [Before working inside your computer](#).

#### About this task

The following images provide a visual representation of the SIM card tray removal procedure.

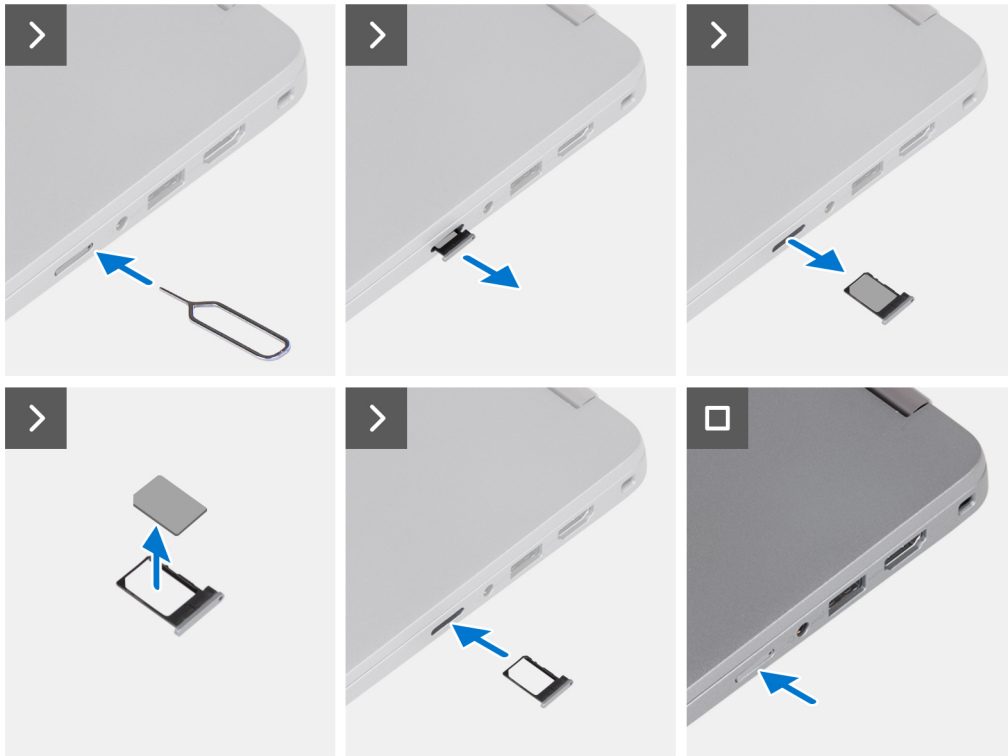

**Figure 15. Removing the SIM card tray**

### Steps

1. Insert a pin into the release hole to release the SIM card tray.
2. Push the pin to disengage the lock, and eject the SIM card tray.
3. Slide the SIM card tray out of the slot on the computer.
4. Remove the SIM card from the SIM card tray.
5. Slide and push the SIM card tray back into the slot.


## Installing the SIM card tray

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images provide a visual representation of the SIM card tray installation procedure.

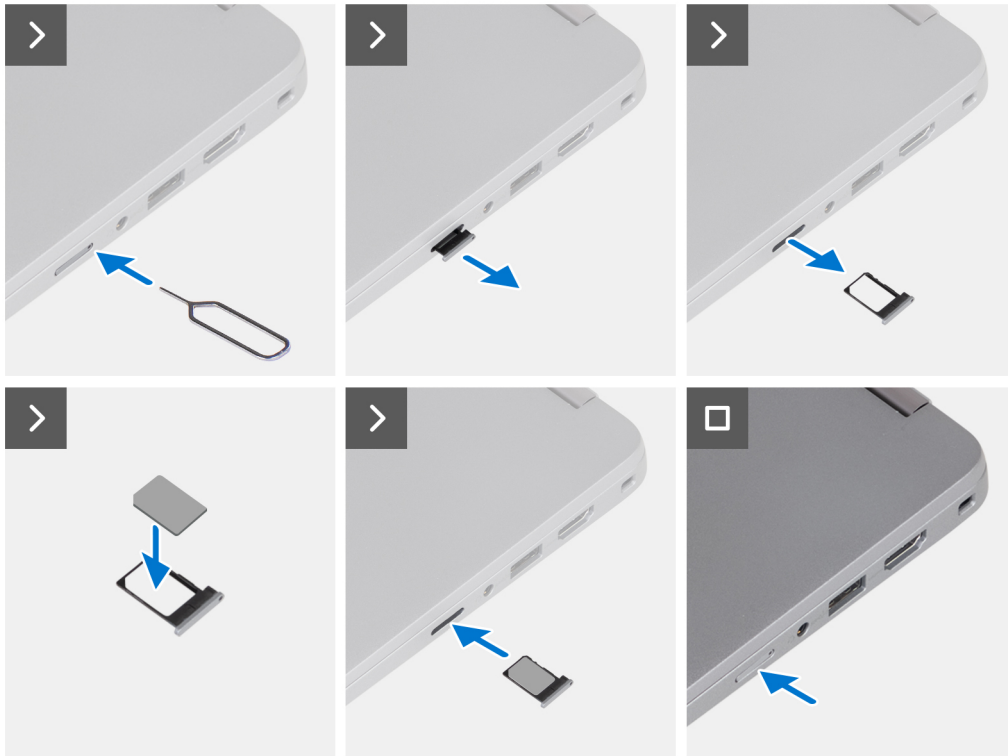

**Figure 16. Installing the SIM card tray**

#### Steps

1. Insert a pin into the release hole to release the SIM card tray.
2. Push the pin to disengage the lock, and eject the SIM card tray.
3. Slide the SIM card tray out of the slot on the computer.
4. Align and place the SIM card in the dedicated slot on the SIM card tray.
5. Slide the SIM card tray into the slot in the computer, and push it to lock in place.

#### Next steps

Follow the procedure in [After working inside your computer](#).

## Base cover

### Removing the base cover

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

**NOTE:** Ensure that your computer is in Service Mode. For more information see, [Before working inside your computer](#).



**CAUTION:** If your computer is unable to enter Service Mode, disconnect the battery cable from the system board.

**About this task**

The following images indicate the location of the base cover and provide a visual representation of the removal procedure.



**Figure 17. Loosen the eight captive screws that secure the base cover to the palm-rest assembly**

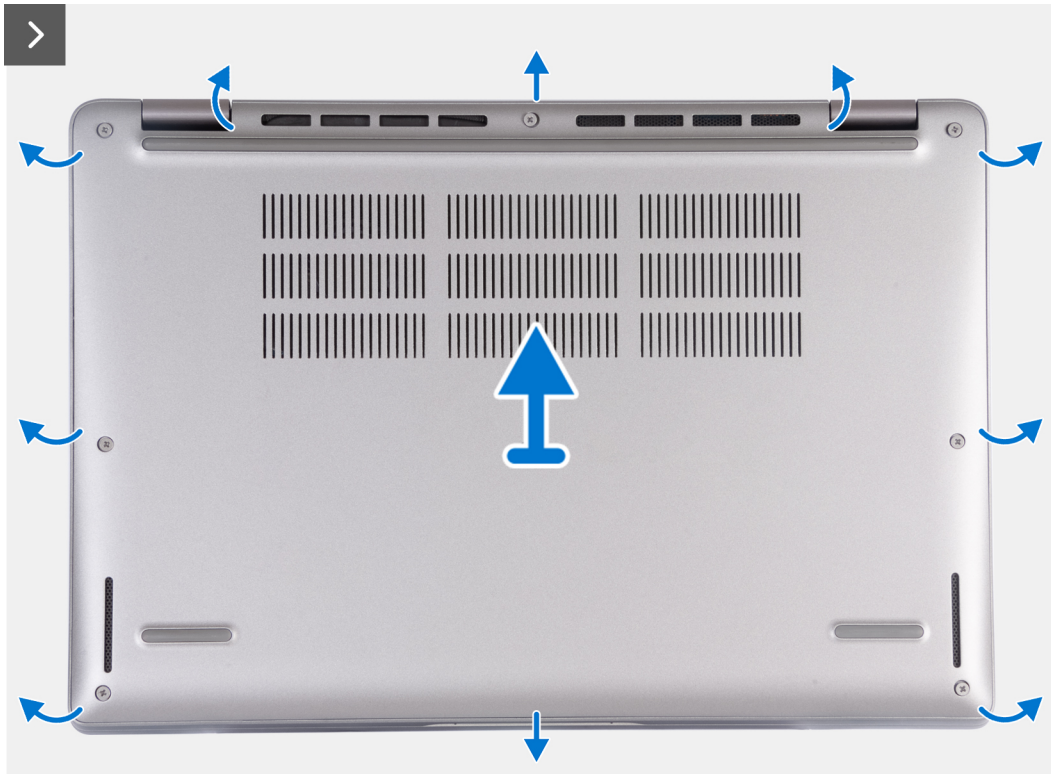


Figure 18. Pry the base cover from the recesses and lift the base cover off the palm-rest assembly



Figure 19. Disconnect the battery cable from the system board

**Steps**

1. Loosen the eight captive screws (M2.5x6) that secure the base cover to the palm-rest assembly.
2. Using a plastic scribe, pry open the base cover from the recesses near the hinges.
3. Lift the base cover off the palm-rest assembly.

**NOTE:** Ensure that your computer is in Service Mode. If your computer is unable to enter Service Mode, disconnect the battery cable from the system board. To disconnect the battery cable, follow step 4 to step 6.

4. Disconnect the battery cable from the system board.
5. Peel the tape that secures the battery cable to the battery.
6. Press and hold the power button for five seconds to ground the computer and drain the flea power.

# Installing the base cover

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The following images indicate the location of the base cover and provide a visual representation of the installation procedure.

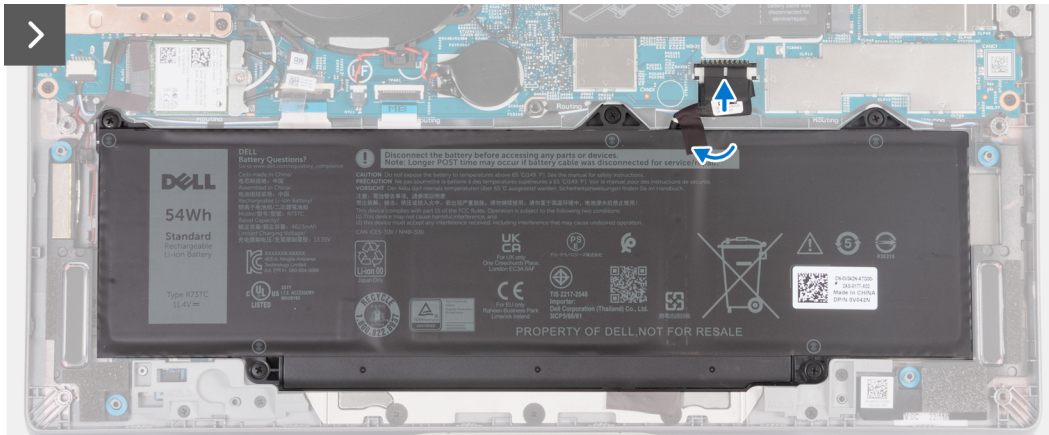


Figure 20. Connect the battery cable to the system board

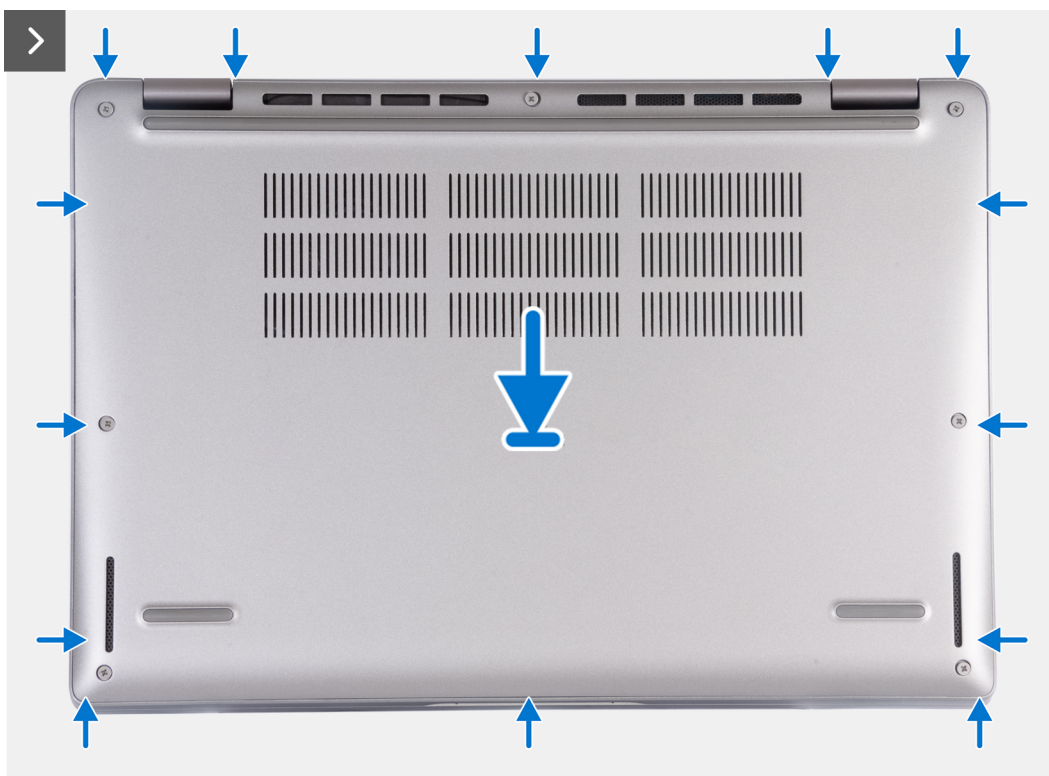


Figure 21. Snap the base cover to the palm-rest assembly





**Figure 22. Tighten the eight captive screws to secure the base cover to the palm-rest assembly**

**i NOTE:**

If the battery is not a pre-requisite and if you have disconnected the battery cable, ensure to connect the battery cable. To connect the battery cable, follow step 1 and step 2 in the procedure.

**Steps**

1. Connect the battery cable to the system board.
2. Adhere the tape that secures the battery cable to the battery.
3. Align the tabs on the base cover with the slots on the computer and snap the base cover to the palm-rest assembly.
4. Tighten the eight captive screws (M2.5x6) to secure the base cover to the palm-rest assembly.

**Next steps**

1. Follow the procedure in [After working inside your computer](#).

**i NOTE:** Ensure that your computer is in Service Mode. For more information see, [Before working inside your computer](#).

# M.2 solid state drive


## Removing the M.2 2230 solid state drive (SSD)

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

### About this task

The following images indicate the location of the SSD and provide a visual representation of the removal procedure of the M.2 2230 SSD.

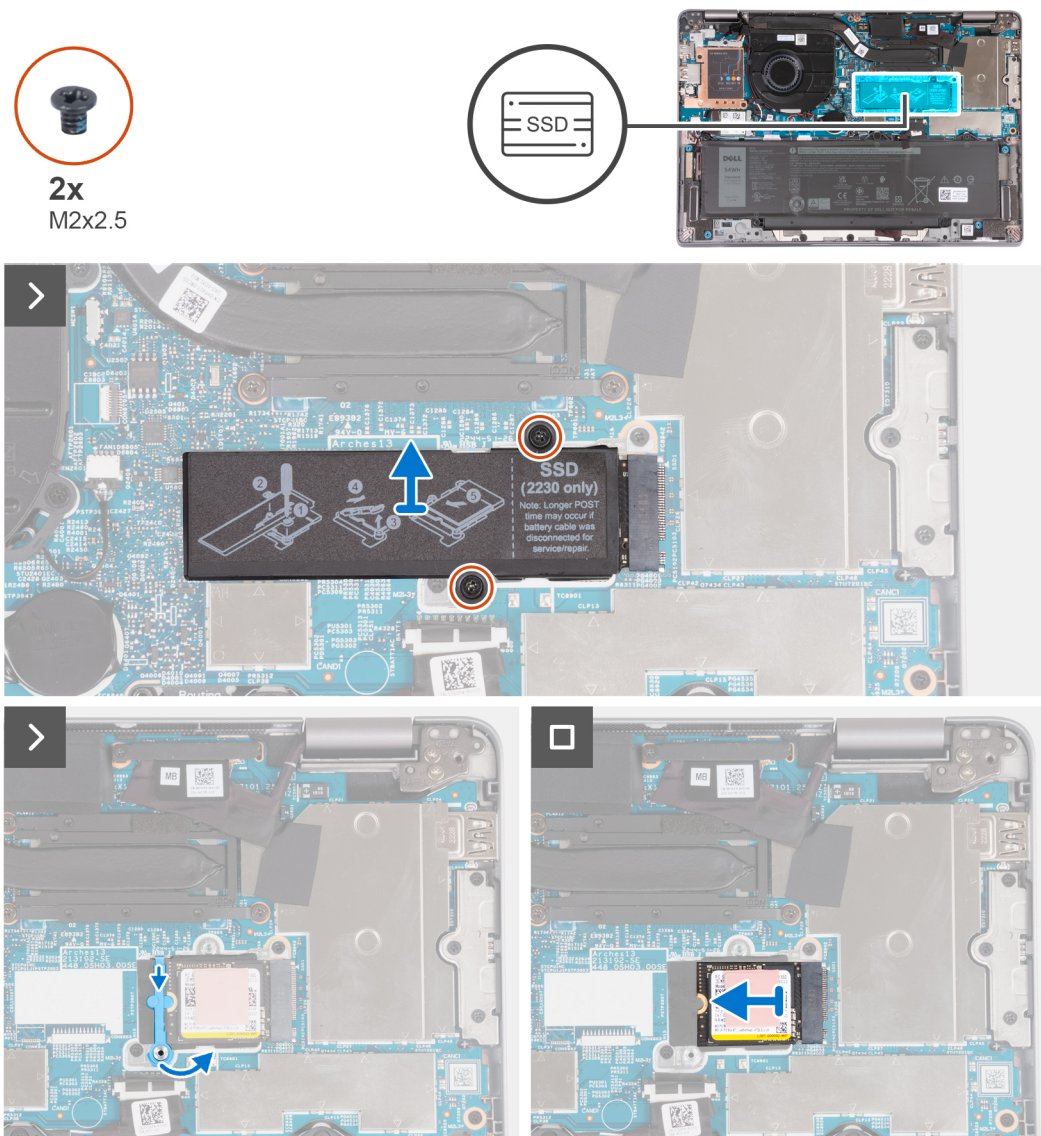

**Figure 23. Remove the M.2 2230 SSD**

### Steps

1. Remove the two screws (M2x2.5) that secure the SSD thermal plate to the system board.
2. Lift the SSD thermal plate from the SSD.

**NOTE:** If the thermal pad on the thermal plate gets detached, adhere it back to the SSD thermal plate.

3. Lift the SSD holder and carefully release it from the hook to remove it.
4. Slide and remove the SSD from the SSD slot on the system board.


## Installing the M.2 2230 solid state drive (SSD)

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the SSD and provide a visual representation of the installation procedure of the M.2 2230 SSD.

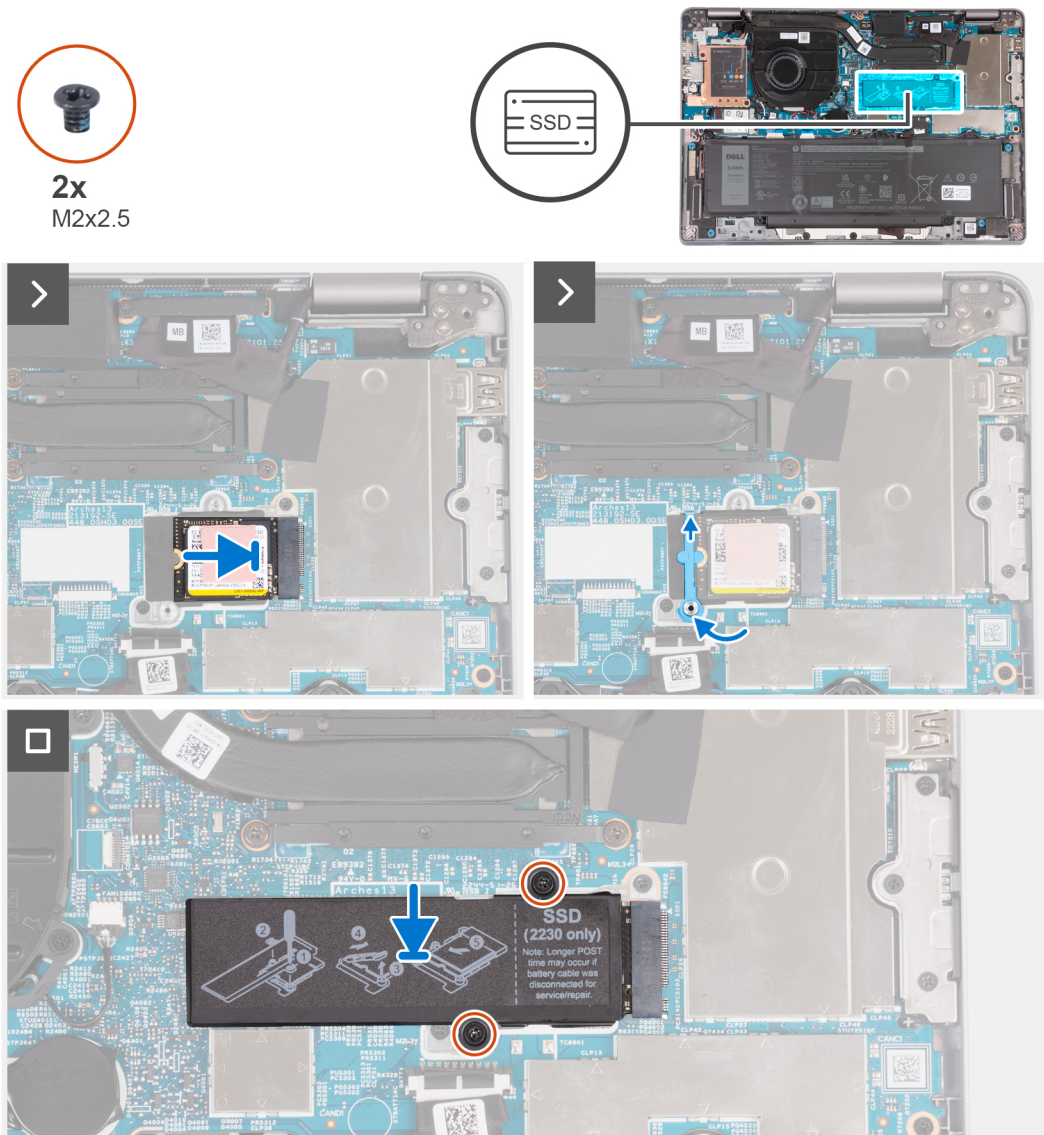

**Figure 24. Installing the M.2 2230 SSD**

### Steps

1. Align the notch on the SSD with the tab on the M.2 card slot.
2. Slide the SSD into the M.2 card slot.

3. Slide the SSD holder over the hook and press it down.
4. Align the SSD thermal plate and firmly press to cover the SSD.
5. Replace the two screws (M2x2.5) that secure the SSD thermal plate to the system board.

#### **Next steps**

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

## **Wireless card**

### **Removing the wireless card**


#### **Prerequisites**

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

#### **About this task**

The following images indicate the location of the wireless card and provide a visual representation of the removal procedure.



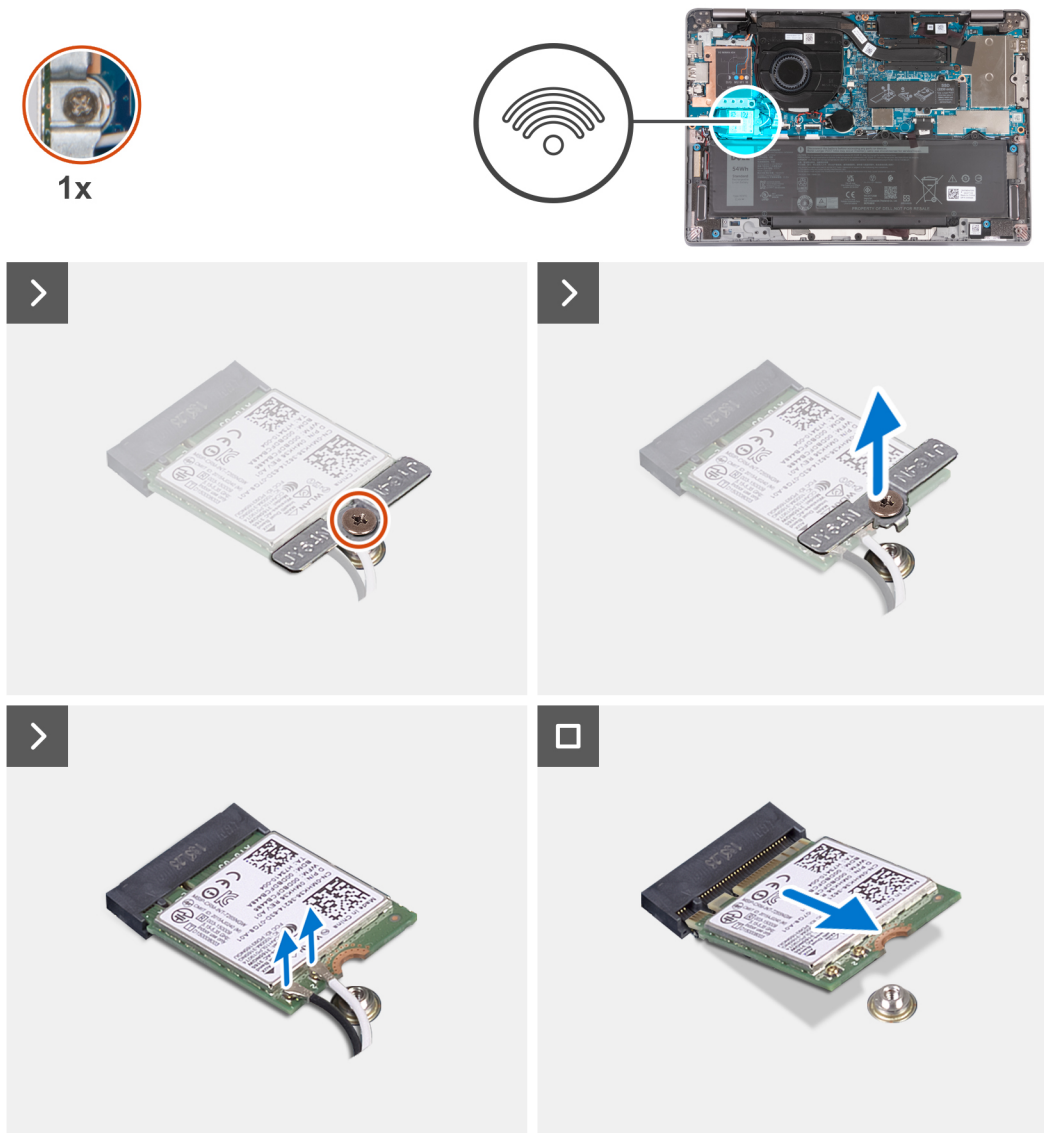

**Figure 25. Remove the wireless card**

**Steps**

1. Loosen the captive screw that secures the wireless-card bracket to the system board.
2. Lift the wireless-card bracket from the wireless card.
3. Disconnect the antenna cables from the wireless card.
4. Slide and remove the wireless card from the wireless-card slot (WLAN1) on the system board.

## Installing the wireless card


**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the wireless card and provide a visual representation of the installation procedure.



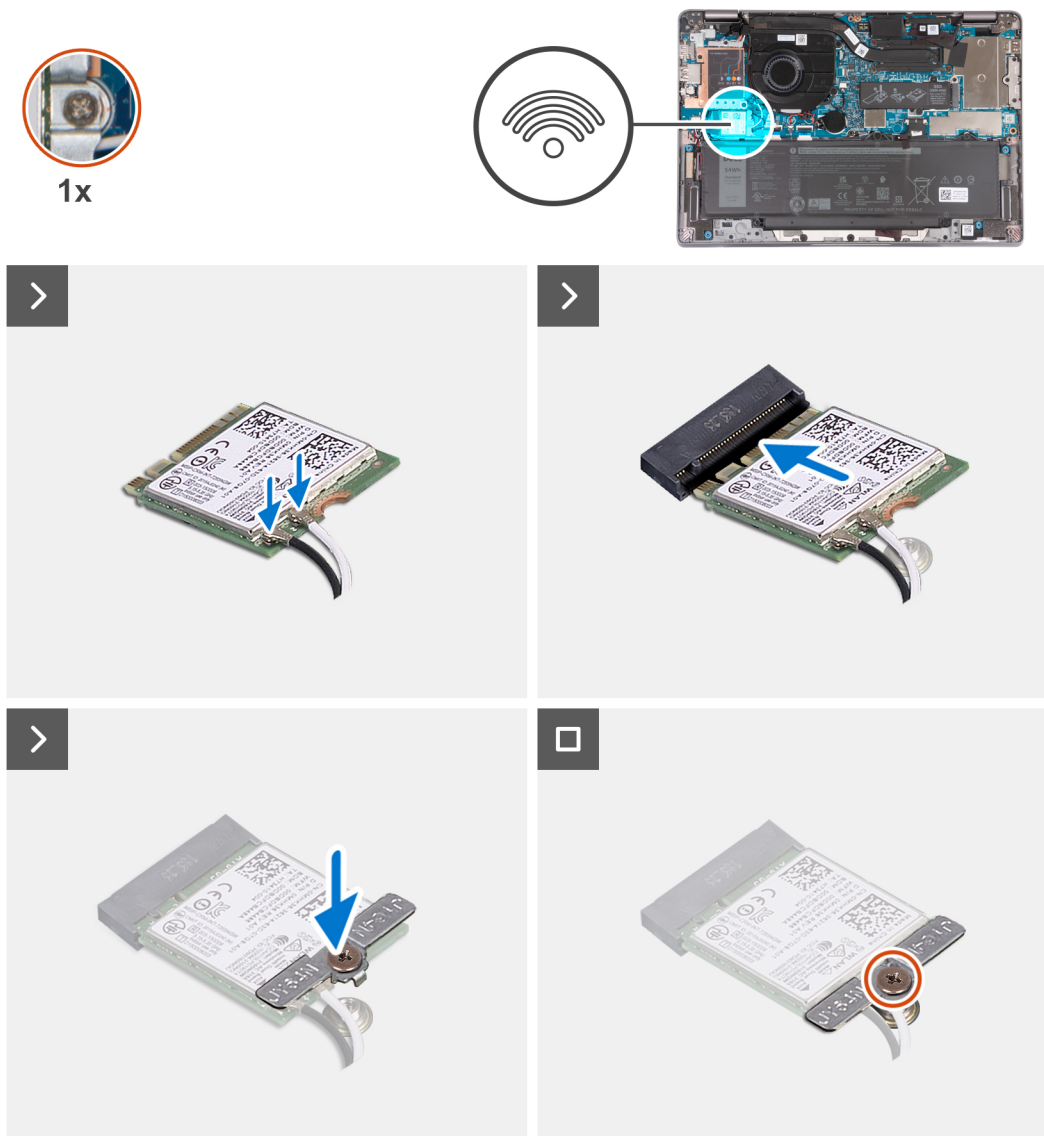

**Figure 26. Installing the wireless card**

**Steps**

1. Connect the antenna cables to the wireless card.  
The following table provides the antenna-cable color scheme of the wireless card that is supported on your computer.

**Table 34. Antenna-cable color scheme**

Connector on the wireless card	Antenna-cable color	Silkscreen marking	
Main	White	MAIN	△ (white triangle)
Auxiliary	Black	AUX	▲ (black triangle)

2. Align the notch on the wireless card with the tab on the wireless-card slot (WLAN1) and insert the wireless card into the slot.
3. Align and place the wireless-card bracket on the wireless card.
4. Tighten the captive screw that secures the wireless-card bracket to the system board.

**Next steps**

1. Install the [base cover](#).

2. Follow the procedure in [After working inside your computer](#).

## Wireless Wide Area Network (WWAN) card


### Removing the WWAN 4G card

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).


#### About this task

**NOTE:** When you replace the system board, transfer the reusable WWAN thermal pad on mylar to the new system board.

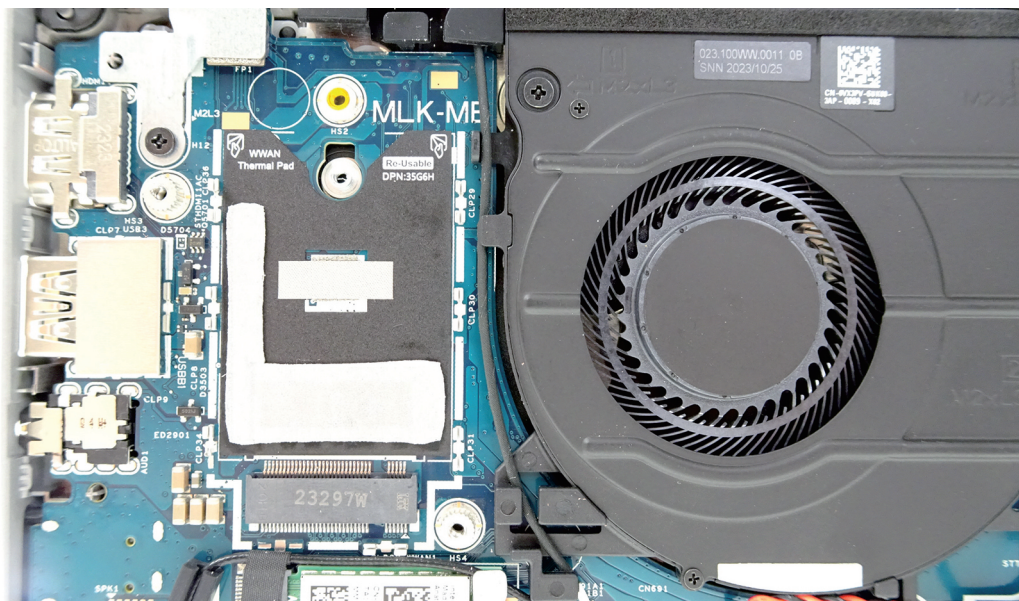

**Figure 27. Reusable WWAN thermal pad**

The following images indicate the location of the WWAN 4G card and provide a visual representation of the removal procedure.

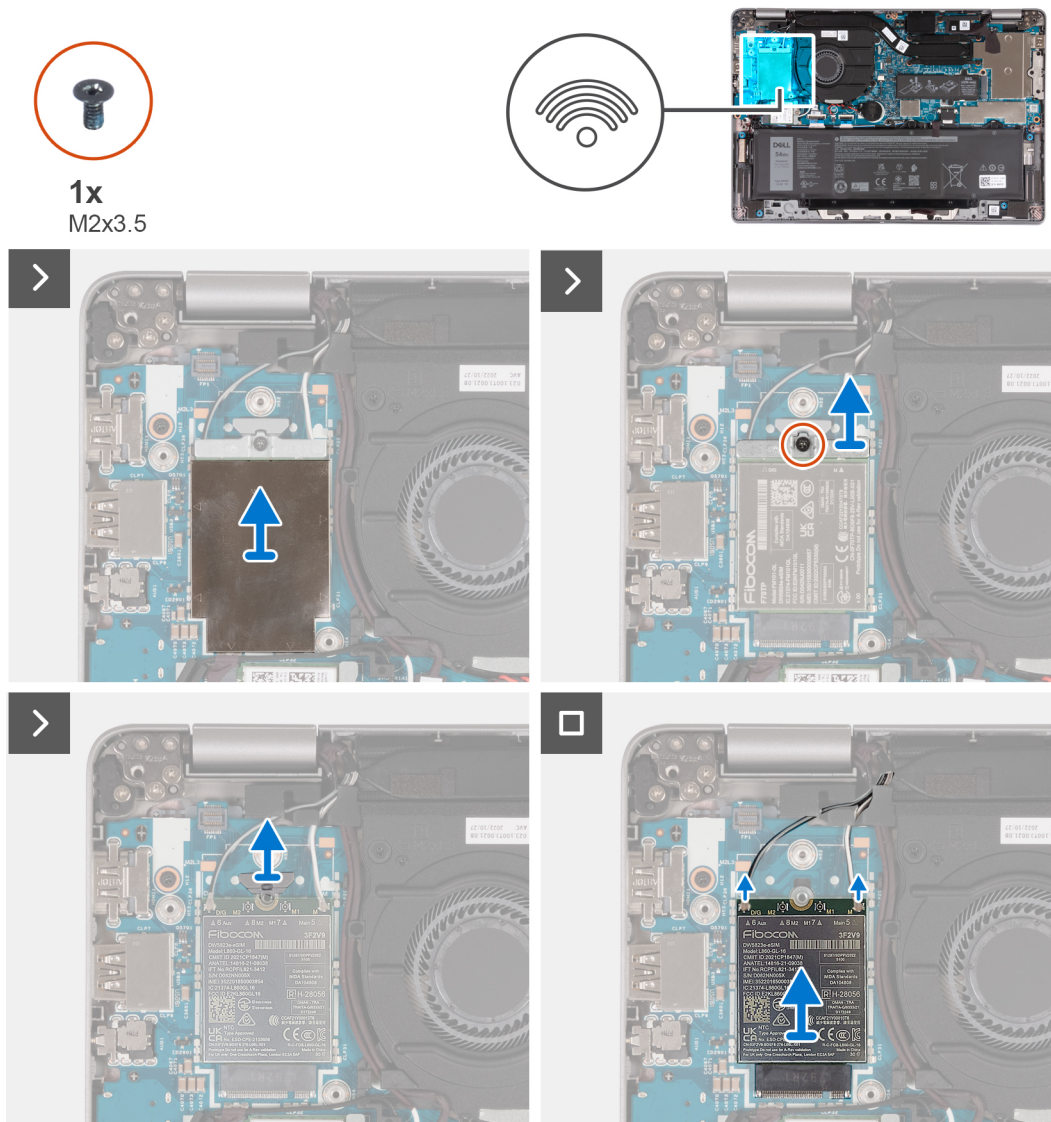

**Figure 28. Remove the WWAN 4G card**

### Steps

1. Remove the WWAN-thermal shield covering the WWAN 4G card.
2. Remove the screw (M2x3.5) that secures the WWAN-card bracket to the WWAN 4G card.
3. Lift the WWAN-card bracket off the system board.
4. Disconnect the antenna cables from the WWAN card.
5. Slide and remove the WWAN 4G card from the WWAN-card slot (WWAN1).
6. Remove the WWAN-card holder from the system board.

## Installing the WWAN 4G card


### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the WWAN 4G card and provide a visual representation of the installation procedure.



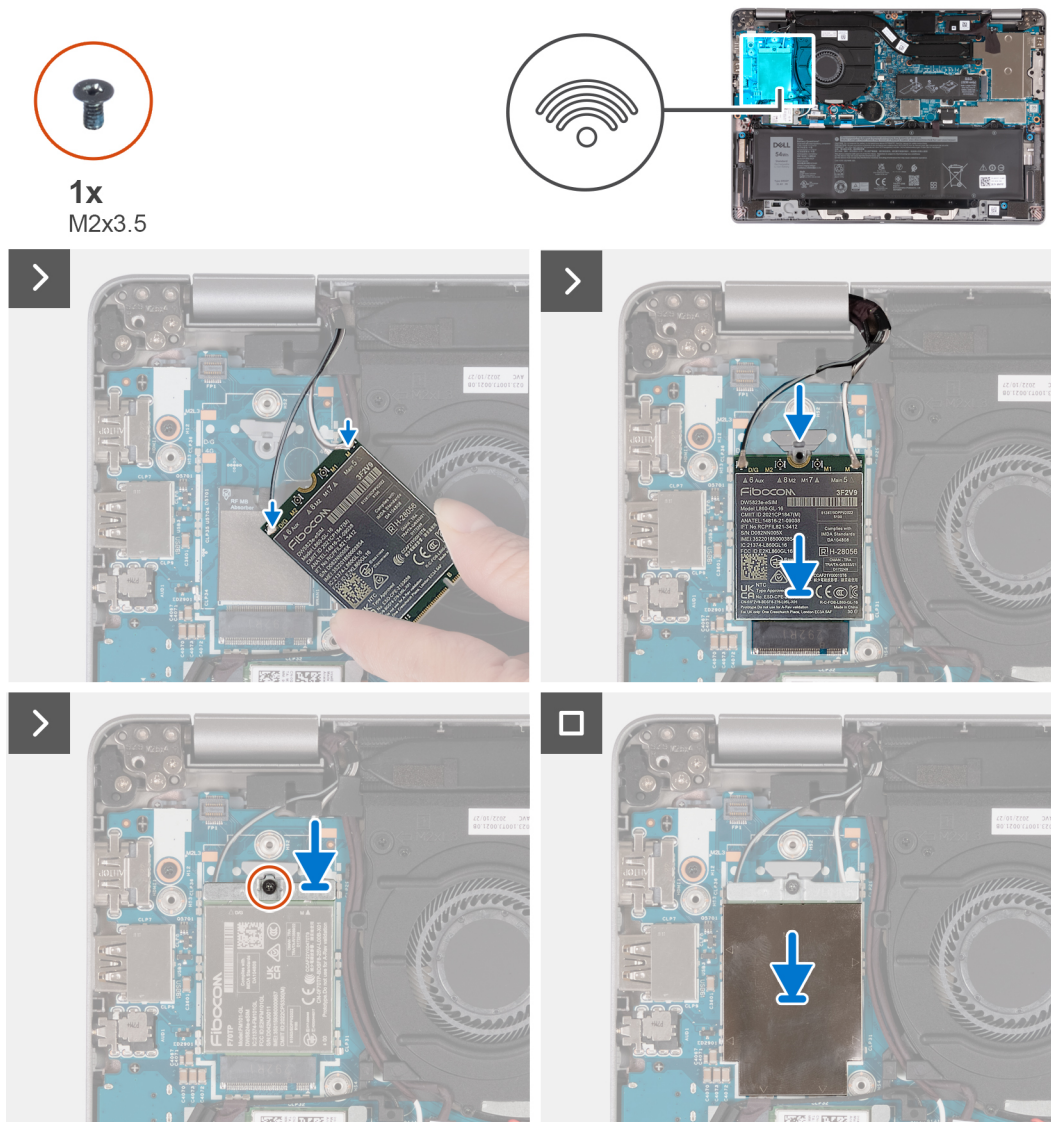

**Figure 29. Install the WWAN 4G card**

**i NOTE:** For instructions on how to find your computer International Mobile Station Equipment Identity (IMEI) number, see the knowledge base article [000143678](http://www.dell.com/support) at [www.dell.com/support](http://www.dell.com/support).

**Steps**

1. Place the WWAN-card holder on the system board.
2. Connect the antenna cables to the connectors on the WWAN 4G card.

The following table provides the antenna-cable color scheme of the WWAN card that is supported on your computer.

**Table 35. Antenna-cable color scheme**

Connectors on the WWAN card	Antenna-cable color	Silkscreen marking	
Main	White	MAIN	△ (white triangle)
Auxiliary	Black	AUX	▲ (black triangle)

3. Align the notch on the WWAN card and slide the WWAN 4G card into the WWAN-card slot (WWAN1).
4. Align and place the WWAN-card bracket on the WWAN 4G card, and tighten the screw (M2x3.5).
5. Replace the WWAN-thermal shield covering the WWAN 4G card.

### Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Removing the WWAN 5G card


### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

### About this task

**NOTE:** When you replace the system board, transfer the reusable WWAN thermal pad on mylar to the new system board.

The following images indicate the location of the WWAN 5G card and provide a visual representation of the removal procedure.

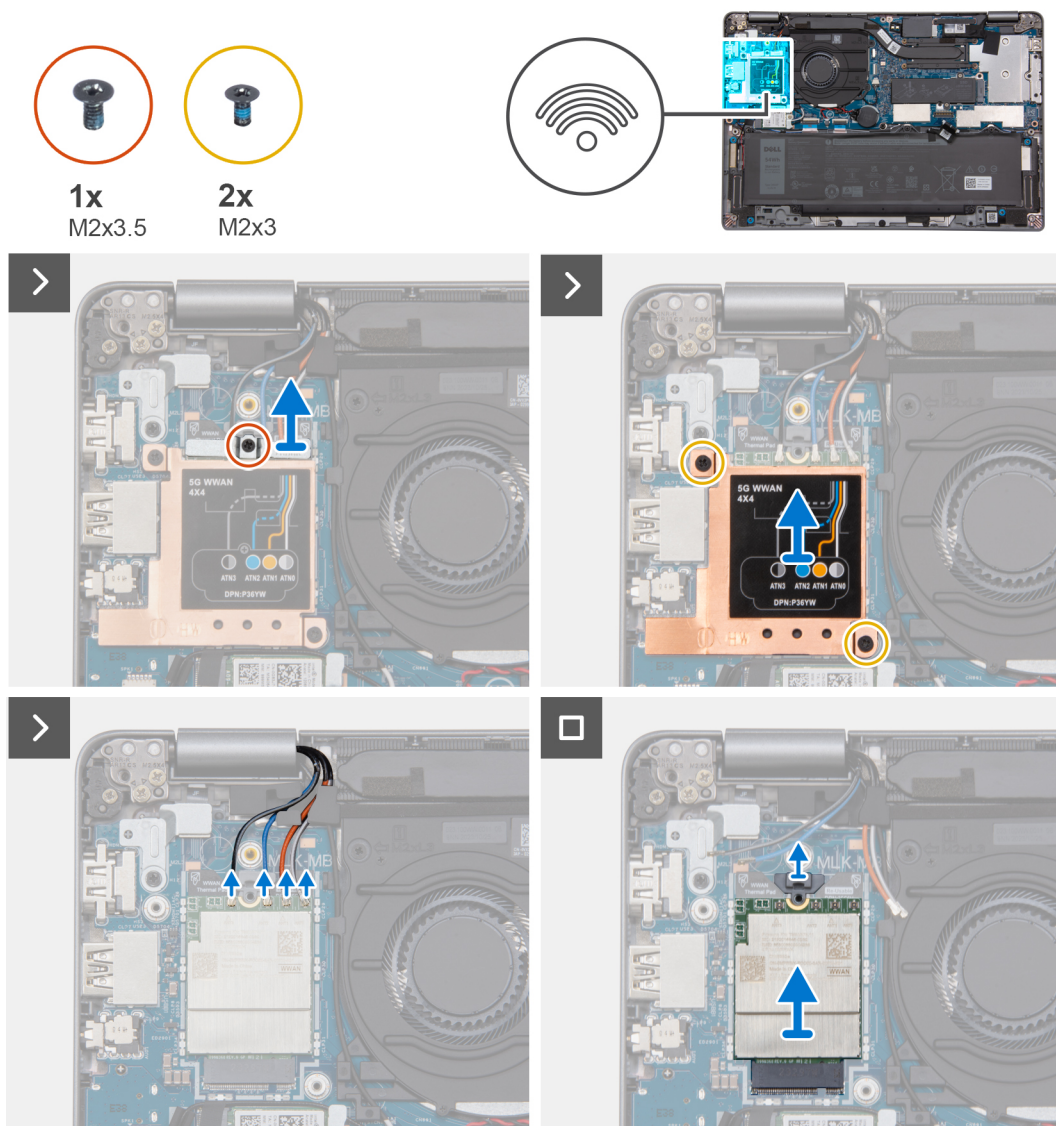


**Figure 30. Removing the WWAN 5G card**

### Steps

1. Remove the screw (M2x3.5) that secures the WWAN-card bracket to the WWAN 5G card.

2. Remove the two screws (M2x3) that secure the WWAN-thermal shield to the WWAN 5G card.

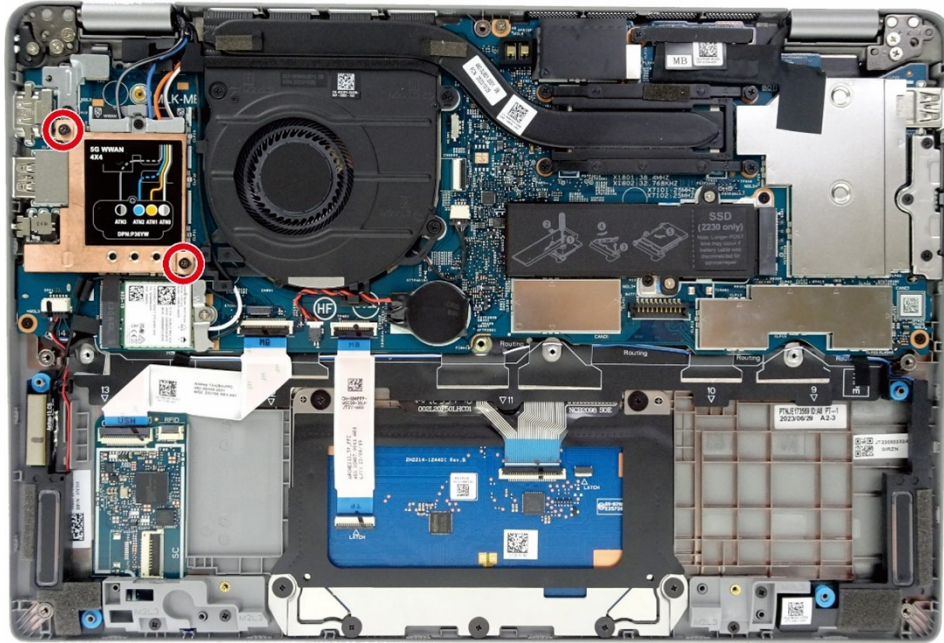

**Figure 31. Metal shielding for the WWAN board**

3. Lift the WWAN-thermal shield out of the computer.
4. Disconnect the antenna cables from the connectors on the WWAN card.
5. Slide and remove the WWAN 5G card from the WWAN-card slot (WWAN1).
6. Remove the WWAN-card holder from the system board.

## Installing the WWAN 5G card


### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the WWAN 5G card and provide a visual representation of the installation procedure.



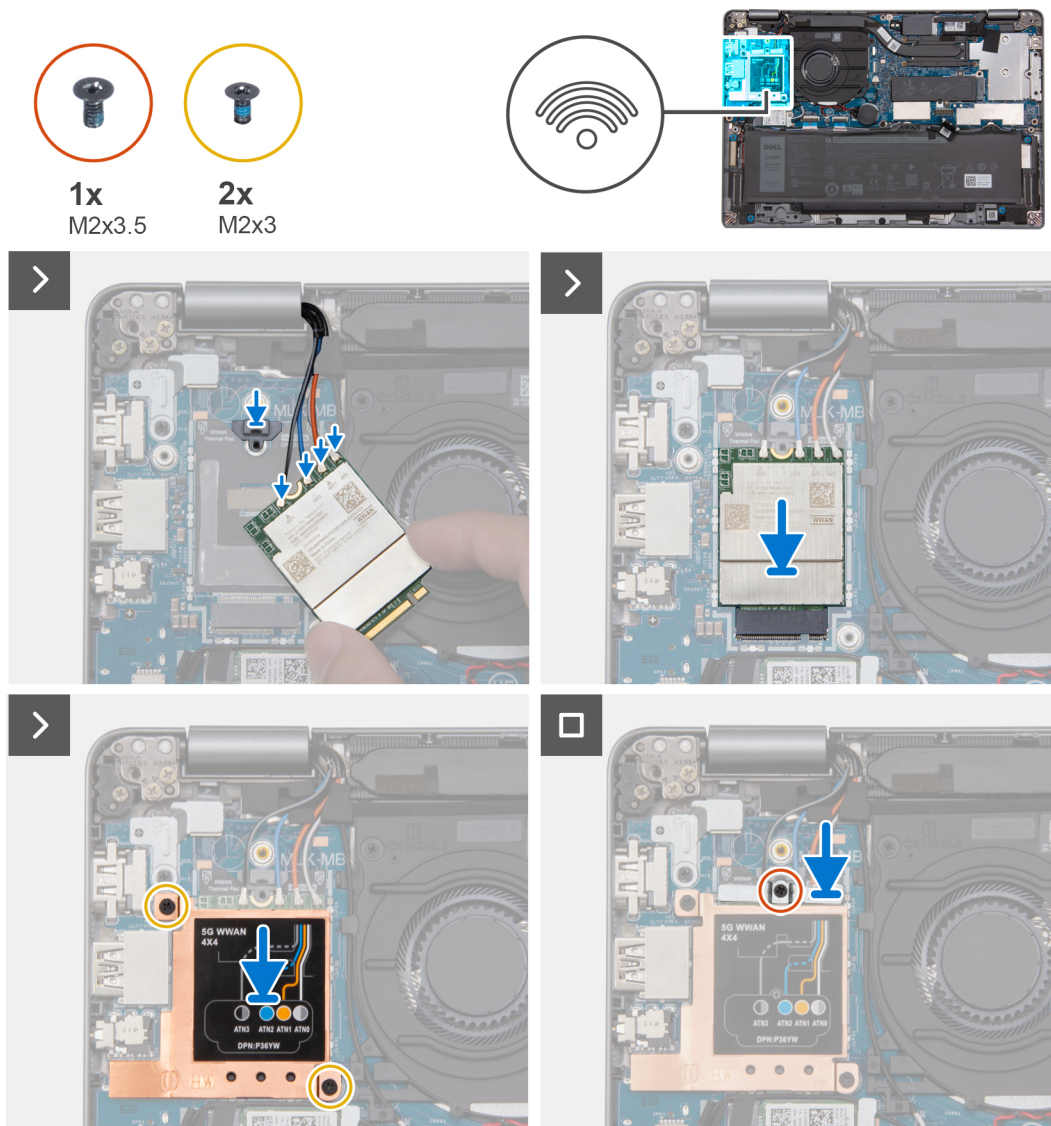

**Figure 32. Installing the WWAN 5G card**

**i** **NOTE:** For instructions on how to find your computer International Mobile Station Equipment Identity (IMEI) number, see the knowledge base article [000143678](http://www.dell.com/support) at [www.dell.com/support](http://www.dell.com/support).

**Steps**

1. Place the WWAN-card holder on the system board.
2. Connect the antenna cables to the connectors on the WWAN 5G card.  
The following table provides the antenna-cable color scheme for the WWAN 5G card that is supported on your computer.


**Table 36. Antenna-cable color scheme**

Connectors on the WWAN card	Antenna-cable color	Silkscreen marking	
D/G	Black with a thin white stripe	ANT3 D/G	▲ (black triangle)
M2	Blue	ANT2 M2	△ (white triangle)
M1	Orange	ANT1 M1	▲ (black triangle)

**Table 36. Antenna-cable color scheme (continued)**

Connectors on the WWAN card	Antenna-cable color	Silkscreen marking	
M	White with a thin gray stripe	ANT0 M	△ (white triangle)

3. Align the notch on the WWAN card and slide the WWAN 5G card at an angle into the WWAN-card slot (WWAN1).
4. Align and place the WWAN-thermal shield on the WWAN 5G card, and tighten the two screws (M2x3).

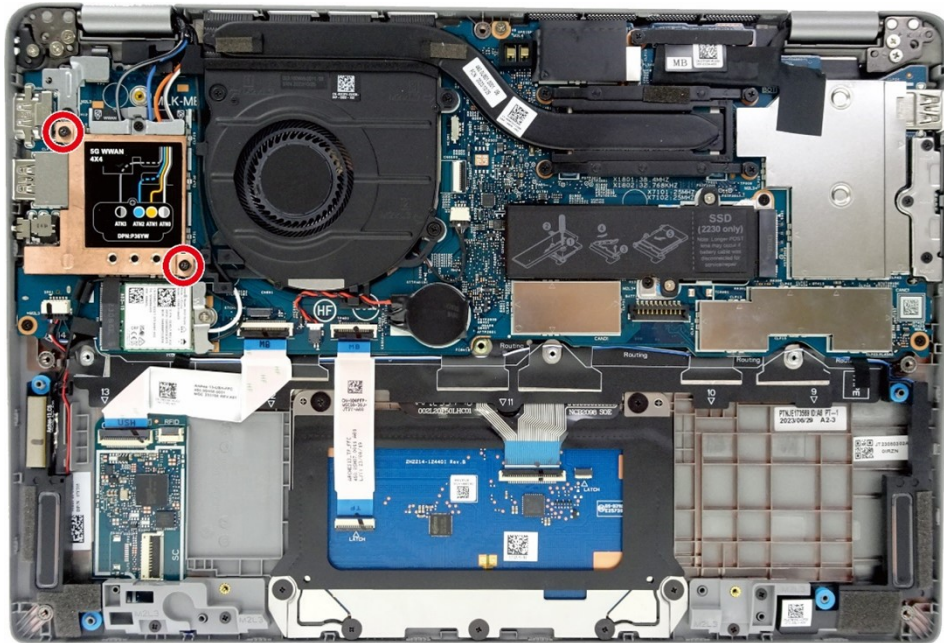

**Figure 33. Metal shielding for the WWAN board**

5. Align and place the WWAN-card bracket on the WWAN 5G card and tighten the screw (M2x3.5).

#### Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Fan

### Removing the fan


#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [wireless card](#).
4. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.

#### About this task

The following images indicate the location of the fan and provide a visual representation of the removal procedure.



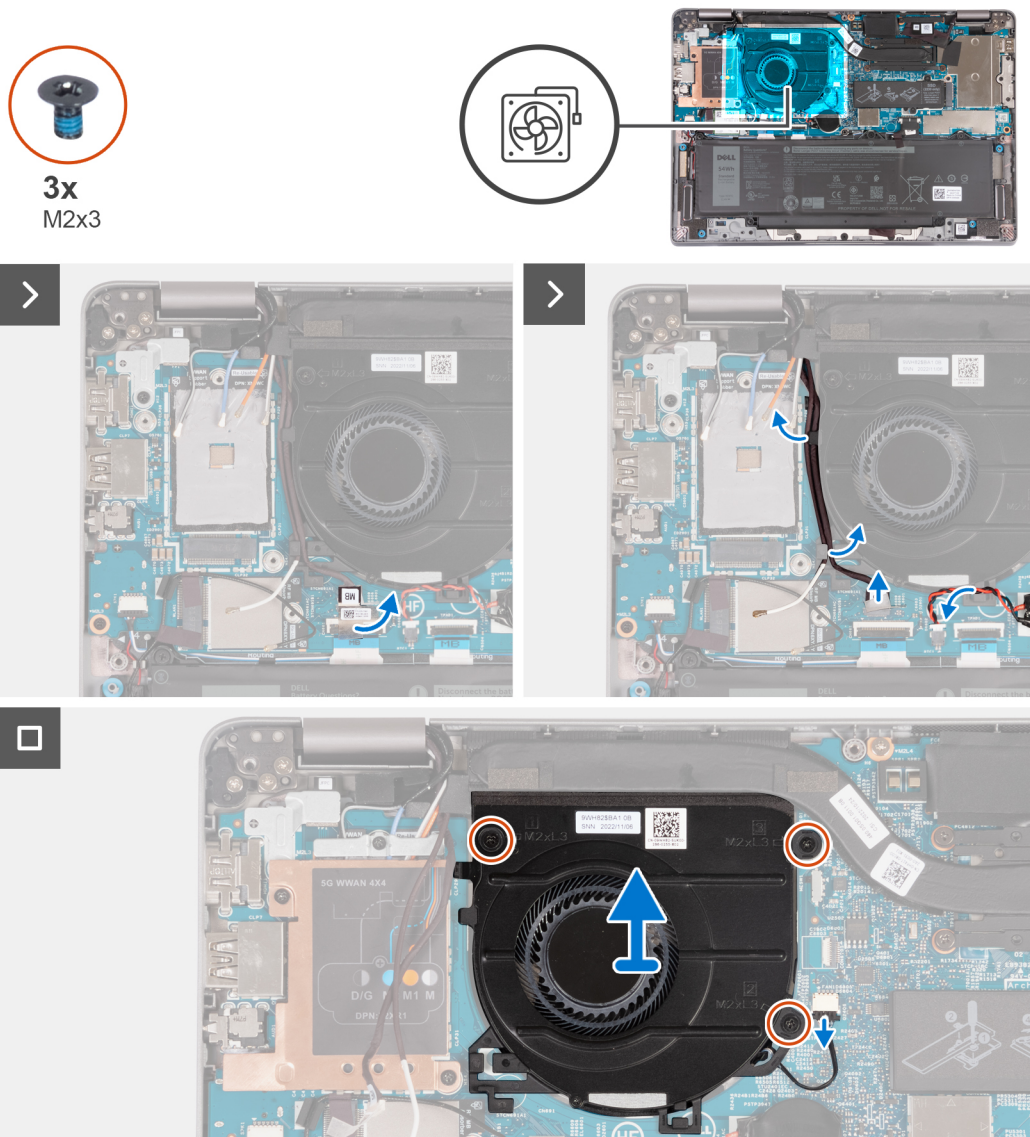

**Figure 34. Remove the fan**

**Steps**

1. Note the wireless card antenna cable routing, and remove the antenna cables from the routing guide on the fan.
2. Remove the coin-cell battery cable from the routing guide on the fan.
3. Disconnect the fan cable from the connector (FAN1) on the system board.
4. Remove the three screws (M2x3) that secure the fan to the palm-rest assembly.
5. Remove the fan from the system board.


**Installing the fan**

**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the fan and provide a visual representation of the installation procedure.

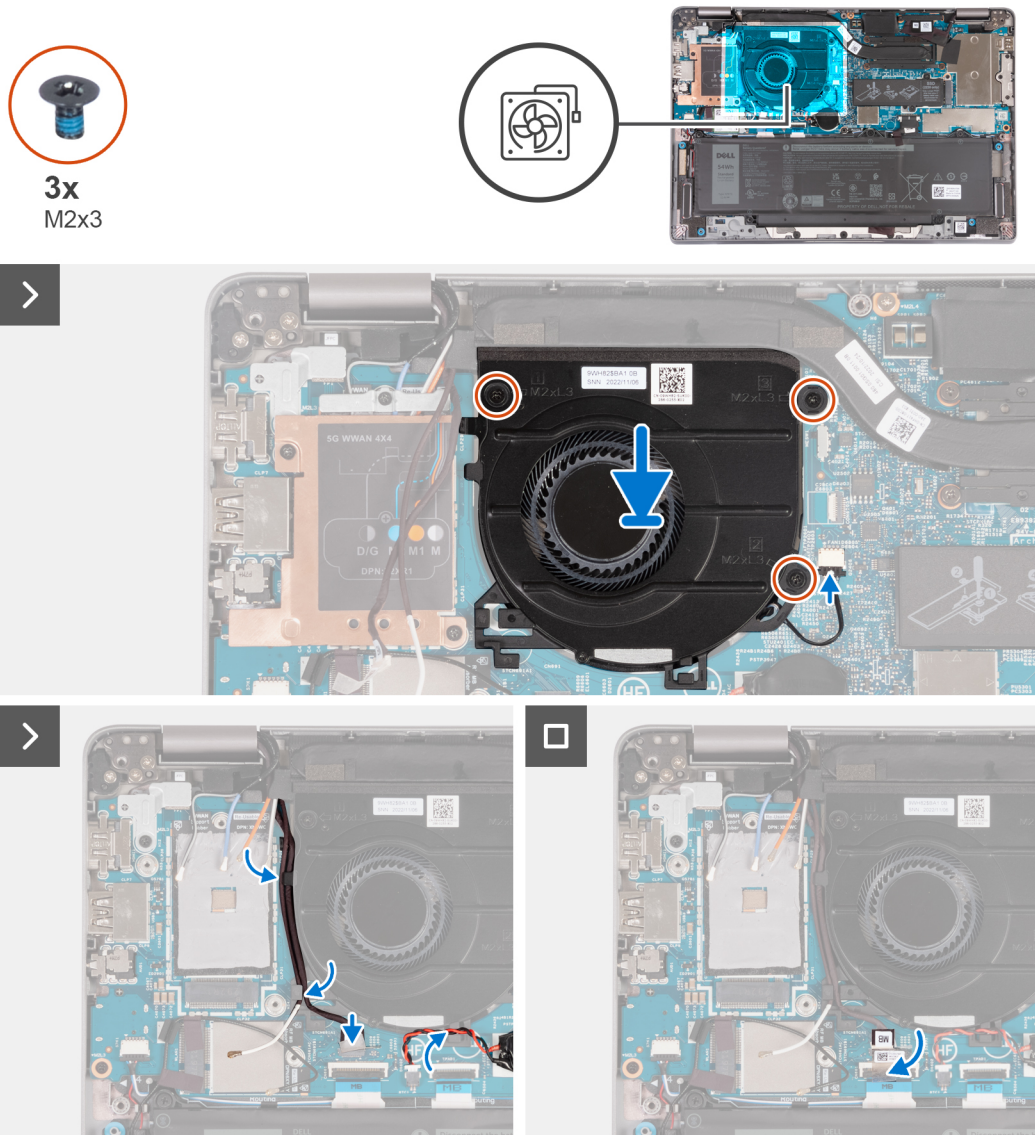

**Figure 35. Install the fan**

**Steps**

1. Align the screw holes on the fan with the screw holes on the system board.
2. Replace the three screws (M2x3) to secure the fan to the palm-rest assembly.
3. Connect the fan cable to the connector (FAN1) on the system board.
4. Route the coin-cell battery cable through the routing guide on the fan.
5. Route the antenna cables through the routing guides on the fan.

**Next steps**

1. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
2. Install the [wireless card](#).
3. Install the [base cover](#).
4. Follow the procedure in [After working inside your computer](#).

# Removing and installing Field Replaceable Units (FRUs)

The replaceable components in this chapter are Field Replaceable Units (FRUs).

**CAUTION:** The information in this removing and installing FRU's section is intended for authorized service technicians only.

**CAUTION:** To avoid any potential damage to the component or loss of data, ensure that an authorized service technician replaces the Field Replaceable Units (FRUs).

**CAUTION:** Dell Technologies recommends that this set of repairs, if needed, to be conducted by trained technical repair specialists.

**CAUTION:** As a reminder, your warranty does not cover damages that may occur during FRU repairs that are not authorized by Dell Technologies.

**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Battery

### Removing the battery

#### Prerequisites


**CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

#### About this task

**NOTE:** Latitude 5350 supports both 3-cell 42 Wh and 3-cell 54 Wh battery configurations.

The following images indicate the location of the 3-cell 54 Wh battery and provide a visual representation of the removal procedure.

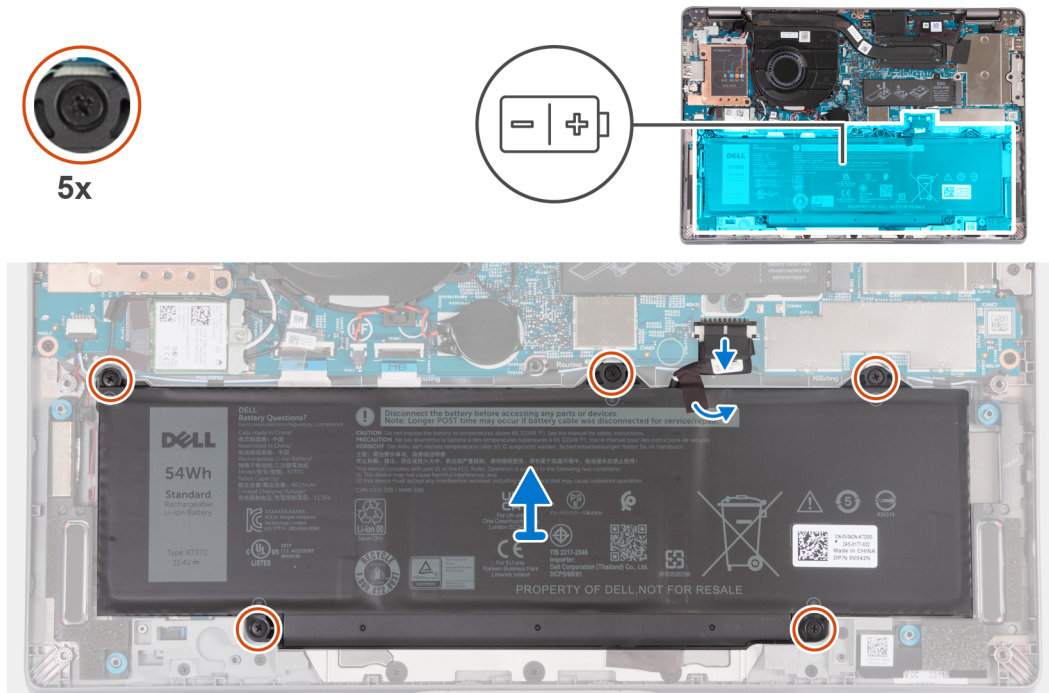

**Figure 36. Removing the battery**

**Steps**

1. Using the pull tab, disconnect the battery cable from the connector (BATT1) on the system board.
2. Peel off the tape securing the battery.
3. Loosen the five captive screws (M2x4.5, OD4.6, T0.8) that secure the battery to the palm-rest assembly.
4. Lift the battery off the palm-rest assembly.

## Installing the battery

**Prerequisites**

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

**NOTE:** Latitude 5350 supports both 3-cell 42 Wh and 3-cell 54 Wh battery configurations.

The following images indicate the location of the 3-cell 54 Wh battery and provide a visual representation of the installation procedure.



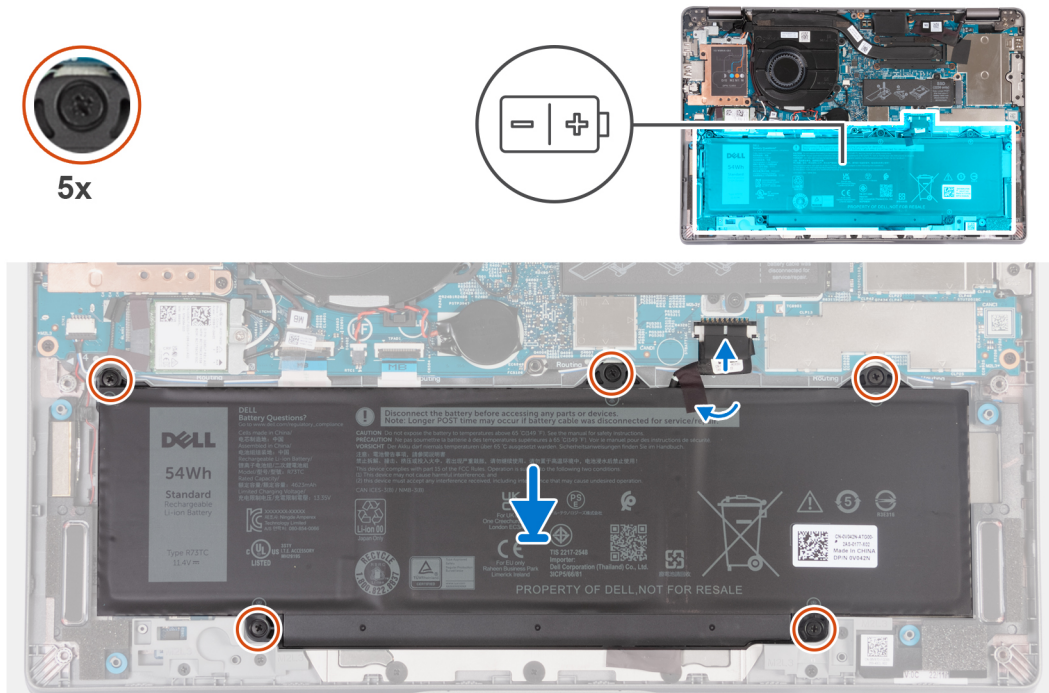


Figure 37. Installing the battery

### Steps

1. Align the screw holes on the battery with the screw holes on the palm-rest assembly.
2. Tighten the five captive screws (M2x4.5, OD4.6, T0.8) to secure the battery to the palm-rest assembly.
3. Connect the battery cable to the connector (BATT1) on the system board.
4. Adhere the tape to secure the battery cable to the battery.

### Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Battery cable

### Removing the battery cable

#### Prerequisites



**CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).

**NOTE:** If the battery is disconnected from the system board for service, then there is a delay during boot as the computer undergoes RTC battery reset.

#### About this task

The following images indicate the location of the battery cable and provide a visual representation of the removal procedure.

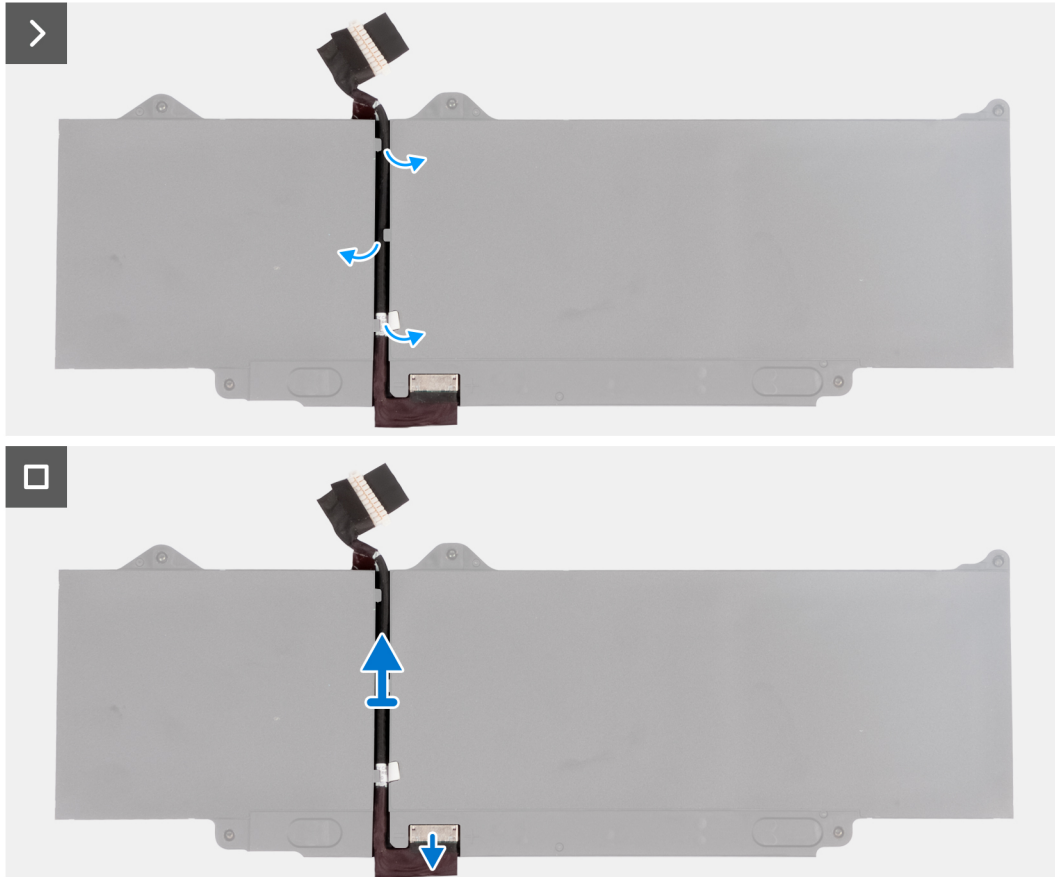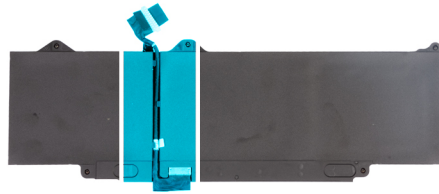

**Figure 38. Removing the battery cable**

### Steps

1. Flip the battery and peel off the tape that adheres the battery cable to the battery.
2. Remove the battery cable from the routing guides on the battery.
3. Disconnect the battery cable from the connector on the battery.
4. Remove the battery cable from the battery.

## Installing the battery cable


### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the battery cable and provide a visual representation of the installation procedure.

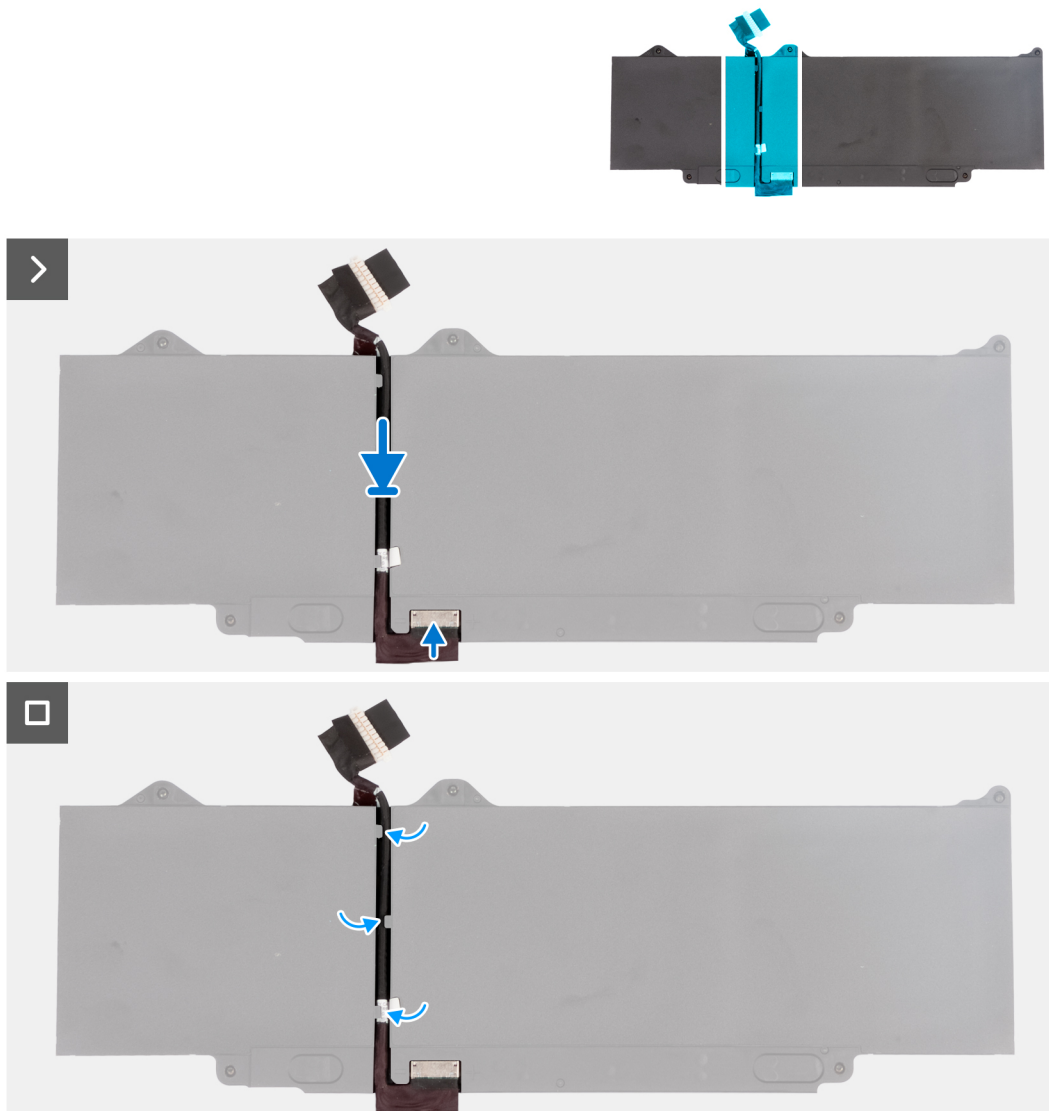

**Figure 39. Installing the battery cable**

**Steps**

1. Align and route the battery cable through the routing guides on the battery.
2. Adhere the tape that secures the battery cable to the battery.
3. Connect the battery cable to the connector on the battery.
4. Flip over the battery.

**Next steps**

1. Install the [battery](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

# Coin-cell battery

## Removing the coin-cell battery

### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.


1. Follow the procedure in [Before working inside your computer](#).

**CAUTION:** Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.

2. Remove the [base cover](#).

### About this task

The following images indicate the location of the coin-cell battery and provide a visual representation of the removal procedure.

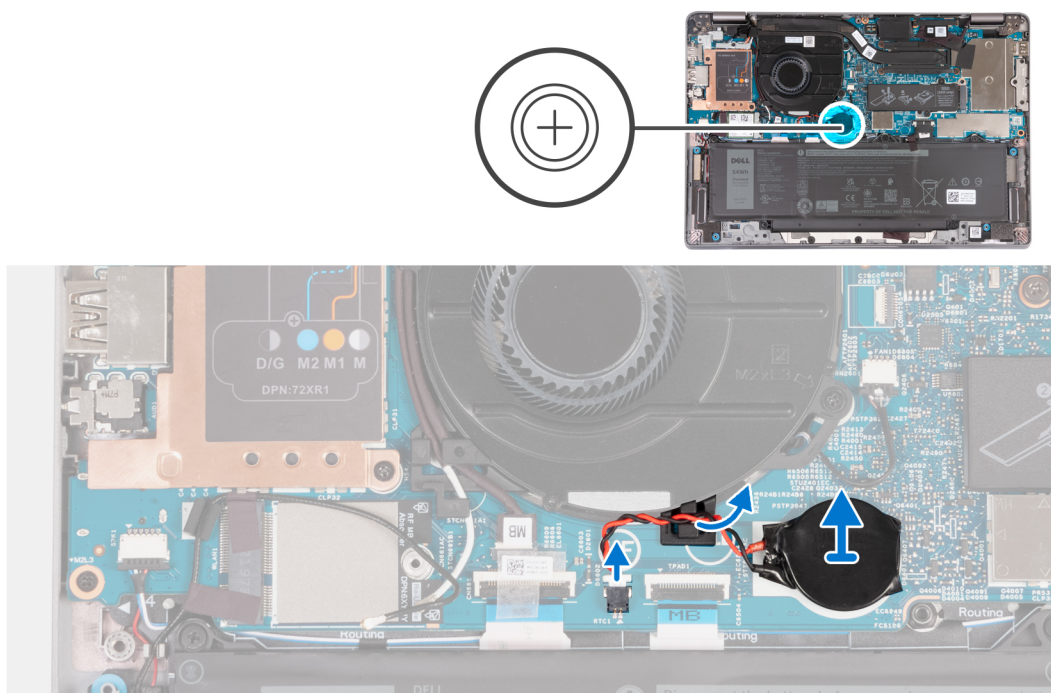

**Figure 40. Removing the coin-cell battery**

### Steps

1. Disconnect the coin-cell battery cable from the connector (RTC1) on the system board.
2. Remove the coin-cell battery cable from the routing guide on the fan.
3. Peel the coin-cell battery and lift it off the system board.

## Installing the coin-cell battery

### Prerequisites


**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the existing component before performing the installation procedure.



## About this task

The following images indicate the location of the coin-cell battery and provide a visual representation of the installation procedure.

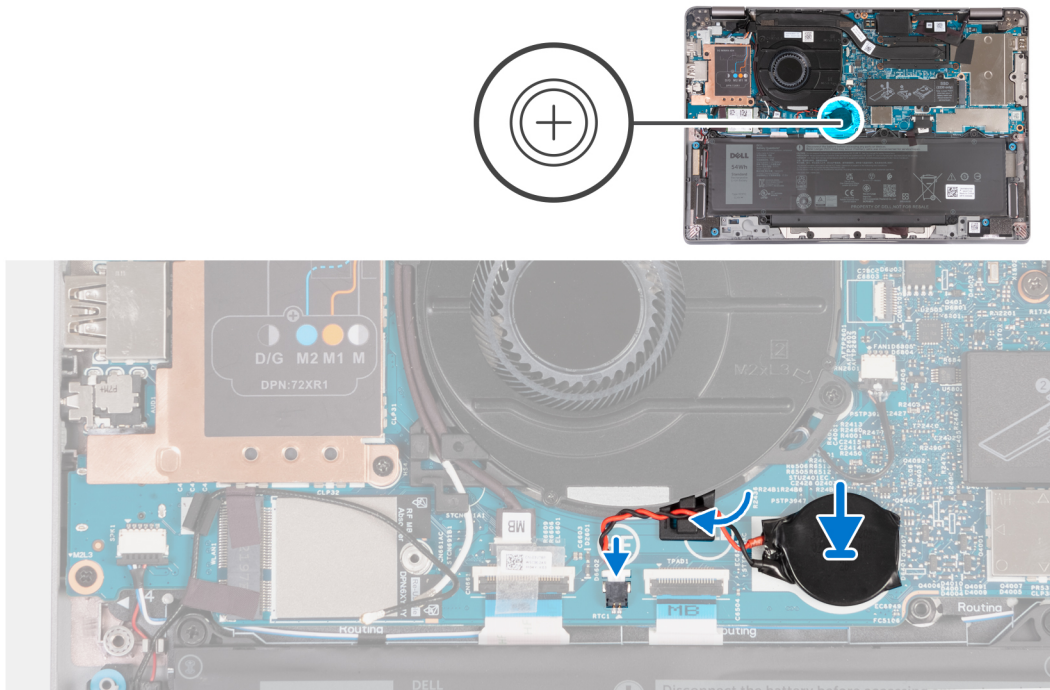

**Figure 41. Installing the coin-cell battery**

### Steps

1. Adhere the coin-cell battery to the slot on the system board.
2. Route the coin-cell battery cable through the routing guide on the fan.
3. Connect the coin-cell battery cable to the connector (RTC1) on the system board.

### Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Heat sink

### Removing the heat sink

#### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

**NOTE:** For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).

## About this task

The following image indicates the location of the heat sink and provides a visual representation of the removal procedure.

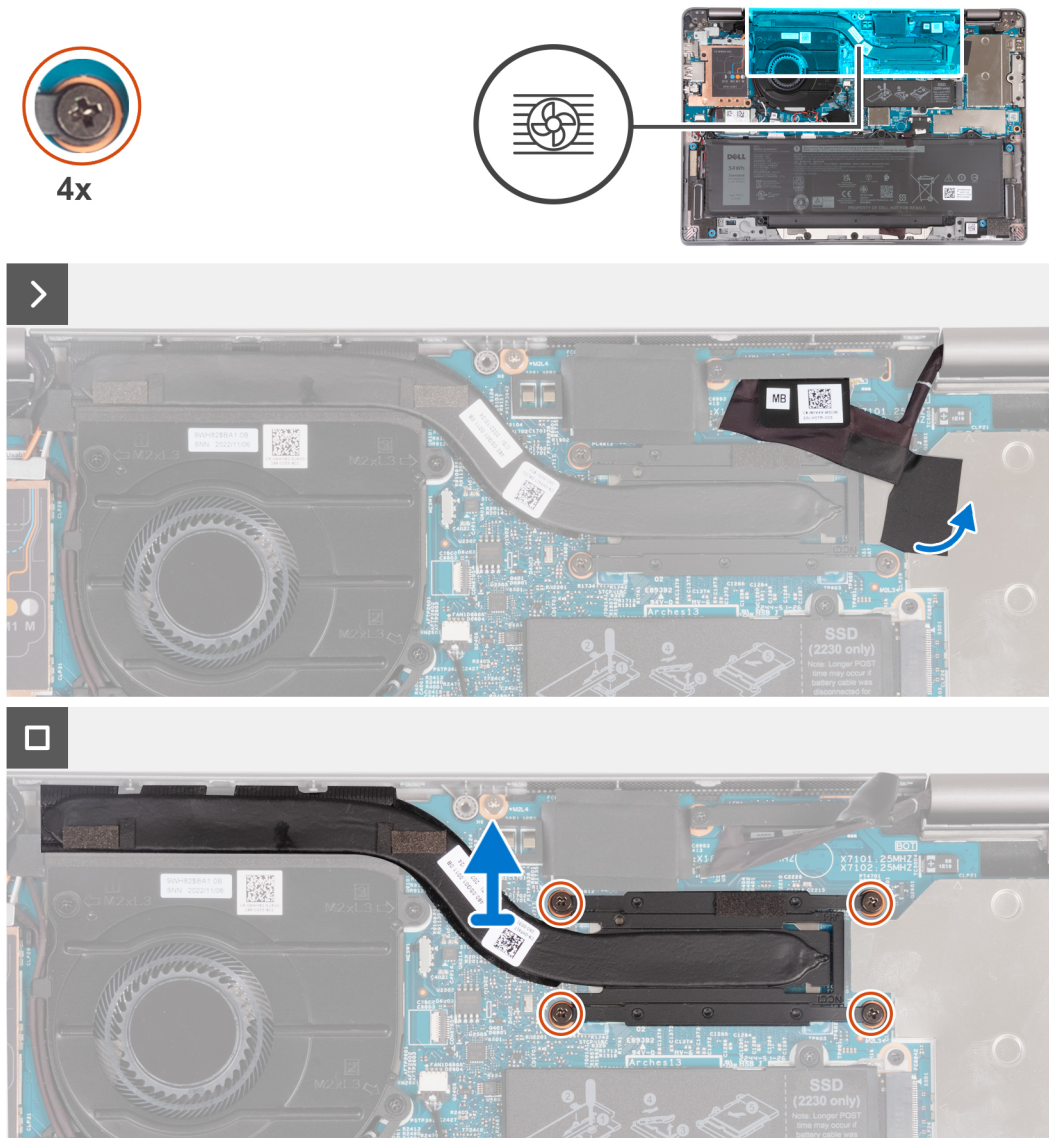


Figure 42. Removing the heat sink

## Steps

1. Peel the tape that secures the eDP cable to show the hidden captive screw on the heat sink.
2. In reverse sequential order (4 > 3 > 2 > 1), as indicated on the heat sink, loosen the four captive screws that secure the heat sink to the system board.
3. Lift the heat sink off the system board.

## Installing the heat sink

### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.


If you are replacing a component, remove the existing component before performing the installation procedure.

**NOTE:** Incorrect alignment of the heat sink can damage the system board and processor.

**NOTE:** If the system board or the heat sink is replaced, use the thermal pad or paste provided in the kit to ensure that thermal conductivity is achieved.

### About this task

The following image indicates the location of the heat sink and provides a visual representation of the installation procedure.

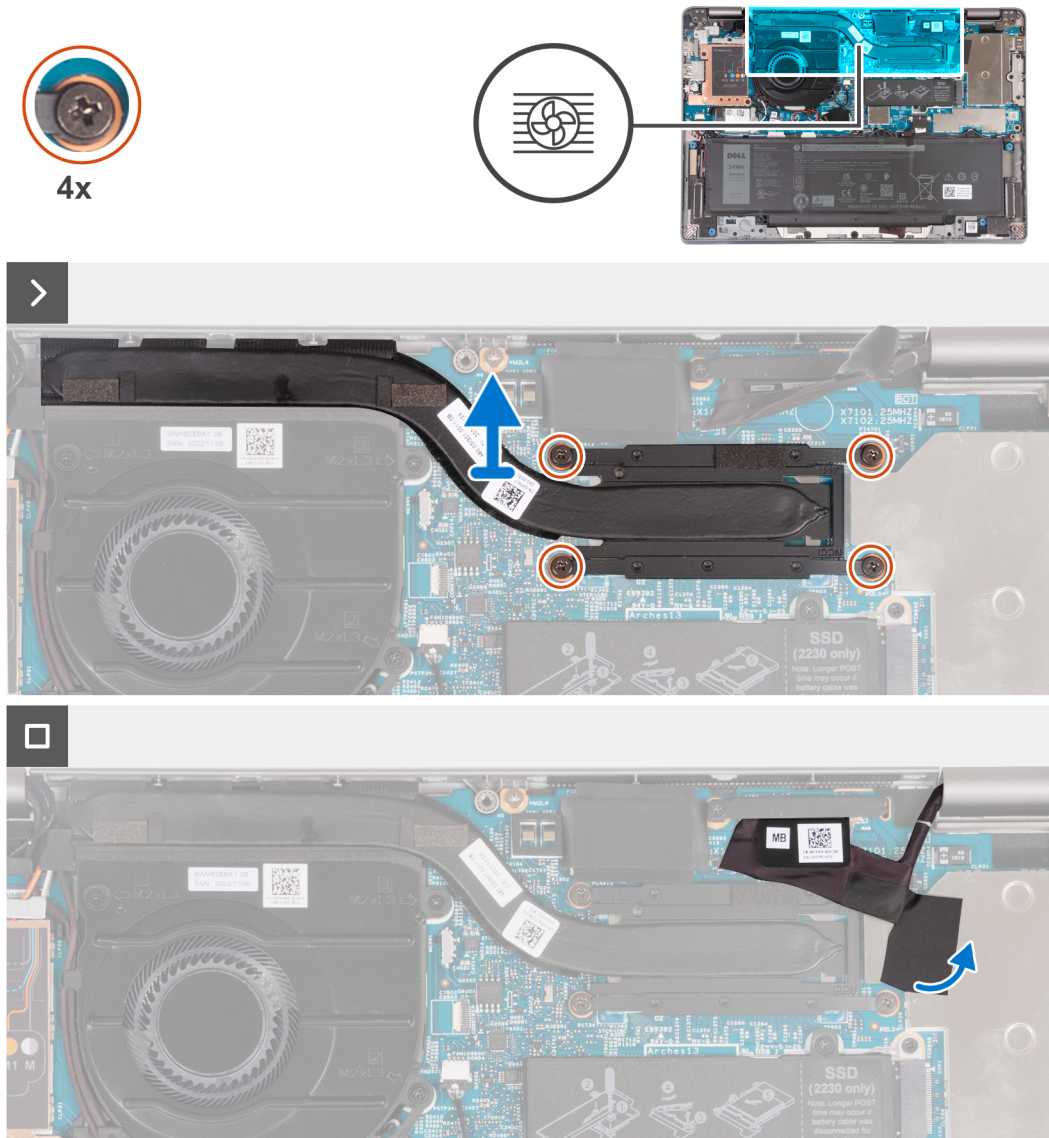

**Figure 43. Installing the heat sink**

### Steps

1. Align the screw holes on the heat sink with the screw holes on the system board.
2. In sequential order (1 > 2 > 3 > 4), as indicated on the heat sink, tighten the four captive screws to secure the heat sink to the system board.
3. Replace the tape that secures the eDP cable in place.

### Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

# System board

## Removing the system board


### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM card tray](#) (for computers with nano-SIM card option).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230 solid state drive](#).
6. Remove the [wireless card](#).
7. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
8. Remove the [fan](#).
9. Remove the [heat sink](#).

### About this task

**NOTE:** When you remove the system board to replace or access other parts, the system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

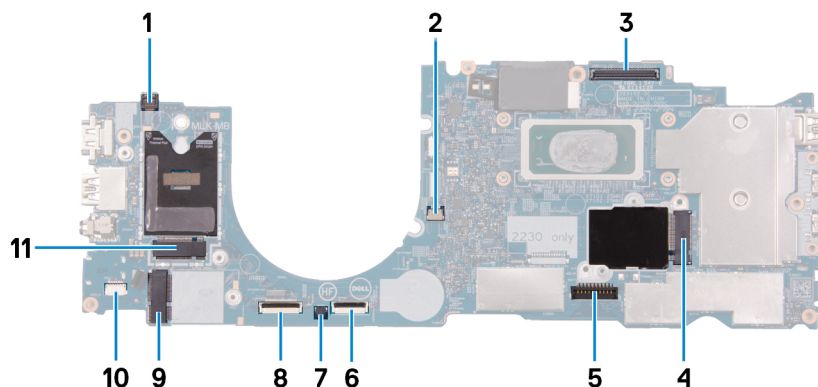

**Figure 44. System-board connectors**

1. Fingerprint-reader cable connector (FP1)
2. Fan-cable connector (FAN1)
3. display-cable connector (LCD1)
4. Solid state drive slot (SSD1)
5. Battery-cable connector (BATT1)
6. Touchpad-cable connector (TPAD1)
7. Coin-cell battery connector (RTC1)
8. Universal Security Hub (USH) cable connector (CN661)
9. Wireless-card connector (LAN1)
10. Speaker-cable connector (SPK1)
11. WWAN 5G/4G-card connector (WWAN1)

The following images indicate the location of the system board and provide a visual representation of the removal procedure.



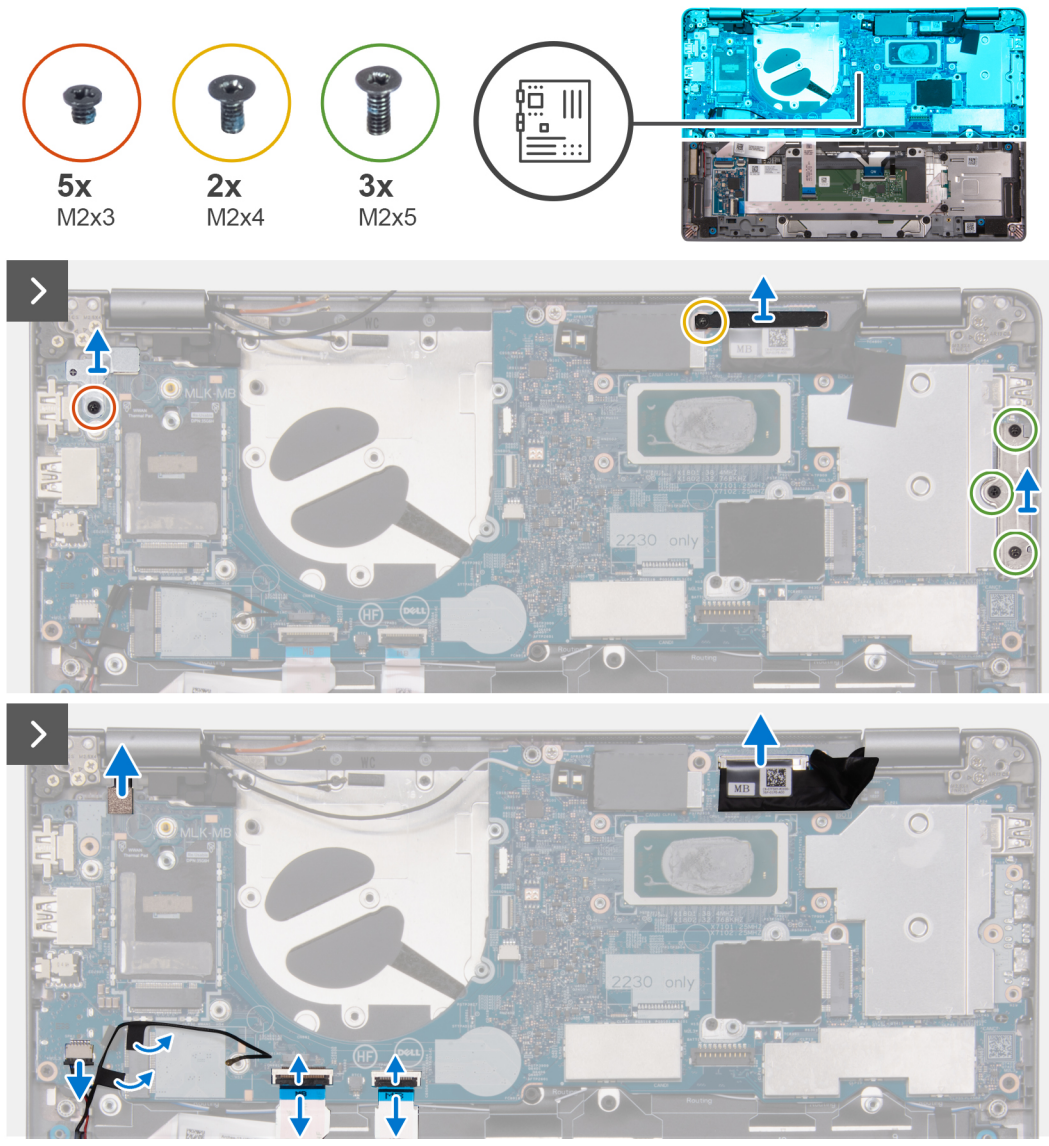


Figure 45. Removing the system board


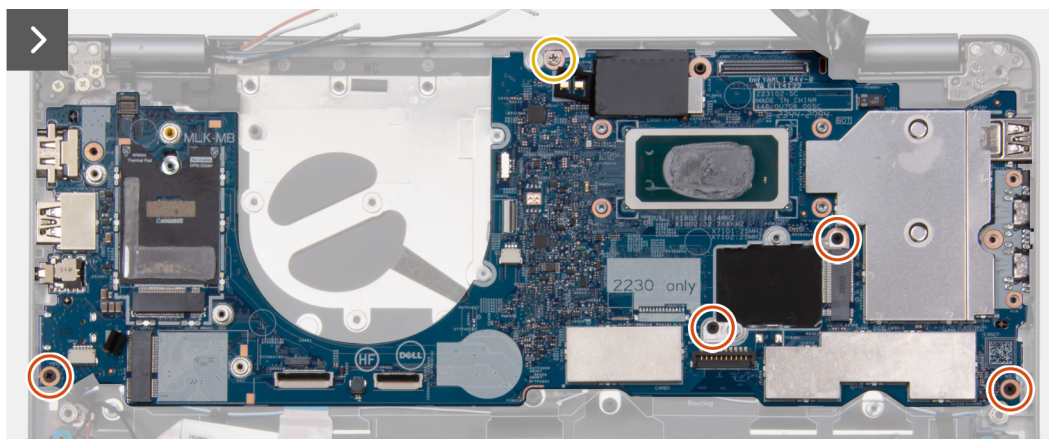


Figure 46. Removing the system board

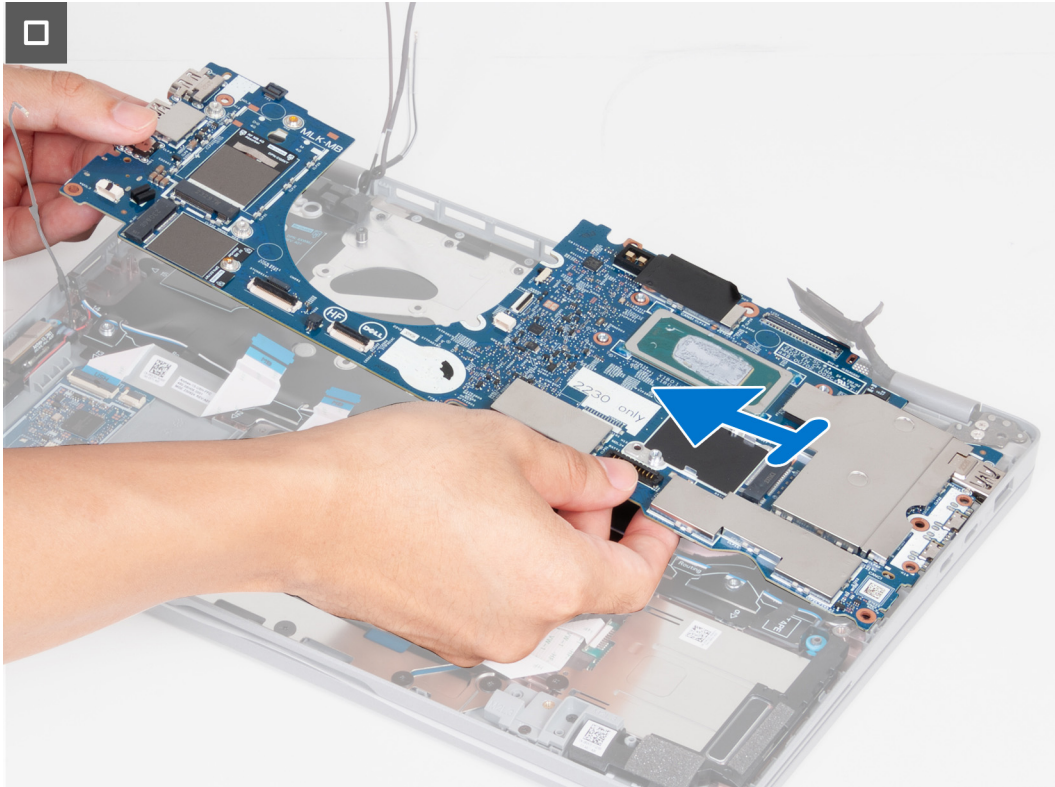

**Figure 47. Removing the system board**

### Steps

1. Remove the screw (M2x3) that secures the fingerprint-reader bracket.
  - NOTE:** Computers with non-fingerprint reader configuration do not have a fingerprint-reader bracket.
2. Remove the fingerprint-reader bracket from the computer.
3. Remove the screw (M2x4) that secures the display bracket to the system board and remove the bracket.
4. Remove the three screws (M2x5) that secure the USB Type-C bracket to the system board and remove the bracket.
5. Disconnect the fingerprint-reader cable from the connector (FP1) on the system board.
6. Peel the conductive tape that is covering the display cable.
7. Disconnect the display cable from the connector (LCD1) on the system board.
8. Open the latch and disconnect the touchpad cable from the connector (TPAD1) on the system board.
9. Open the latch and disconnect the USH cable from the connector (CN661) on the system board.
10. Disconnect the speaker cable from the connector (SPK1) on the system board. Peel off the tape that secures the speaker cable to the system board.
11. Remove the screw (M2x4) that secures the system board to the palm-rest assembly.
12. Remove the four screws (M2x3) that secure the system board to the palm-rest assembly.
13. Lift the system board at an angle to release it from the port and remove it off the palm-rest assembly.

## Installing the system board


### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

**NOTE:** When you remove the system board to replace or access other parts, the system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

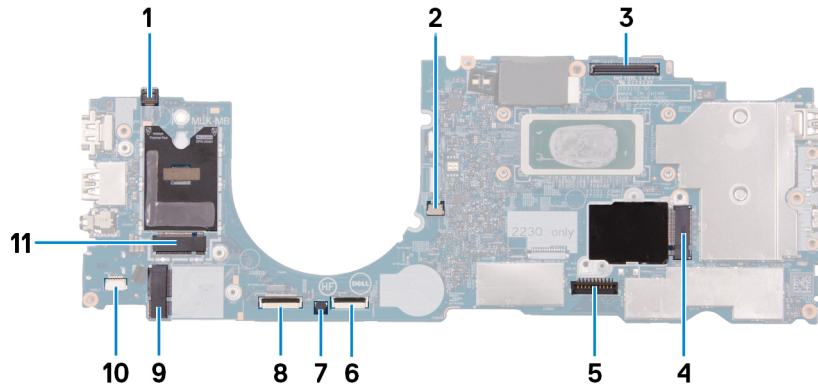

**Figure 48. System-board connectors**

1. Fingerprint-reader cable connector (FP1)
2. Fan-cable connector (FAN1)
3. display-cable connector (LCD1)
4. Solid state drive slot (SSD1)
5. Battery-cable connector (BATT1)
6. Touchpad-cable connector (TPAD1)
7. Coin-cell battery connector (RTC1)
8. Universal Security Hub (USH) cable connector (CN661)
9. WLAN-card connector (WLAN1)
10. Speaker-cable connector (SPK1)
11. WWAN 5G/4G-card connector (WWAN1)

The following images indicate the location of the system board and provide a visual representation of the installation procedure.



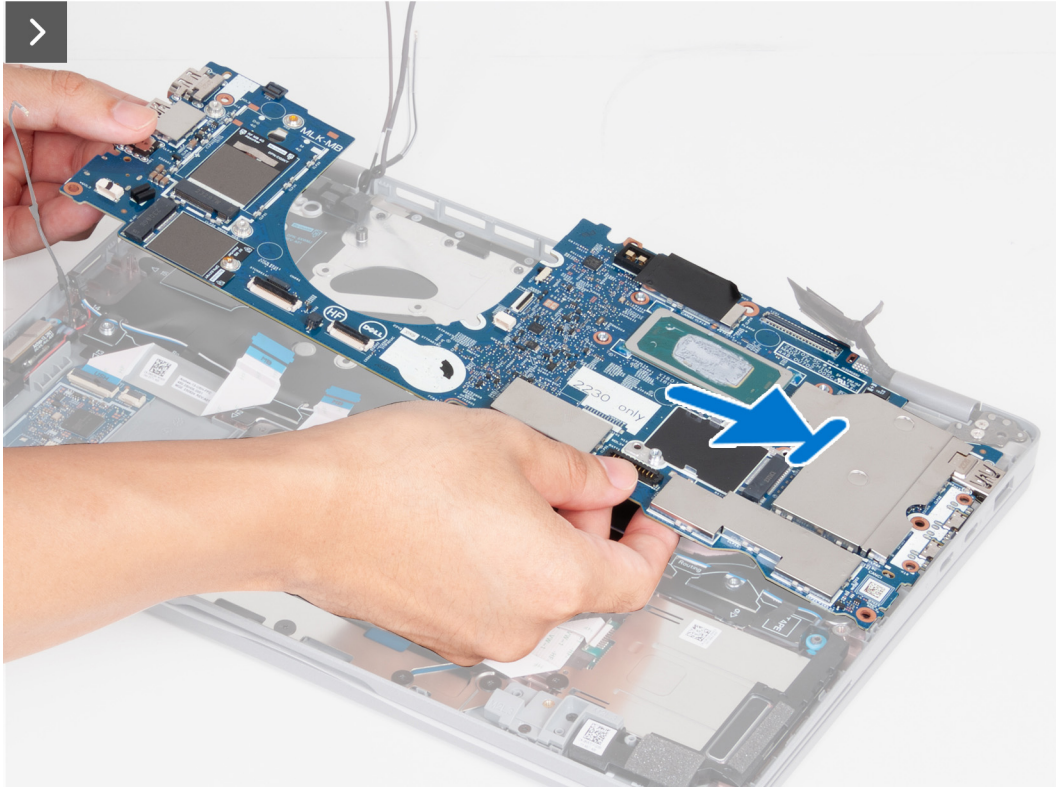


Figure 49. Installing the system board



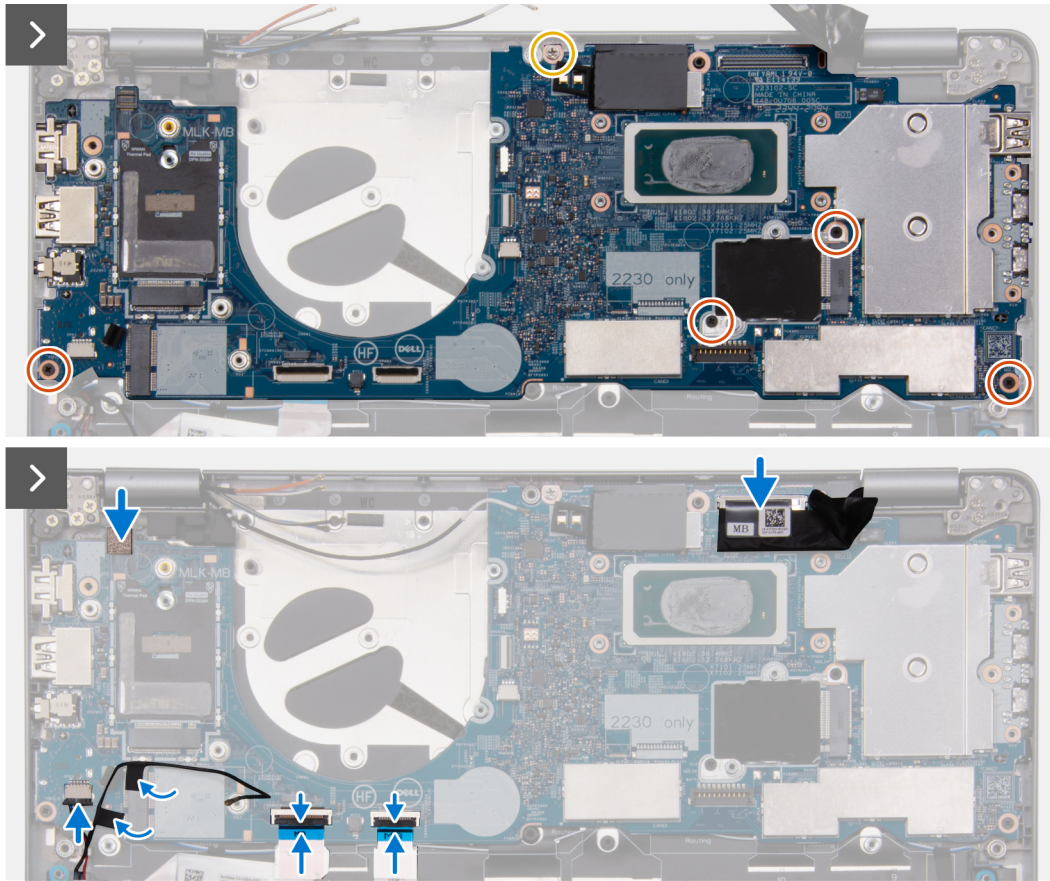


Figure 50. Installing the system board

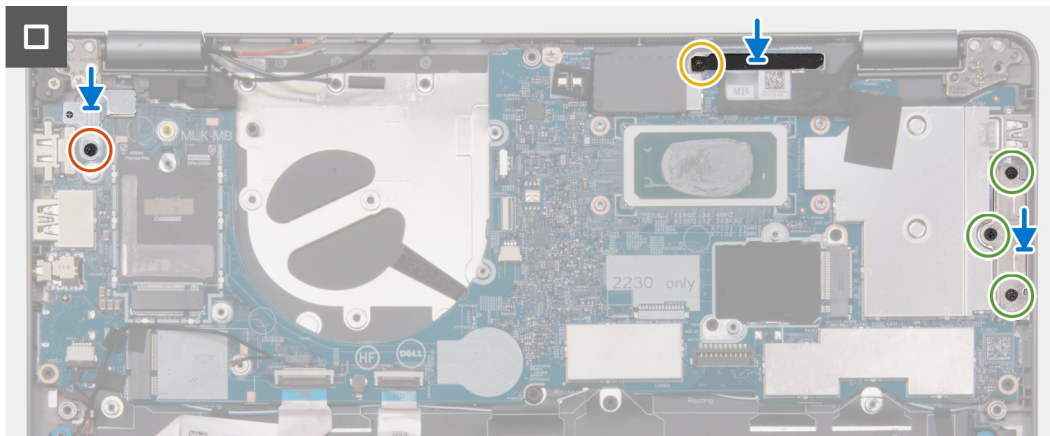


Figure 51. Installing the system board

**Steps**

1. Align the screw holes on the system board with the screw holes on the palm-rest assembly.
2. Replace the four screws (M2x3) to secure the system board to the palm-rest assembly.
3. Replace the screw (M2x4) to secure the system board to the palm-rest assembly.
4. Connect the fingerprint-reader cable to the connector (FP1) on the system board.
5. Connect the display cable to the connector (LCD1) on the system board.
6. Adhere the tape to cover the display cable.
7. Connect the touchpad cable to the connector (TPAD1) on the system board and close the latch.
8. Connect the USH board cable to the connector (CN661) on the system board and close the latch.
9. Connect the speaker cable to the connector (SPK1) on the system board and adhere the tape to secure the speaker cable.

10. Align the screw hole on the fingerprint-reader bracket to the screw hole on the system board.

 **NOTE:** Computers with non-fingerprint reader configuration do not have a fingerprint reader bracket.

11. Replace the screw (M2x3) to secure the fingerprint-reader bracket to the system board.

12. Align the screw hole on the display bracket with the screw hole on the system board.

13. Replace the screw (M2x4) to secure the display bracket to the system board.

14. Align the screw holes on the USB Type-C bracket to the screw holes on the system board.

15. Replace the three screws (M2x5) to secure the USB Type-C bracket to the system board.

### Next steps

1. Install the [heat sink](#).
2. Install the [fan](#).
3. Install the [wireless card](#).
4. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
5. Install the [M.2 2230 solid state drive](#).
6. Install the [battery](#).
7. Install the [base cover](#).
8. Install the [SIM card tray](#) (for computers with nano-SIM card option).
9. Follow the procedure in [After working inside your computer](#).

## Speakers


### Removing the speakers

#### Prerequisites


 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM card tray](#) (for computers with nano-SIM card option).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230 solid state drive](#).
6. Remove the [wireless card](#).
7. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
8. Remove the [fan](#).
9. Remove the [system board](#).

#### About this task

 **NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

The following images indicate the location of the speakers and provide a visual representation of the removal procedure.

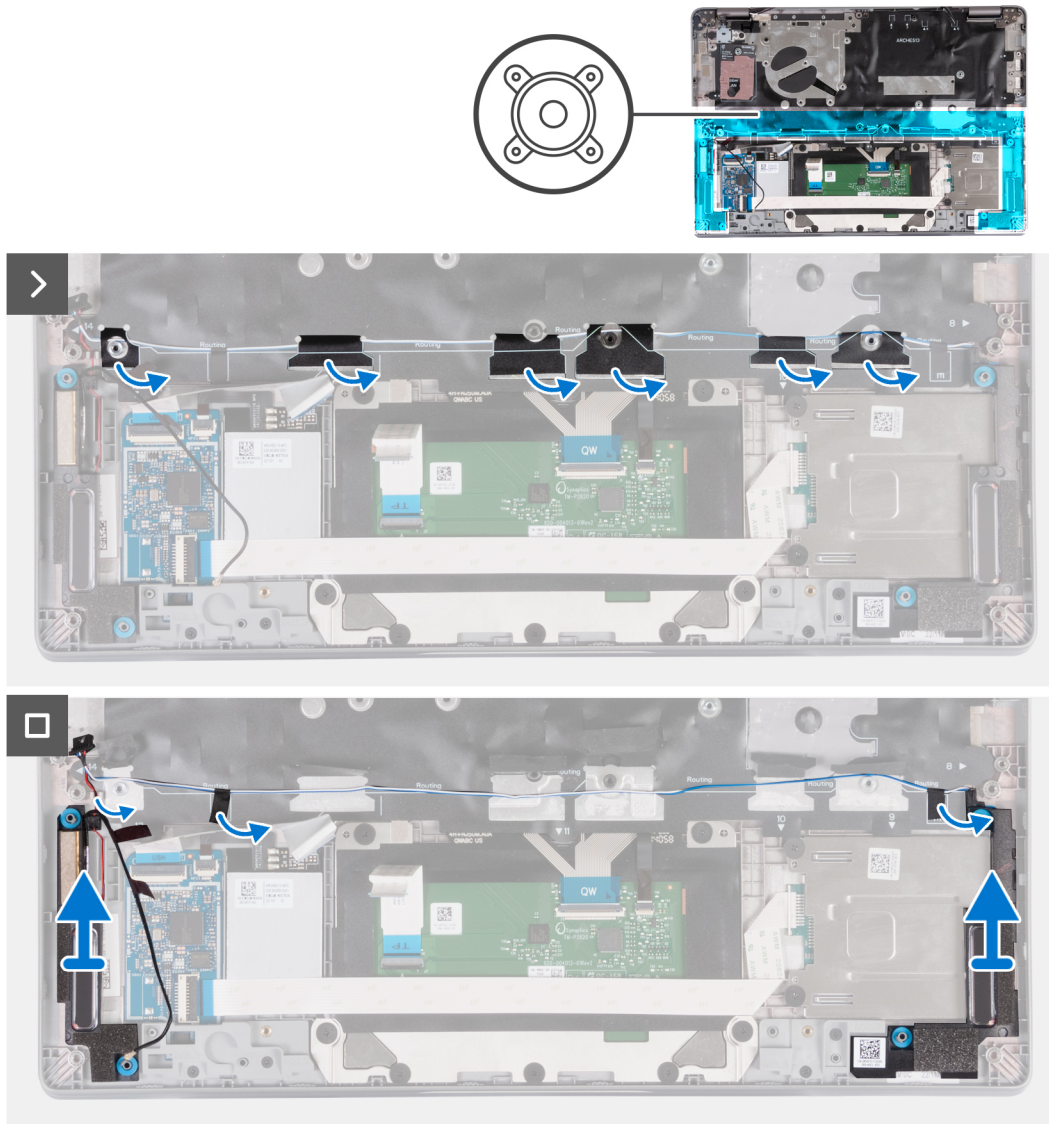

**Figure 52. Removing the speakers**

### Steps

1. Note the routing of the speaker cable, and remove the speaker cable from the routing guides on the palm-rest assembly.
2. Peel off the adhesive tape that secures the speaker cable.
3. Lift the speakers along with the cable off the palm-rest assembly.

## Installing the speakers

### Prerequisites

**⚠ CAUTION:** The information in this installation section is intended for authorized service technicians only.


If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

**i NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

The following images indicate the location of the speaker and provide a visual representation of the installation procedure.



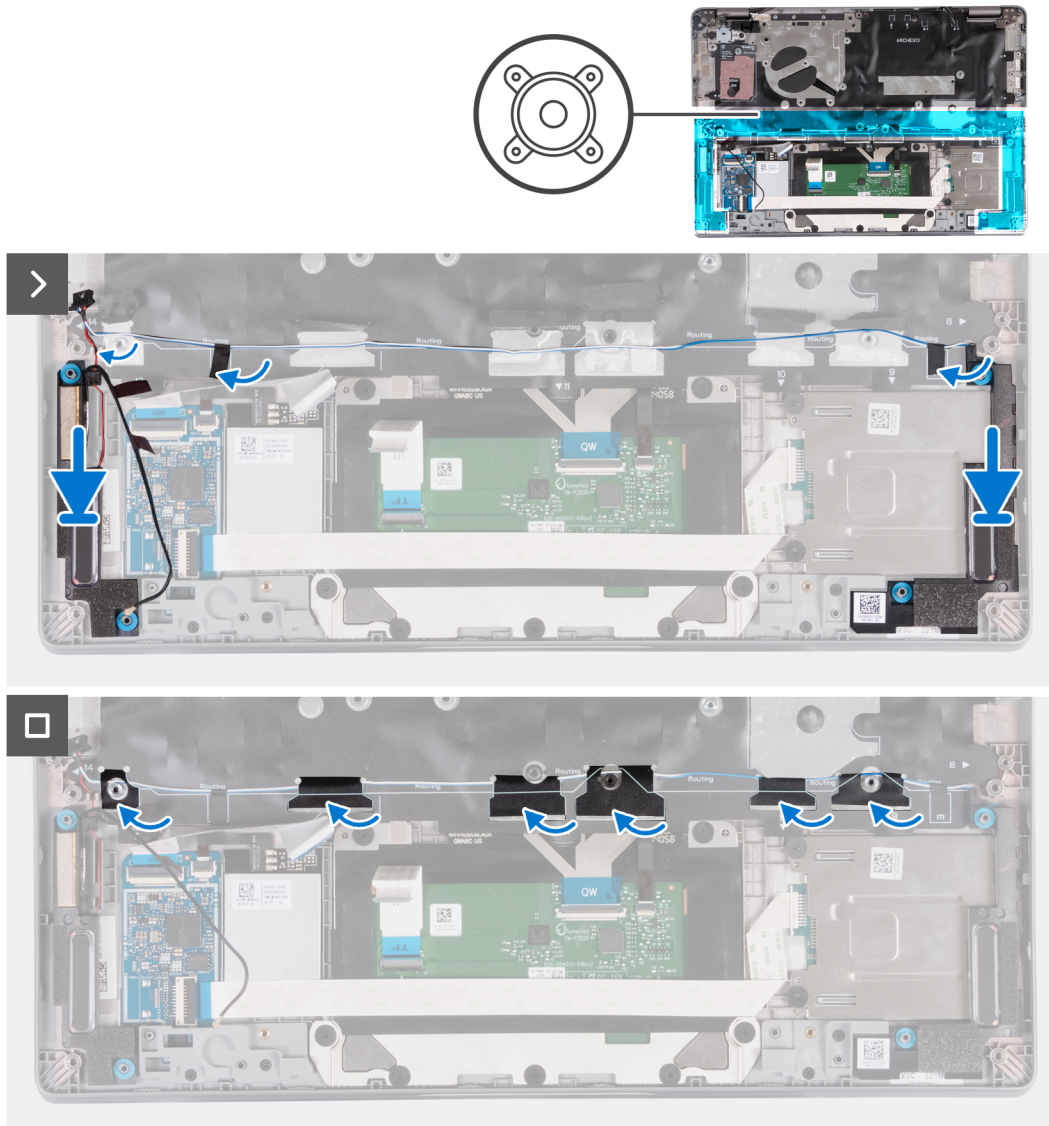


**Figure 53. Installing the speakers**

**Steps**

1. Using the alignment posts, place the left and right speakers into their slots on the palm-rest assembly.

**(i) NOTE:** Ensure that the four rubber grommets are seated into the slot and installed on the speakers properly.

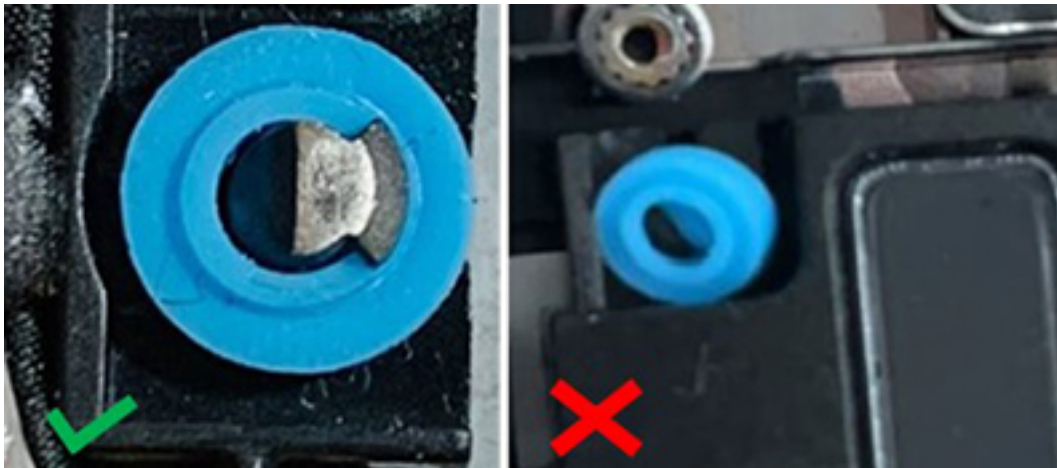

**Figure 54. Rubber grommets of speaker**

2. Route the speaker cables through the routing guides on the palm-rest assembly.
3. Adhere the tape to secure the speaker cables to the palm-rest assembly.

#### Next steps

1. Install the [system board](#).
2. Install the [fan](#).
3. Install the [wireless card](#).
4. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
5. Install the [M.2 2230 solid state drive](#).
6. Install the [battery](#).
7. Install the [base cover](#).
8. Install the [SIM card tray](#) (for computers with nano-SIM card option).
9. Follow the procedure in [After working inside your computer](#).

## Power-button board

### Removing the power button

#### Prerequisites


**⚠ CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM card tray](#) (for computers with nano-SIM card option).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230 solid state drive](#).
6. Remove the [wireless card](#).
7. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
8. Remove the [fan](#).
9. Remove the [system board](#).

#### About this task

**i NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

The following images indicate the location of the power-button and provide a visual representation of the removal procedure.

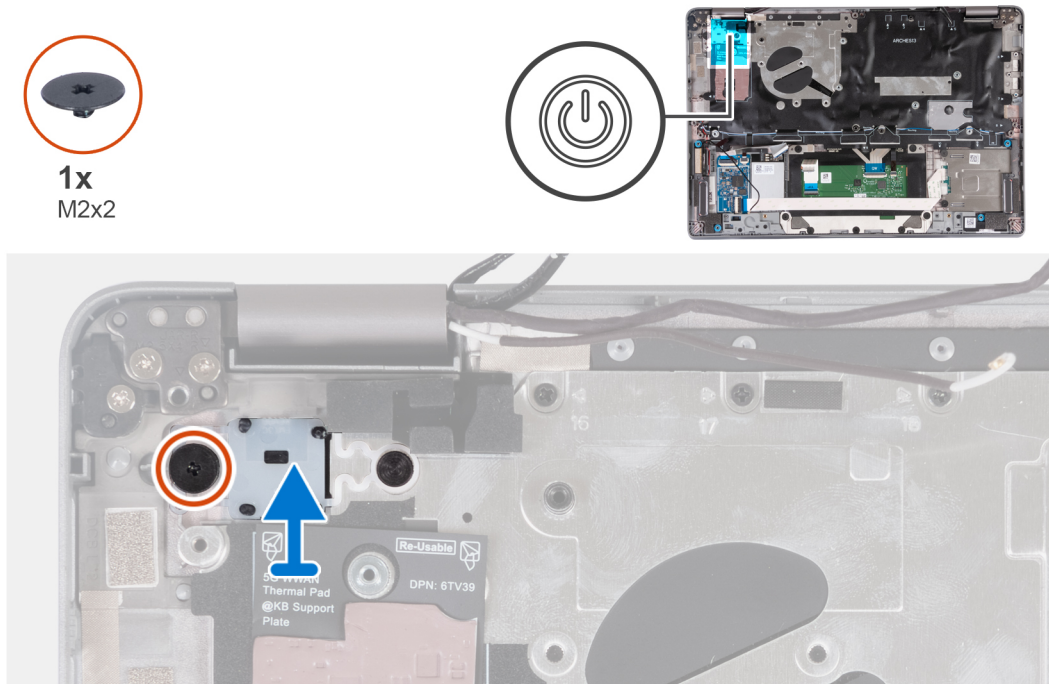

**Figure 55. Removing the power button**

### Steps

1. Remove the screw (M2x2) that secures the power button to the palm-rest assembly.
2. Lift the power button off the computer.


## Installing the power button

### About this task

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

The following images indicate the location of the power button and provide a visual representation of the removal procedure.

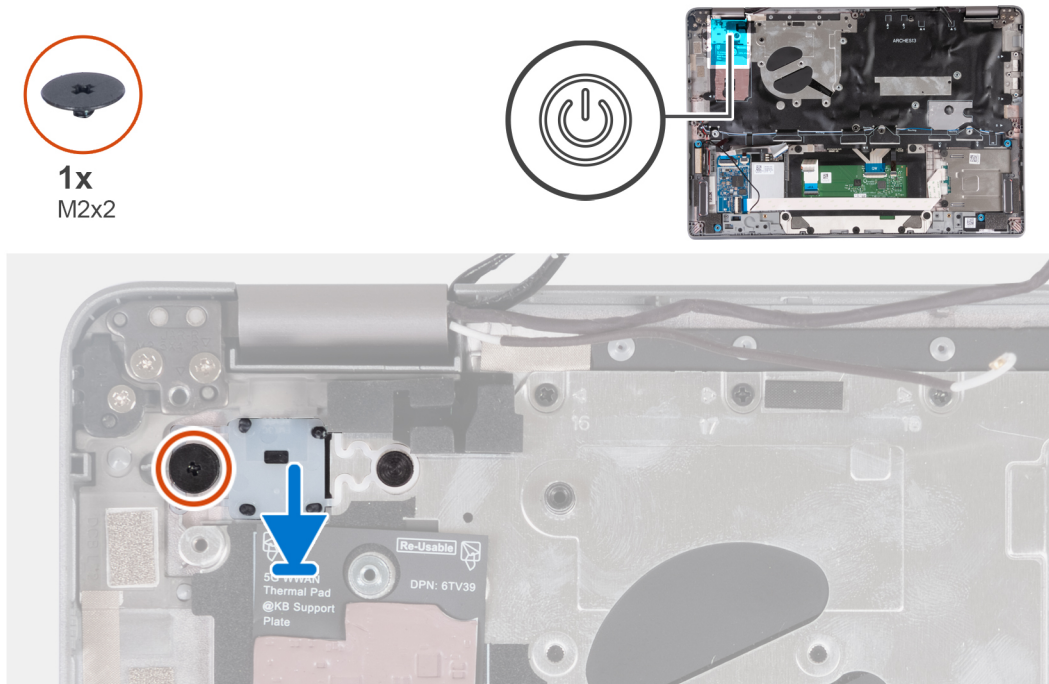

**Figure 56. Installing the power button**

**Steps**

1. Align and place the power button on the palm-rest assembly.
2. Replace the screw (M2x2) that secures the power button to the palm-rest assembly.

**Next steps**

1. Install the [system board](#).
2. Install the [fan](#).
3. Install the [wireless card](#).
4. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
5. Install the [M.2 2230 solid state drive](#).
6. Install the [battery](#).
7. Install the [base cover](#).
8. Install the [SIM card tray](#) (for computers with nano-SIM card option).
9. Follow the procedure in [After working inside your computer](#).

## Removing the power button with fingerprint reader

**Prerequisites**

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM card tray](#) (for computers with nano-SIM card option).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230 solid state drive](#).
6. Remove the [wireless card](#).
7. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
8. Remove the [fan](#).
9. Remove the [system board](#).



### About this task

**NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

The following images indicate the location of the power-button with optional fingerprint reader and provide a visual representation of the removal procedure.

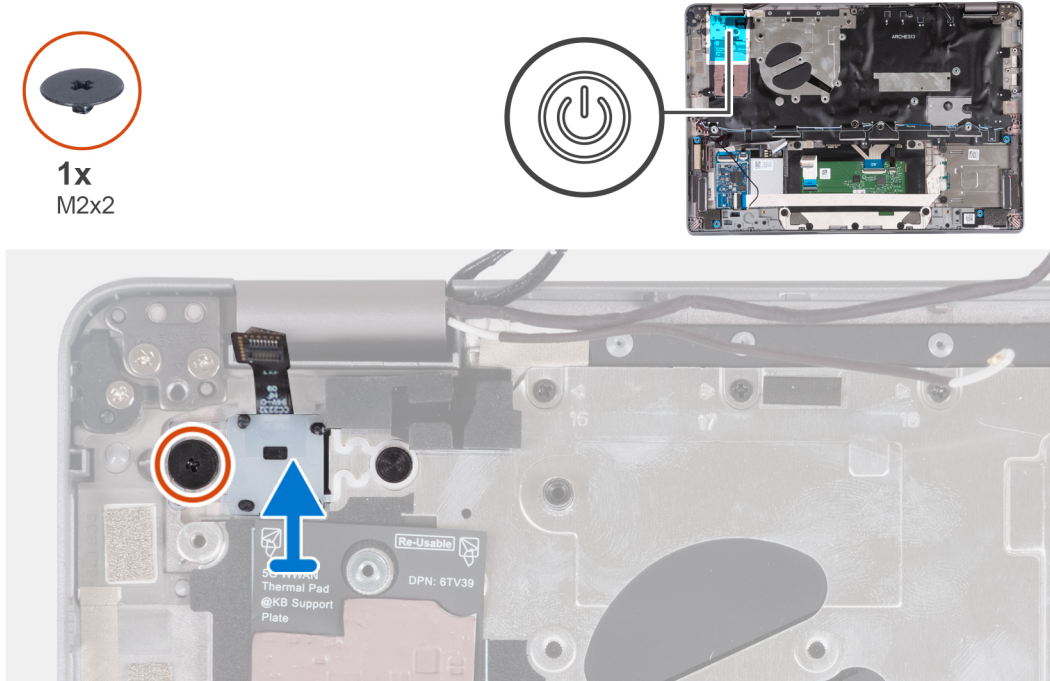


Figure 57. Removing the power button with fingerprint reader

### Steps

1. Remove the screw (M2x2) that secures the power button with fingerprint reader to the palm-rest assembly.
2. Lift the power button with the fingerprint reader and cable off the computer.

## Installing the power button with fingerprint reader


### About this task

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

The following images indicate the location of the power button with fingerprint reader and provide a visual representation of the removal procedure.



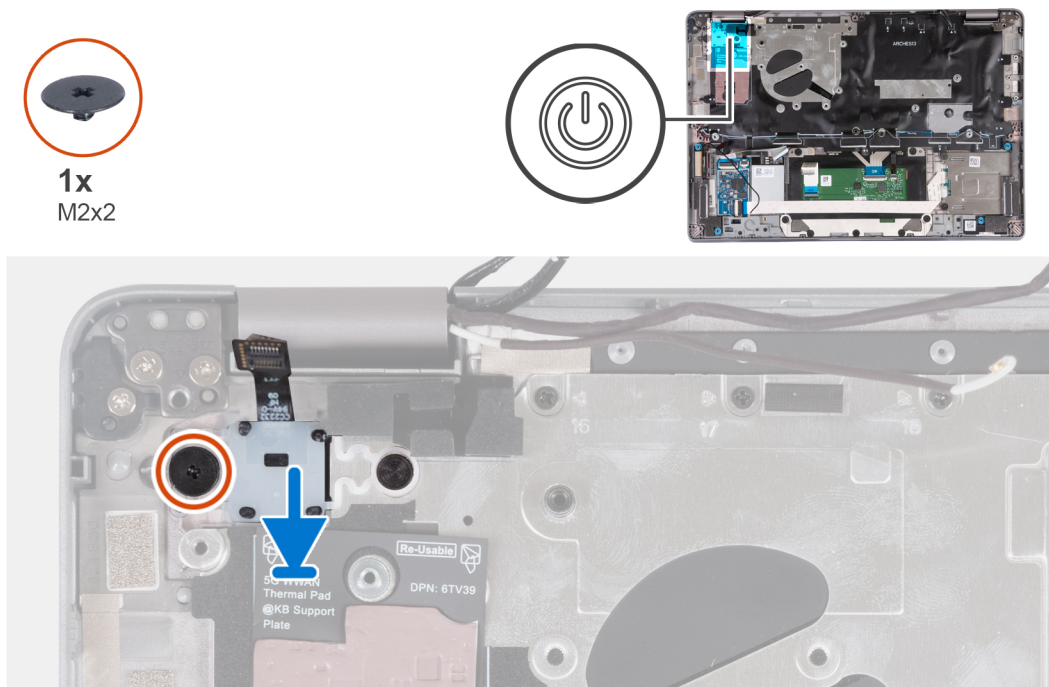

**Figure 58. Installing the power button with fingerprint reader**

### Steps

1. Align and place the power button with the fingerprint reader and cable on the palm-rest assembly.
2. Replace the screw (M2x2) to secure the power button with fingerprint reader to the palm-rest assembly.

### Next steps

1. Install the [system board](#).
2. Install the [fan](#).
3. Install the [wireless card](#).
4. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
5. Install the [M.2 2230 solid state drive](#).
6. Install the [battery](#).
7. Install the [base cover](#).
8. Install the [SIM card tray](#) (for computers with nano-SIM card option).
9. Follow the procedure in [After working inside your computer](#).

## Keyboard

### Removing the keyboard

#### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM card tray](#) (for computers with nano-SIM card option).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230 solid state drive](#).
6. Remove the [wireless card](#).
7. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.

8. Remove the fan.
9. Remove the system board.
10. Remove the speakers.
11. Remove the power button or power button with optional fingerprint reader, whichever is applicable.
12. Remove the smart card reader (optional).
13. Remove the display assembly.

**About this task**

**NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

The following images indicate the location of the keyboard and provide a visual representation of the removal procedure.

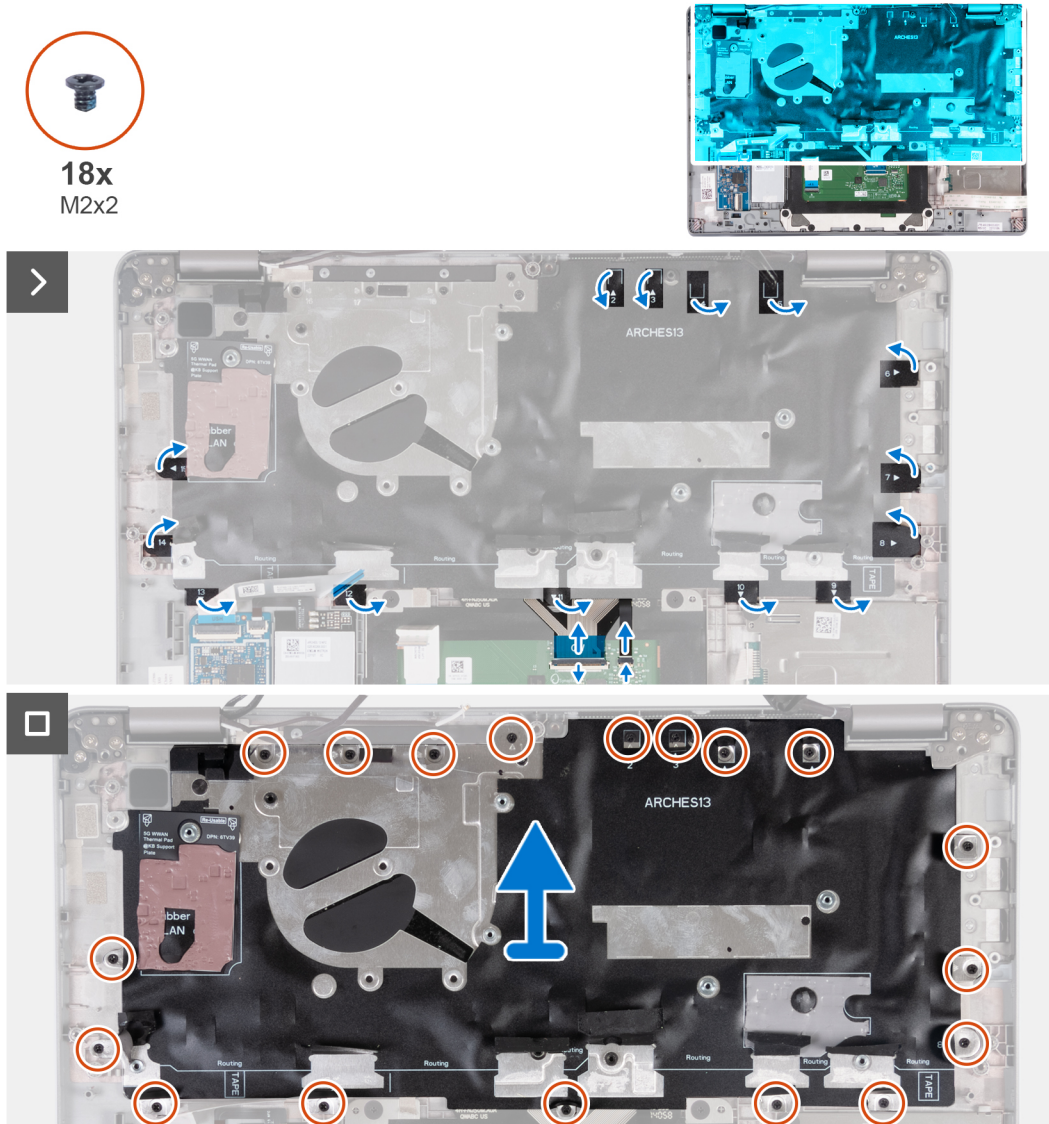

**Figure 59. Removing the keyboard assembly**

**Steps**

1. Open the latch and disconnect the keyboard cable from the touchpad.
2. Open the latch and disconnect the keyboard backlit cable from the touchpad.
3. Lift the mylar covering the screws.
4. Remove the 18 screws (M2x2) that secure the keyboard assembly to the palm-rest assembly.
5. Carefully lift the keyboard assembly from the palm-rest assembly.



2x  
M2x2



Figure 60. Removing the keyboard assembly

6. Flip the keyboard assembly.
7. Remove the two screws (M2x2) that secure the keyboard to the keyboard bracket.
8. Remove the keyboard from the keyboard bracket.

## Installing the keyboard

### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

**NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

The following images indicate the location of the keyboard and provide a visual representation of the installation procedure.



2x  
M2x2




**Figure 61. Installing the keyboard assembly**

### Steps

1. Replace the two screws (M2x2) that secure the keyboard to the keyboard bracket.
2. Flip the keyboard assembly and align it to its slot on the palm-rest assembly.
3. Press down on the lattice at the snap points, to secure the keyboard assembly to the palm-rest assembly.



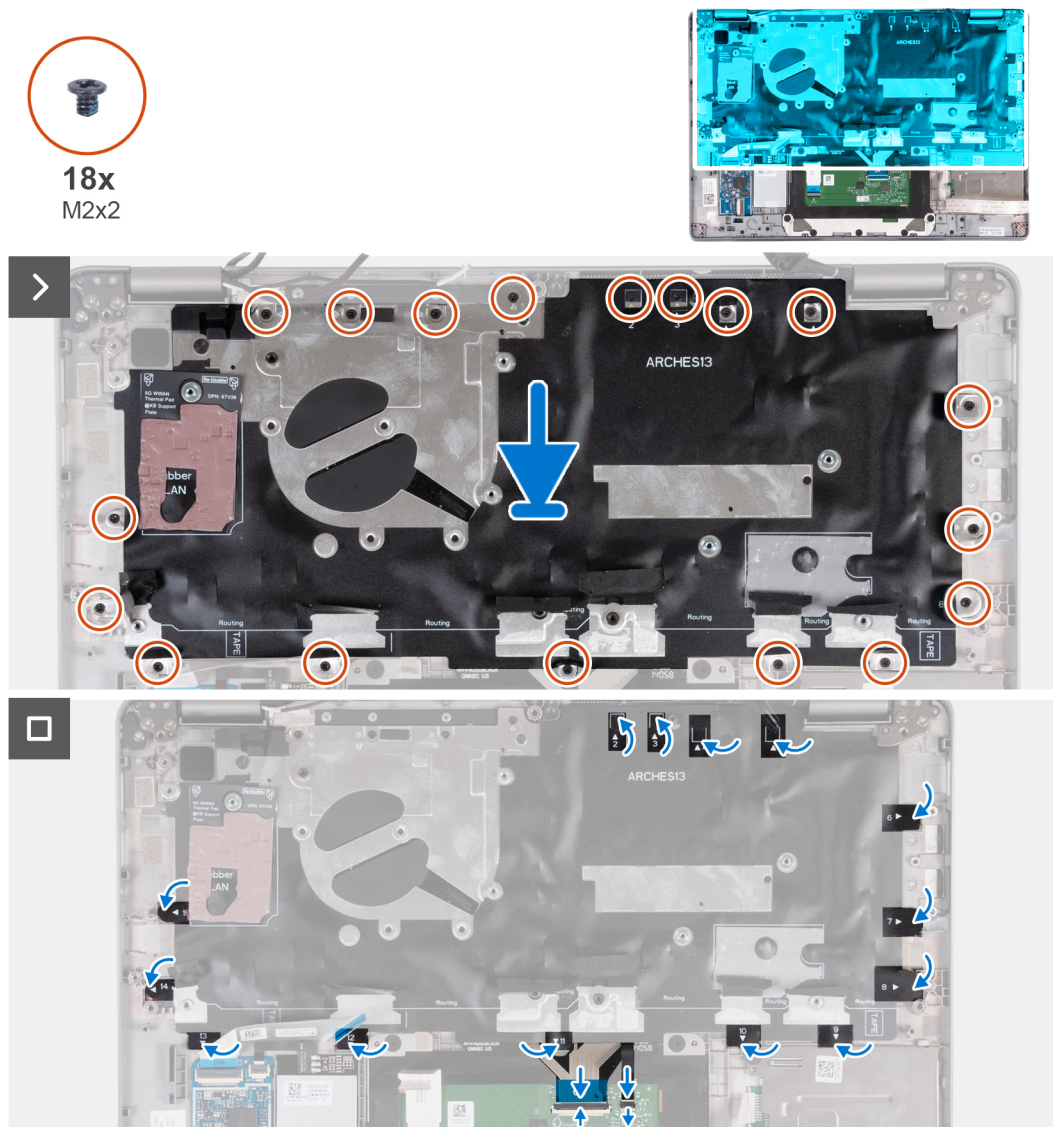

**Figure 62. Installing the keyboard assembly**

4. Replace the 18 screws (M2x2) to secure the keyboard assembly to the palm-rest assembly.
5. Adhere the mylar back on the screws.
6. Connect the keyboard backlit cable to the touchpad and close the latch.
7. Connect the keyboard cable to the touchpad and close the latch.

#### Next steps

1. Install the [display assembly](#).
2. Install the [speakers](#).
3. Install the [smart card reader](#) (optional).
4. Install the [power button](#) or [power button with fingerprint reader](#), whichever is applicable.
5. Install the [system board](#).
6. Install the [heat sink](#).
7. Install the [fan](#).
8. Install the [wireless card](#).
9. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
10. Install the [M.2 2230 solid state drive](#).
11. Install the [battery](#).
12. Install the [base cover](#).

13. Install the [SIM card tray](#) (for computers with nano-SIM card option).
14. Follow the procedure in [After working inside your computer](#).

## Display assembly

### Removing the display assembly

Latitude 5350 laptop display assembly can be further disassembled to replace display bezel, display panel, hinges, display cable, camera, and display back cover.

#### Prerequisites

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM card tray](#) (for computers with nano-SIM card option).
3. Remove the [base cover](#).

#### About this task

The following images indicate the location of the display assembly and provide a visual representation of the removal procedure.




**Figure 63. Removing the display assembly**

**Steps**

1. Remove the screw (M2x4) that secures the display bracket to the system board.
2. Peel the adhesive tape that secures the display cable.
3. Disconnect the display cable from the connector (LCD1) on the system board.
4. Note the wireless card antenna cable routing, and remove the antenna cables from the routing guide on the fan.
5. Disconnect the sensor cable from the system board.
6. Remove the four screws (M2.5x4) that secure the left-display hinge and right-display hinge to the system board.



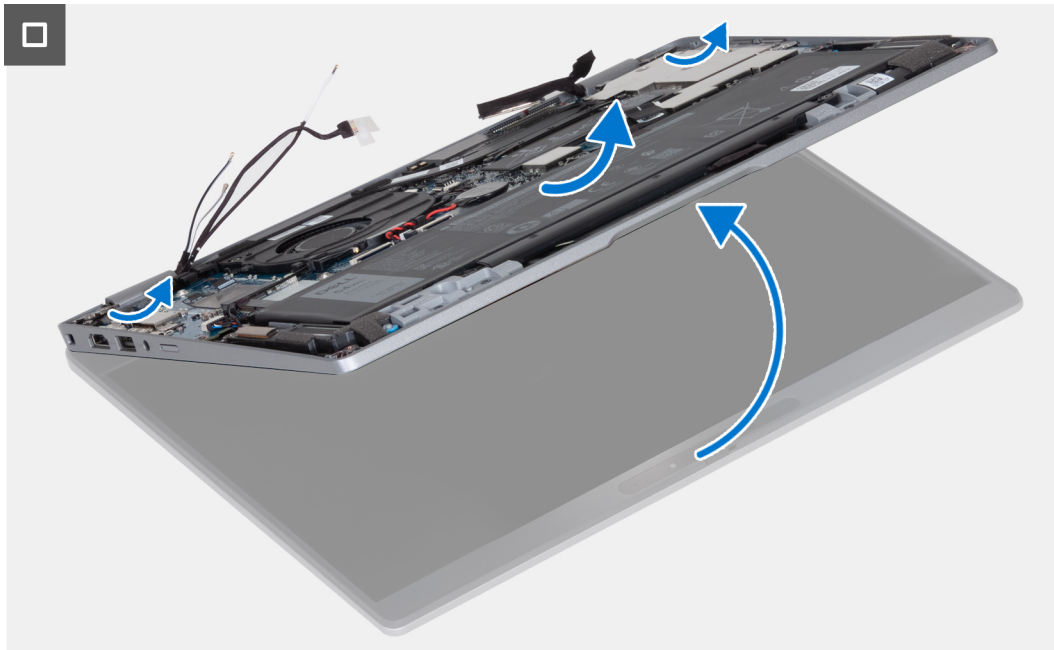

**Figure 64. Removing the display assembly**

7. Open the palm-rest assembly at an angle.
8. Gently lift the display assembly off the palm-rest assembly.

## Installing the display assembly


### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task


The following images indicate the location of the display assembly and provide a visual representation of the installation procedure.

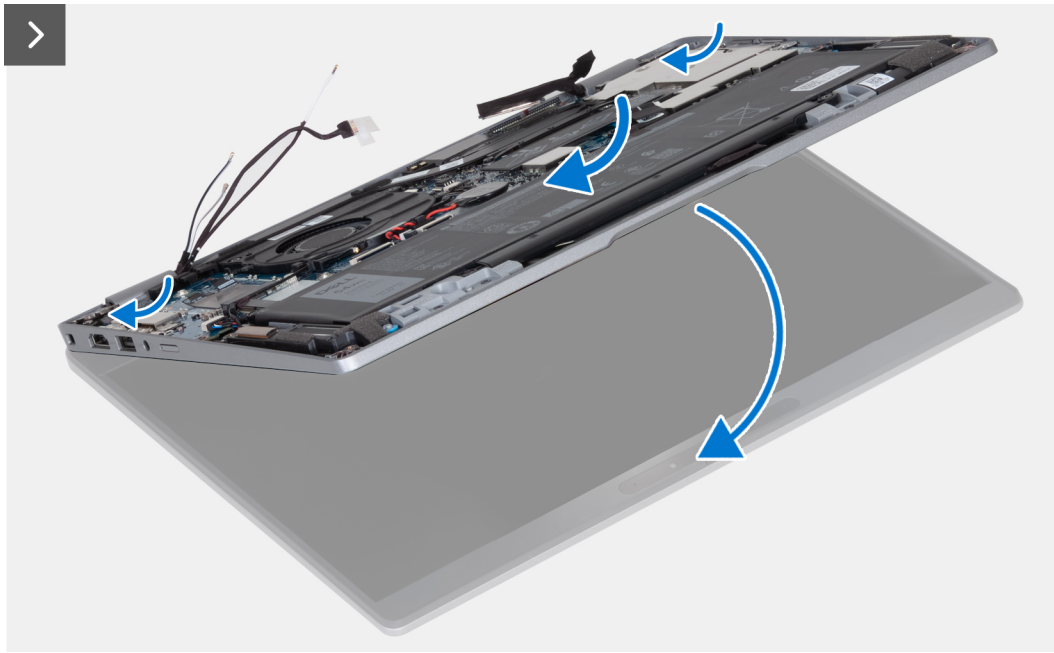

**Figure 65. Installing the display assembly**

**Steps**

1. Place the display assembly on a clean and flat surface.
2. Align and place the palm-rest assembly on the display assembly.
3. Using the alignment posts, close the display hinges.

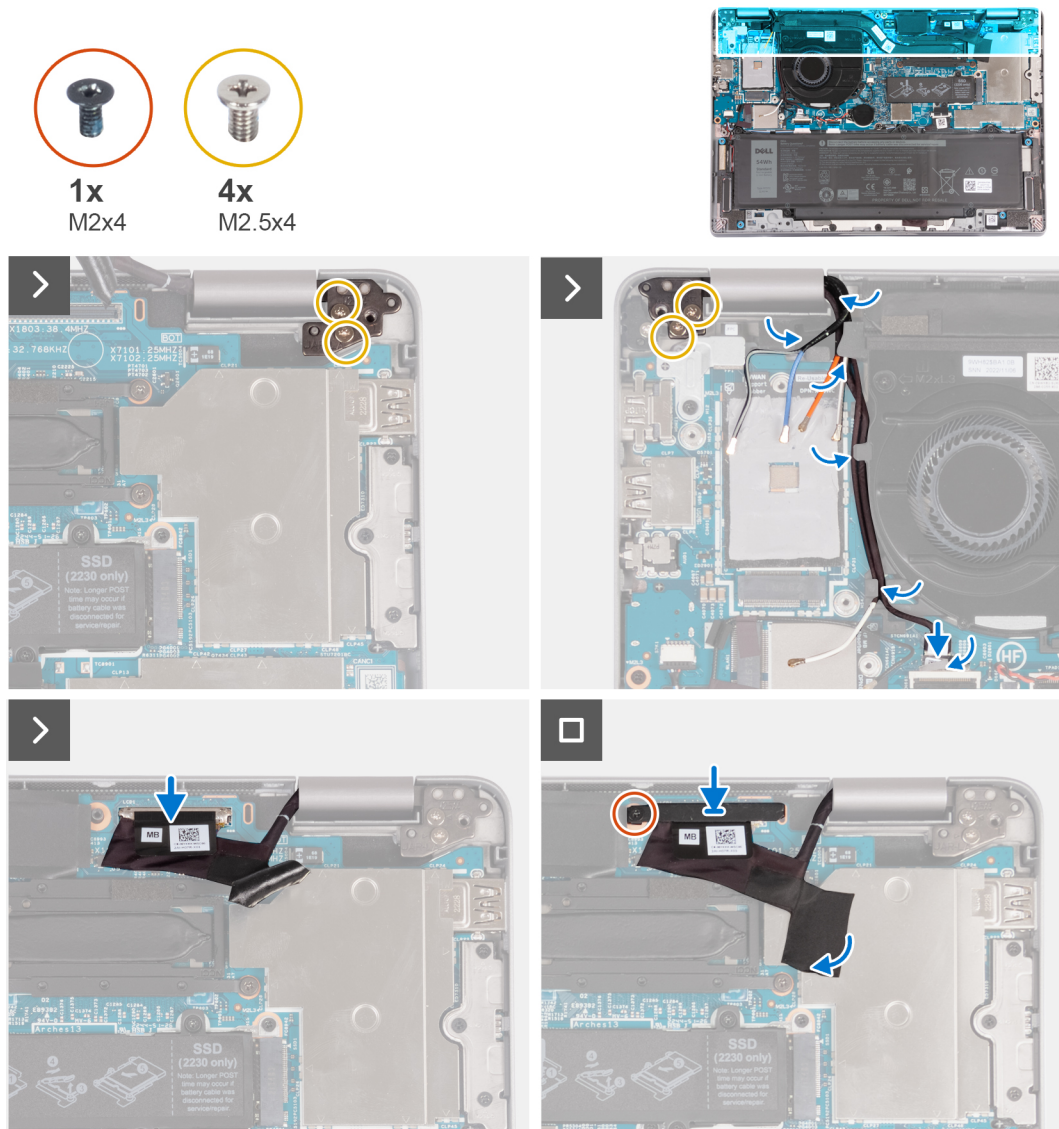

**Figure 66. Installing the display assembly**

4. Replace the four screws (M2.5x4) that secure the left-display hinge and right-display hinge to the system board.
5. Route the WLAN-antenna cables into the routing guide underneath the fan.
6. Connect the sensor cable to the system board.
7. Connect the display cable to the connector (LCD1) on the system board and adhere the tape.
8. Replace the screw (M2x4) that secures the display bracket to the system board.

#### Next steps

1. Install the [base cover](#).
2. Install the [SIM card tray](#) (for computers with nano-SIM card option).
3. Follow the procedure in [After working inside your computer](#).

# Display bezel

## Removing the display bezel (laptop)

### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** The display bezel removal procedure is applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [display assembly](#).

### About this task

The following images indicate the location of the display bezel and provide a visual representation of the removal procedure.




**Figure 67. Removing the display bezel (laptop)**

### Steps

1. Insert a plastic scribe into the recesses near both the hinge caps to start the prying, and release the display bezel.
  - NOTE:** The display bezel is adhered to the display panel with adhesive. Work your way around the entire display bezel to disengage the adhesive first before prying upwards.
  - NOTE:** Carefully pry and remove the bezel to minimize the risk of display panel damages.
2. Carefully pry along the outside edge of the display bezel. Work your way around the entire display bezel until the display bezel is separated from the display cover.

**NOTE:** Do not use a plastic scribe or any other objects to pry up the display bezel in the manner that is shown in the following image. The pressure applied on the display panel by the plastic scribe damages the display panel.

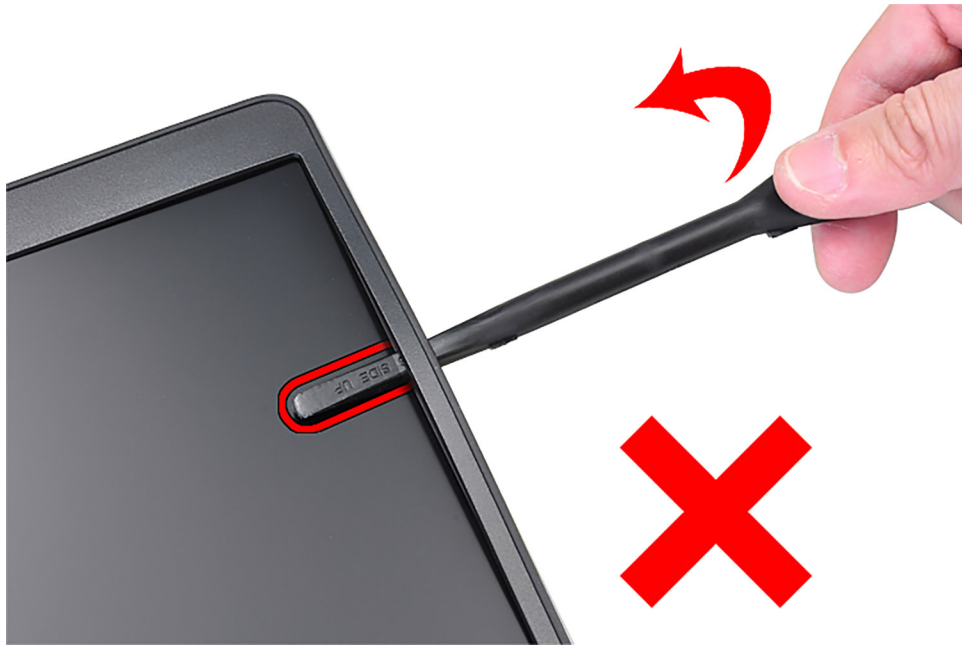

**Figure 68. Prying the display bezel (laptop)**

3. Remove the display bezel off the display back cover.

## Installing the display bezel

### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** The display-bezel installation procedure is applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the display bezel and provide a visual representation of the installation procedure.



**Figure 69. Installing the display bezel (laptop)**

#### Steps

Align the display bezel with the display back cover and antenna assembly, and gently snap the display bezel into place.

#### Next steps

1. Install the [display assembly](#).
2. Install the [battery](#).
3. Install the [base cover](#).
4. Follow the procedure in [After working inside your computer](#).

## Display hinges

### Removing the display hinges (laptop)

#### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** The display-hinge removal procedure is applicable only for the Latitude 5350 laptop and not for the 2-in-1 configuration.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [display assembly](#).



#### About this task

The following images indicate the location of the display hinges and provide a visual representation of the removal procedure.





**6x**  
M2.5x3

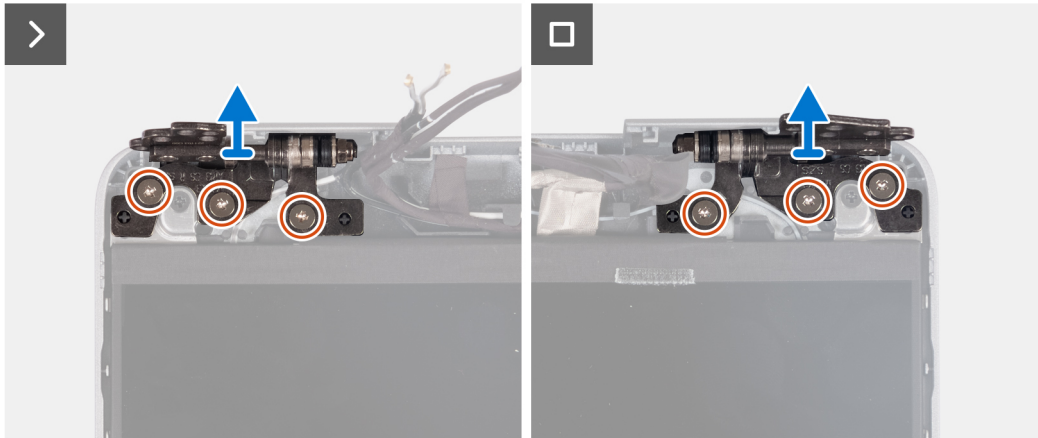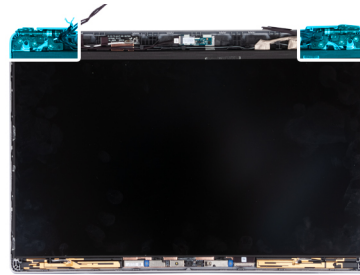

**Figure 70. Removing the display hinges (laptop)**

#### Steps

1. Remove the six screws (M2.5x3) that secure the right and left display hinges to the display back cover.
2. Lift the display hinges from the display back cover.

## Installing the display hinges (laptop)

#### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** The display-hinge installation procedure is applicable only for the Latitude 5350 laptop and not for the 2-in-1 configuration.



If you are replacing a component, remove the existing component before performing the installation procedure.

#### About this task

The following images indicate the location of the display hinges and provide a visual representation of the installation procedure.



**6x**  
M2.5x3

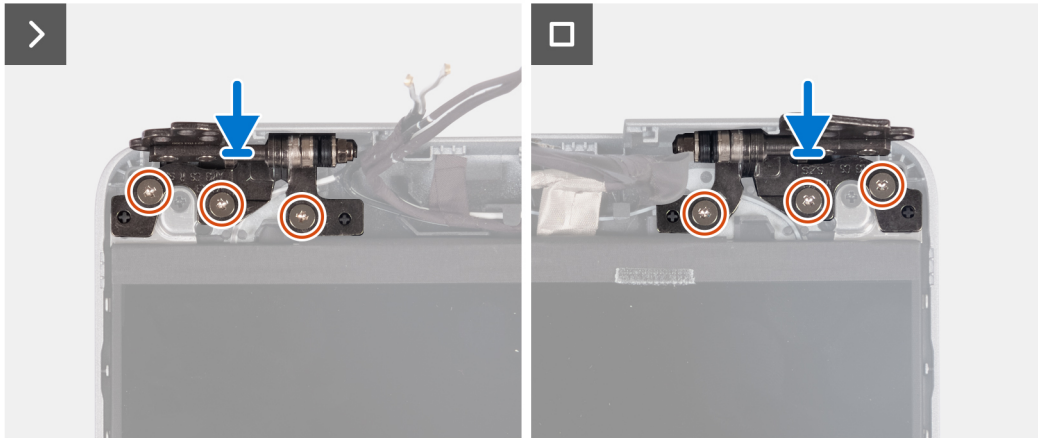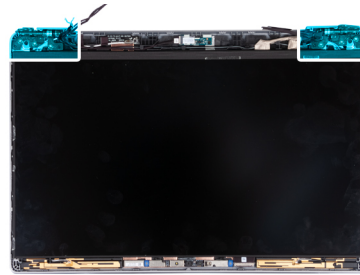

**Figure 71. Removing the display hinges (laptop)**

#### Steps

1. Lower the display hinges on the display assembly.
2. Replace the six screws (M2.5x3) to secure the left and right display hinges to the display back cover.

#### Next steps

1. Install the [display assembly](#).
2. Install the [battery](#).
3. Install the [base cover](#).
4. Follow the procedure in [After working inside your computer](#).

## Display panel

### Removing the display panel (laptop)

#### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.


**NOTE:** The display-panel removal procedure is applicable only for the Latitude 5350 laptop and not for the 2-in-1 configuration.

**NOTE:** The display panel and its support brackets are a single assembly and cannot be further disassembled once it is removed from the display back cover. Do not remove the support brackets from the display panel.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [display assembly](#).
5. Remove the [display bezel](#).
6. Remove the [display hinges](#).

**About this task**

The following image indicate the location of the display panel and provide a visual representation of the removal procedure.

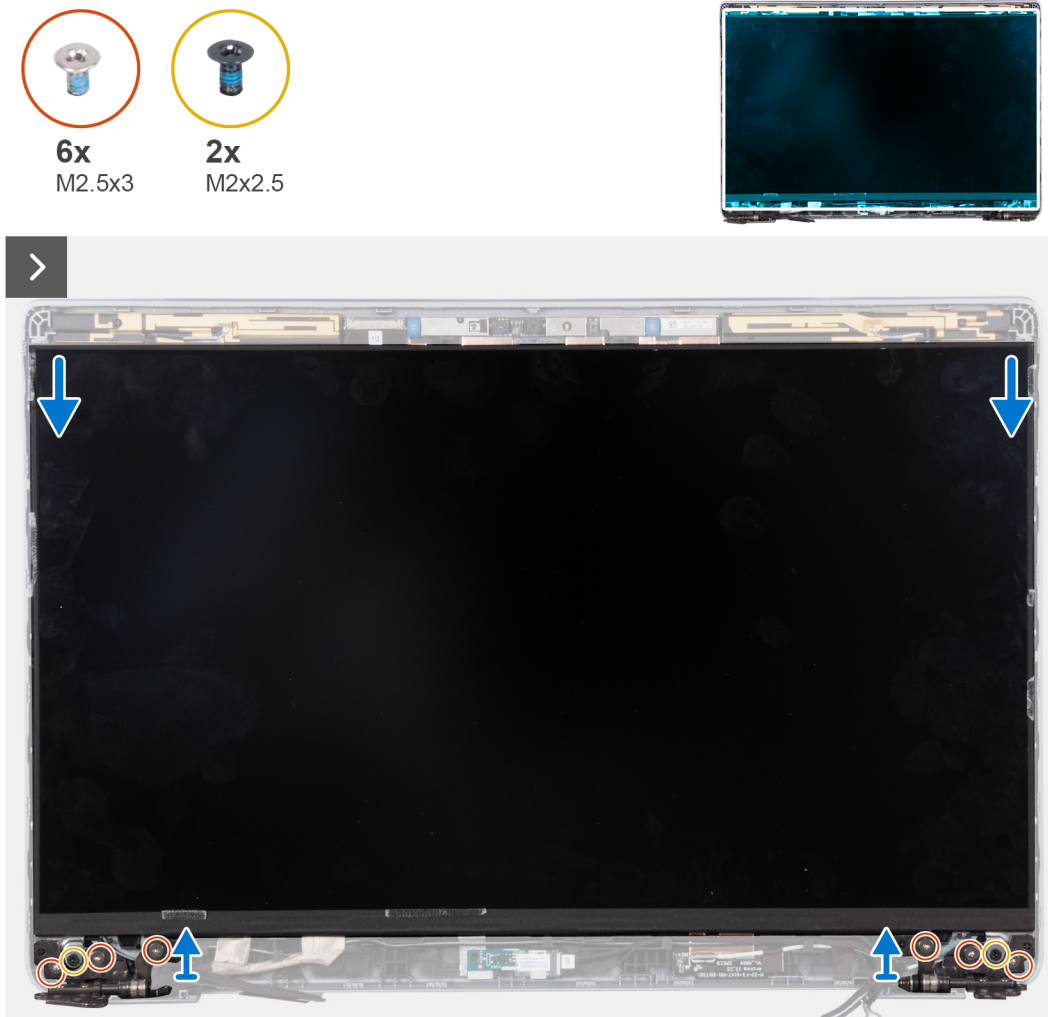

**Figure 72. Removing the display panel (laptop)**

**NOTE:** Do not pull and release the Stretch Release (SR) tapes from the display panel. Separation of the brackets from the display panel is not required.



Figure 73. Stretch Release tape

### Steps

1. Remove the six screws (M2.5x3) that secure the right and left display hinges to the display.
2. Remove the two screws (M2x2.5) that secure the display panel to the display assembly.

**NOTE:** When removing the display panel, disengage the display panel tabs from the display cover before flipping it over for removal.


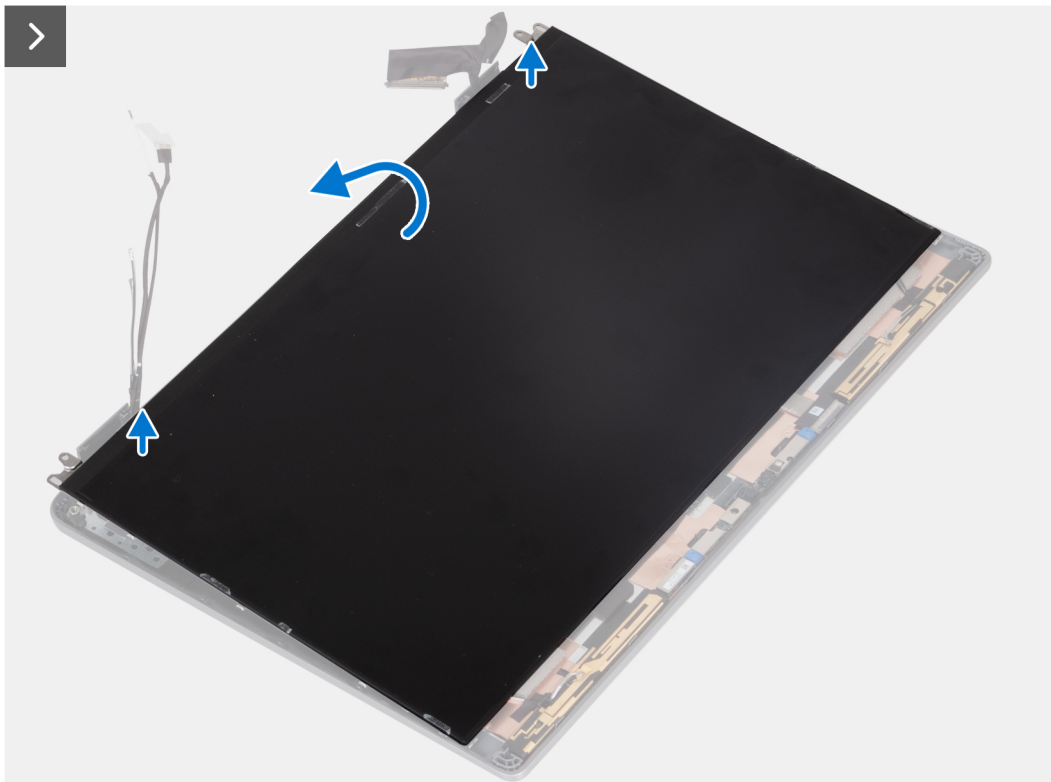


Figure 74. Removing the display panel (laptop)

3. Lift the display panel from the display assembly starting from the hinges.



**Figure 75. Removing the display panel (laptop)**

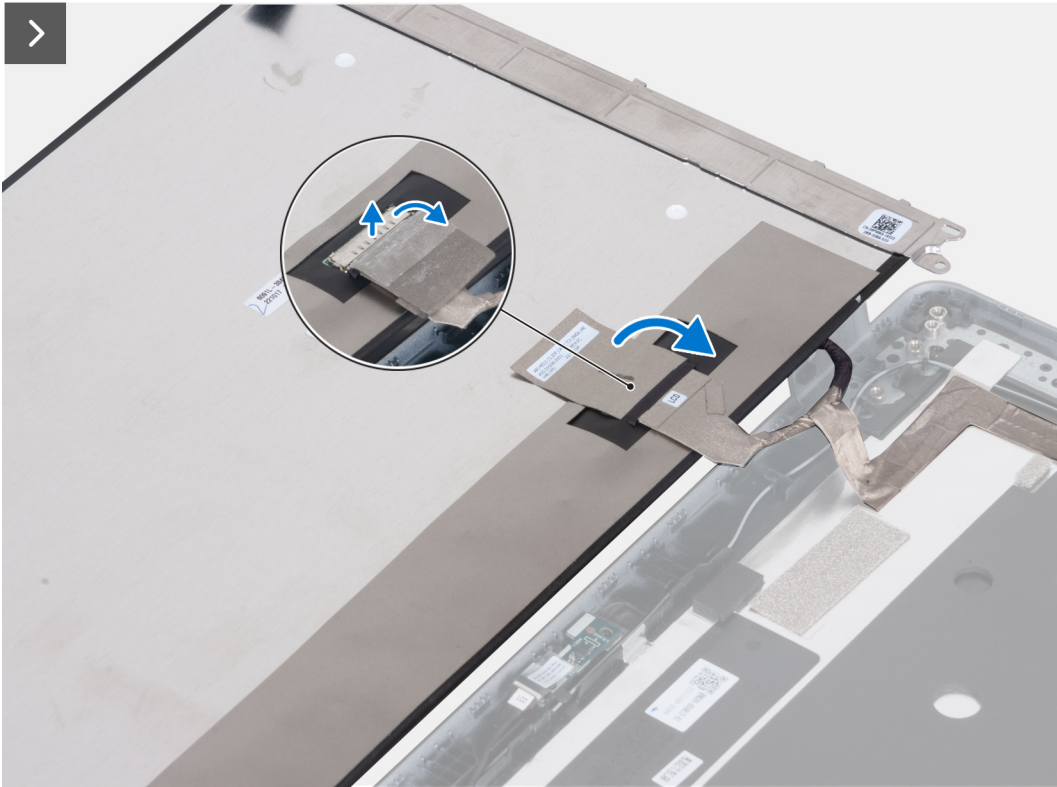

**Figure 76. Removing the display panel (laptop)**

4. Peel off the conductive tape on the display cable connector.
5. Open the latch and disconnect the display cable from the connector on the display panel.



## Installing the display panel (laptop)

### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.


**NOTE:** The display panel installation procedure is applicable only for the Latitude 5350 laptop and not for the 2-in-1 configuration.

**NOTE:** The display panel and its support brackets are a single assembly and cannot be further disassembled once it is removed from the display back cover. Do not remove the support brackets from the display panel.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task


The following images indicate the location of the display panel and provide a visual representation of the installation procedure.

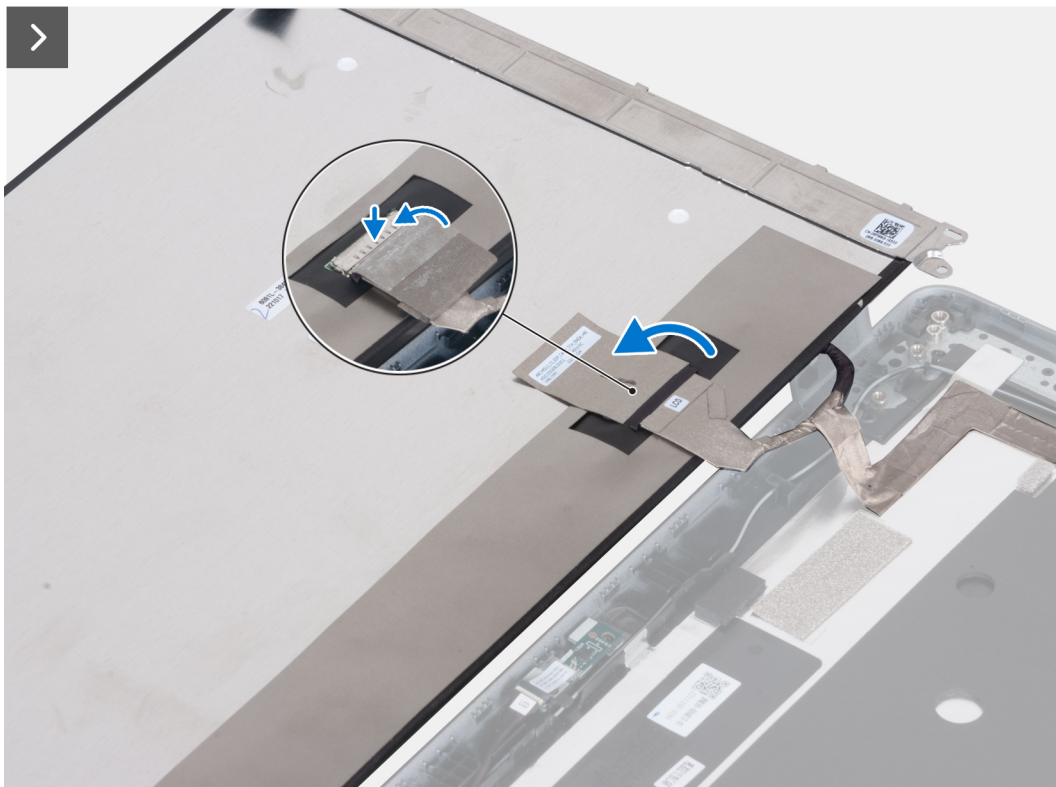

**Figure 77. Installing the display panel (laptop)**


### Steps

1. Connect the display cable to the connector and close the latch.
2. Adhere the adhesive strip to secure the display-cable connector.

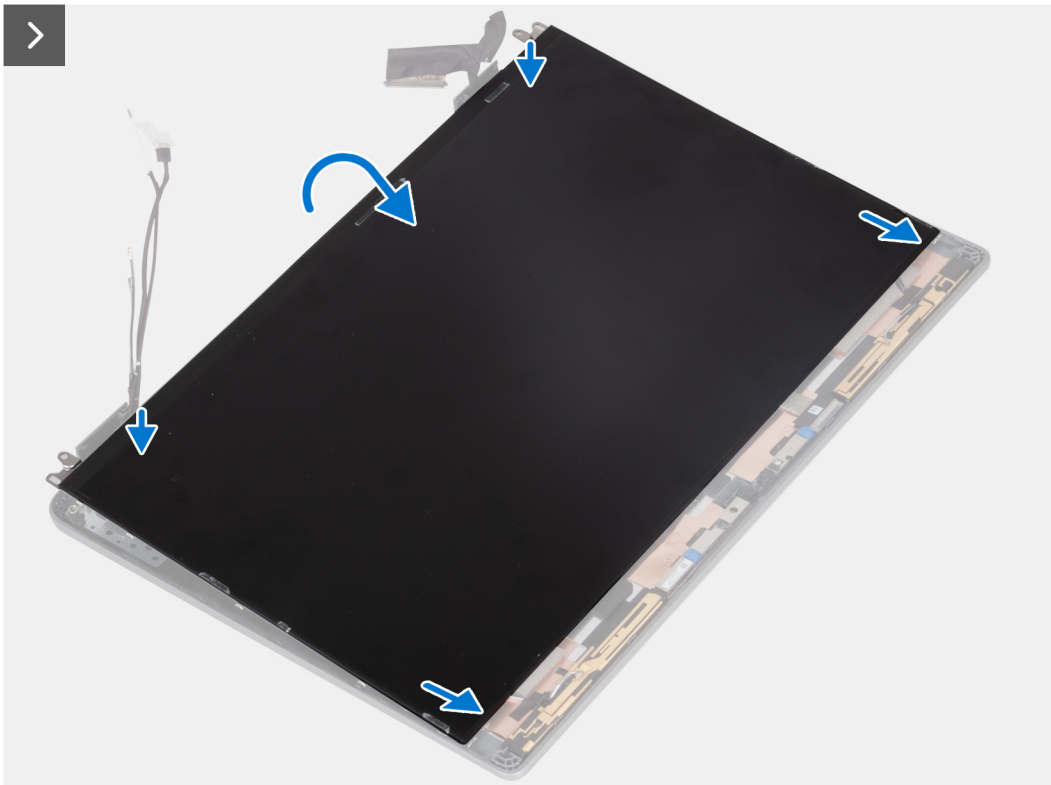

**Figure 78. Adhering the adhesive strip to secure the display-cable connector**

3. Insert the display-panel tabs into the slots on the display cover.

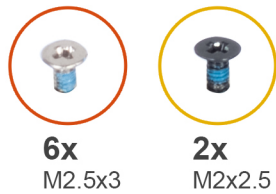

**Figure 79. Inserting the display-panel tabs into the slots on the display cover**

4. Replace the two screws (M2x2.5) that secure the display panel to the display assembly.
5. Replace the six screws (M2.5x3) that secure the right and left display hinges to the display.

#### Next steps

1. Install the [display hinges](#).
2. Install the [display bezel](#).
3. Install the [display assembly](#).
4. Install the [battery](#).
5. Install the [base cover](#).
6. Follow the procedure in [After working inside your computer](#).

## Display cable

### Removing the display cable (laptop)

#### Prerequisites


 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** The display cable removal procedure is applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [display assembly](#).
5. Remove the [display bezel](#).
6. Remove the [display hinges](#).
7. Remove the [display panel](#).

#### About this task

The following images indicate the location of the display cable and provide a visual representation of the removal procedure.

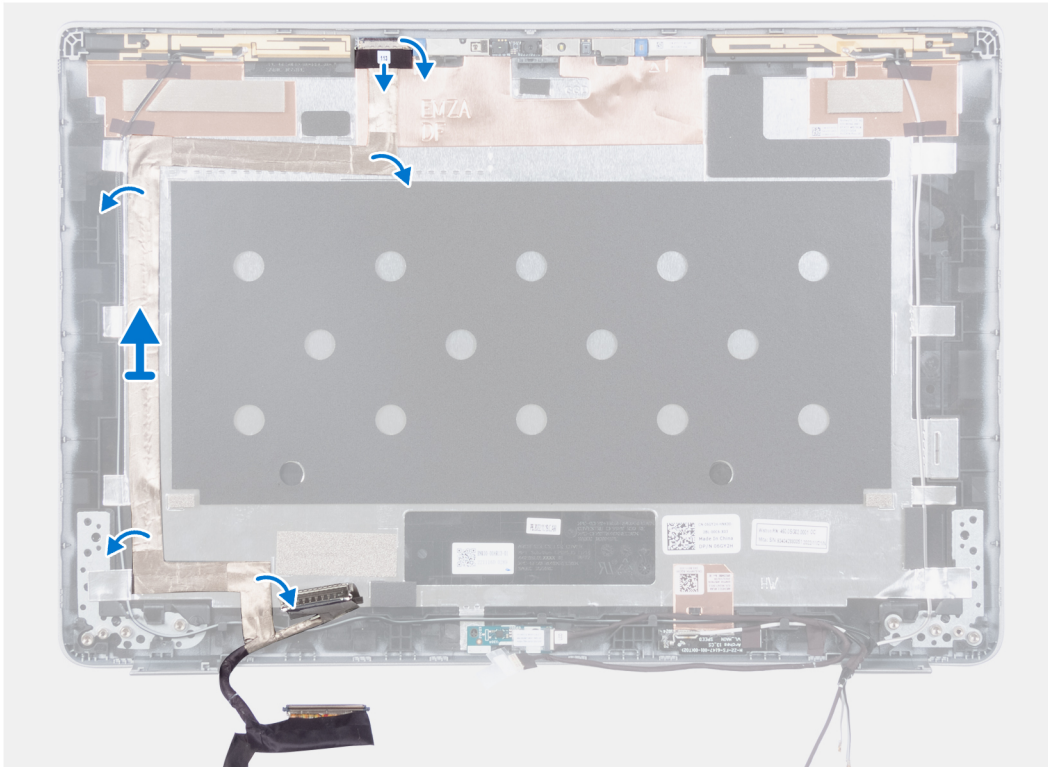

**Figure 80. Removing the display cable (laptop)**

#### Steps

1. Peel off the conductive tape that secures the camera cable in place.
2. Open the latch and disconnect the camera cable from the connector on the camera module.
3. Peel the tape that secures the display cable to the display back cover.
4. Remove the display cable from the display back cover.


## Installing the display cable (laptop)

#### About this task

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** The display cable installation procedure is applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration.

The following images indicate the location of the display cable and provide a visual representation of the installation procedure.

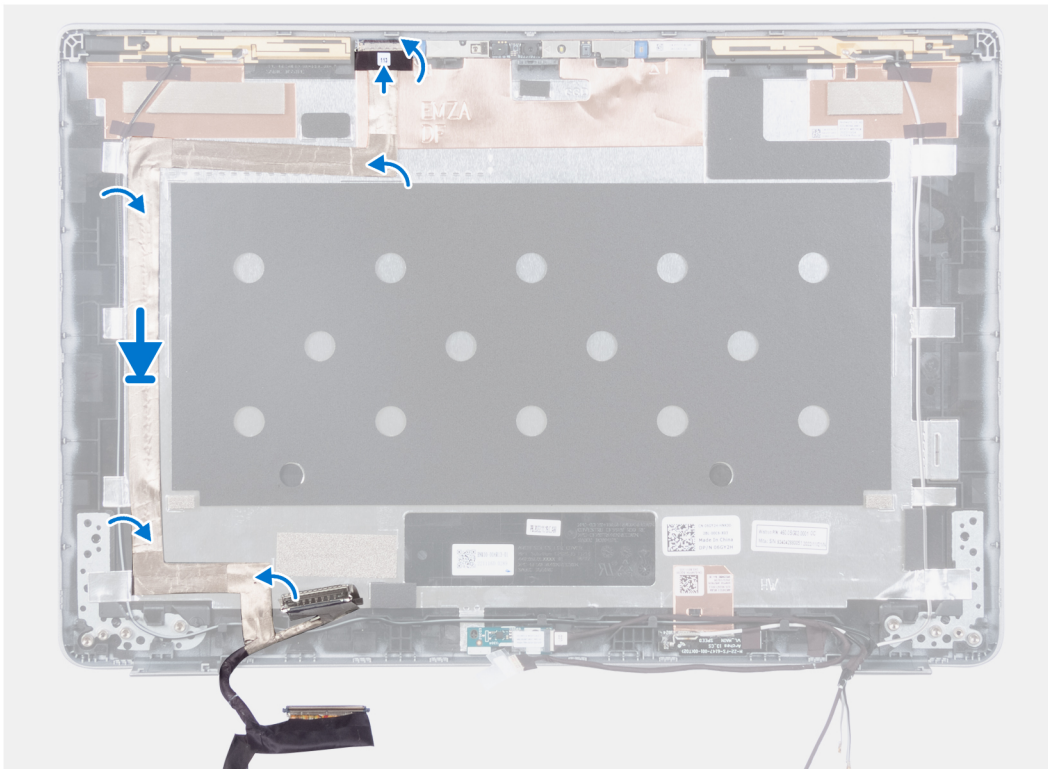

**Figure 81. Installing the display cable (laptop)**

### Steps

1. Adhere the conductive tape to secure the camera cable in place.
2. Connect the camera cable from the connector on the camera module and close the latch.
3. Connect the display cable to the display back cover.

### Next steps

1. Install the [display panel](#).
2. Install the [display hinges](#).
3. Install the [display bezel](#).
4. Install the [display assembly](#).
5. Install the [battery](#).
6. Install the [base cover](#).
7. Follow the procedure in [After working inside your computer](#).

## Camera

### Removing the camera (laptop)

#### Prerequisites

**⚠ CAUTION:** The information in this removal section is intended for authorized service technicians only.

**i NOTE:** The camera removal procedure is applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration.


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [display assembly](#).



- 5. Remove the [display bezel](#).
- 6. Remove the [display hinges](#).
- 7. Remove the [display panel](#).

**About this task**

The following images indicate the location of the camera and provide a visual representation of the removal procedure.

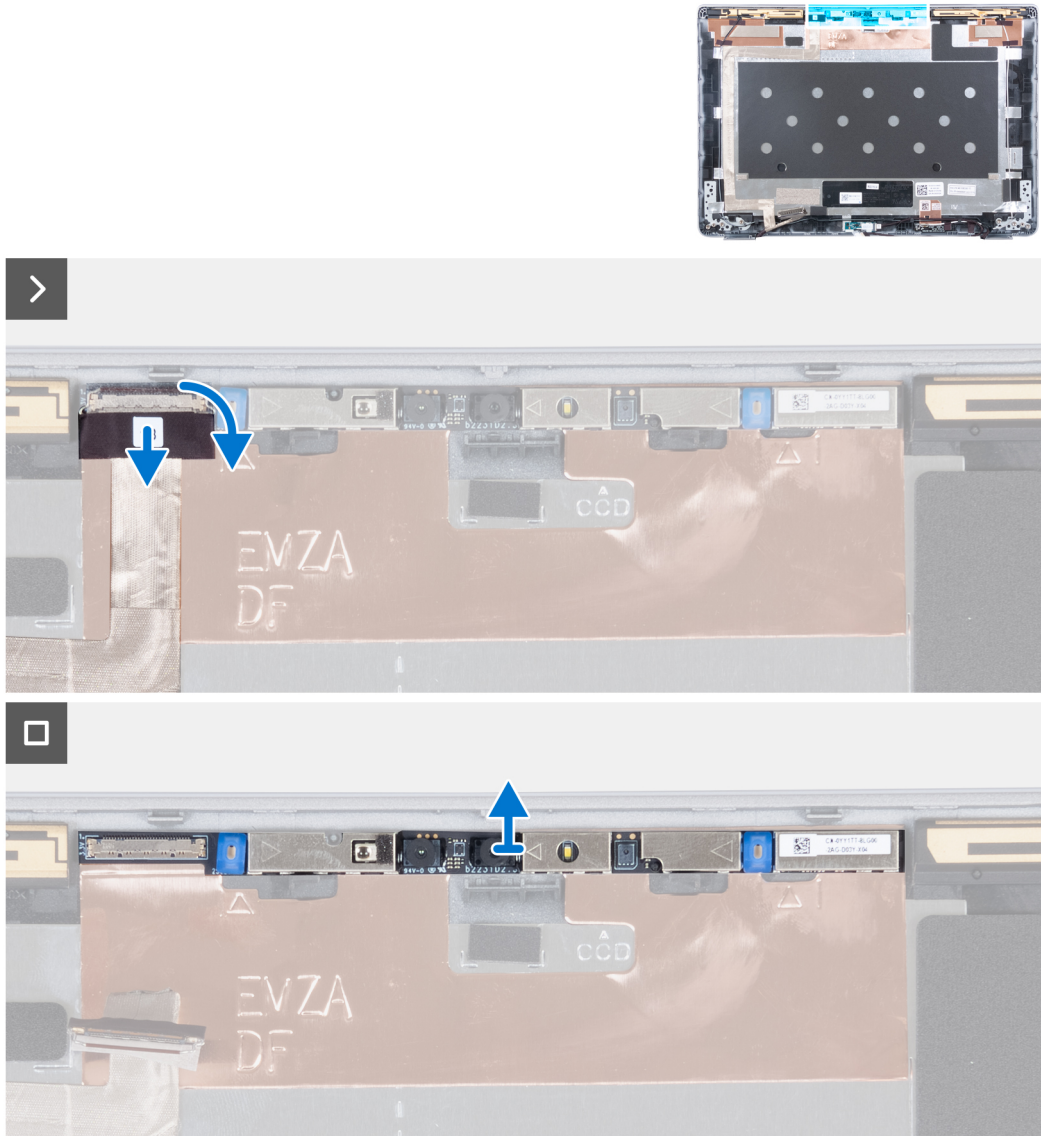

**Figure 82. Removing the camera (laptop)**

**Steps**

- 1. Peel off the conductive tape that secures the camera cable in place.
- 2. Open the latch and disconnect the camera cable from the connector on the camera.
- 3. Carefully pry and lift the camera from the display back cover.

## Installing the camera (laptop)

**Prerequisites**


 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** The camera installation procedure is applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the camera and provide a visual representation of the installation procedure.

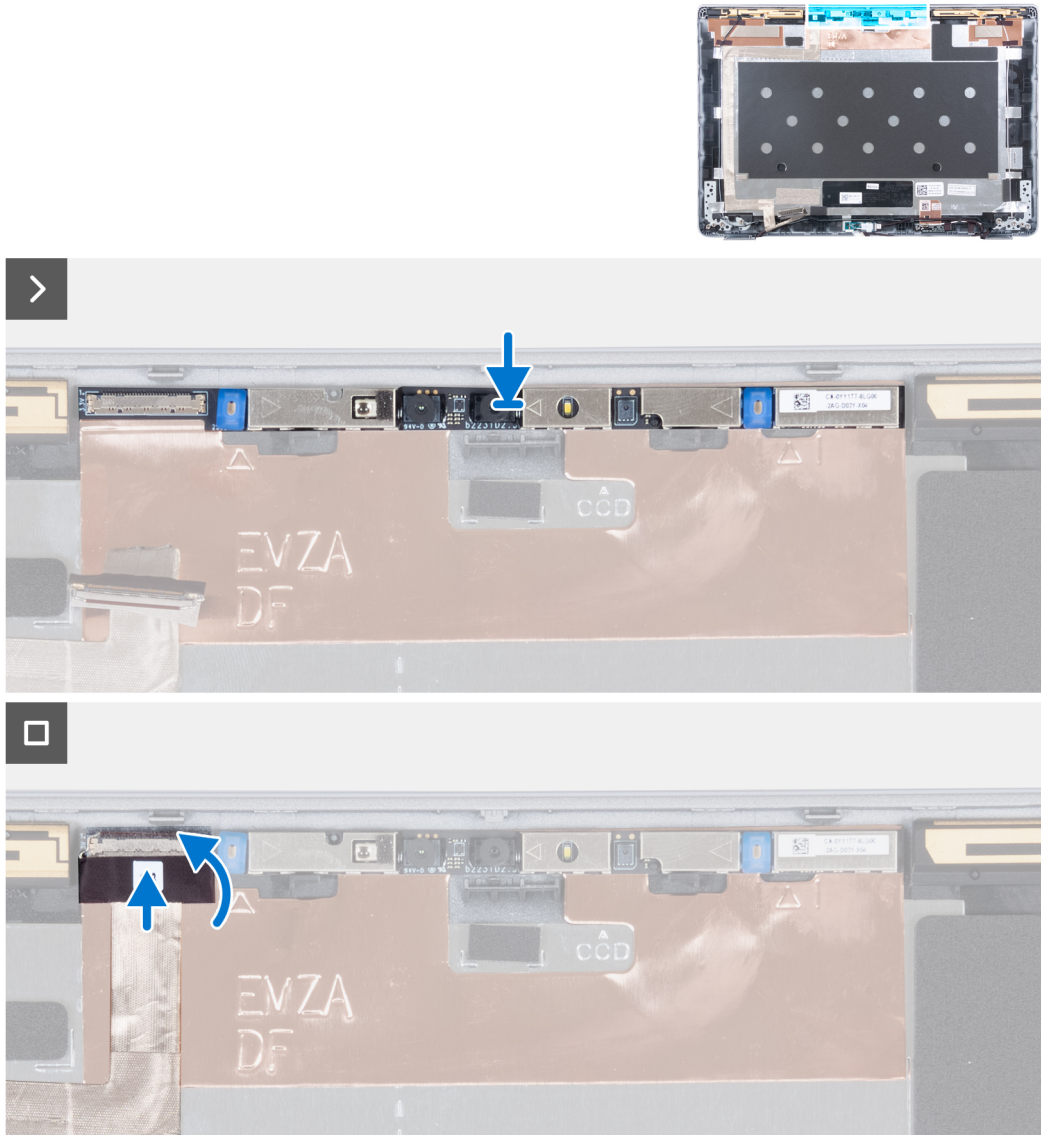

**Figure 83. Installing the camera (laptop)**

### Steps

1. Insert the camera into the slot on the display back cover.
2. Connect the camera cable to the connector and close the latch.
3. Adhere the adhesive tape above the connector on the camera.

### Next steps

1. Install the [display panel](#).
2. Install the [display hinges](#).
3. Install the [display bezel](#).
4. Install the [display assembly](#).
5. Install the [battery](#).

6. Install the [base cover](#).
7. Follow the procedure in [After working inside your computer](#).

## Display back cover

### Removing the display back cover (laptop)

#### Prerequisites


**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** The display back-cover removal procedure is applicable only for the Latitude 5350 laptop and not for the 2-in-1 configuration.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [display assembly](#).
5. Remove the [display bezel](#).
6. Remove the [display hinges](#).
7. Remove the [display panel](#).
8. Remove the [camera](#).
9. Remove the [display cable](#).

#### About this task

The following images indicate the location of the display back-cover and provide a visual representation of the removal procedure.

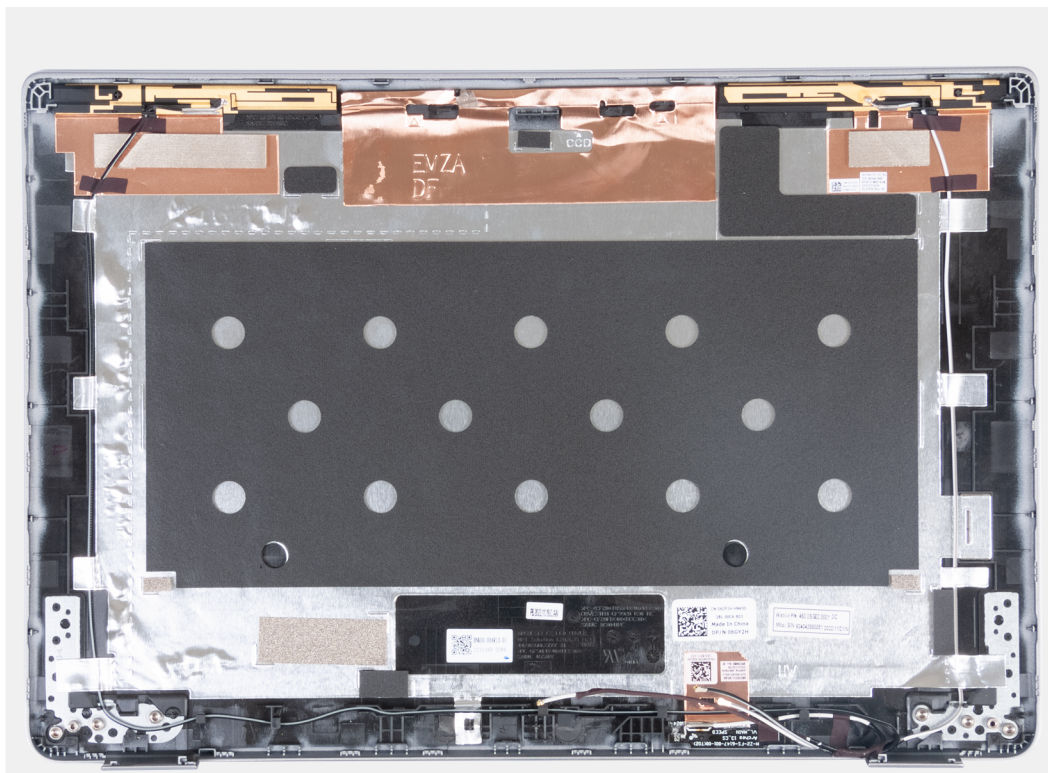

**Figure 84.** Removing the display back cover (laptop)



## Steps

After performing the preceding steps, you are left with the display back cover.

# Installing the display back-cover (laptop)

## Prerequisites


**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** The display back-cover installation procedure is applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration.

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The following images indicate the location of the display back-cover and provide a visual representation of the installation procedure.

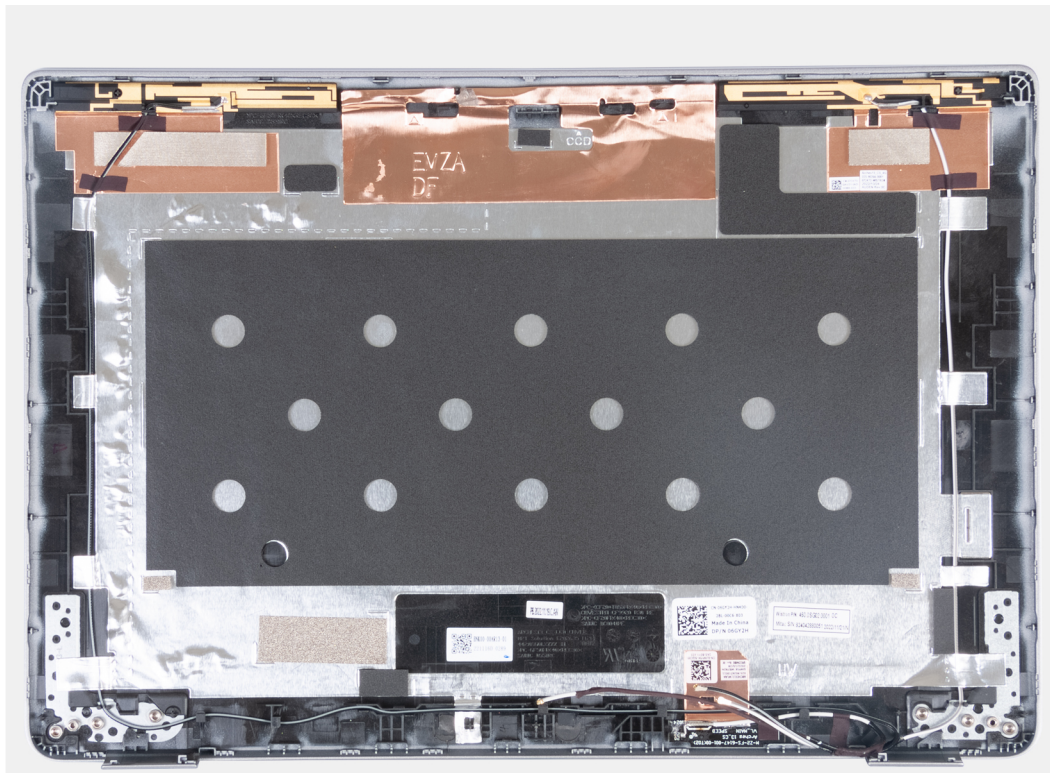

**Figure 85. Installing the display back cover (laptop)**

## Steps

Place the display back-cover on a flat surface and perform the following steps to install the display back cover.

## Next steps

1. Install the [display cable](#).
2. Install the [camera](#).
3. Install the [display panel](#).
4. Install the [display hinges](#).
5. Install the [display bezel](#).
6. Install the [display assembly](#).
7. Install the [battery](#).
8. Install the [base cover](#).

9. Follow the procedure in [After working inside your computer](#).

## Sensor board

### Removing the sensor board (laptop)

#### Prerequisites


**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** The sensor board removal procedure is applicable only for the Latitude 5340 laptop and not for the 2-in-1 configuration.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [display assembly](#).
5. Remove the [display bezel](#).
6. Remove the [display panel](#).

#### About this task

The following images indicate the location of the sensor board and provide a visual representation of the removal procedure.

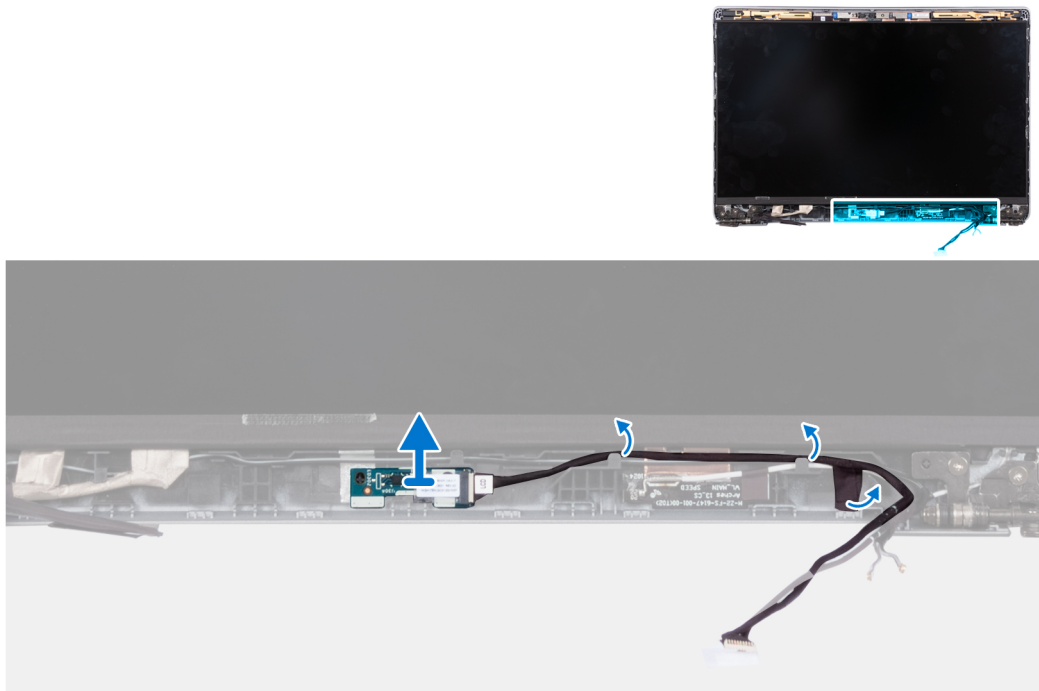

**Figure 86. Removing the sensor board (laptop)**

#### Steps

1. Open the latch and disconnect the display cable from the connector on the sensor board.
2. Remove the display cable from the routing guides on the display assembly.
3. Gently lift the sensor board from the display assembly.




# Installing the sensor board (laptop)

## About this task

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** The sensor board installation procedure is applicable only for Latitude 5340 laptop and not for the 2-in-1 configuration.

The following images indicate the location of the sensor board and provide a visual representation of the removal procedure.

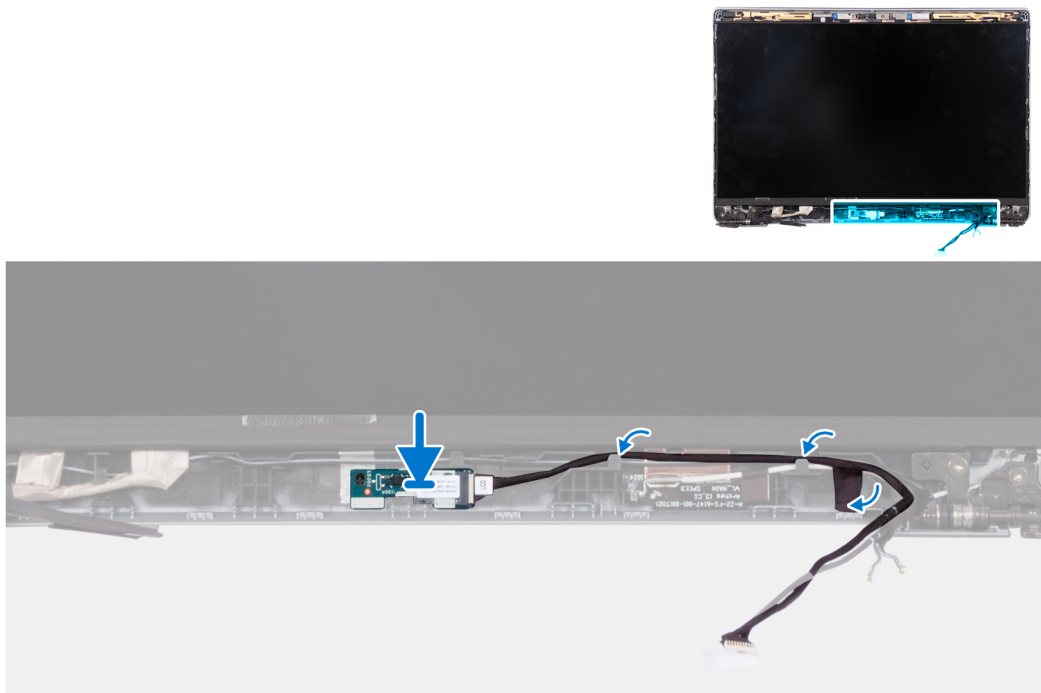

**Figure 87. Installing the sensor board (laptop)**

## Steps

1. Align and place the sensor board on the display assembly.
2. Connect the display to connector on the sensor board and close the latch.
3. Route the display cable along the routing guide on the display assembly.

## Next steps

1. Install the [display panel](#).
2. Install the [display bezel](#).
3. Install the [display assembly](#).
4. Install the [battery](#).
5. Install the [base cover](#).
6. Follow the procedure in [After working inside your computer](#).

# Smart-card reader

## Removing the smart card reader (optional)

### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Remove the [SIM card tray](#) (for computers with nano-SIM card option).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [M.2 2230 solid state drive](#).
5. Remove the [wireless card](#).
6. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
7. Remove the [fan](#).
8. Remove the [speakers](#).

### About this task

**NOTE:** For models with smart card reader configuration, the smart card reader is preinstalled in the replacement palm-rest assembly. The following images indicate the location of the smart card reader and provide a visual representation of the removal procedure.

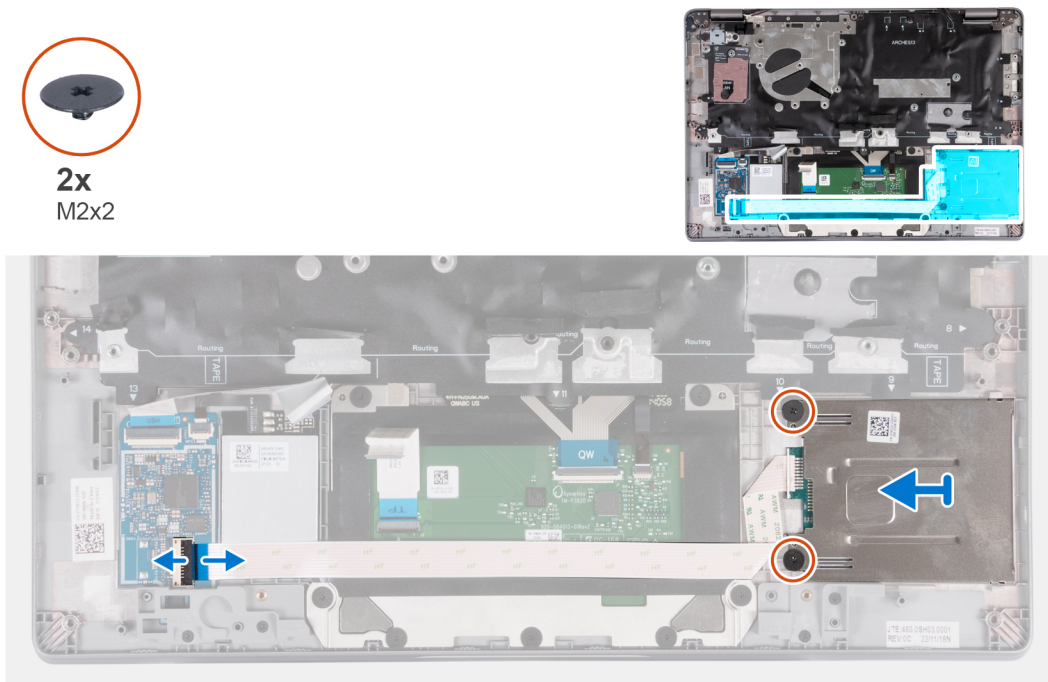


Figure 88. Removing the smart card reader

### Steps

1. Open the latch and disconnect the smart card reader cable from the USH board.
2. Remove the two screws (M2x2) that secure the smart card reader to the palm-rest assembly.
3. Lift the smart card reader off the palm-rest assembly.

## Installing the smart card reader (optional)


### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the smart card reader and provide a visual representation of the installation procedure.

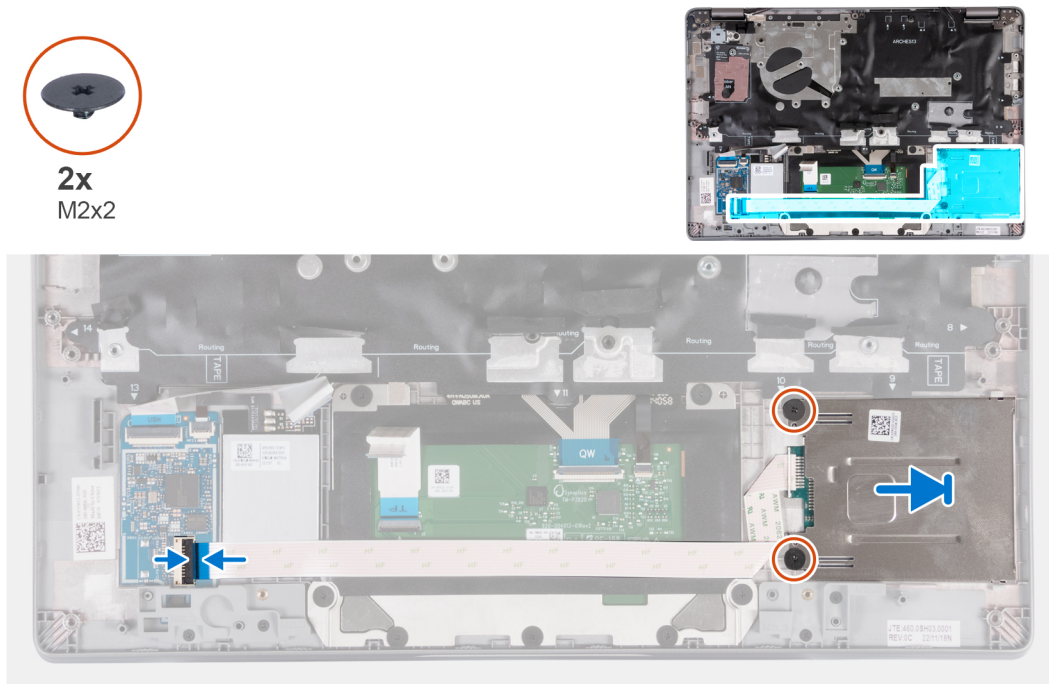

**Figure 89. Installing the smart card reader**

### Steps

1. Align and slide the smart card reader inwards.
2. Replace the two screws (M2x2) to secure the smart card reader to the palm-rest assembly.
3. Connect the smart card reader cable to its connector on the USH board and close the latch.

### Next steps

1. Install the [speakers](#).
2. Install the [fan](#).
3. Install the [wireless card](#).
4. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
5. Install the [M.2 2230 solid state drive](#).
6. Install the [battery](#).
7. Install the [base cover](#).
8. Install the [SIM card tray](#) (for computers with nano-SIM card option).
9. Follow the procedure in [After working inside your computer](#).

# Dummy SIM-card slot filler

## Removing the SIM-card slot filler

### Prerequisites

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [M.2 2230 solid state drive](#).
5. Remove the [wireless card](#).
6. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
7. Remove the [fan](#).
8. Remove the [power button](#) or [power button with optional fingerprint reader](#).
9. Remove the [smart card reader](#) (optional).
10. Remove the [speakers](#).
11. Remove the [display assembly](#).
12. Remove the [system board](#).
  - NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.
13. Remove the [keyboard](#).
14. Remove the [palm-rest assembly](#).

### About this task

**NOTE:** For computers shipped without nano-SIM option, the SIM-card slot filler is a separate service part and is not included with a replacement palm rest. Hence, the SIM-card slot filler must be removed and then re-installed when replacing the palm rest.

The following images provide a visual representation of the SIM-card slot filler removal procedure.

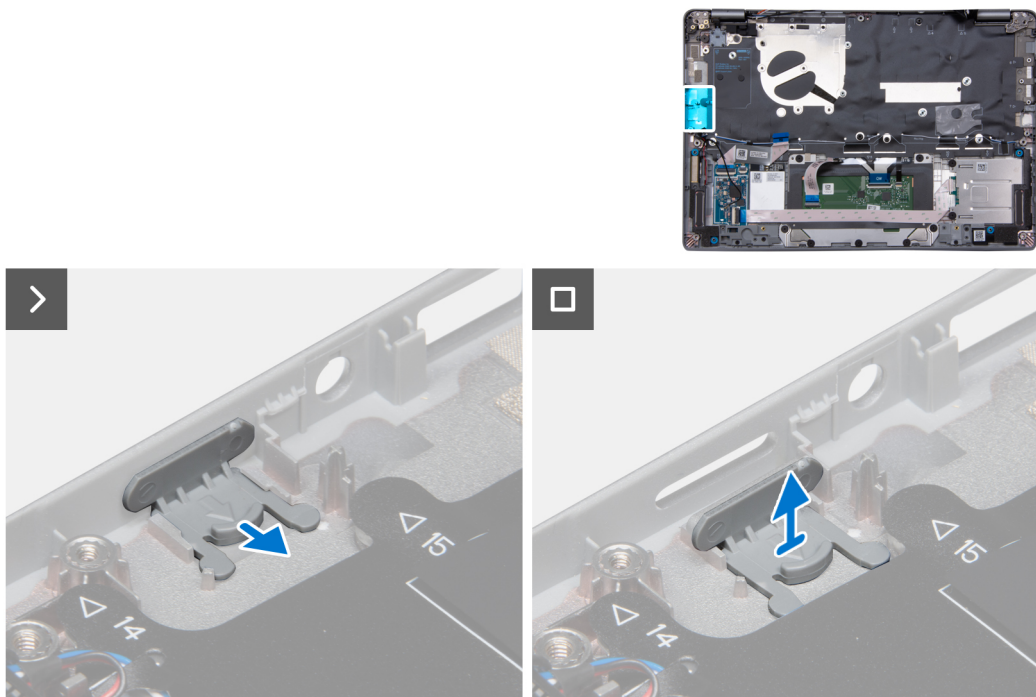


Figure 90. Removing the SIM-card slot filler

## Steps

1. Pull the SIM-card slot filler from the top side of the palm rest.
2. Lift the SIM-card slot filler out of the computer.

# Installing the SIM-card slot filler

## Prerequisites


**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the necessary component before the installation procedure.

## About this task

**NOTE:** For computers shipped without nano-SIM option, the SIM-card slot filler is a separate service part and is not included with a replacement palm rest. Hence, the SIM-card slot filler must be removed and then re-installed when replacing the palm rest.

The following images provide a visual representation of the SIM-card slot filler installation procedure.

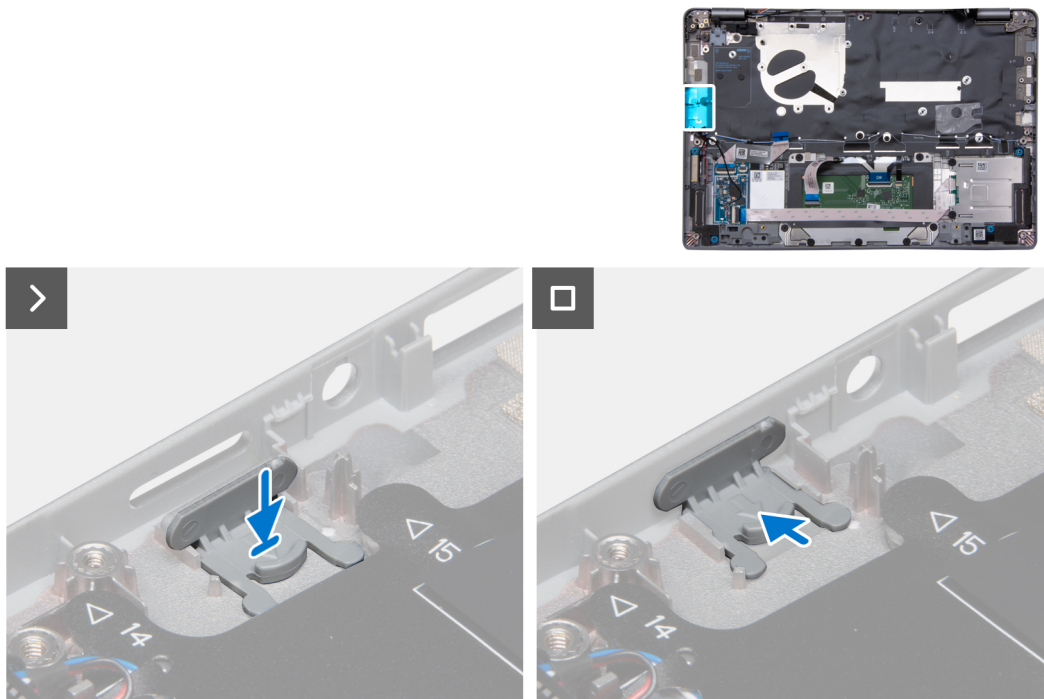

**Figure 91. Installing the SIM-card slot filler**

## Steps

1. Place the SIM-card slot filler into its compartment on the palm rest ensuring that the SIM-card slot filler is aligned with the ribs on the palm rest.
2. Press the SIM-card slot filler until you hear it click ensuring it fits securely into the SIM-card slot filler.

## Next steps

1. Install the [palm-rest assembly](#).
2. Install the [keyboard](#).
3. Install the [display assembly](#).
4. Install the [speakers](#).
5. Install the [smart card reader](#) (optional).
6. Install the [power button](#) or [power button with optional fingerprint reader](#).




7. Install the [system board](#).
8. Install the [fan](#).
9. Install the [wireless card](#).
10. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
11. Install the [M.2 2230 solid state drive](#).
12. Install the [battery](#).
13. Install the [base cover](#).
14. Follow the procedure in [After working inside your computer](#).


## Palm-rest assembly

### Removing the palm-rest assembly

#### Prerequisites


 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

 **NOTE:** For models with smart card reader configuration, the smart card reader is preinstalled in the replacement palm-rest assembly.

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM card tray](#) (for computers with nano-SIM card option).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230 solid state drive](#).
6. Remove the [wireless card](#).
7. Remove the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
8. Remove the [fan](#).
9. Remove the [system board](#).  
 **NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.
10. Remove the [power button](#) or [power button with optional fingerprint reader](#), whichever is applicable.
11. Remove the [smart card reader](#) (optional).
12. Remove the [speakers](#).
13. Remove the [display assembly](#).
14. Remove the [SIM card slot filler](#) (for computers without nano-SIM card option).

#### About this task

The following image indicates the location of the palm rest and provides a visual representation of the removal procedure.

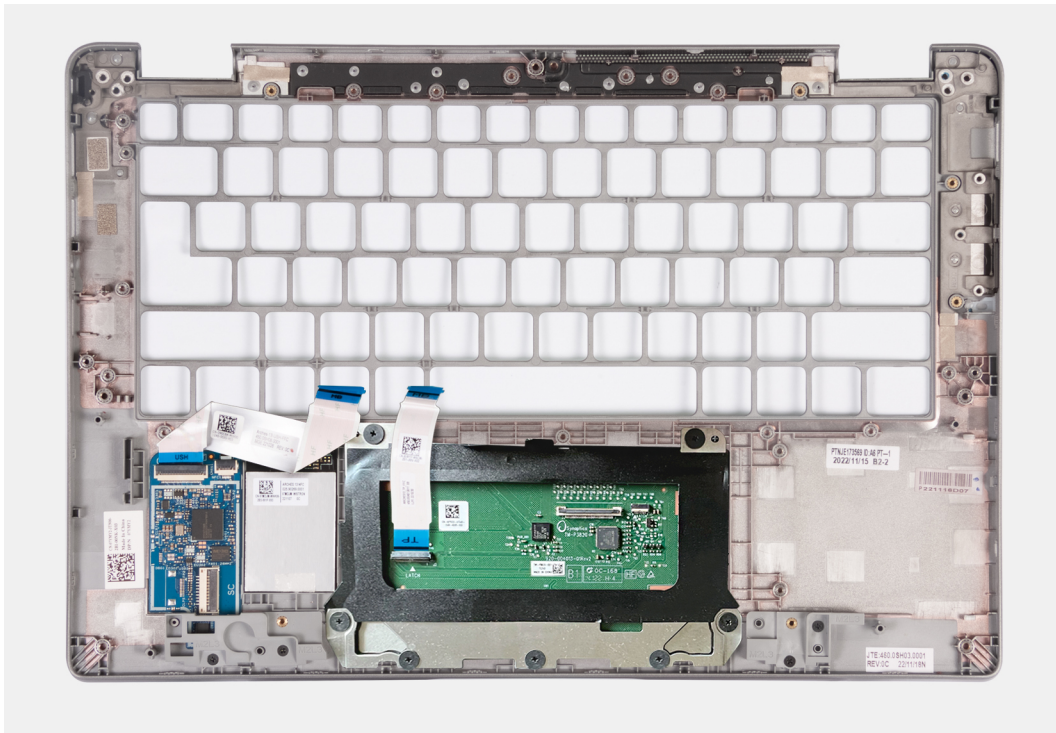

**Figure 92. Removing the palm rest**

### Steps

After performing the preceding steps, you are left with the palm rest.

## Installing the palm-rest assembly


### Prerequisites

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following image indicates the palm rest and provides a visual representation of the installation procedure.

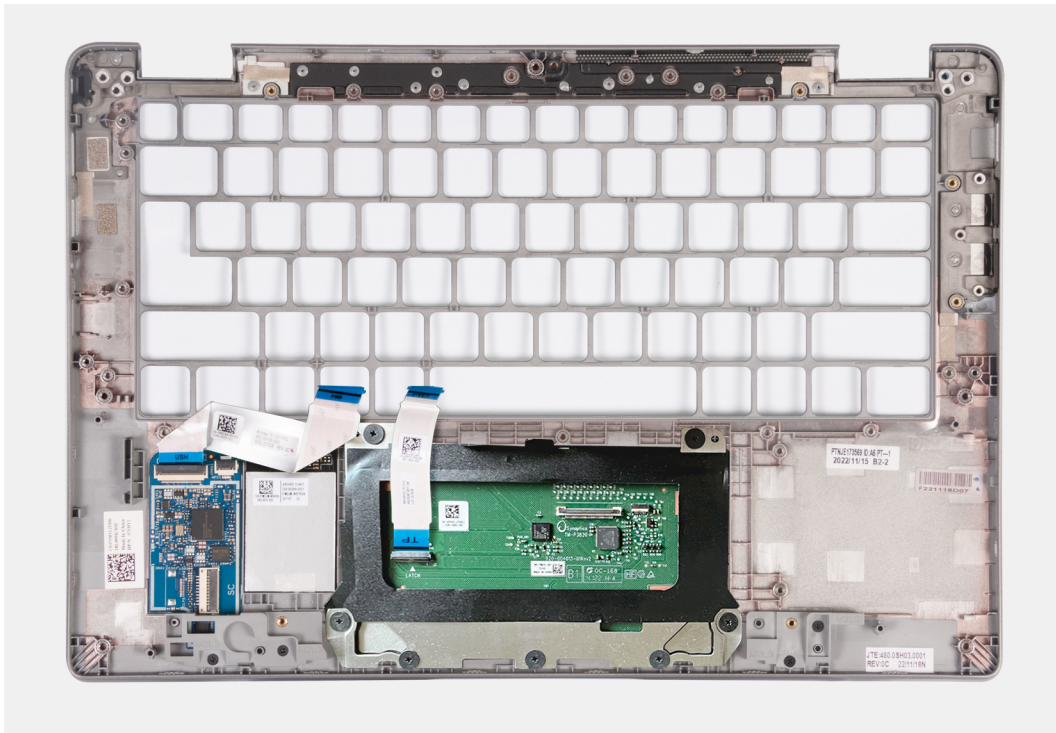

**Figure 93. Installing the palm rest**

### Steps

Place the palm-rest assembly on a flat surface.

### Next steps

**NOTE:** The system board can be removed and installed with the heat sink attached. The removal and installation procedure is simplified to preserve the thermal bond between the system board and heat sink.

1. Install the [SIM card slot filler](#) (for computers without nano-SIM card option).
2. Install the [display assembly](#).
3. Install the [speakers](#).
4. Install the [smart card reader](#) (optional).
5. Install the [power button](#) or [power button with fingerprint reader](#), whichever is applicable.
6. Install the [system board](#).
7. Install the [fan](#).
8. Install the [wireless card](#).
9. Install the [WWAN 4G card](#) or [WWAN 5G card](#), whichever is applicable.
10. Install the [M.2 2230 solid state drive](#).
11. Install the [battery](#).
12. Install the [base cover](#).
13. Install the [SIM card tray](#) (for computers with nano-SIM card option).
14. Follow the procedure in [After working inside your computer](#).

# Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

## Operating system

Your Latitude 5350/Latitude 5350 2-in-1 supports the following operating systems:

- Windows 11 Pro
- Windows 11 Home
- Ubuntu Linux 22.04 LTS (applicable only for Latitude 5350 laptop and not for the 2-in-1 configuration)

## Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the Dell Knowledge Base article [Drivers and Downloads FAQs 000123347](#).

# BIOS Setup

**CAUTION:** Unless you are an expert computer user, do not change the settings in the BIOS Setup. Certain changes can make your computer work incorrectly.

**NOTE:** Depending on the computer and its installed devices, the items that are listed in this section may or may not be displayed.

**NOTE:** Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the storage device.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

## Entering BIOS setup program

### About this task

Turn on (or restart) your computer and press F2 immediately.

## Navigation keys

**NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the computer.


**Table 37. Navigation keys**

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follows the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area. <b>NOTE:</b> For the standard graphical user interface only.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer.


## F12 One Time Boot menu

To enter the One Time Boot menu, turn on your computer, and then press F12 immediately.



 **NOTE:** It is recommended to shut down the computer, if it is on.

The F12 One Time Boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)
  -  **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access System Setup.

## View Advanced Setup options

### About this task

Some BIOS Setup options are only visible by enabling **Advanced Setup** mode, which is disabled by default.

 **NOTE:** BIOS Setup options, including **Advanced Setup** options, are described in [System setup options](#).

### To enable Advanced Setup


#### Steps

1. Enter BIOS Setup.  
The Overview menu appears.
2. Click the **Advanced Setup** option to move it to the **ON** mode.  
Advanced BIOS Setup options are visible.

## View Service options

### About this task

Service options are hidden by default and only visible by entering a hotkey command.


 **NOTE:** Service options are described in [System setup options](#).


### To view Service options:

#### Steps

1. Enter BIOS Setup.  
The Overview menu appears.
2. Enter the hotkey combination **Ctrl +Alt + s** to view the **Service** options.  
**Service** options are visible.


## System Setup options

 **NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the computer.

 **NOTE:** Depending on your computer and its installed devices, the items that are listed in this section may differ.

**Table 38. System Setup options—Overview menu**





**Overview**

Latitude 5350/Latitude 5350 2-in-1	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the Express Service Code of the computer.
Ownership Tag	Displays the Ownership Tag of the computer.
Signed Firmware Update	Displays whether the Signed Firmware Update is enabled on your computer. By default, the <b>Signed Firmware Update</b> option is enabled.  <b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a> .

**BATTERY**

Battery Type	Displays whether the battery is Primary or Secondary on your computer.
Battery Level	Displays the battery level of the computer.
Battery State	Displays the battery state of the computer.
Health	Displays the battery health of the computer.
AC Adapter	Displays whether an AC adapter is connected. If connected, displays the type of AC adapter that is connected.
Battery Life Type	Displays whether the battery life type is Standard, Long Life Cycle 1.0, or Long Life Cycle 2.0. By default, the <b>Standard</b> option is selected.

**PROCESSOR**

Processor Type	Displays the processor type.
Maximum Clock Speed	Displays the maximum processor clock speed.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Minimum Clock Speed	Displays the minimum processor clock speed.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Current Clock Speed	Displays the current processor clock speed.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Core Count	Displays the number of cores on the processor.
Processor ID	Displays the processor identification code.
Processor L2 Cache	Displays the processor L2 cache size.
Processor L3 Cache	Displays the processor L3 cache size.
Microcode Version	Displays the microcode version.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .

**Table 38. System Setup options—Overview menu (continued)**

**Overview**

Intel Hyper-Threading Capable	Displays whether the processor is Hyper-Threading (HT) capable. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
64-Bit Technology	Displays if the 64-Bit technology is supported. Default value: Yes.

**MEMORY**

Memory Installed	Displays the total computer memory installed.
Memory Available	Displays the total computer memory available.
Memory Speed	Displays the memory speed. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Memory Channel Mode	Displays single or dual channel mode. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Memory Technology	Displays the technology that is used for the memory.

**DEVICES**

Panel Type	Displays the panel type of the computer.
Panel Revision	Displays the panel revision of the computer.
Video Controller	Displays the video controller type of the computer.
Video Memory	Displays the video memory information of the computer.
Wi-Fi Device	Displays the wireless device information of the computer.
Native Resolution	Displays the native resolution of the computer.
Video BIOS Version	Displays the video BIOS version of the computer. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Audio Controller	Displays the audio controller information of the computer.
Bluetooth Device	Displays the Bluetooth device information of the computer.
Pass Through MAC Address	Displays the MAC address of the video pass-through.
Cellular Device	Displays if the cellular device is installed.

**Table 39. System Setup options—Boot Configuration menu**

<b>Boot Configuration</b>	
<b>Boot Sequence</b>	Displays the boot sequence.
Boot Mode: UEFI only	Displays the boot mode of the computer. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a> .
<b>Enable PXE Boot Priority</b>	Enables or disables PXE Boot Priority.
Secure Digital (SD) Card Boot	Enables or disables read-only boot from Secure Digital (SD) card. By default, the <b>Secure Digital (SD) Card Boot</b> option is disabled. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .

**Table 39. System Setup options—Boot Configuration menu (continued)**

<b>Boot Configuration</b>	
<b>Secure Boot</b>	Secure Boot is a method of guaranteeing the integrity of the boot path by performing additional validation of the operating system and PCI add-in cards. The computer stops booting to the operating system when a component is not authenticated during the boot process. Secure Boot can be enabled in BIOS setup or using management interfaces like Dell Command Configure, but can only be disabled from BIOS setup.
Enable Secure Boot	<p>Enables the computer to boot using only validated boot software.</p> <p>By default, this <b>Enable Secure Boot</b> option is disabled. For additional security, Dell Technologies recommends keeping the <b>Secure Boot</b> option enabled to ensure that the UEFI firmware validates the operating system during the boot process.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p> <p><b>i</b> <b>NOTE:</b> To enable Secure Boot, the computer is required to be in UEFI boot mode and the Enable Legacy Option ROMs option is required to be turned off.</p>
Enable Microsoft UEFI CA	<p>When disabled, the UEFI CA is removed from the BIOS UEFI Secure Boot database.</p> <p><b>i</b> <b>NOTE:</b> When disabled, the Microsoft UEFI CA could render your computer unable to boot, computer graphics may not function, some devices may not function properly, and the computer could become unrecoverable.</p> <p>By default, the <b>Enable Microsoft UEFI CA</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Microsoft UEFI CA</b> option enabled to ensure the broadest compatibility with devices and operating systems.</p>
Secure Boot Mode	<p>Enables or disables the Secure Boot operation mode.</p> <p>By default, the <b>Deployed Mode</b> is selected. <b>Deployed Mode</b> should be selected for normal operation of Secure Boot.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Expert Key Management</b>	
Enable Custom Mode	<p>Enables or disables the keys in the PK, KEK, db, and dbx security key databases to be modified.</p> <p>By default, the <b>Enable Custom Mode</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Custom Mode Key Management	<p>Selects the custom values for expert key management.</p> <p>By default, the <b>PK</b> option is selected.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 40. System Setup options—Integrated Devices menu**

<b>Integrated Devices</b>	
<b>Date/Time</b>	
Date	Sets the computer date in MM/DD/YYYY format. Changes to the date format take effect immediately.

**Table 40. System Setup options—Integrated Devices menu (continued)**

<b>Integrated Devices</b>	
Time	Sets the computer time in HH/MM/SS 24-hour format. You can switch between a 12-hour or 24-hour clock. Changes to the time format take effect immediately.
<b>Camera</b>	
Enable Camera	Enables the camera. By default, the <b>Enable Camera</b> option is enabled.  <b>NOTE:</b> Depending on the configuration ordered, the camera setup option may not be available.
<b>Audio</b>	
Enable Audio	Enables all integrated audio controller. By default, all the options are enabled.
Enable Microphone	Enables the microphone. By default, the <b>Enable Microphone</b> option is enabled.  <b>NOTE:</b> Depending on the configuration ordered, the microphone setup option may not be available.
Enable Internal Speaker	Enables the internal speaker. By default, the <b>Enable Internal Speaker</b> option is enabled.
<b>USB/Thunderbolt Configuration</b>	
Enable External USB Ports	Enables the external USB ports. By default, the <b>Enable External USB Ports</b> option is enabled.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Enable USB Boot Support	Enables booting from USB mass storage devices that are connected to external USB ports. By default, the <b>Enable USB Boot Support</b> option is enabled.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Enable Thunderbolt Technology Support	Enables the associated ports and adapters for Thunderbolt Technology support. By default, the <b>Enable Thunderbolt Technology Support</b> option is enabled.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Enable Thunderbolt Boot Support	Enables the Thunderbolt adapter-peripheral device and USB devices that are connected to the Thunderbolt adapter to be used during BIOS Preboot. By default, the <b>Enable Thunderbolt Boot Support</b> option is disabled.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Enable Thunderbolt (and PCIe behind TBT) pre-boot modules	Enables the PCIe devices that are connected through a Thunderbolt adapter to run the PCIe devices UEFI Option ROM (if present) during preboot. By default, the <b>Enable Thunderbolt (and PCIe behind TBT) pre-boot modules</b> option is disabled.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Disable USB4 PCIE Tunneling	Disables the USB4 PCIE Tunneling option.






**Table 40. System Setup options—Integrated Devices menu (continued)**

<b>Integrated Devices</b>	
	<p>By default, the <b>Disable USB4 PCIE Tunneling</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">Entering BIOS Setup program</a>.</p>
Video/Power only on Type-C Ports	<p>Enables or disables the Type-C port functionality to video or only power.</p> <p>By default, the <b>Video/Power only on Type-C Ports</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Type-C Dock Override	<p>Enables or disables to use connected Type-C Dell Dock to provide data stream with external USB ports disabled. When Type-C Dock override is enabled, the Video/Audio/LAN submenu is activated.</p> <p>By default, the <b>Type-C Dock Override</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">Entering BIOS Setup program</a>.</p>
Type C Dock Audio	<p>Enables or disables the usage of audio inputs and outputs from the connected Type-C Dell docking station.</p> <p>By default, the <b>Type-C Dock Audio</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Type C Dock Lan	<p>Enables or disables the usage of LAN on the external ports of the connected Type-C Dell docking station.</p> <p>By default, the <b>Type-C Dock LAN</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Unobtrusive Mode	<p>Enables or disables the unobtrusive mode. When enabled, all system LEDs, LCD panel backlight and audio devices of the computer are turned off.</p> <p>By default, the <b>Unobtrusive Mode</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> On computers with collaboration touchpad, the Collaboration Touchpad is disabled when the <b>Unobtrusive Mode</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>






**Table 41. System Setup options—Storage menu**

<b>Storage</b>	
<b>SATA/NVMe Operation</b>	
SATA/NVMe Operation	<p>Sets the operating mode of the integrated SATA hard drive controller.</p> <p>By default, the <b>Raid On</b> option is selected.</p>
<b>Storage Interface</b>	
Port Enablement	Enables you to select onboard drives.
M.2 PCIe SSD	Displays the onboard device interface present in the platform for control.
<b>Smart Reporting</b>	
Enable Smart Reporting	<p>Enables or disables the Smart reporting option.</p> <p>By default, the <b>Smart Reporting</b> option is disabled.</p>

**Table 41. System Setup options—Storage menu (continued)**

<b>Storage</b>	
	<p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Drive Information</b>	Displays the information of onboard drives.
<b>Enable MediaCard</b>	
Secure Digital (SD) Card	<p>Enables or disables the SD card.</p> <p>By default, the <b>Secure Digital (SD) Card</b> option is enabled.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Secure Digital (SD) Card Read-Only Mode	<p>Enables or disables the SD card read-only mode.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p> <p>By default, the <b>Secure Digital (SD) Card Read-Only Mode</b> option is disabled.</p>

**Table 42. System Setup options—Display menu**

<b>Display</b>	
<b>Display Brightness</b>	
Brightness on battery power	<p>Enables to set the screen brightness when the computer is running on battery power.</p> <p>By default, the screen brightness is set to 50 when the computer is running on battery power.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Brightness on AC power	<p>Enables to set the screen brightness when the computer is running on AC power.</p> <p>By default, the screen brightness is set to 100 when the computer is running on AC power.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Full Screen Logo</b>	<p>Enables or disables the computer to display full screen logo, if the image matches screen resolution.</p> <p>By default, the <b>Full Screen Logo</b> option is disabled.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Touchscreen</b>	<p>Enables or disables the touch screen option.</p> <p>By default, the <b>Touchscreen</b> option is enabled.</p> <p> <b>NOTE:</b> Only available on computers with touch screen displays.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 43. System Setup options—Connection menu**

<b>Connection</b>	
<b>Network Controller Configuration</b>	
Integrated NIC	Enables or disables the network controller.

**Table 43. System Setup options—Connection menu (continued)**

<b>Connection</b>	
	By default, the <b>Enabled with PXE</b> option is selected.
<b>Wireless Device Enable</b>	
WWAN/GPS	Enables or disables the internal WWAN device. By default, the <b>WWAN/GPS</b> option is enabled.
WLAN	Enables or disables the internal WLAN device. By default, the <b>WLAN</b> option is enabled.
Bluetooth	Enables or disables the internal Bluetooth device. By default, the <b>Bluetooth</b> option is enabled.
Contactless Smartcard/NFC	Enables or disables the smartcard device. By default, the <b>Contactless Smartcard/NFC</b> option is enabled. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
<b>Enable UEFI Network Stack</b>	Enables or disables the UEFI Network Stack and controls the onboard LAN Controller. By default, the <b>Auto Enabled</b> option is selected. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
<b>Wireless Radio Control</b>	
Control WLAN Radio	Enables to sense the connection of the computer to a wired network and then disables the selected WLAN radio. Upon disconnection from the wired network, the selected wireless radios are reenabled. By default, the <b>Control WLAN Radio</b> option is disabled. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Control WWAN Radio	Enables to sense the connection of the computer to a wired network and then disables the selected WWAN radios. By default, the <b>Control WWAN Radio</b> option is disabled. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
<b>HTTP(s) Boot</b>	
HTTP(s) Boot	When enabled, supports HTTP(s) boot on the client BIOS, which offers wired or wireless and HTTP/HTTPS connection options. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
HTTP(s) Boot Modes	In Auto Mode, the boot URL is obtained from the DHCP response; the boot URL specifies the HTTP Boot Server and location of the Network Boot Program (NBP) file. In Manual mode, the user enters the URL in the text box, which must start with <code>http://</code> or <code>https://</code> and end with the NBP file name. By default, <b>Auto Mode</b> is selected. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
Boot URL	

**Table 43. System Setup options—Connection menu (continued)**

<b>Connection</b>	
Certificate	<p>Upload or delete the certificate.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 44. System Setup options—Power menu**

<b>Power</b>	
<b>Battery Configuration</b>	
Battery Configuration	<p>Enables or disables the computer to run on battery during peak power usage hours. Use the table <b>Custom Charge Start</b> and <b>Custom Charge Stop</b>, to prevent AC power usage between certain times of each day.</p> <p>By default, the <b>Adaptive</b> option is selected. Battery settings are adaptively optimized based on your typical battery usage pattern.</p>
Custom Charge Start	<p>Enables you to set the Custom Charge Start value.</p> <p>Default value: 50</p>
Custom Charge Stop	<p>Enables you to set the Custom Charge Stop value.</p> <p>Default value: 90</p>
<b>Advanced Configuration</b>	
Enable Advanced Battery Charge Configuration	<p>Enables Advanced Battery Charge Configuration from the beginning of the day to a specified work period. When enabled, Advanced Battery Charged maximizes battery health while still supporting heavy use during the work day.</p> <p>By default, the <b>Enable Advanced Battery Charge Configuration</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Peak Shift</b>	
Enable Peak Shift	<p>Enables or disables the computer to run on battery during peak power usage hours.</p> <p>By default, the <b>Enable Peak Shift</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>USB PowerShare</b>	
Enable USB PowerShare	<p>Enables or disables the USB PowerShare on the computer.</p> <p>By default, the <b>USB Powershare</b> option is disabled.</p>
<b>Thermal Management</b>	
	<p>Enables or disables cooling of the fan and manages the processor heat to adjust the system performance, noise, and temperature.</p> <p>By default, the <b>Optimized</b> option is selected. Standard settings for balanced performance, noise, and temperature.</p>
<b>USB Wake Support</b>	
Wake on Dell USB-C Dock	<p>When enabled, connecting a Dell USB-C Dock wakes the computer from Standby, Hibernate, and Power Off.</p> <p>By default, the <b>Wake on Dell USB-C Dock</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 44. System Setup options—Power menu (continued)**

Power	
<b>Block Sleep</b>	<p>Enables or disables the computer from entering Sleep (S3) mode in the operating system.</p> <p>By default, the <b>Block Sleep</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> When enabled, the computer does not go to Sleep, Intel Rapid Start is disabled automatically, and the operating system power option is blank if it was set to Sleep.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Lid Switch	
Enable Lid Switch	<p>Enables or disables the Lid Switch.</p> <p>By default, the <b>Enable Lid Switch</b> option is enabled.</p>
Power On Lid Open	<p>When enabled, allows the computer to turn on from the off state whenever the lid is opened.</p> <p>By default, the <b>Power On Lid Open</b> option is enabled.</p>
<b>Intel Speed Shift Technology</b>	<p>Enables or disables the Intel Speed Shift Technology support. When enabled, the operating system selects the appropriate processor performance automatically.</p> <p>By default, the <b>Intel Speed Shift Technology</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a>.</p>

**Table 45. System Setup options—Security menu**







Security	
<b>TPM 2.0 Security</b>	<p>Trusted Platform Module (TPM) is a security device that stores computer-generated keys for encryption and features such as BitLocker, Virtual Secure Mode, remote Attestation.</p> <p>By default, the <b>TPM 2.0 Security</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Trusted Platform Module (TPM) enabled to allow these security technologies to fully function.</p>
TPM 2.0 Security On	<p>Enables or disables the TPM.</p> <p>By default, the <b>TPM 2.0 Security On</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping TPM enabled to allow these security technologies to fully function.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Attestation Enable	<p>The <b>Attestation Enable</b> option controls the endorsement hierarchy of TPM. Disabling the <b>Attestation Enable</b> option prevents TPM from being used to digitally sign certificates.</p> <p>By default, the <b>Attestation Enable</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Attestation Enable</b> option enabled.</p> <p><b>i</b> <b>NOTE:</b> When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>









**Table 45. System Setup options—Security menu (continued)**

<b>Security</b>	
Key Storage Enable	<p>The <b>Key Storage Enable</b> option controls the storage hierarchy of TPM, which is used to store digital keys. Disabling the <b>Key Storage Enable</b> option restricts the ability of TPM to store owner's data.</p> <p>By default, the <b>Key Storage Enable</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Key Storage Enable</b> option enabled.</p> <p><b>NOTE:</b> When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p> <p><b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a>.</p>
SHA-256	<p>Allows you to control the usage of SHA-256 by TPM. When enabled, the BIOS and TPM use the SHA-256 hash algorithm to extend measurements into the TPM PCRs during BIOS boot. When disabled, the BIOS and TPM use the SHA-1 hash algorithm to extend measurements into the TPM PCRs during BIOS boot.</p> <p>By default, the <b>SHA-256</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>SHA-256</b> option enabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a>.</p>
Clear	<p>When enabled, the <b>Clear</b> option clears information that is stored in the TPM after exiting the system's BIOS. This option returns to the disabled state when the computer restarts.</p> <p>By default, the <b>Clear</b> option is disabled.</p> <p>Dell Technologies recommends enabling the <b>Clear</b> option only when TPM data is required to be cleared.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Physical Presence Interface (PPI) Bypass for Clear Command	<p>The PPI Bypass for Clear Command option allows the operating system to manage certain aspects of PTT. When enabled, you are not prompted to confirm changes to the PTT configuration.</p> <p>By default, the <b>PPI Bypass for Clear Command</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>PPI Bypass for Clear Command</b> option disabled.</p>
<b>Intel Total Memory Encryption</b>	
Multi-Key Total Memory Encryption (Up to 16 keys)	<p>Enables or disables the processor's memory encryption feature.</p> <p>By default, the <b>Intel Total Memory Encryption</b> option is disabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Chassis Intrusion</b>	
Chassis Intrusion	<p>Enables or disables the detection of chassis intrusion events. This feature notifies the user when the base cover has been removed from the computer.</p> <p>When set to <b>Enabled</b>, a notification is displayed on the next boot and the event is logged in the BIOS Events log.</p> <p>When set to <b>Disabled</b>, no notification is displayed and no event is logged in the BIOS Events log.</p>

**Table 45. System Setup options—Security menu (continued)**

<b>Security</b>	<p>When set to <b>On-Silent</b>, the event is logged in the BIOS Events log, but no notification is displayed.</p> <p>By default, the <b>Chassis Intrusion Detection</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Chassis Intrusion</b> option enabled.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Block Boot Until Cleared	<p>The <b>Block Boot Until Clear</b> option is enabled when <b>Chassis Intrusion</b> is enabled. When enabled, the computer does not boot until the chassis intrusion is cleared.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Clear Intrusion Warning	<p>The <b>Clear Intrusion Warning</b> option appears only after chassis intrusion is enabled and is tripped.</p> <p>By default, the <b>Clear Intrusion Warning</b> option is disabled.</p>
<b>SMM Security Mitigation</b>	<p>Enables or disables additional UEFI SMM Security Mitigation protections. This option uses the Windows SMM Security Mitigations Table (WSMT) to confirm to the operating system that security best practices have been implemented by the UEFI firmware.</p> <p>By default, the <b>SMM Security Mitigation</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>SMM Security Mitigation</b> option enabled unless you have a specific application which is not compatible.</p> <p> <b>NOTE:</b> This feature may cause compatibility issues or loss of functionality with some legacy tools and applications.</p> <p> <b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a>.</p>
<b>Data Wipe on Next Boot</b>	<p><b>Start Data Wipe</b></p> <p>Data Wipe is a secure wipe operation that deletes information from a storage device.</p> <p> <b>CAUTION: The Secure Data Wipe operation erases information in a way that it cannot be reconstructed.</b></p> <p>Commands such as delete and format in the operating system may remove files from showing up in the file system, however they can be reconstructed through forensic means as they are still represented on the physical media. Data Wipe prevents this reconstruction and is not recoverable.</p> <p>When enabled, the BIOS will queue up a data wipe cycle for storage devices that are connected to the motherboard on the next reboot.</p> <p>By default, the <b>Start Data Wipe</b> option is disabled.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Absolute</b>	<p>Absolute Software provides various cyber security solutions, some requiring software preloaded on Dell computers and integrated into the BIOS. To use these features, you must enable the Absolute BIOS setting and contact Absolute for configuration and activation.</p> <p>By default, the <b>Absolute</b> option is enabled.</p>

**Table 45. System Setup options—Security menu (continued)**

Security	
	<p>For additional security, Dell Technologies recommends keeping the <b>Absolute</b> option enabled.</p> <p> <b>WARNING: The Permanently Disabled option can only be selected once. When Permanently Disabled is selected, Absolute Persistence cannot be reenabled. No further changes to the Enable/Disable states are allowed.</b></p> <p> <b>NOTE:</b> The Enable/Disable options are unavailable while the computer is in the activated state.</p> <p> <b>NOTE:</b> When the Absolute features are activated, the Absolute integration cannot be disabled from the BIOS Setup screen.</p>
<b>UEFI Boot Path Security</b>	<p>Enables or disables the computer to prompt the user to enter the Administrator password (if set) when booting to a UEFI boot path device from the F12 boot menu.</p> <p>By default, the <b>Always Except Internal HDD</b> option is enabled.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Firmware Device Tamper Detection</b>	<p>Allows you to control the firmware device tamper detection feature. This feature notifies the user when the firmware device is tampered. When enabled, a screen warning message is displayed on the computer and a tamper detection event is logged in the BIOS Events log. The computer fails to reboot until the event is cleared.</p> <p>By default, the <b>Firmware Device Tamper Detection</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Firmware Device Tamper Detection</b> option enabled.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Clear Firmware Device Tamper Detection	<p>Allows you to clear the events that are logged when tampering of firmware device is detected.</p> <p>By default, the <b>Clear Firmware Device Tamper Detection</b> option is disabled.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 46. System Setup options—Passwords menu**

Passwords	
<b>Administrator Password</b>	<p>The Administrator Password prevents unauthorized access to the BIOS Setup options. Once the administrator password is set, the BIOS Setup options can only be modified after providing the correct password.</p> <p>The following rules and dependencies apply to the Administrator Password -</p> <ul style="list-style-type: none"> <li>• The administrator password cannot be set if system and/or internal hard drive passwords are previously set.</li> <li>• The administrator password can be used in place of the system and/or internal hard drive passwords.</li> <li>• When set, the administrator password must be provided during a firmware update.</li> <li>• Clearing the administrator password also clears the system password (if set).</li> </ul> <p>Dell Technologies recommends using an administrator password to prevent unauthorized changes to BIOS Setup options.</p>

**Table 46. System Setup options—Passwords menu (continued)**

<b>Passwords</b>	
<b>System Password</b>	<p>The System Password prevents the computer from booting to an operating system without entering the correct password.</p> <p>The following rules and dependencies apply when the System Password is used -</p> <ul style="list-style-type: none"> <li>• The computer shuts down when idle for approximately 10 minutes at the system password prompt.</li> <li>• The computer shuts down after three incorrect attempts to enter the system password.</li> <li>• The computer shuts down when the <b>Esc</b> key is pressed at the <b>System Password</b> prompt.</li> <li>• The system password is not prompted when the computer resumes from standby mode.</li> </ul> <p>Dell Technologies recommends using the system password in situations where it is likely that a computer may be lost or stolen.</p>
<p><b>Hard Drive Password</b></p> <p><b>NOTE:</b> On some computers, the <b>M.2 PCIe SSD-0 Password</b> option is shown.</p>	<p>The hard drive password can be set to prevent unauthorized access of the data stored on the solid state drive. The computer prompts for the hard drive password during boot in order to unlock the drive. A password-secured hard drive stays locked even when removed from the computer or placed into another computer. It prevents an attacker from accessing data on the drive without authorization.</p> <p>The following rules and dependencies apply when the <b>Hard Drive Password</b> or <b>M.2 PCIe SSD-0 Password</b> option is used.</p> <ul style="list-style-type: none"> <li>• The hard drive password option cannot be accessed when the hard drive is disabled in the BIOS Setup.</li> <li>• The computer shuts down when idle for approximately 10 minutes at the hard drive password prompt.</li> <li>• The computer shuts down after three incorrect attempts to enter the hard drive password and treats the hard drive as not available.</li> <li>• The hard drive does not accept password unlock attempts after five incorrect attempts to enter the hard drive password from the BIOS Setup. The hard drive password must be reset for the new password unlock attempts.</li> <li>• The computer treats the hard drive as not available when the <b>Esc</b> key is pressed at the hard drive password prompt.</li> <li>• The hard drive password is not prompted when the computer resumes from standby mode. When the hard drive is unlocked by the user before the computer goes into standby mode, it remains unlocked after the computer resumes from standby mode.</li> <li>• If the system and hard drive passwords are set to the same value, the hard drive unlocks after the correct system password is entered.</li> </ul> <p>Dell Technologies recommends using a hard drive password to protect unauthorized data access.</p>
<b>Password Configuration</b>	<p>The Password configuration page includes several options for changing the requirements of BIOS passwords. You can modify the minimum and maximum length of the passwords as well as require passwords to contain certain character classes (upper case, lower case, digit, special character).</p> <p>When the <b>Lower Case Letter</b> option is enabled, the password requires at least one lower case letter.</p> <p>When the <b>Upper Case Letter</b> option is enabled, the password requires at least one upper case letter.</p> <p>When the <b>Digit</b> option is enabled, the password requires at least one numeric digit.</p> <p>When the <b>Special Character</b> option is enabled, the password requires at least one special character from the set: !"#%&amp;'()*+,-./:;&lt;=&gt;?@[\\]^_`{ }~.</p>

**Table 46. System Setup options—Passwords menu (continued)**

<b>Passwords</b>	
	<p>When setting <b>Minimum Characters</b> for password length, Dell Technologies recommends setting the minimum password length to at least eight characters.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Password Bypass</b>	<p>The <b>Password Bypass</b> option allows the computer to reboot from the operating system without entering the system or hard drive password. If the computer has already booted to the operating system, it is presumed that the user has already entered the correct system or hard drive password.</p> <p><b>i</b> <b>NOTE:</b> This option does not remove the requirement to enter the password after shutting down.</p> <p>By default, the <b>Password Bypass</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Password Bypass</b> option enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Password Changes</b>	
Allow Non-Admin Password Changes	<p>The <b>Allow Non-Admin Password Changes</b> option in BIOS Setup allows an end user to set or change the system or hard drive passwords without entering the administrator password. This gives an administrator control over the BIOS settings but enables an end user to provide their own password.</p> <p>By default, the <b>Allow Non-Admin Password Changes</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Allow Non-Admin Password Changes</b> option disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Non-Admin Setup Changes	<p>The <b>Non-Admin Setup Changes</b> option allows an end user to configure the wireless devices without requiring the administrator password.</p> <p>By default, the <b>Non-Admin Setup Changes</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Non-Admin Setup Changes</b> option disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Enable Admin Setup Lockout</b>	<p>The <b>Admin Setup Lockout</b> option prevents an end user from even viewing the BIOS Setup configuration without first entering the administrator password (if set).</p> <p>By default, the <b>Enable Admin Setup Lockout</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Admin Setup Lockout</b> option disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Enable Master Password Lockout</b>	<p>The <b>Master Password Lockout</b> option allows you to disable the Recovery Password feature. If the system, administrator, or hard drive password is forgotten, the computer becomes unusable.</p> <p><b>i</b> <b>NOTE:</b> When the owner password is set, the Master Password Lockout option is not available.</p>



**Table 46. System Setup options—Passwords menu (continued)**

Passwords	
	<p><b>i</b> <b>NOTE:</b> When an internal hard drive password is set, it must first be cleared before Master Password Lockout can be changed.</p> <p>By default, the <b>Enable Master Password Lockout</b> option is disabled.</p> <p>Dell Technologies does not recommend enabling the <b>Master Password Lockout</b> unless you have implemented your own password recovery system.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Enable Allow Non-Admin PSID Revert</b>	<p>The <b>Allow Non-Admin PSID Revert</b> option allows a user to clear the hard drive password without entering the BIOS Admin Password. When an Admin Password is set, the ability to enter the PSID is protected by requiring authentication with the Admin Password. If this option is enabled, any user can clear the drive without entering the Admin Password.</p> <p>By default, the <b>Enable Allow Non-Admin PSID Revert</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 47. System Setup options—Update, Recovery menu**

Update, Recovery	
<b>UEFI Capsule Firmware Updates</b>	
Enable UEFI Capsule Firmware Updates	<p>Enables or disables BIOS updates through UEFI capsule update packages.</p> <p><b>i</b> <b>NOTE:</b> Disabling this option blocks the BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS).</p> <p>By default, the <b>Enable UEFI Capsule Firmware Updates</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>BIOS Recovery from Hard Drive</b>	<p>Enables or disables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB drive.</p> <p>By default, the <b>BIOS Recovery from Hard Drive</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> BIOS Recovery from Hard Drive is not available for self-encrypting drives (SED).</p> <p><b>i</b> <b>NOTE:</b> BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>BIOS Downgrade</b>	
Allow BIOS Downgrade	<p>Allows downgrading of the system firmware to previous revisions.</p> <p>By default, the <b>Allow BIOS Downgrade</b> option is enabled.</p>
<b>SupportAssist OS Recovery</b>	<p>Enables or disables the boot flow for SupportAssist OS Recovery tool if certain system errors occur.</p> <p>By default, the <b>SupportAssist OS Recovery</b> option is enabled.</p>
<b>BIOSConnect</b>	<p>Enables or disables cloud service operating system recovery if the main operating system fails to boot with the number of failures equal to or greater than the</p>

**Table 47. System Setup options—Update, Recovery menu (continued)**

Update, Recovery	
	<p>value specified by the Auto operating system Recovery Threshold setup option and local service operating system does not boot or is not installed.</p> <p>By default, the <b>BIOSConnect</b> option is enabled.</p>
<b>Dell Auto OS Recovery Threshold</b>	<p>Allows the control of the automatic boot flow for the SupportAssist System Resolution Console and the Dell operating system Recovery Tool.</p> <p>By default, the <b>Dell Auto OS Recovery Threshold</b> value is set to <b>2</b>.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 48. System Setup options—System Management menu**

System Management	
<b>Service Tag</b>	Displays the Service Tag of the computer.
<b>Asset Tag</b>	<p>Creates a computer Asset Tag that an IT administrator can use to uniquely identify a particular computer.</p> <p><b>i</b> <b>NOTE:</b> Once set in the BIOS, the Asset Tag cannot be changed.</p>
AC Behavior	
Wake on AC	<p>Enables or disables the computer to turn on and go to boot when AC power is supplied to the computer.</p> <p>By default, the <b>Wake on AC</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Wake on LAN</b>	<p>Enables or disables the computer to turn on by a special LAN signal.</p> <p>By default, the <b>Wake on LAN</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Auto On Time</b>	<p>Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays, or Selected Days.</p> <p>By default, the <b>Auto On Time</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Intel AMT capability</b>	<p>Configure Intel Active Management Technology (AMT) options, which can be enabled, disabled, or restricted.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
First Power On Date	
Set Ownership Date	<p>Enables you to set the ownership date.</p> <p>By default, the <b>Set Ownership Date</b> option is disabled.</p>
<b>Diagnostics OS agent requests</b>	<p>Enable or disable the option for applications running in the operating system to run with preboot diagnostics on subsequent boots.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 48. System Setup options—System Management menu (continued)**

System Management	
<b>Power-On-Self-Test Automatic Recovery</b>	<p>Enable or disable the automatic recovery of the computer from no power or no-POST failure by applying mitigation steps.</p> <p>By default, the <b>Power-On-Self-Test Automatic Recovery</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 49. System Setup options—Keyboard menu**

Keyboard	
<b>Fn Lock Options</b>	<p>Enables or disables the Fn Lock option.</p> <p>By default, the <b>Fn Lock</b> option is enabled.</p>
Fn Lock Mode	<p>Enables or disables the Fn Lock option.</p> <p>By default, the <b>Fn Lock</b> option is enabled.</p>
Lock Mode	<p>By default, the <b>Lock Mode</b> option is enabled. With this option, the F1-F12 keys scan the code for their secondary functions.</p>
<b>Keyboard Illumination</b>	<p>Configures the operating mode of the keyboard illumination feature.</p> <p>By default, the <b>Dim</b> option is selected. Enables the keyboard illumination feature at 100% brightness level.</p>
<b>Keyboard Backlight Timeout on AC</b>	<p>Sets the timeout value for the keyboard backlight when an AC adapter is connected to the computer.</p> <p>By default, the <b>10 seconds</b> option is selected.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Keyboard Backlight Timeout on Battery</b>	<p>Sets the timeout value for the keyboard backlight when the computer is running only on the battery power. The keyboard backlight timeout value is only effective when the backlight is enabled.</p> <p>By default, the <b>10 seconds</b> option is selected.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Device Configuration HotKey Access</b>	<p>Allows you to control whether you can access device configuration screens through hotkeys during system startup.</p> <p>By default, the <b>Device Configuration HotKey Access</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> This setting controls only the Intel RAID (CTRL+I), MEBX (CTRL+P), and LSI RAID (CTRL+C) Option ROMs. Other preboot Option ROMs, which support entry using a key sequence, are not affected by this setting.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 50. System Setup options—Pre-boot Behavior menu**

Pre-boot Behavior	
<b>Adapter Warnings</b>	
Enable Adapter Warnings	<p>Enables the warning messages during boot when the adapters with less power capacity are detected.</p> <p>By default, the <b>Enable Adapter Warnings</b> option is enabled.</p>

**Table 50. System Setup options—Pre-boot Behavior menu (continued)**

<b>Pre-boot Behavior</b>	
	<p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Warnings and Errors</b>	<p>Enables or disables the action to be taken when a warning or error is encountered.</p> <p>By default, the <b>Prompt on Warnings and Errors</b> option is selected. Stop, prompt, and wait for user input when warnings or errors are detected.</p> <p><b>i</b> <b>NOTE:</b> Errors deemed critical to the operation of the computer hardware stop the functioning of the computer.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Extend BIOS POST Time</b>	<p>Sets the BIOS POST (Power-On Self-Test) load time.</p> <p>By default, the <b>0 seconds</b> option is selected.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>MAC Address Pass-Through</b>	<p>Replaces the external NIC MAC address (in a supported dock or dongle) with the selected MAC address from the computer.</p> <p>By default, the <b>System Unique MAC Address</b> option is selected.</p>
<b>Sign of Life</b>	
Early Keyboard Backlight	<p>Enables or disables the Keyboard Backlight Sign of Life.</p> <p>By default, the <b>Early Keyboard Backlight</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 51. System Setup options—Virtualization Support menu**

<b>Virtualization Support</b>	
<b>Intel Virtualization Technology</b>	
Enable Intel Virtualization Technology (VT)	<p>When enabled, the computer can run a Virtual Machine Monitor (VMM).</p> <p>By default, the <b>Enable Intel Virtualization Technology (VT)</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>VT for Direct I/O</b>	
Enable Intel VT for Direct I/O	<p>When enabled, the computer can perform Virtualization Technology for Direct I/O (VT-d). VT-d is an Intel method that provides virtualization for memory map I/O.</p> <p>By default, the <b>Enable Intel VT for Direct I/O</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Intel Trusted Execution Technology (TXT)</b>	<p>Specifies whether a measured Virtual Machine Monitor (MVMM) can use the additional hardware capabilities provided by Intel Trusted Execution Technology. The following must be enabled in order to enable Intel TXT -</p> <ul style="list-style-type: none"> <li>● Trusted Platform Module (TPM)</li> <li>● Intel Hyper-Threading</li> <li>● All CPU cores (Multi-Core Support)</li> <li>● Intel Virtualization Technology</li> </ul>

**Table 51. System Setup options—Virtualization Support menu (continued)**

<b>Virtualization Support</b>	
	<ul style="list-style-type: none"> <li>Intel VT for Direct I/O</li> </ul> <p>By default, the <b>Intel Trusted Execution Technology (TXT)</b> option is disabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>DMA Protection</b>	
Enable Pre-Boot DMA Support	<p>Allows you to control the Pre-Boot DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system.</p> <p><b>NOTE:</b> This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the <b>Enable Pre-Boot DMA Support</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Enable Pre-Boot DMA Support</b> option enabled.</p> <p><b>NOTE:</b> This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Enable OS Kernel DMA Support	<p>Allows you to control the Kernel DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. For operating systems that support DMA protection, this setting indicates to the operating system that the BIOS supports the feature.</p> <p><b>NOTE:</b> This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the <b>Enable OS Kernel DMA Support</b> option is enabled.</p> <p><b>NOTE:</b> This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Internal Port DMA Compatibility Mode</b>	By default, the <b>Internal Port DMA Compatibility Mode</b> option is disabled.

**Table 52. System Setup options—Performance menu**

<b>Performance</b>	
<b>Multi-Core Support</b>	
Multiple Atom Cores	<p>Change the number of Atom cores available to the operating system. The default value is set to the maximum number of cores.</p> <p>By default, the <b>All Cores</b> option is selected.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Intel SpeedStep</b>	
Enable Intel SpeedStep Technology	<p>Enables the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production.</p> <p>By default, the <b>Enable Intel SpeedStep Technology</b> option is enabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a>.</p>

**Table 52. System Setup options—Performance menu (continued)**


<b>Performance</b>	
<b>C-State Control</b>	
Enable C-State Control	<p>Enables or disables the ability of the CPU to enter and exit low-power state. When disabled, it disables all C-states. When enabled, it enables all C-states that the chipset or platform allows.</p> <p>By default, the <b>Enable C-State Control</b> option is enabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Intel TurboBoost Technology</b>	
Enable Intel Turbo Boost Technology	<p>Enables or disables the Intel TurboBoost mode of the processor. When enabled, the Intel TurboBoost driver increases the performance of the CPU or graphics processor.</p> <p>By default, the <b>Enable Intel TurboBoost Technology</b> option is enabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Intel HyperThread Technology</b>	
Enable Intel HyperThread Technology	<p>Enables or disables the Intel Hyper-Threading mode of the processor. When enabled, the Intel Hyper-Threading increases the efficiency of the processor resources when multiple threads run on each core.</p> <p>By default, the <b>Intel HyperThread Technology</b> option is enabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Dynamic Tuning: Machine Learning</b>	
Enable Dynamic Tuning: Machine Learning	<p>Enables or disables operating system capability to enhance power tuning capabilities depending on the detected workloads.</p> <p><b>NOTE:</b> This option is available for development only and is not customer visible.</p> <p>By default, the <b>Enable Dynamic Tuning: Machine Learning</b> option is enabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a>.</p>

**Table 53. System Setup options—System Logs menu**

<b>System Logs</b>	
<b>BIOS Event Log</b>	
Clear BIOS Event Log	<p>Select the option to keep or clear BIOS events logs.</p> <p>By default, the <b>Keep Log</b> option is selected.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Thermal Event Log</b>	
Clear Thermal Event Log	<p>Select the option to keep or clear Thermal events logs.</p> <p>By default, the <b>Keep Log</b> option is selected.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Power Event Log</b>	




**Table 53. System Setup options—System Logs menu (continued)**

System Logs	
Clear Power Event Log	Select the option to keep or clear Power events logs. By default, the <b>Keep Log</b> option is selected.  <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .


## Updating the BIOS

### Updating the BIOS in Windows

#### About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the computer it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the computer will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

#### Steps


1. Go to [www.dell.com/support](http://www.dell.com/support).
2. Click **Product support**. In the **Search support** box, enter the Service Tag of your computer, and then click **Search**.  
 **NOTE:** If you do not have the Service Tag, use the SupportAssist feature to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.  
For more information, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

### Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see the knowledge base article [000131486](https://www.dell.com/support/000131486) at [www.dell.com/support](http://www.dell.com/support).

### Updating the BIOS using the USB drive in Windows

#### About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the computer it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the computer will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).


## Steps

1. Follow the procedure from step 1 to step 6 in [Updating the BIOS in Windows](#) to download the latest BIOS setup program file.
2. Create a bootable USB drive. For more information, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).
3. Copy the BIOS setup program file to the bootable USB drive.
4. Connect the bootable USB drive to the computer that needs the BIOS update.
5. Restart the computer and press **F12**.
6. Select the USB drive from the **One Time Boot Menu**.
7. Type the BIOS setup program filename and press **Enter**.  
The **BIOS Update Utility** appears.
8. Follow the on-screen instructions to complete the BIOS update.

## Updating the BIOS from the F12 One-Time boot menu

Update your computer BIOS using the BIOS update.exe file that is copied to a FAT32 USB drive and booting from the F12 One-Time boot menu.


### About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the computer it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the computer will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

### BIOS Update

You can run the BIOS update file from Windows using a bootable USB drive or you can also update the BIOS from the F12 One-Time boot menu on the computer.

Most of the Dell computers built after 2012 have this capability, and you can confirm by booting your computer to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your computer. If the option is listed, then the BIOS supports this BIOS update option.

 **NOTE:** Only computers with the BIOS Flash Update option in the F12 One-Time boot menu can use this function.

### Updating from the One-Time boot menu

To update your BIOS from the F12 One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (key does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter that is connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS update flash process from the F12 menu:

 **CAUTION:** Do not turn off the computer during the BIOS update process. The computer may not boot if you turn off your computer.

## Steps

1. From a turn off state, insert the USB drive where you copied the flash into a USB port of the computer.
2. Turn on the computer and press F12 to access the One-Time Boot Menu, select BIOS Update using the mouse or arrow keys then press Enter.  
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select an external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS update is completed.

# System and setup password


Table 54. System and setup password

Password type	Description
System password	Password that you must enter to log in to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data that is stored on your computer, when not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

## Assigning a System Setup password

### Prerequisites

You can assign a new System or Admin Password only when the status is in **Not Set**.

### About this task

To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.  
The **Security** screen is visible.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.  
Use the following guidelines to assign the system password:
  - A password can have up to 32 characters.
  - At least one special character: "( ! " # \$ % & ' \* + , - . / : ; < = > ? @ [ \ ] ^ \_ ` { | } )"
  - Numbers 0 to 9.
  - Upper case letters from A to Z.
  - Lower case letters from a to z.
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Esc and save the changes as prompted by the message.
5. Press Y to save the changes.  
The computer restarts.

## Deleting or changing an existing system setup password


### Prerequisites

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

### About this task

To enter the System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter. The **System Security** screen is displayed.
2. In the **System Security** screen, verify that the Password Status is **Unlocked**.
3. Select **System Password**, update, or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**, update, or delete the existing setup password, and press Enter or Tab.  
 **NOTE:** If you change the System and/or Setup password, reenter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.
5. Press Esc. A message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup. The computer restarts.

## Clearing CMOS settings

### About this task

 **CAUTION:** Clearing CMOS settings resets the BIOS settings on your computer.


### Steps

1. Remove the [base cover](#).
2. Disconnect the battery cable from the system board.
3. Remove the [coin-cell battery](#).
4. Wait for one minute.
5. Replace the [coin-cell battery](#).
6. Connect the battery cable to the system board.
7. Replace the [base cover](#).

## Clearing BIOS (System Setup) and System passwords

### About this task

To clear the system or BIOS passwords, contact Dell technical support as described at [www.dell.com/contactdell](http://www.dell.com/contactdell).

 **NOTE:** For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.

# Troubleshooting

## Handling swollen rechargeable Li-ion batteries

Like most laptops, Dell laptops use Lithium-ion batteries. One type of Lithium-ion battery is the rechargeable Li-ion battery. Rechargeable Li-ion batteries have increased in popularity in recent years and have become standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to rechargeable Li-ion battery technology is the potential for swelling of the battery cells.

A swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and should be replaced and disposed of properly. We recommend contacting Dell product support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing rechargeable Li-ion batteries are as follows:

- Exercise caution when handling rechargeable Li-ion batteries.
- Discharge the battery before removing it from the system. To discharge the battery, unplug the AC adapter from the system and operate the system only on battery power. When the system will no longer turn on when the power button is pressed, the battery is fully discharged.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries that are covered under warranty should be returned to Dell in an approved shipping container (provided by Dell)—this is to comply with transportation regulations. Swollen batteries that are not covered under warranty should be disposed of at an approved recycling center. Contact Dell product support at <https://www.dell.com/support> for assistance and further instructions.
- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from <https://www.dell.com> or otherwise directly from Dell.

Rechargeable Li-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information about how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, search Dell Laptop Battery in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

## Locate the Service Tag or Express Service Code of your Dell computer

Your Dell computer is uniquely identified with a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, we recommend entering the Service Tag or Express Service Code at [www.dell.com/support](http://www.dell.com/support).


For more information about how to find the Service Tag for your computer, see [Locate the Service Tag on your computer](#).

# Dell SupportAssist Pre-boot System Performance Check diagnostics

## About this task

SupportAssist diagnostics (also known as system diagnostics) performs a complete check of your hardware. The Dell SupportAssist Pre-boot System Performance Check diagnostics is embedded with the BIOS and launched by the BIOS internally. The embedded system diagnostics provides options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode.
- Repeat the tests.
- Display or save test results.
- Run thorough tests to introduce additional test options to provide extra information about one or more failed devices.
- View status messages that inform you the tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

 **NOTE:** Some tests for specific devices require user interaction. Always ensure that you are present at the computer terminal when the diagnostic tests are performed.

For more information, see the knowledge base article [000180971](#).

## Running the SupportAssist Pre-Boot System Performance Check


### Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key as the Dell logo appears.
3. On the boot menu screen, select the **Diagnostics** option.
4. Click the arrow at the bottom left corner.  
Diagnostics front page is displayed.
5. Click the arrow in the lower-right corner to go to the page listing.  
The items that are detected are listed.
6. To run a diagnostic test on a specific device, press Esc and click **Yes** to stop the diagnostic test.
7. Select the device from the left pane and click **Run Tests**.
8. If there are any issues, error codes are displayed.  
Note the error code and validation number and contact Dell.


## Built-in self-test (BIST)

### M-BIST

M-BIST (Built In Self-Test) is the system board built-in self-test diagnostics tool that improves the diagnostics accuracy of system board Embedded Controller (EC) failures.

 **NOTE:** M-BIST can be manually initiated before Power On Self-Test (POST).

### How to run M-BIST

 **NOTE:** M-BIST must be initiated on the computer from a power-off state that is either connected to AC power or with a battery only.

1. Press and hold both the **M** key on the keyboard and the **power button** to initiate M-BIST.
2. The battery indicator LED may exhibit two states:
  - a. OFF: No fault was detected with the system board.
  - b. AMBER: Amber indicates a problem with the system board.



- If there is a failure with the system board, the battery status LED flashes one of the following error codes for 30 seconds:

**Table 55. LED error codes**

Blinking Pattern		Possible Problem
Amber	White	
2	1	CPU Failure
2	8	LCD Power Rail Failure
1	1	TPM Detection Failure
2	4	Memory/RAM failure

- If there is no failure with the system board, the LCD cycles through the solid color screens that are described in the LCD-BIST section for 30 seconds and then turn off.

## LCD Power rail test (L-BIST)

L-BIST is an enhancement to the single LED error code diagnostics and is automatically initiated during POST. L-BIST will check the LCD power rail. If there is no power being supplied to the LCD (that is if the L-BIST circuit fails), the battery status LED flashes either an error code [2,8] or an error code [2,7].

**NOTE:** If L-BIST fails, LCD-BIST cannot function as no power will be supplied to the LCD.

### How to invoke the L-BIST Test:

- Press the power button to start the computer.
- If the computer does not start up normally, look at the battery status LED:
  - If the battery status LED flashes an error code [2,7], the display cable may not be connected properly.
  - If the battery status LED flashes an error code [2,8], there is a failure on the LCD power rail of the system board, hence there is no power that is supplied to the LCD.
- For cases, when a [2,7] error code is shown, check to see if the display cable is properly connected.
- For cases when a [2,8] error code is shown, replace the system board.

## LCD Built-in Self-Test (BIST)

Dell laptops have a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with the LCD (screen) of the Dell laptop or with the video card (GPU) and computer settings.

When you notice screen abnormalities like flickering, distortion, clarity issues, fuzzy or blurry image, horizontal or vertical lines, color fade and so on, it is always a good practice to isolate the LCD (screen) by running the Built-In Self-Test (BIST).

### How to invoke the LCD BIST Test

- Power off the Dell laptop.
- Disconnect any peripherals that are connected to the laptop. Connect only the AC adapter (charger) to the laptop.
- Ensure that the LCD (screen) is clean (no dust particles on the surface of the screen).
- Press and hold the **D** key and **Power on** the laptop to enter LCD built-in self-test (BIST) mode. Continue to hold the D key until the computer boots up.
- The screen displays solid colors and change colors on the entire screen to white, black, red, green, and blue twice.
- Then it displays the colors white, black, and red.
- Carefully inspect the screen for abnormalities (any lines, fuzzy color, or distortion on the screen).
- At the end of the last solid color (red), the computer shuts down.

**NOTE:** Dell SupportAssist Preboot diagnostics upon launch initiates an LCD BIST first, expecting a user intervention to confirm functionality of the LCD.

# System-diagnostic lights

This section lists the system-diagnostic lights of your Latitude 5350/Latitude 5350 2-in-1.

## Power and battery-status light

The power and battery status light indicates the power and battery status of the computer. These are the power states:

**Solid white:** Power adapter is connected and the battery is charging.

**Sold amber:** Battery charge is low or critical.

**Off:** Battery is fully charged.

- Power adapter is connected, and the battery is fully charged.
- Computer is running on battery, and the battery has more than 5% charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light may blink amber or white according to pre-defined "beep codes" indicating various failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off, indicating no memory or RAM is detected.

**Table 56. System-diagnostic lights**

Blinking pattern		Problem description
Amber	White	
1	1	TPM detection failure
1	2	Unrecoverable SPI Flash Failure
1	5	EC unable to program i-Fuse
1	6	Generic catch-all for ungraceful EC code flow errors
2	1	CPU failure
2	2	System board failure (included BIOS corruption or ROM error)
2	3	No memory or RAM detected
2	4	Memory or RAM failure
2	5	Invalid memory installed
2	6	System board or Chipset Error
2	7	LCD failure (SBIOS message)
2	8	LCD failure (EC detection of power rail failure)
3	1	CMOS battery failure
3	2	PCI or Video card or chip failure
3	3	BIOS Recovery image not found
3	4	BIOS Recovery image found but invalid
3	5	Power rail failure
3	6	Flash corruption is detected by SBIOS.
3	7	Timeout waiting on ME to reply to HECI message.

**NOTE:** Blinking 3-3-3 LEDs on Lock LED (Caps-Lock or Num-Lock), Power button LED (without Fingerprint reader), and Diagnostic LED indicates failure to provide input during LCD panel test on Dell SupportAssist Pre-boot System Performance Check diagnostics.

# Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a stand-alone tool that is preinstalled in all Dell computers that are installed with the Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, or restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into their primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at [www.dell.com/serviceabilitytools](http://www.dell.com/serviceabilitytools). Click **SupportAssist** and then, click **SupportAssist OS Recovery**.

## Real-Time Clock (RTC Reset)

The Real Time Clock (RTC) reset function allows you or the service technician to recover Dell computers from No POST/No Power/No Boot situations. The legacy jumper enabled RTC reset has been retired on these models.

Start the RTC reset with the computer powered off and connected to AC power. Press and hold the power button for thirty (30) seconds. The computer RTC Reset occurs after you release the power button.

## Backup media and recovery options

It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell proposes multiple options for recovering the Windows operating system on your Dell computer. For more information, see [Dell Windows Backup Media and Recovery Options](#).

## Wi-Fi power cycle

### About this task

If your computer is unable to access the Internet due to Wi-Fi connectivity issues a Wi-Fi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a Wi-Fi power cycle:

 **NOTE:** Some Internet Service Providers (ISPs) provide a modem or router combo device.

### Steps

1. Turn off your computer.
2. Turn off the modem.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on your computer.

## Drain residual flea power (perform hard reset)

### About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.


For your safety, and to protect the sensitive electronic components in your computer, you are requested to drain residual flea power before removing or replacing any components in your computer.

Draining residual flea power, also known as a performing a "hard reset", is also a common troubleshooting step if your computer does not turn on or boot into the operating system.

### **Procedure to drain residual flea power (perform a hard reset)**

#### **Steps**

1. Turn off your computer.
2. Disconnect the power adapter from your computer.
3. Remove the base cover.
4. Remove the battery.
5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to your computer.
9. Turn on your computer.


 **NOTE:** For more information about performing a hard reset, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

# Getting help and contacting Dell

## Self-help resources


You can get information and help on Dell products and services using these self-help resources:


**Table 57. Self-help resources**

Self-help resources	Resource location
Information about Dell products and services	<a href="http://www.dell.com">www.dell.com</a>
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	<a href="http://www.dell.com/support/windows">www.dell.com/support/windows</a> <a href="http://www.dell.com/support/linux">www.dell.com/support/linux</a>
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at <a href="http://www.dell.com/support">www.dell.com/support</a> .  For more information about how to find the Service Tag for your computer, see <a href="#">Locate the Service Tag on your computer</a> .
Dell knowledge base articles	<ol style="list-style-type: none"> <li>1. Go to <a href="http://www.dell.com/support">www.dell.com/support</a>.</li> <li>2. On the menu bar at the top of the Support page, select <b>Support &gt; Knowledge Base</b>.</li> <li>3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.</li> </ol>

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [www.dell.com/contactdell](http://www.dell.com/contactdell).

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.