Hanns Note 2




Eco-friendly Natural Illumination Reader



Instruction Manual & Warranty Information

Packing Contents

HannsNote2	1 pc
USB-C Charger Cable	1 pc
Quick Guide	1 pc

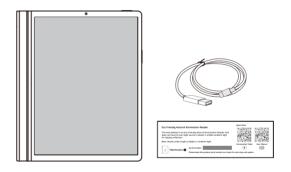


Getting Started

Turn On: Press the power button for 3 seconds.

Turn off: Press the power button and the volume button at the same time. Tap Power off to turn the device off.

Screen On/Off: Press the power button for 1 second.

Product Overview

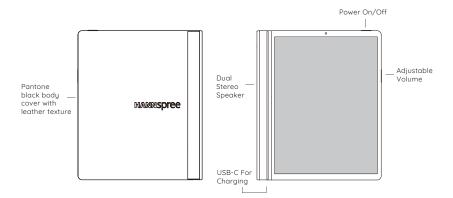

User Instructions

 This product's display utilizes ambient light reflection and as such, it does not have any built-in light source.
It is suitable for indoor or outdoor use wherever there's sufficient ambient light.

- 2. Do not use sharp objects to write on HannsNote2.
- 3. Hannspree will not be responsible for any damage caused by use of unauthorized accessories.
- 4. To prevent any damage to device, always use the charging cable provided with this pack.
- 5. Do not submerge the product in water or sprinkle water on the device.
- 6. Use a clean and smooth cloth to wipe the surface of the device. Do not use material with coarse surface or chemicals for cleaning purpose.
- 7. Images shown in this manual are for reference purpose only. The actual product may appear different, depending on the model.

Important Product Information

Technical Description			
Model	HannsNote2	Weight	350g
Product	Full-color E-Reader Tablet	Bluetooth	5.0
Display Size	10"	Operating Temperature	0°C to 45°C
Resolution	1200X1600	Storage Temperature	-20°C to 60°C
Battery Capacity	2200mAh	Input	5V 2A
Memory	4GB + 64GB	LCD type	eVPD (TN, reflective)

Limited Warranty

Valid for and only applies to the products purchased through Hannspree authorized sales channel. "Hannspree warrants the product, to the original consumer purchaser, except for the accessories such as OTG converter, writing stylus, USB cable, charging pad, to be free from defects in materials and workmanship under normal use and service for a period of one year, from the date of original retail purchase. Hannspree's sole obligation and entire liability under this warranty shall be, at Hannspree's option, either repair or replacement of the defective product or parts thereof, of which Hannspree is notified during the warranty period; provided, however, that you are responsible for (i) the cost of transportation of the product to the designated service location and (ii) any loss or damage to the product resulting from such transportation. Hannspree shall have no responsibility to repair or replace the product if the failure of product has resulted from accident, abuse, misuse, negligence, or unauthorized modification or repair or storage conditions not recommended by Hannspree."

Precautions

- Store the product in a location well out of reach of children. Failure to observe this may result in children accidently swallowing components or parts detached from the product.
- 2. Risk of explosion if battery is replaced by an incorrect type. Please discard batteries in accordance with local laws and regulations.

Disposal of the built-in lithium-ion Battery

Please dispose batteries in accordance with the local government directives.

 \triangle Note: 5G band (W52) indoor use only.

Hanns Note 2

HANNspree