



## **K4 HE Wireless Magnetic Switch Keyboard**

# Fully Assembled Version

## Keyboard

1x Fully Assembled Keyboard

## Including

1x Case

1x PCB

1x Aluminum Plate

1x Sound Absorbing Foam

1x EPDM Foam

1x Bottom Case PET Film

1x Silicone Bottom Pad

6 Sets x Stabilizers

1 Set x Keycaps

1 Set x Magnetic Switches



## Cable

1x Type-A to Type-C Cable

## Receiver

1x Type-A 2.4GHz Receiver

 
1x Extension Adapter For Receiver

## Tools

1x Keycap & Switch Puller

1x Screwdriver

1x Hex Key

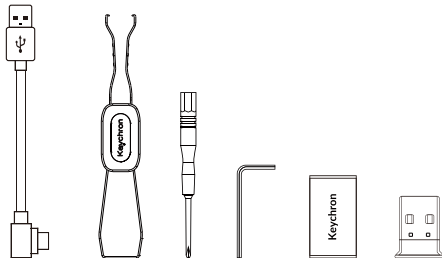

# Barebone Version

## Keyboard Kit

1x Keyboard Kit (Without Keycaps & Switches)

Including

1x Case

1x PCB

1x Aluminum Plate

 
1x Sound Absorbing Foam

1x EPDM Foam

1x Bottom Case PET Film

1x Silicone Bottom Pad

6 Sets x Stabilizers

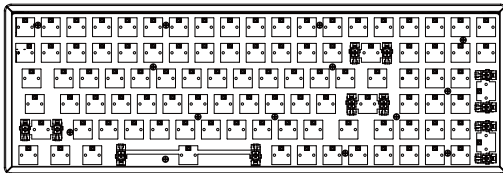

## Cable

1x Type-A to Type-C Cable

## Receiver

1x Type-A 2.4GHz Receiver

 
1x Extension Adapter For Receiver

## Tools

1x Keycap & Switch Puller

1x Screwdriver


1x Hex Key

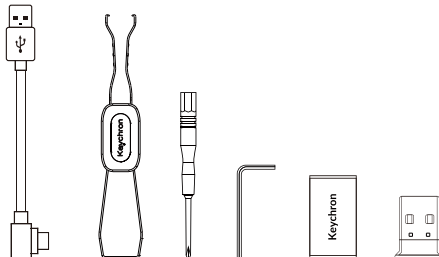

# QUICK START GUIDE

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

 Mac / Windows

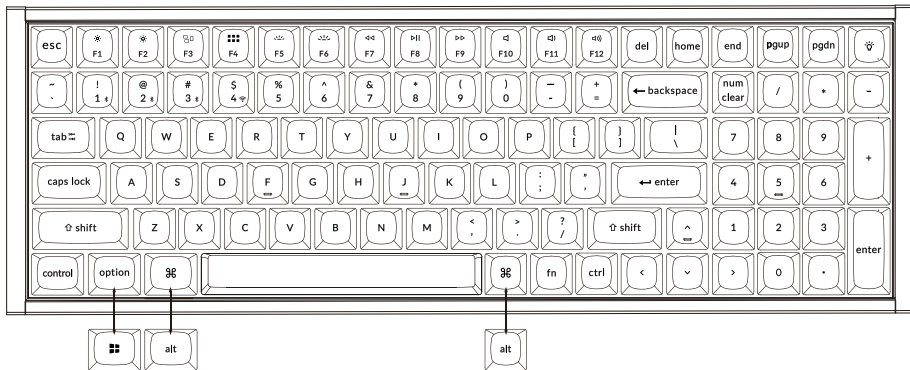


## 1 Connect 2.4GHz Receiver


Connect the 2.4GHz receiver to the device USB port.



 Switch toggle to 2.4GHz mode

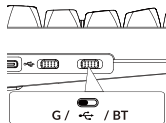


G = 2.4GHz

 


Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4 GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.


## 2 Connect Bluetooth

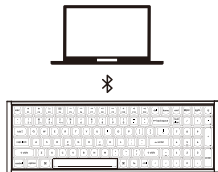 


Switch toggle to Bluetooth

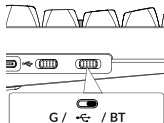 

 Press fn + 1 (for 4 seconds) and pair with device named Keychron K4 HE.

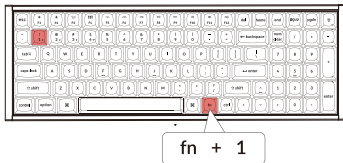


### 3 Connect Cable

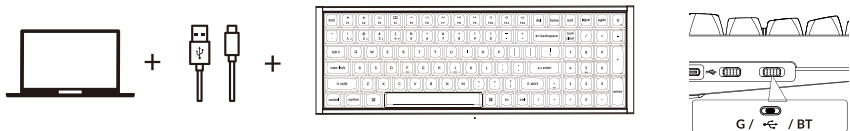 

---


### 4 Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.




## 5 The Backlight

 Press fn + Q to change the lighting effect

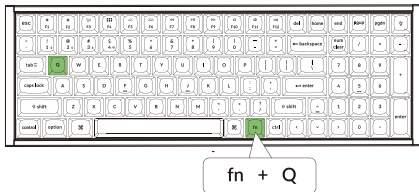

 
Press fn + tab to turn the backlight on/off

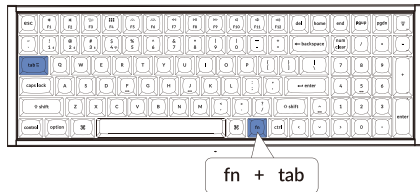


---

## 6 Adjust The Backlight Brightness

 Press fn + W to increase the backlight brightness

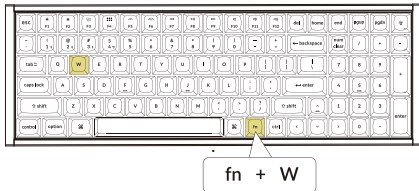


 Press fn + S to decrease the backlight brightness

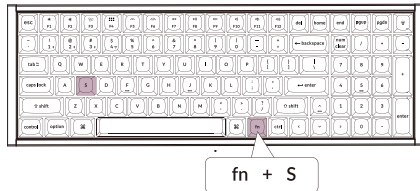


## 7 Adjust The Backlight Speed

 Press fn + T to increase the light effect speed

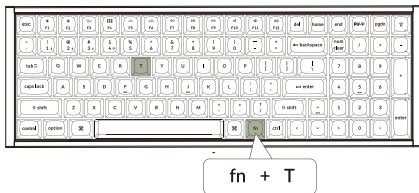

 Press fn + G to decrease the light effect speed

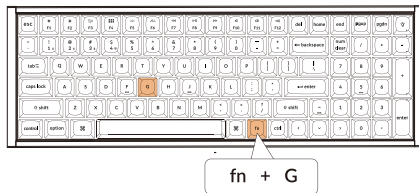

---

## 8 The Keychron Launcher App

 
Please visit [launcher.keychron.com](https://launcher.keychron.com) to access the Keychron online Launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more. If it cannot recognize your keyboard, please reach our support to get instruction.




\*The online launcher app can only run on the latest version of Chrome, Edge, and Opera browsers yet.

## 9 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.



 If your system toggle is switched to Mac, then the layer 0 will be activated.




If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



---

## 10 Factory Reset & Firmware Update

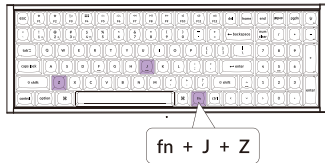 

### Troubleshooting? Don't know what's going on with the keyboard?

#### Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

#### Flash your keyboard firmware

1. Visit [launcher.keychron.com](http://launcher.keychron.com) to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update. \*Step-by-step guide, search the keyword "firmware" on [keychron.com](http://keychron.com).

## 11 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



## K4 HE WIRELESS MAGNETIC SWITCH KEYBOARD SPECIFICATIONS

Number of keys: 100

Switch type: Magnetic

Battery: 4000mAh

Charging time: Around 5 hours

Charging port: Type-C

Mode: Bluetooth / Wired / 2.4GHz

 
 
Bluetooth operating distance: Within 10 meters (open space)

Name of Bluetooth device: Keychron K4 HE

### LED STATUS OVERVIEW


LED Location	Function	Status
Power Indicator	Charging	Low Power - Red Light Blinking Charging - Static Red Fully Charged - Static Green
Bluetooth / 2.4 GHz Indicator	Bluetooth / 2.4 GHz	Reconnecting - Fast Blinking Paired - Light Off Pairing - Slow Blinking
Caps Lock Indicator	Caps Lock	Enable Caps Lock - Static White Disable Caps Lock - Light Off

# K4 HE WIRELESS MECHANICAL KEYBOARD OVERVIEW

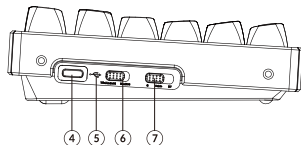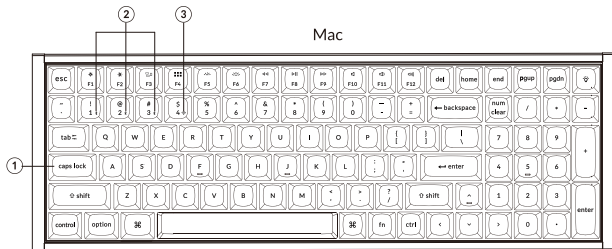


- ① Caps Lock Indicator
- ② Bluetooth Indicator
- ③ 2.4GHz Indicator
- ④ Type-C Port
- ⑤ Power Indicator
- ⑥ Win/Android Mac/iOS(OS Toggle)
- ⑦ 2.4G / Cable / Bluetooth  
(Connection Mode Toggle)

## Windows

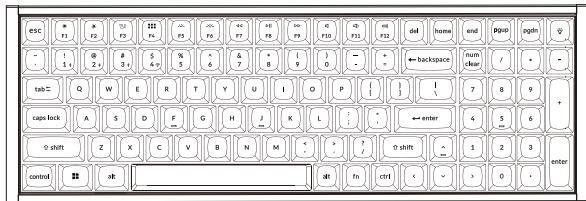 


## DEFAULT KEY LAYOUT:

 
LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

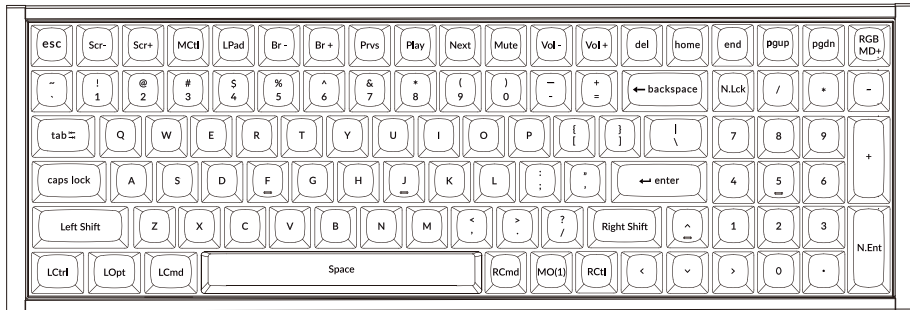

LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

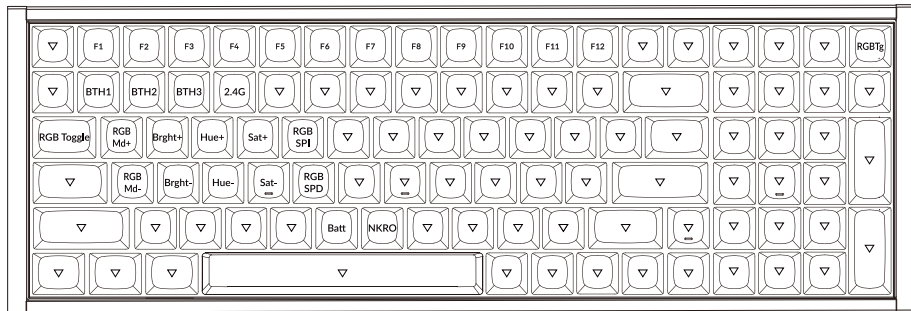 


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Windows.

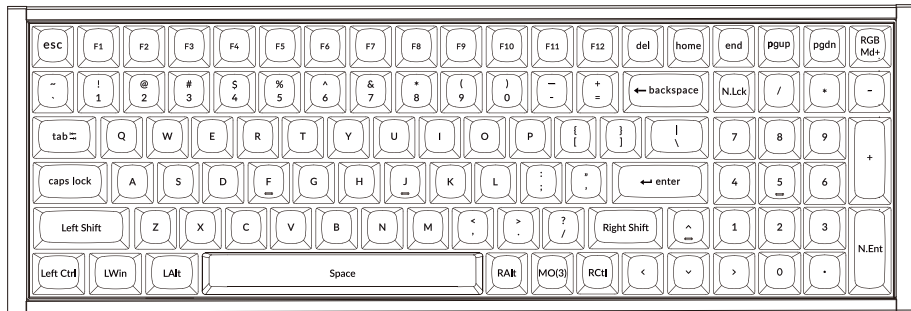 

LWin = Left Windows    LAlt = Left Alt    RAlt = Right Alt    RCl = Right Ctrl

 LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

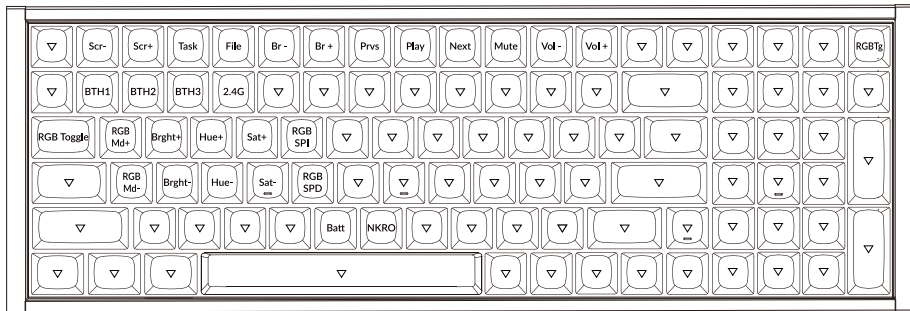

## KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGBMd-	RGB Mode Previous	NKRO	N-key Rollover
Scr+	Screen Brightness Increase	Hue+	Hue Increase	Task	Task View
Bright-	Backlight Decrease	Hue-	Hue Decrease	File	File Explorer
Bright+	Backlight Increase	RGB SPI	RGB Speed Increase	MCTl	Mission Control
Prvs	Previous	RGB SPD	RGB Speed Decrease	LPad	LaunchPad
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key	Sat+	Saturation Increase
Next	Next	MO(3)	Layer 3 will be activated when holding this key	Sat-	Saturation Decrease
Mute	Mute	BTH1	Bluetooth Host 1		
Vol-	Volume Decrease	BTH2	Bluetooth Host 2		
Vol+	Volume Increase	BTH3	Bluetooth Host 3		
RGB Toggle	Turn Backlight on/off	2.4G	2.4GHz Host		
RGBMd+	RGB Mode Next	Batt	Battery Life		

## **FUNCTION DESCRIPTION: CHARGING**

Plug the cable into a USB port and plug the other end into the keyboard port. Power indicator: A red light will stay on while charging; Fully charged in around 5 hours, a green power indicator will appear.

\*The K4 HE keyboard is compatible with all USB ports. Please use a 5V 3A adapter or USB 3.0 for the best performance. The K4 HE can be charged in 2.4GHz/Cable/Bluetooth mode.

\*\*This product supports up to 5V charging voltage and 3A charging current. We are not responsible for any problems caused by improper charging.

### **2.4GHZ / CABLE / BLUETOOTH MODE (MODE TOGGLE)**

#### **2.4GHZ MODE**

1. Connect the 2.4GHz receiver to your device's USB Port.
2. Switch the toggle to the "G" option. The keyboard will automatically connect to your device.

#### **BLUETOOTH MODE**

1. Switch the toggle to the "BT" option.
2. Backlighting will be turned on.
3. Hold "fn+1" key for 4 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).

4. Search for the Bluetooth device “Keychron K4 HE” on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination “fn” + “1” / “fn” + “2” / “fn” + “3”.

\*The Bluetooth indicator will continue to flash for 3 minutes.

\*\*Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.

### **SWITCH BLUETOOTH DEVICES**


Short press key combination “fn” + “1” / “fn” + “2” / “fn” + “3” to switch to other device.

### **RECONNECT:**

1. Switch the keyboard to the “BT” option to activate the keyboard.
2. The Bluetooth indicator flashes for 3 seconds and automatically pairs with the last paired device.
3. If the Bluetooth indicator is off, press any button to enter the connection again.


\* The keyboard must have been paired with the device to perform this function.

### **WIRED MODE**

1. Switch the toggle to the “ ” option .
2. Connect our cable with your PC and keyboard.
3. Backlighting will be turned on.

\*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

### **TURN OFF THE KEYBOARD**

Switch the keyboard to the “ ” option and unplug the power cable.

## **BACKLIGHT SETTING**

- Short press key combination "fn" + "tab" to turn the backlight on/off.
- Short press key combination "fn" + "Q" or "fn" + "A" to switch between different types of lighting effects.

## **AUTO SLEEP MODE:**

When the keyboard is in Bluetooth or 2.4G wireless mode, it will enter AUTO SLEEP MODE when there are no key operations to save power.

1. After 10 minutes of inactivity, the keyboard backlight turns off. Press any key to wake up the keyboard;
2. After 30 minutes of inactivity, the keyboard will enter deep sleep mode and disconnect the wireless connection. Press the SPACE BAR to wake up the keyboard. The keyboard will automatically connects back to the last connected device.

## **PROFILE SWITCHING IN HALL EFFECT MODE**

Short press fn + P + Z / X / C to switch to Profile 1 / 2 / 3. The keyboard backlight will flash red, with the Z / X / C key flashing white, indicating that the Hall Effect mode profile has been successfully switched.

The key combination for each Profile is configurable on the Launcher web app: open the app > go to Keymap > Custom > select the button PROF1 / PROF2 / PROF3 > drop it on the key you want on Layer 0 / 1 / 2 / 3.

\* PROF1 = Profile 1; PROF2 = Profile 2; PROF3 = Profile 3

## **OS TOGGLE SWITCH**

### **1 – MAC/iOS**

Switch the toggle to Mac/iOS when the keyboard is connected to a Mac or iOS operating system.

## 2 – WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating system.

*\*When using the Windows/Android mode,   keys are used for “Windows” and “Alt” functions.*

## 3 – INPUT METHOD SWITCH

*For iOS:*

Input method switch: Ctrl + Space

Caps Lock: Caps (Enable General>Keyboards>Hardware Keyboard>Caps Lock Language Switch)

*For Android:*

Input method switch: Shift + Space

*NOTE: Functions of certain multimedia key may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS. We also recommend not to switch OS frequently as it may impact keyboard operations.*

## TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

### **My keyboard isn't working in Bluetooth mode.**

For the computer/smartphone:

Go to your device Bluetooth settings>Select the keyboard and remove/delete/unpair it.

Then restart your device.

For the keyboard:

Turn the keyboard off and back on. Then reconnect it to your device.

### **My keyboard isn't working in 2.4 GHz mode.**

Ensure the toggle is set to 2.4 GHz, remove the receiver from your device, and press "fn" + "4" for 4 seconds to force pair, then reinsert the receiver into the device, keeping the keyboard within 20 cm of the receiver for optimal pairing.

### **Wireless connection is interrupted even within 10 meters.**

Check if the keyboard is resting on a metal surface that can interfere with the wireless signal.

### **Third-party input tools are not compatible with the keyboard.**

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

## Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

\*Multimedia keys: 

Function keys:



## Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(14°F) or above 50°C(122°F) to preserve the lifespan of the keyboard.

## Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

[support@keychron.com](mailto:support@keychron.com)

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



## **K4 HE 无线磁轴键盘**

# 完全组装版本

## 键盘

1x 已组装成品键盘

## 包含

1x 外壳

1x PCB

1x 铝定位板

1x 吸音泡棉

1x EPDM泡棉

1x 底壳PET垫

1x 硅胶底垫

6套PCB卫星轴

1套键帽

1套磁轴



## 线材

1x Type-A to Type-C 接口线材

## 接收器

1x Type-A 2.4GHz 接收器

 
1x 接收器延长器

## 工具

1x 拔轴键器

1x 十字螺丝刀

1x 内六角螺丝刀

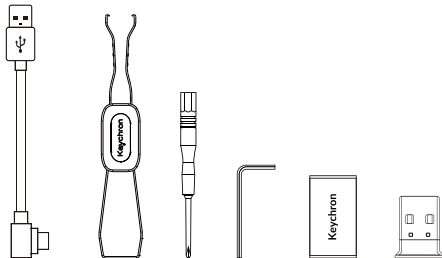

# 套件版本

## 键盘

1x 键盘本体 (不包含键帽、轴体)

## 包含

1x 外壳

1x PCB

1x 铝定位板

 
1x 吸音泡棉

1x EPDM泡棉

1x 底壳PET垫

1x 硅胶底垫

6套PCB卫星轴

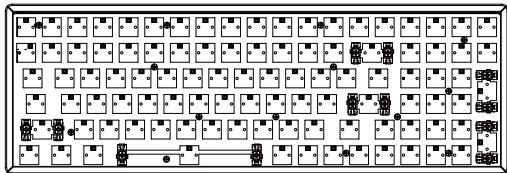

## 线材

1x Type-A to Type-C 接口线材

## 接收器

1x Type-A 2.4GHz 接收器

 
1x 接收器延长器

## 工具

1x 拔轴键器

1x 十字螺丝刀


1x 内六角螺丝刀

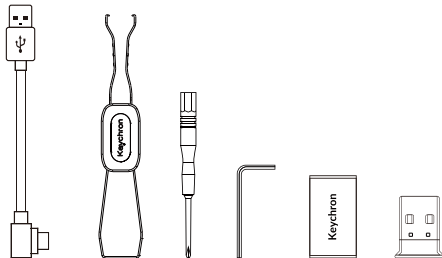

## 快速上手指南

如果你是Windows用户，请在包装盒里找到如下的键帽，用拔键器拔下键盘上的对应键帽并且更换。

 Mac / Windows


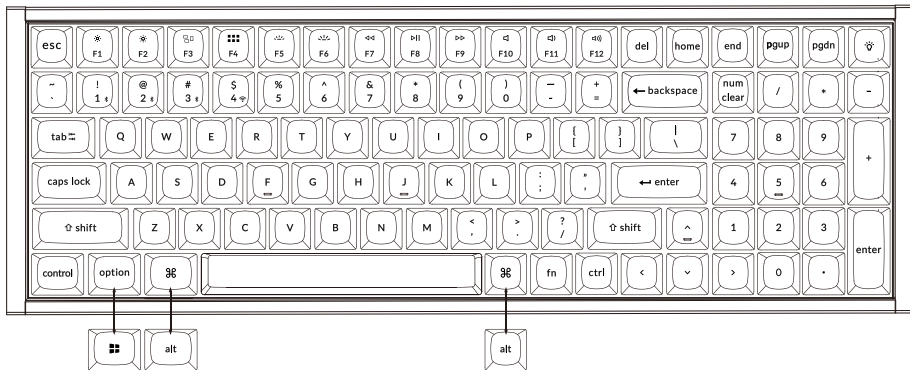


## 1 连接2.4GHz接收器

将2.4GHz接收器连接到设备USB端口。




  把开关拨到2.4GHz模式

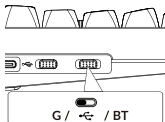


注意:为了获得最佳的无线体验,我们建议将2.4 GHz接收器插入线材+赠送的接收器延长器,放置在书桌上靠近你的键盘,以降低延迟率和更少的干扰信号。


## 2 连接蓝牙

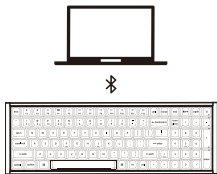 


把开关拨到蓝牙模式

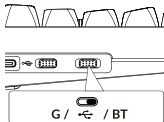 

 长按fn+1四秒使键盘进入配对模式,键盘的配对名为: Keychron K4 HE。

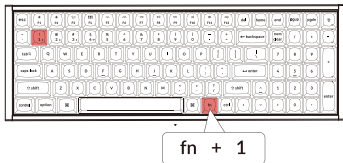


### 3 连接有线

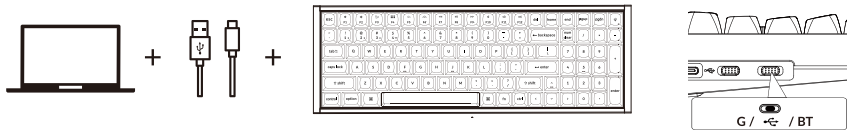 

---


### 4 系统切换

 请确保键盘左上角的系统拨片切换到对应系统，  
如果没有选择正确，  
部分功能将无法使用。




## 5 更改键盘背光模式以及快速关闭/开启键盘背光

 组合fn+Q键,更改键盘背光模式。

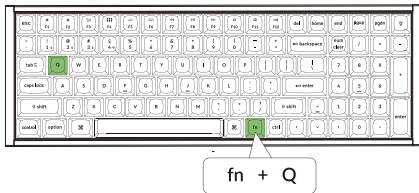


组合fn+tab键,可快速关闭/开启键盘背光。

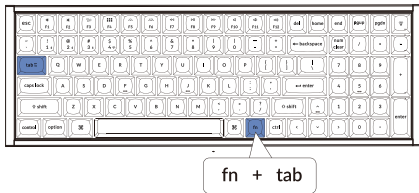 


---

## 6 调整键盘背光亮度的

 组合fn+W键,提高键盘背光亮度的

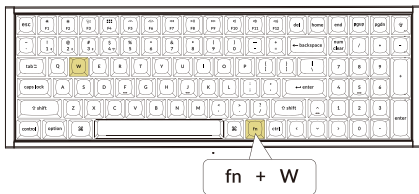


组合fn+S键,减少键盘背光亮度的

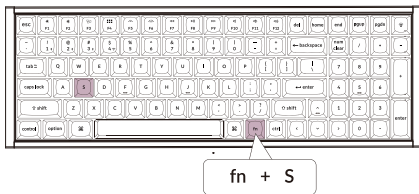 


## 7 调整背光速度

 组合fn+T键, 增加光效速度。

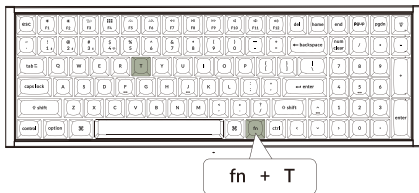

组合fn+G键, 降低光效速度。

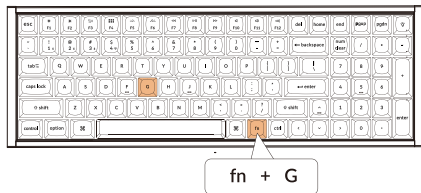 

---

## 8 关于Keychron Launcher App

 
请访问[launcher.keychron.com](http://launcher.keychron.com) 使用在线Launcher app。  
该软件可以映射按键, 调节按键触发点, 设置一键多重命令, 体验游戏手柄模式等功能。  
如果Launcher app不能识别你的键盘, 请联系我们以获得技术支持。




\*在线Launcher app只能在最新版本的Chrome, Edge和Opera浏览器中运行。

## 9 关于键盘键层说明

键盘有四层按键设置。  
层0和层1是用于Mac系统。  
层2和层3是用于Windows系统。




如果您的系统拨片切换到Mac档位，  
层0将被激活。

 

如果您的系统切换到Windows，  
那么层2将被激活。  
如果您在Windows系统模式下使用，  
请对层2进行更改，而不是层0。  
否则无法进行按键映射操作。



## 10 恢复出厂模式&更新固件

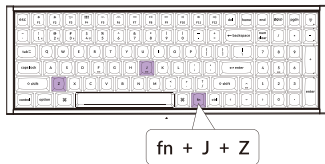 

### 如果键盘出现了故障, 不知道怎么办?

#### 恢复出厂设置

1. 打开键盘(任意模式均可)。
2. 按住 fn + J + Z (持续 4 秒)。键盘背光灯会呈红色快速闪烁 3 秒，表示键盘已重置。

#### 刷新键盘固件

 
 
 
1. 访问 [launcher.keychron.com](http://launcher.keychron.com) 打开在线 Launcher web app。
  2. 确保键盘处于Cable或者有无线模式，并插入电源线。
  3. 在Launcher上找到“固件更新”选项，并将键盘与其连接。
  4. 按照Launcher提示，完成固件更新。
- \*在 [keychron.com](http://keychron.com) 上搜索关键字“Firmware”可以找到步骤指南。

## 11 保修

由于K4 HE客制化键盘是可高度定制且易于组装的，所以键盘的任何一个部件出了问题，我们只会更换键盘有问题的部件而不是整个键盘。



## K4 HE键盘概述

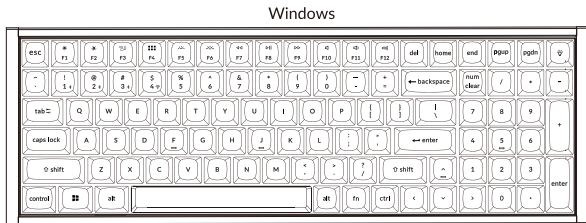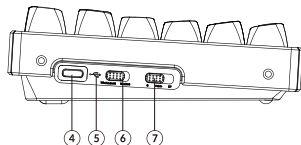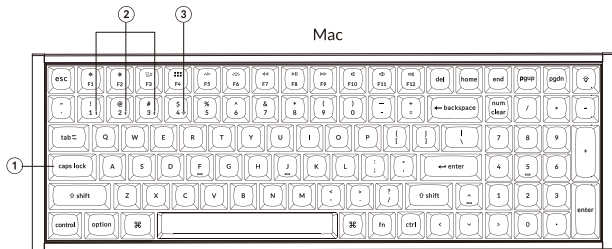

- ① 大写状态指示灯
- ② 蓝牙指示灯
- ③ 2.4GHz指示灯
- ④ Type-C充电口
- ⑤ 电源指示灯
- ⑥ Win/Android Mac/iOS  
(OS切换开关)
- ⑦ Bluetooth/Cable/2.4G  
(连接模式切换开关)

## K4 HE键盘规格

按键: 100键

轴: 磁轴

电池: 4000mAh

充电时间: 5小时

充电端口: Type-C

模式: 蓝牙 / 有线 / 2.4G

蓝牙工作距离: 最长10米(开放空间)

蓝牙设备名称: Keychron K4 HE

 
## 功能说明

LED状态显示如下:


功能	LED位置	状态
充电	电源指示灯	低电量—红灯闪烁 充电—红灯常亮 满电—绿灯常亮
蓝牙 / 2.4GHz	蓝牙 / 2.4GHz指示灯	快闪—切换 熄灭—连接成功 慢闪—配对
大小写	大小写状态指示灯	白灯—大写 熄灭—小写

## 按键布局


层0: 当您的系统拨片切到Mac档位的时候, 层0将被激活使用。

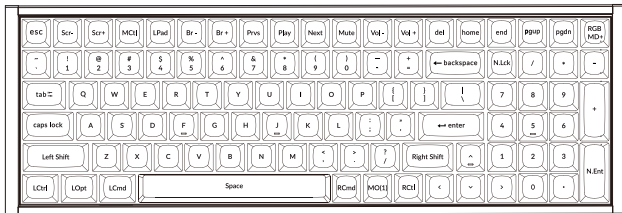

 层1: 当您的系统拨片切到Mac档位并组合fn/MO(1)键的时候, 层1将被激活使用。

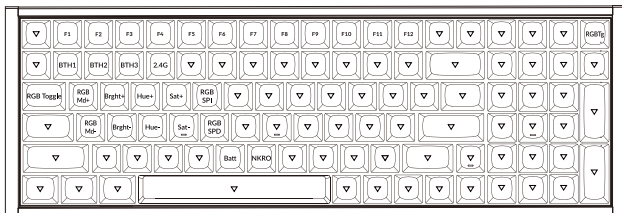


层2:当您的系统拨片切到Windows档位的时候,层2将被激活使用。

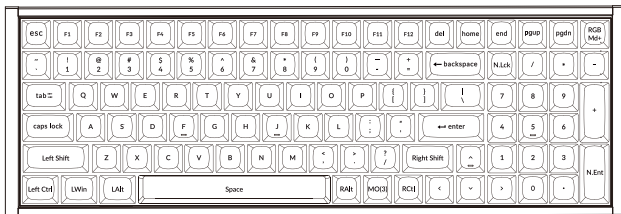 

LWin = Left Windows    LAlt = Left Alt    RAlt = Right Alt    RCl = Right Ctrl

 层3:当您的系统拨片切到Windows档位并组合fn/MO(3)键的时候,层3将被激活使用。

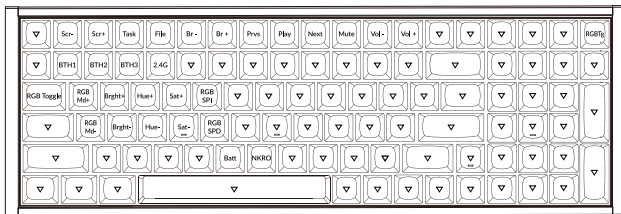

## K4 HE 客制化键盘多媒体按键说明

按键说明		按键说明		按键说明	
Scr-	屏幕亮度-	RGB Md-	上一个RGB灯光模式	NKRO	全键无冲
Scr+	屏幕亮度+	Hue+	下一个灯光颜色	Task	任务视图
Bright-	键盘背光亮度-	Hue-	上一个灯光颜色	File	文件管理器
Bright+	键盘背光亮度+	RGB SPI	RGB灯光速度+	MCtl	调度中心
Prvs	上一曲	RGB SPD	RGB灯光速度-	LPad	启动台
Play	播放/暂停	MO(1)	按住MO(1),层1将被激活	Sat+	饱和度+
Next	下一曲	MO(3)	按住MO(3),层3将被激活	Sat-	饱和度-
Mute	静音	BTH1	蓝牙连接设备 1		
Vol-	音量-	BTH2	蓝牙连接设备 2		
Vol+	音量+	BTH3	蓝牙连接设备 3		
RGB Toggle	关闭/开启键盘背光	2.4G	2.4G连接		
RGB Md+	下一个RGB灯光模式	Batt	电池电量		

## 充电

将电线插入USB端口，将另一端插入键盘的端口。

充电指示灯：电池电量低于15%，红色电池指示灯慢闪；充电时，红色电池指示灯长亮；在约5小时内完全充电，指示灯绿色长亮。

\*Keychron K4 HE键盘与所有USB端口兼容。要获得最佳信号和最快充电时间，建议采用USB3.0端口或5V-3A电源适配器。

\*Keychron K4 HE可在2.4GHz / 有线 / 蓝牙模式下充电。

\*有线模式下，充电指示灯不会熄灭。

\*本产品最高支持5V充电电压，和3A充电电流。因不当充电而产生的问题，我们概不负责。

## 背光灯

-短按组合键“fn+tab”可关闭/开启键盘背光。

-短按组合键“fn+Q”/“fn+A”可切换背光效果。

## 2.4GHz / 蓝牙 / 有线模式

### 2.4GHz模式

1. 将键盘2.4GHz接收器连接至设备端口的USB接口
2. 将键盘“模式切换”拨动到“G”位置 (2.4GHz模式)，键盘将自动连接到您的设备。

### 蓝牙模式

1. 将键盘“模式切换”拨动到“BT”位置。
2. 键盘背光灯将打开。
3. 长按“fn+1”键4秒激活蓝牙配对 (蓝牙指示灯闪烁3分钟)。
4. 在你的装置上搜索蓝牙装置“Keychron K4 HE”并连接它 (配对成功后蓝牙指示灯熄灭)。

注意:此键盘支持通过组合键“fn+1”/“fn+2”/“fn+3”依次配对最多3台设备。

\*因蓝牙版本较多等原因，初次连接可能出现连接缓慢或连接失败等问题，请耐心等待检查设备设置是否正确。

### 切换至蓝牙装置

短按组合键“fn+1”/“fn+2”/“fn+3”切换到其他装置。


\*切换过程可能会因切换频繁或切换速度过快，导致延迟，此时请耐心等待或重新切换。

### 回连

1. 将键盘切换到“BT”位置启动键盘。
2. 蓝牙指示灯快闪3秒，自动配对上一次配对的设备。
3. 如蓝牙指示灯熄灭，可按任何按键再次进入回连状态。


\* 键盘必须曾经配对该装置才能实现此功能。

### 有线模式

1. 将键盘“模式切换”拨动到“ ”位置（没插USB线的时候键盘无任何反应）。
2. 使用本产品USB Type-C线连接电脑即可使用。
3. 键盘背光灯将打开。

\* 在有线模式下，键盘不会自动进入省电模式。

### 关闭键盘

将模式开关拨动到“ ”，拔掉电源线，此时键盘关闭所有模式。

### 自动休眠模式

键盘在蓝牙或者2.4G无线模式下，无按键操作时会进入自动休眠模式来节约电量。

1. 无按键操作10分钟后，键盘背光关闭。按任意键唤醒键盘；
2. 无按键操作30分钟后，键盘将进入深度休眠模式，同时断开无线连接。按空格键唤醒键盘，并自动回连上一次连接的设备。

### 磁轴功能的配置层切换

短按 fn + P + Z / X / C 可切换到配置层 1 / 2 / 3。键盘背光将闪烁红色，Z / X / C 键闪烁白色，表示已成功切换到磁轴功能对应的配置层。

每个配置层的组合键均可在Launcher上设置：打开Launcher > 选择“键盘键位” > “自定义” > 选择按键“PROF1”/“PROF2”/“PROF3” > 在第 0 / 1 / 2 / 3 键层上，将其放在您想要的按键上。

\* PROF1 = 配置1；PROF2 = 配置2；PROF3 = 配置3

## 系统切换

### 1 — MacOS / iOS

连接到Mac或iOS操作系统时，请将键盘上方系统开关拨至Mac/iOS。

### 2 — WINDOWS / 安卓

当键盘连接到 Windows 或 Android 操作系统时，请将键盘上方系统开关拨至Win/Android。

### 3 — 输入法切换

对于iOS:

输入法切换: Ctrl + Space

大写锁定: Caps (启用常规>键盘>硬件键盘>大写锁定拉丁开关)

对于安卓:

输入法切换: Shift + Space

注: 由于Windows / 安卓OS的兼容性、版本、品牌和驱动程序, 某些多媒体键的功能可能不能被使用。我们还建议不要频繁切换操作系统, 因为它可能会影响键盘的操作。

## 疑难排解

### 我无法将键盘与我的装置配对。

答: 确认您要配对的装置可使用蓝牙。

重新启动装置并尝试再次与键盘配对。

注意: 在Windows计算机上, 新的蓝牙连接有时需要额外的软件更新 - 在出现表示成功完成的消息后, 该过程可能仍在进行中。配对后至少等待20分钟, 以确保在重新启动计算机之前完成所有更新。

确认装置配置可接受蓝牙连接 (Windows) 并支持外部键盘 (HID配置文件)。

转到蓝牙装置>打开设置, 然后选择以下复选框:

允许蓝牙装置找到这台电脑

允许蓝牙装置连接到这台电脑

当蓝牙装置想要连接时提醒我

### 我的键盘无法使用2.4G。

请确保开关已切换至2.4GHz,从设备中拔出接收器,按住“fn”+“4”键4秒以强制配对,然后将接收器重新插入设备,确保在配对过程中键盘与接收器的距离不超过20厘米以获得最佳配对效果。

### 我的键盘无法使用蓝牙。

答:请打开您的电脑/智能手机上的蓝牙设置>选择键盘并删除此设备/取消配对,然后重启您的设备;关闭并重新打开键盘,然后重新连接到您的装置。

### 蓝牙连接或在10米内受干扰。

答:检查键盘是否放在可能干扰蓝牙信号的金属表面上。

### 第三方输入工具与键盘不兼容

答:由于Windows / Android 系统的兼容性、版本、品牌和驱动程序,第三方输入工具在使用键盘时或被影响。请确保你的作业系统和驱动程序为最新版本。

### 某些多媒体键或功能键在设备上不起作用。

答:由于设备的兼容性,系统版本,驱动程序等原因,某些多媒体键或者功能键可能无法使用。

\*多媒体键: 

功能键: 

### 注意事项:

请勿将本产品,其配件和包装部件放在儿童接触到的地方,以防发生意外引致窒息。

请保持产品干燥,以免腐蚀。

请勿将产品暴露在低于-10°C (14°F) 或高于50°C (122°F) 的极端温度下,以维持键盘或电池的使用寿命。



**Keychron, Inc.**  
**Dover, DE 19901, United States**

<http://www.keychron.com>

通过以下方式与我们联系

[support@keychron.com](mailto:support@keychron.com)

 @keychron

 @keychron

 @keychronMK

Keychron设计

中国制造

中国区总代：渴创技术（深圳）有限公司

执行标准：GB/T 14081-2010

售后热线：400-0766268

地 址：深圳市龙岗区坂田街道大发埔社区  
大发路24号文坑工业区2栋201