 


MVC S40-C5U

 
Requirements

- A display connected to MCore 4 (not included).
- A Microsoft Teams Rooms account (not included).
- Wired network environment (not included).


Package Contents

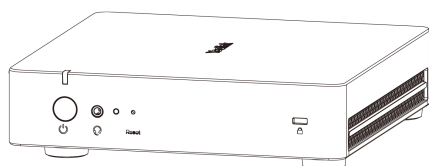

MCore 4 Package

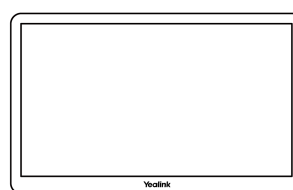

MTouch Plus Package

 


SmartVision 40 Package




RoomSensor Package

 
Optional



MeetingDisplay 65/75/86 Package

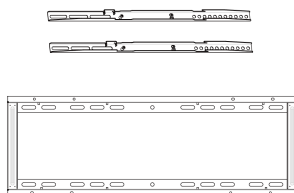 

MD-WallMount Package

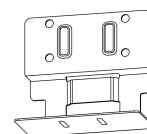 

MD-AVBracket-S Package

 
 We recommend using MeetingDisplay 65/75/86, MD-Wallmount and MD-AVBracket-S together.

- MCore 4 package details see [MCore 4 Installation](#).
- MTouch Plus package details see [MTouch Plus Installation](#).
- SmartVision 40 package details see [SmartVision 40 Installation](#).
- RoomSensor package details see [RoomSensor Installation](#).

Install MVC S40-C5U

- **MCore 4** supports: mount on the wall, mount on the TV, put on a table, mount on the MeetingDisplay (optional).
- **MTouch Plus** supports: put on a table, paste on a table, fixed on a table, mount on the wall.

- ## Connect MVC S40-C5U

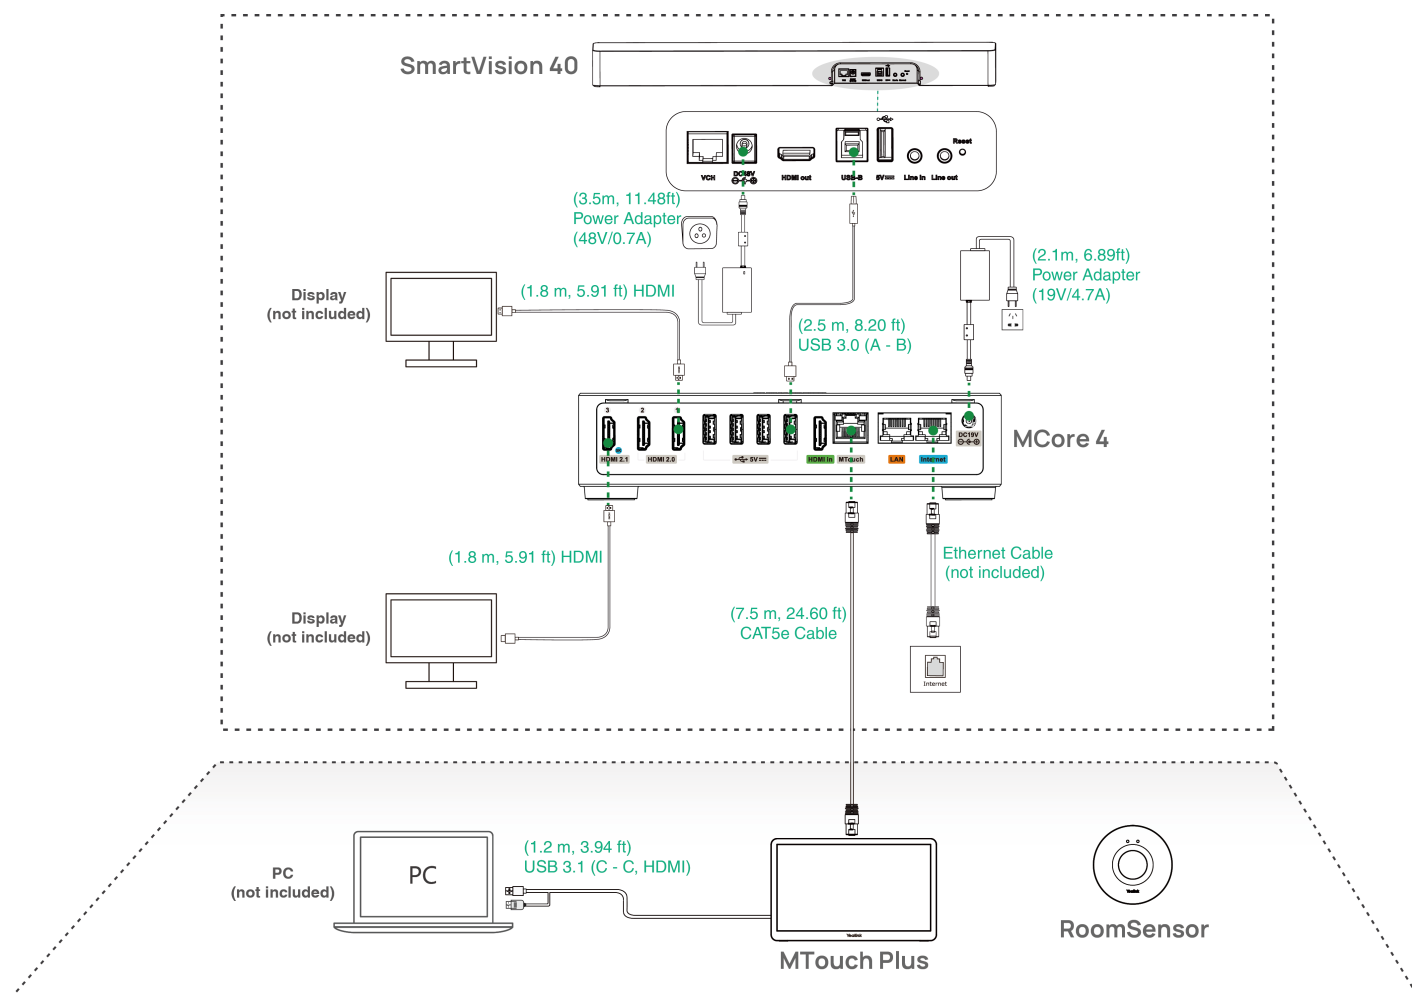


NOTE

- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- **Not included accessories requirements:**
 - **Display:** Resolution of 1080p or higher and with an HDMI port.
 - **PC:** Equipped with HDMI or USB-C (support DP protocol) Port.
 - **Ethernet cable:** CAT5e or higher ethernet cable.
 - **PoE switch:** If you use PoE to connect speakers or cameras, you need to use PoE+.

Optional: Connect with MeetingDisplay

NOTE

 If not connected to the LAN port of MeetingDisplay, please connect to the external network port.

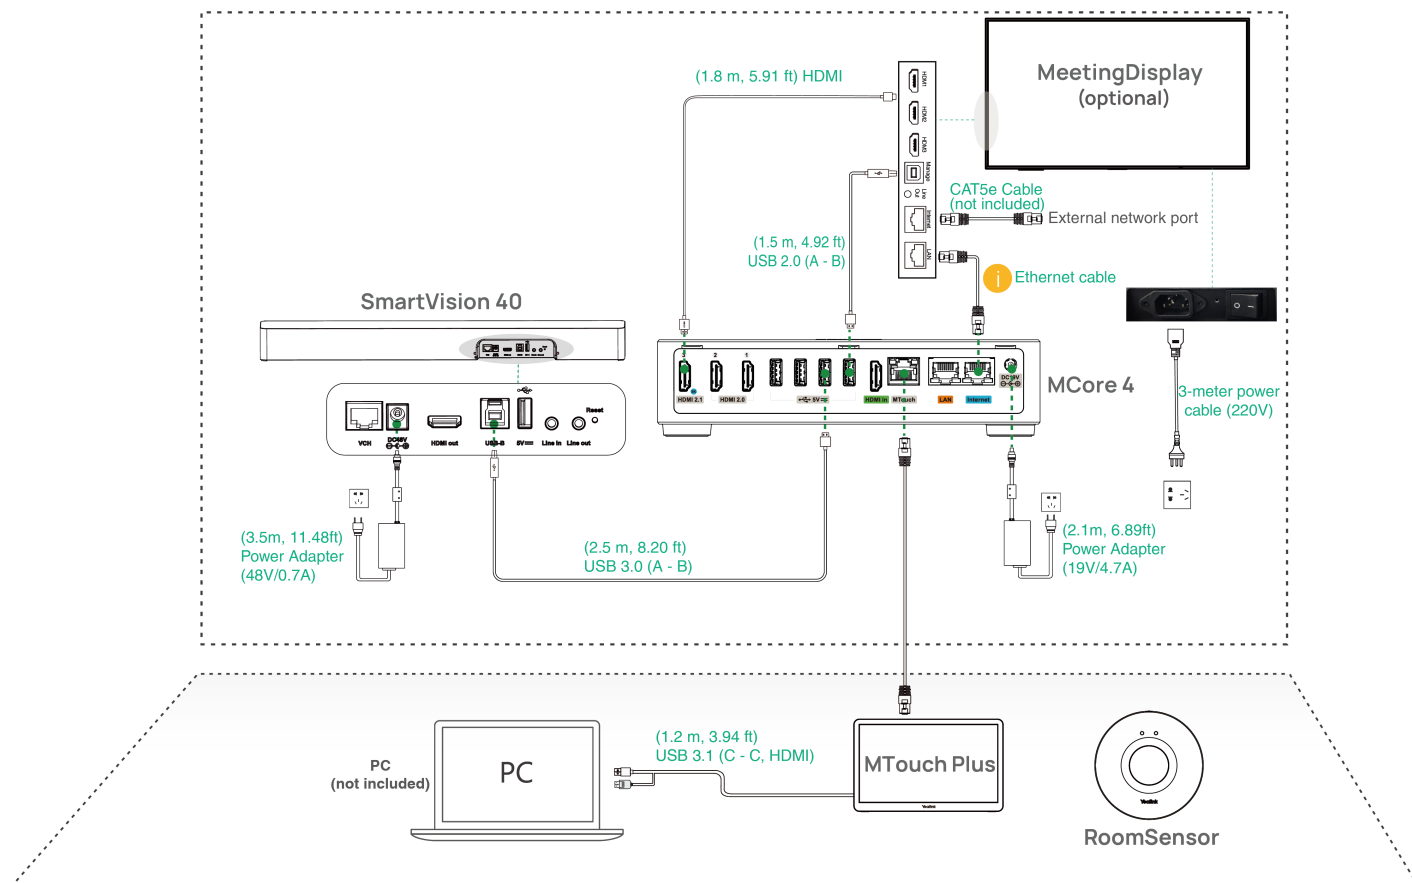

NOTE

- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- Not included accessories requirements:
 - PC: Equipped with an HDMI or USB-C (support DP protocol) Port.
 - PoE switch: If you use PoE to connect speakers or cameras, you need to use a PoE+ switch.
 - Ethernet cable: CAT5e or higher Ethernet cable.

Supported Accessories

For the compatible devices and the maximum number of compatible devices, please refer to [Teams Room Accessories Compatibility Lists](#).

Initial Setup

When the hardware deployment and connections are completed, you need to set up your Microsoft Teams Room System (MVC) system. Please refer to [Quick Setup](#) for more details.

Features

Wireless Sharing

1. Connect the Wireless Presentation Pod to the USB port of the MTouch Plus. When pairing, the LED indicator of Wireless Presentation Pod is orange. When the pairing is successful, the LED indicator turns green breathing light.
2. Connect the paired Wireless Presentation Pod to the USB-A/USB-C port on your PC.
3. On the Wireless Presentation Pod, press the presentation button to share the full screen.

Pair with a RoomSensor

1. Switch account from Skype to Admin.
2. Open Yealink RoomConnect Software from Desktop.
3. Go to **MTouch Plus > Sensor**.
4. Add sensor. Select the right sensor to pair. Remove the back cover of RoomSensor, you will see its name on the top. Then select accordingly.

NOTE

- A MTouch Plus can be paired with one RoomSensor at most.
- The distance between MTouch Plus and RoomSensor needs to be within 20m.