



Keychron

K0 Max Wireless Mechanical Numpad

Knob
Version

Fully Assembled Version

Numpad

1x Fully Assembled Numpad

Including

1x Aluminum Case

1x PCB

1x Latex Foam

1x IXPE Film

1x PET Film

3 sets x Stabilizers

1 set x Keycaps (PBT Double-shot)

1 set x Mechanical Switches

Cable

1x Type-A to Type-C Cable

1x Extension Adapter for Receiver

 
 
Receiver

1x Type-A 2.4 GHz Receiver

Tools


1x Keycap & Switch Puller

1x Screwdriver

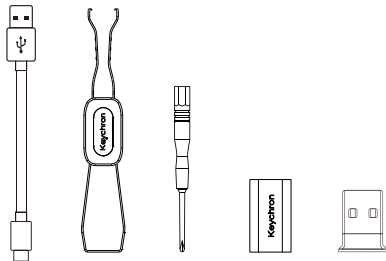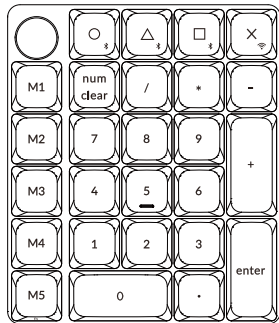

Quick Start Guide

 The default layer of this product is Windows.

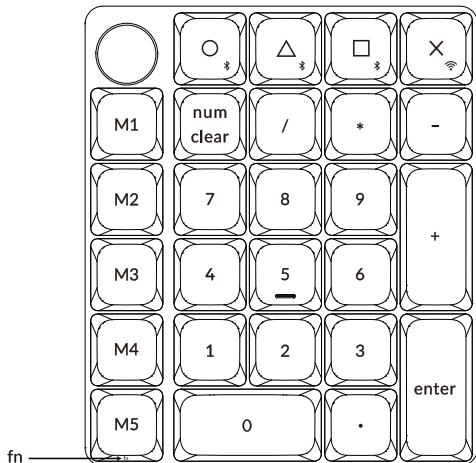


1 Connect 2.4 GHz Receiver

Switch toggle to 2.4 GHz mode




G / BT
G = 2.4 GHz

 Press fn + X (for 4 seconds)

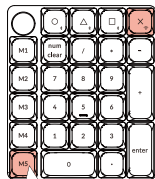


fn + X

 Connect the 2.4 GHz receiver to the device USB port.



 Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4 GHz receiver somewhere on your desk close to your numpad for a low rate of latency and fewer signal interferences.

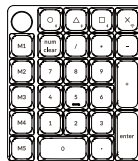


2 Connect Bluetooth

 


Switch toggle to Bluetooth



G /  / BT

Press fn +  (for 4 seconds) and pair with device named Keychron K0 Max

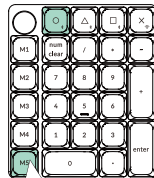

fn + 

 
3 Connect Cable



+



+

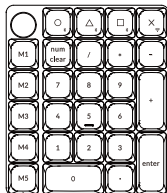


Switch toggle to Cable



G /  / BT

4 The Backlight

 Press **fn + num clear** to change the lighting effect

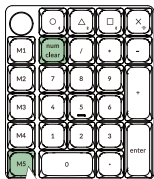

fn + num clear

 
Press **fn + 0** to turn the backlight on/off



fn + 0


5 Adjust The Backlight Brightness

Press **fn + /** to increase the backlight brightness

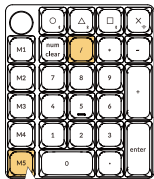

fn + /

 
Press **fn + 8** to decrease the backlight brightness

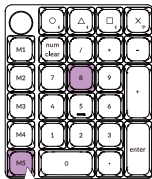

fn + 8


6 Adjust The Backlight Speed

 Press fn + 5 to increase the light effect speed

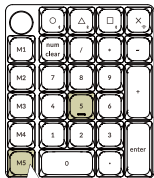


fn + 5

 Press fn + 2 to decrease the light effect speed

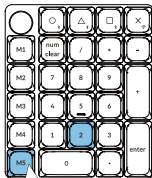

fn + 2

 7 Set Up Mac Layer

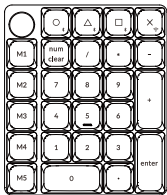


+

Use the online launcher app to remap the Windows keys to Mac keys.



 8 Factory Reset & Firmware Update

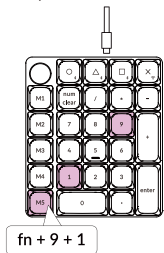

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold **fn + 9 + 1** (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

1. Visit launcher.keychron.com to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update.
*Step-by-step guide, search the keyword "firmware" on keychron.com.

9 The Keychron Launcher App

Please visit launcher.keychron.com to access the Keychron online launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more. If it cannot recognize your keyboard, please reach our support to get instruction.



*The online launcher app can only run on the latest version of Chrome, Edge, and Opera browsers yet.

10 Warranty

The numpad is highly customizable and easy to be rebuilt. If anything goes wrong with any of the numpad components of numpad during the warranty period, we will only replace the defective parts of the numpad, not the whole numpad.



K0 MAX WIRELESS MECHANICAL NUMPAD SPECIFICATIONS

Number of keys: 27

Switch type: Mechanical

Battery: 750 mAh

Wireless working time (RGB): Up to 50 hours (Lowest brightness)

Charging time: Around 2.5 hours

Charging port: USB Type-C

Mode: 2.4 GHz/ Cable / Bluetooth

 
 
Wireless operating distance: Within 10 meters (open space)

Name of Bluetooth device: Keychron K0 Max

Operating environment: -10 to 50°C

Technical specifications can be subjected to change without notice, we apologize for any inconvenience caused.


K0 MAX WIRELESS MECHANICAL NUMPAD OVERVIEW

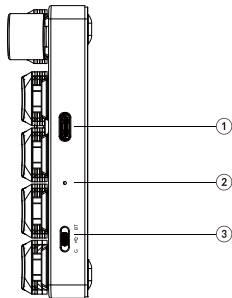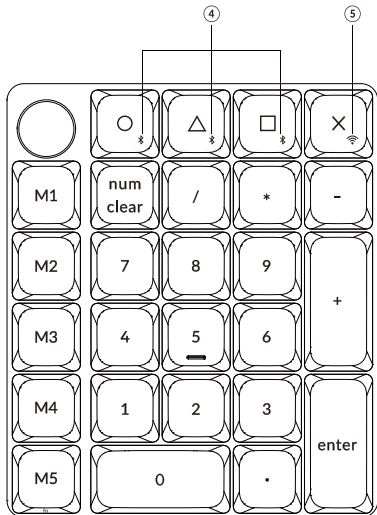


- ① Type-C Port
- ② Power Indicator
- ③ G Cable BT (Mode Toggle)
- ④ Bluetooth Channel Indicator
- ⑤ 2.4 GHz Channel Indicator

DEFAULT KEY LAYOUT:

 
LAYER 0: This layer is the default layer.

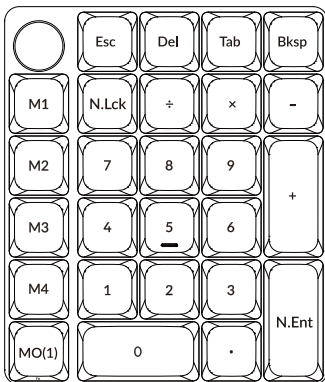

LAYER 1: This layer will be activated when you press the MO(1) key.

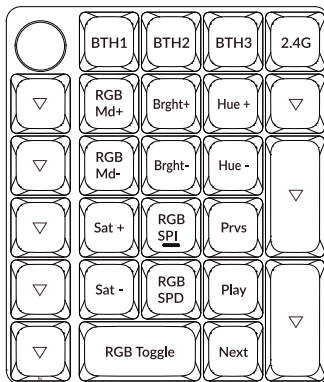 

 LAYER 2 / LAYER 3: This is a blank layer.

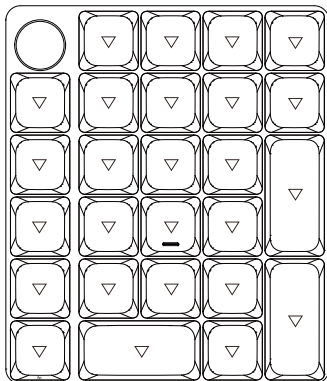

KEY DESCRIPTION

Key Description	
Bright-	Backlight Decrease
Bright+	Backlight Increase
Prvs	Previous
Play	Play/Pause
Next	Next
RGB Toggle	Turn Backlight on/off
RGBMd+	RGB Mode Next
Sat+	Saturation Increase
Sat-	Saturation Decrease
2.4G	2.4 GHz Host

Key Description	
RGBMd-	RGB Mode Previous
RGB SPI	RGB Speed Increase
RGB SPD	RGB Speed Decrease
MO(1)	Layer 1 will be activated when holding this key
MO(2)	Layer 2 will be activated when holding this key
MO(3)	Layer 3 will be activated when holding this key
MO(4)	Layer 4 will be activated when holding this key
Hue+	Hue Increase
Hue-	Hue Dncrease
BTH1	Bluetooth Host 1

Key Description	
BTH2	Bluetooth Host 2
BTH3	Bluetooth Host 3

LED STATUS OVERVIEW

LED Location	Function	Status
Power Indicator	Charging	Charging - Static Red Fully Charged - Static Green
Bluetooth / 2.4 GHz Channel Indicator	Bluetooth / 2.4 GHz	Reconnecting - Fast Blinking Paired - Light Off Pairing - Slow Blinking

FUNCTION DESCRIPTION: CHARGING

Plug the cable into a USB port and plug the other end into the numpad port. Power indicator: A red light will stay on while charging; Fully charged in around 2.5 hours, a green power indicator will appear.

*The Keychron numpad is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The Keychron K0 Max can be charged in 2.4 GHz/Cable/Bluetooth mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

2.4 GHZ / WIRED / BLUETOOTH MODE (MODE TOGGLE)

2.4 GHZ MODE


1. Switch the toggle to the "G" option. Press "fn" + " X " on your keyboard for 4 seconds to activate the 2.4 GHz pairing status.
2. Connect the 2.4 GHz receiver to your device's USB / Type-C Port. The keyboard will automatically connect to your device.

FORCED PAIRING:

1. Remove the receiver from your device and switch the keyboard to "G" option to activate the keyboard. The backlight will be opened.
2. Press "fn" + " X " on your keyboard for 4 seconds to activate the 2.4 GHz pairing status. Under this status, the 2.4 GHz channel indicator will flash for 3 minutes.
3. Reinsert the receiver into the device and then the keyboard starts to pair with the device. After successful pairing, the 2.4 GHz channel indicator will be off.

*Keep the keyboard within 20 cm of the receiver for optimal pairing.

WIRED MODE

1. Switch the toggle to the “  ” option (it only works when a USB cable is plugged in).
2. Connect our cable with your PC and numpad.
3. Backlighting will be turned on.

*Under Wired Mode, numpad will not enter into Battery Saver Mode.

BLUETOOTH MODE

1. Switch the toggle to the “BT” option.
2. Backlighting will be turned on.
3. Hold “fn+○” key for 4 seconds to activate Bluetooth pairing (the Bluetooth channel indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device “Keychron K0 Max” on your device and connect it (the Bluetooth channel indicator goes off after successful pairing).

Note: This numpad supports pairing up to 3 devices simultaneously via key combination “fn” + “○” / “fn” + “△” / “fn” + “□”.

**The Bluetooth channel indicator will continue to flash for 3 minutes.*

***Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.*

SWITCH BLUETOOTH DEVICES

Short press key combination “fn” + “○” / “fn” + “△” / “fn” + “□” to switch to other device.

RECONNECT:

1. Switch the numpad to the “BT” option to activate the numpad.
2. The Bluetooth channel indicator flashes for 4 seconds and automatically pairs with the last paired device.
3. If the Bluetooth channel indicator is off, press any button to enter the connection again.

**The numpad must have been paired with the device to perform this function.*

TURN OFF THE NUMPAD

Switch the numpad to the “ ” option and unplug the power cable.

BACKLIGHT SETTING

- Short press key combination “fn” + “0” or “fn” + “knob(press)” to turn the backlight on/off.
- Short press key combination “fn” + “num clear” / “fn” + “7” to switch between different types of lighting effects.

AUTO SLEEP MODE:

When the numpad is in Bluetooth or 2.4G wireless mode, it will enter AUTO SLEEP MODE when there are no key operations to save power.

1. After 10 minutes of inactivity, the numpad backlight turns off. Press any key to wake up the keyboard;
2. After 2 hours of inactivity, the numpad will enter deep sleep mode and disconnect the wireless connection. Press the "fn" or the "KNOB" to wake up the numpad. The numpad backlight turns on and automatically connects back to your device.

TROUBLESHOOTING

If unable to pair numpad to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the numpad again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external numpad (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

My numpad isn't working in Bluetooth mode.

For the computer/smartphone:

Go to your device Bluetooth settings>Select the numpad and remove/delete/unpair it.

Then restart your device.

For the numpad:

Turn the numpad off and back on. Then reconnect it to your device.

My numpad isn't working in 2.4 GHz mode.

Ensure the toggle is set to 2.4 GHz, remove the receiver from your device, and press"fn"+"X" for 4 seconds to force pair, then reinsert the receiver into the device, keeping the numpad within 20 cm of the receiver for optimal pairing.

Wireless connection is interrupted even within 10 meters.

Check if the numpad is resting on a metal surface that can interfere with the wireless signal.

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(14°F) or above 50°C(122°F) to preserve the lifespan of the numpad.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China

 Keychron

K0 Max 无线机械键盘 旋钮版本

完全组装版本

键盘

1x 已组装成品键盘

包含

1x 铝合金金属外壳

1x PCB

1x 乳胶泡棉

1x IXPE轴下垫

1x PET垫

3套钢板卫星轴

1套键帽 (PBT材质-双色注塑)

1套机械轴体

线材

1x Type-A to Type-C 接口线材

1x 接收器延长器

 
 
接收器

1x Type-A 2.4 GHz 接收器

工具


1x 拔轴键器

1x 十字螺丝刀

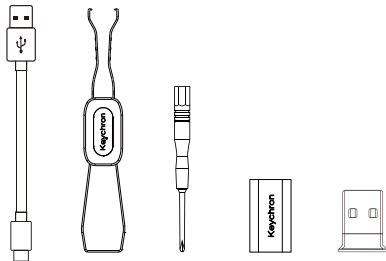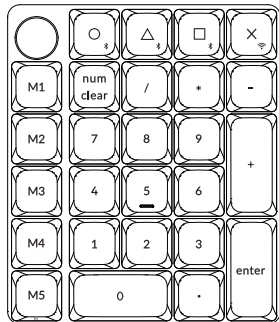


快速上手指南

 本产品默认为Windows系统

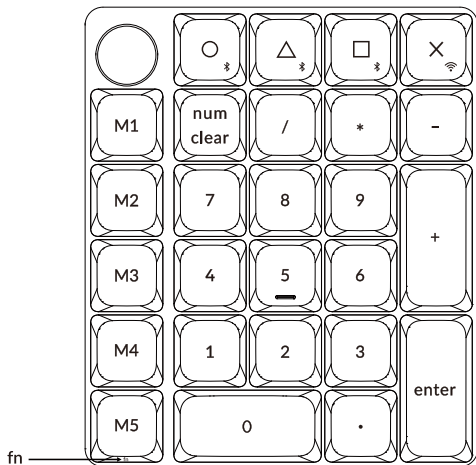


1 连接2.4 GHz接收器

 把开关拨到2.4 GHz模式

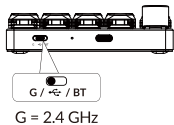


长按fn + X四秒使键盘进入配对模式,

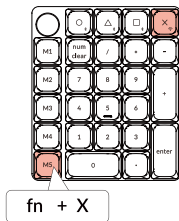 

将2.4 GHz接收器连接到设备USB端口。



 注意:为了获得最佳的无线体验,我们建议将2.4 GHz接收器插入线材+赠送的接收器延长器,放置在书桌上靠近你的键盘,以降低延迟率和更少的干扰信号。

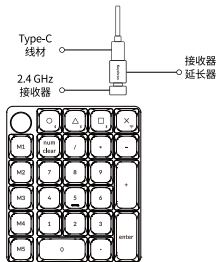


2 连接蓝牙




把开关拨到蓝牙模式



 G /  / BT

 长按fn +  四秒使键盘进入配对模式，
键盘的配对名为: Keychron K0 Max。

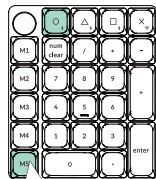

fn + 

 
3 连接有线



+



+

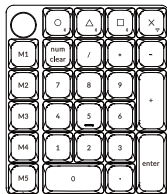


把开关拨到有线模式




G /  / BT

4 更改键盘背光模式以及快速关闭/开启键盘背光

 组合fn+ num clear键, 更改键盘背光模式。

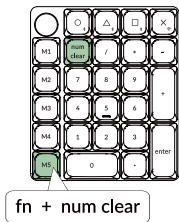


组合fn+0键, 可快速关闭/开启键盘背光。

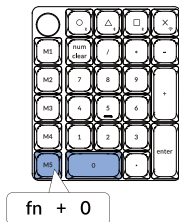 


5 调整键盘背光亮度

 组合fn+/键, 提高键盘背光亮度。

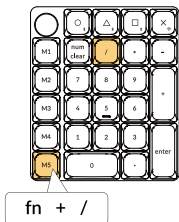


组合fn+8键, 减少键盘背光亮度。

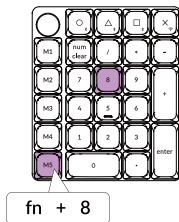 


6 调整背光速度

 
组合fn+5键, 增加光效速度。

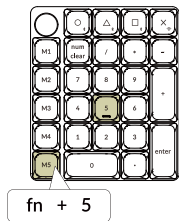

组合fn+2键, 降低光效速度。

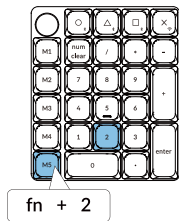 

7 设置Mac键层

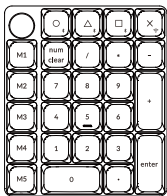 


+

使用在线launcher app软件,
将您的Windows按键映射为Mac按键。



 8 恢复出厂模式&更新固件

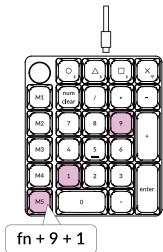

如果键盘出现了故障, 不知道怎么办?

恢复出厂设置

1. 打开键盘(任意模式均可)。
2. 按住 fn + 9 + 1 (持续 4 秒)。键盘背光灯会呈红色快速闪烁 3 秒, 表示键盘已重置。

刷新键盘固件

- 1 访问 launcher.keychron.com 打开在线 Launcher web app。
2. 确保键盘处于Cable或者有线模式, 并插入电源线。
3. 在Launcher上找到“固件更新”选项, 并将键盘与其连接。
4. 按照Launcher提示, 完成固件更新。

*在 keychron.com 上搜索关键字“Firmware”可以找到步骤指南。

9 关于Keychron Launcher App

请访问launcher.keychron.com 使用在线Launcher app。该软件可以映射按键, 调节按键触发点, 设置一键多重命令, 体验游戏手柄模式等功能。如果Launcher app不能识别你的键盘, 请联系我们以获得技术支持。



 
 
*在线Launcher app只能在最新版本的Chrome, Edge和Opera浏览器中运行。

10 保修

由于K0 Max客制化键盘是可高度定制且易于组装的，所以键盘的任何一个部件出了问题，我们只会更换键盘有问题的部件而不是整个键盘。



K0 Max 键盘概述

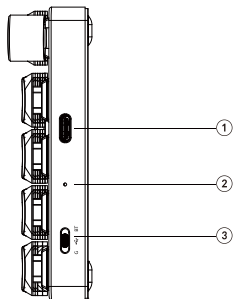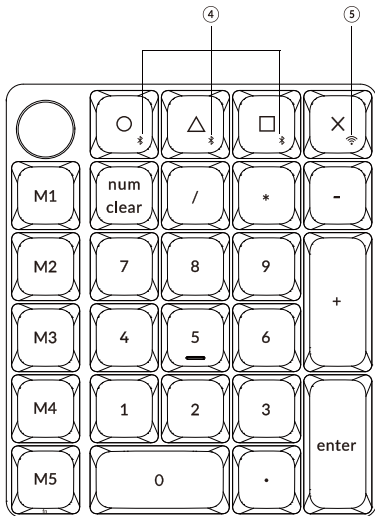

- ① Type-C 接口
- ② 电源指示灯
- ③ G Cable BT (连接模式切换开关)
- ④ 蓝牙通道指示灯
- ⑤ 2.4 GHz通道指示灯

K0 Max 键盘规格

按键: 27键

轴: 机械轴

电池: 750 mAh

电池续航: 50小时(无线模式下开启最低背光亮度)

充电时间: 2.5小时

充电端口: USB Type-C

模式: 2.4 GHz / 有线 / 蓝牙

无线工作距离: 最长10米(开放空间)

蓝牙设备名称: Keychron K0 Max


功能说明

LED状态显示如下:


功能	LED位置	状态
充电	电源指示灯	充电—红灯常亮 满电—绿灯常亮
蓝牙 / 2.4 GHz	蓝牙 / 2.4 GHz通道指示灯	快闪—回连 熄灭—连接成功 慢闪—配对

按键布局

 
层0: 这是默认层。

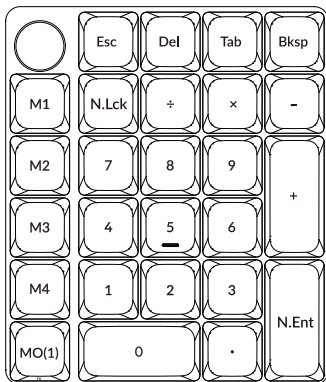

层1: 当您按下 MO(1) 键时, 该层将被激活。

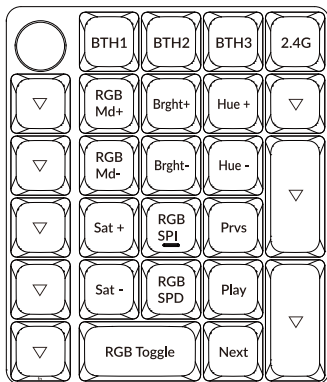 

层2 / 层3:这是一个空白层。

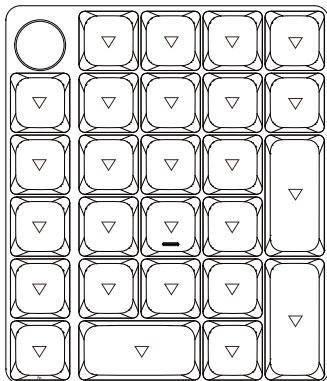 

K0 Max 客制化键盘多媒体按键说明

按键说明		按键说明		按键说明	
Bright-	键盘背光亮度-	RGBMD-	上一个RGB灯光模式	BTH2	蓝牙连接设备 2
Bright+	键盘背光亮度+	RGB SPI	RGB灯光速度+	BTH3	蓝牙连接设备 3
Prvs	上一曲	RGB SPD	RGB灯光速度-		
Play	播放/暂停	MO(1)	按住MO(1),层1将被激活		
Next	下一曲	MO(2)	按住MO(2),层2将被激活		
RGB Toggle	关闭/开启键盘背光	MO(3)	按住MO(3),层3将被激活		
RGBMD+	下一个RGB灯光模式	MO(4)	按住MO(4),层4将被激活		
Sat+	饱和度+	Hue+	下一个灯光颜色		
Sat-	饱和度-	Hue-	上一个灯光颜色		
2.4G	2.4 GHz连接设备	BTH1	蓝牙连接设备 1		

充电

将电线插入USB端口，将另一端插入键盘的端口。

充电指示灯：充电时，红色电池指示灯常亮；在约2.5小时内完全充电，指示灯绿色长亮，低电量时灯闪烁。

*Keychron K0 Max键盘与所有USB端口兼容。要获得最佳信号和最快充电时间，建议采用USB 3.0端口或5V-1A电源适配器。

*Keychron K0 Max可在2.4 GHz/有线/蓝牙模式下充电。

*有线模式下，充电指示灯不会熄灭。

*本产品最高支持5V充电电压，和1A充电电流。因不当充电而产生的问题，我们概不负责。

背光灯

- 短按组合键“fn+0”或“fn+ 旋钮(按压)”可关闭/开启键盘背光。

- 短按组合键“fn+num clear”/“fn+7”可切换背光效果。

2.4 GHz / 有线 / 蓝牙模式

2.4 GHz模式

1. 将键盘“模式切换开关”拨动到“G”位置(2.4 GHz模式), 长按“fn+ X”组合键4秒激活2.4 GHz配对。

2. 将键盘2.4 GHz接收器连接至设备端口的USB或Type-C接口, 键盘将自动连接到您的设备。

强制配对


1. 拔出设备上的接收器, 并将键盘模式开关拨动到“G”位置启动键盘, 键盘背光灯将打开。

2. 长按“fn+ X”组合键4秒激活2.4 GHz配对, 2.4 GHz通道指示灯闪烁3分钟。

3. 将接收器重新插入设备, 接收器和键盘开始配对。配对成功后2.4 GHz通道指示灯熄灭。

*保持键盘和接收器在20cm范围内以获得最佳配对效果。

有线模式

1. 将键盘“模式切换”拨动到“”位置（没插USB线的时候键盘无任何反应）。
 2. 使用本产品USB Type-C线连接电脑即可使用。
 3. 键盘背光灯将打开。
- *在有线模式下，键盘不会自动进入省电模式。

蓝牙模式

1. 将键盘“模式切换”拨动到“BT”位置。
 2. 键盘背光灯将打开。
 3. 长按“fn+O”键4秒激活蓝牙配对（蓝牙通道指示灯闪烁3分钟）。
 4. 在你的装置上搜索蓝牙装置“Keychron K0 Max”并连接它（配对成功后蓝牙通道指示灯熄灭）。
- 注意：此键盘支持通过组合键“fn+O”/“fn+△”/“fn+□”依次配对最多3台设备。
- *因蓝牙版本较多等原因，初次连接可能出现连接缓慢或连接失败等问题，请耐心检查设备设置是否正确。

切换至蓝牙装置

- 短按组合键“fn+O”/“fn+△”/“fn+□”切换到其他装置。
- *切换过程可能会因切换频繁或切换速度过快，导致延迟，此时请耐心等待或重新切换。

回连

1. 将键盘切换到“BT”位置启动键盘。
 2. 蓝牙通道指示灯快闪4秒，自动配对上一次配对的设备。
 3. 如蓝牙通道指示灯熄灭，可按任何按键再次进入回连状态。
- *键盘必须曾经配对该装置才能实现此功能。

关闭键盘

将模式开关拨动到“”，拔掉电源线，此时键盘关闭所有模式。

自动休眠模式

键盘在蓝牙或者2.4G无线模式下,无按键操作时会进入自动休眠模式来节约电量。

1. 无按键操作10分钟后,键盘背光关闭。按任意键唤醒键盘;
2. 无按键操作2小时后,键盘将进入深度休眠模式,同时断开无线连接。按fn键或旋钮唤醒键盘,键盘背光开启,并自动回连上您的设备。

疑难排解

我无法将键盘与我的设备配对。

答: 确认您要配对的设备可使用蓝牙。

重新启动设备并尝试再次与键盘配对。

注意: 在Windows计算机上, 新的蓝牙连接有时需要额外的软件更新 - 在出现表示成功完成的消息后, 该过程可能仍在进行中。配对后至少等待20分钟, 以确保在重新启动计算机之前完成所有更新。

确认设备配置可接受蓝牙连接(Windows)并支持外部键盘(HID配置文件)。

转到蓝牙装置>打开设置, 然后选择以下复选框:

允许蓝牙设备找到这台电脑

允许蓝牙设备连接到这台电脑

当蓝牙设备想要连接时提醒我

我的键盘无法使用2.4G。

答: 请确保开关已切换至2.4GHz,从设备中拔出接收器,按住“fn”+“X”键4秒以强制配对,然后将接收器重新插入设备,确保在配对过程中键盘与接收器的距离不超过20厘米以获得最佳配对效果。

我的键盘无法使用蓝牙。

答: 请打开您的电脑/智能手机上的蓝牙设置>选择键盘并删除此设备/取消配对,然后重启您的设备;关闭并重新打开键盘,然后重新连接到您的装置。

2.4 GHz / 蓝牙连接或在10米内受干扰。

答：检查键盘是否放在可能干扰无线信号的金屬表面上。

安全预防措施：

防止儿童接触到产品、附件和包装部件，以防止任何意外和窒息的危险。

保持产品干燥，避免腐蚀。

不要将产品暴露在低于-10°C (14°F) 或高于50°C (122°F) 的极端温度下，以保持键盘的寿命。

Keychron, Inc.

Dover, DE 19901, United States

<https://www.keychron.com>

通过以下方式与我们联系

support@keychron.com

Facebook @keychron

Instagram @keychron

X @keychronMK

Keychron设计

中国制造

中国区总代：渴创技术（深圳）有限公司

执行标准：GB/T 14081-2010

售后热线：400-0766268

地址：深圳市龙岗区坂田街道大发埔社区
大发路24号文坑工业区2栋201

