



Stylus Pen

Cordless battery-free



USER MANUAL

Please read this manual carefully before use and save it for future reference.

ES68900215-BULK

To maintain the best performance and extend the lifespan of the pen, please follow the above instructions and precautions.



Replaceable and removable pen nib


2

Instructions for Use

1. The pen is a Cordless battery-free EMR pen that can be used directly with the tablet without the need for activation, charging, or battery installation.

2. Built-in pressure sensor with 4096 levels of pressure sensitivity.

3. The writing ink release pressure is 12-30 grams, with a maximum pressure sensitivity of 270-500 grams.

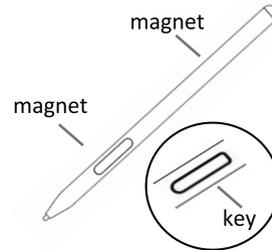

4. Magnetic adsorption works well on SAMSUNG tablets, but adjustments may be needed for other tablets.

4. The key eraser function allows for erasing an entire line (subject to the settings of the tablet app).

3


Replacing the pen tip

The included pen tip remover can be used to disassemble and replace the pen tip, as follows:

1. Hold the tip remover with one hand and the pen with the other, and place the tip remover on the pen tip.

2. Pinch both sides of the tip remover to grip the tip, then slowly pull to remove the tip from the pen.

2. Replace the new tip. Remove the new tip from the packaging and push it into the pen until the neck of the pen tip is not visible.

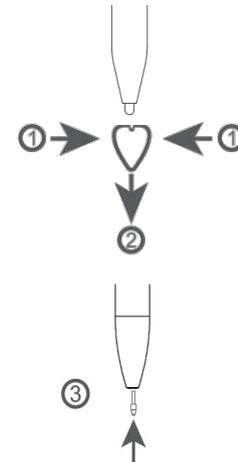

Suggestion:
Put unused tips in the blister of the package.

4

Attention and warning

(1) Before using the pen for the first time, please check if there is any damage to the pen. If it is damaged, do not use it.

(2) Do not use in magnetic field environments as it may lose function. or < -10°C.

(3) Do not use in an environment of > 40°C tip to be under pressure for a long time.

(4) When it not in use, do not allow the pen.

Choking Hazard: This product may contain small components that pose a risk of suffocation for children under 3 years old.

Keep small parts away from children.

Don't drop the pen on the ground. Electronic products, please handle gently. Violent use and falling can cause damage to internal parts.

5