

USER MANUAL

ProLite

Touch Panel PC

ENGLISH

ProLite TW1023ASC
ProLite TW1623AS
ProLite TW2223AS

Thank you very much for choosing the
Iiyama Touch Panel PC.

We recommend that you take a few
minutes to read this comprehensive
manual carefully before installing and
switching on the Touch Panel PC.
Please keep this manual in a safe
place for your future reference.



Scan the QR code to find out additional
software/services available for your
Iiyama product or go to
iiyama.com/signup



Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at <https://iiyama.com>

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

- | model number *
- | purchase receipt and serial number *
- | name and address for collection
- | telephone/fax number, for availability during the day
- | convenient collection date (date, time)
- | short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

Feedback on health and safety issues

If you have any health and safety concerns or questions about the product (including when using the product), please contact iiyama support through our website. You can also contact us by calling +31 204460404. After receiving your feedback, we will ask the responsible unit to handle it as soon as possible and a dedicated person will get back to you. Your feedback will also be recorded and incorporated into our evaluation for improvements

* see the identification plate on the back of the case.

CE MARKING DECLARATION OF CONFORMITY

This Touch Panel PC complies with the requirements of the EC/EU Directive 2014/53/EU "Radio Equipment Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

Radiation Exposure Statement:

This equipment complies with CE radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & body.

Operating Frequency range and the maximum output power (EIRP) are listed below:

Model No. : TW1023A

Function	Frequency	Maximum Output Power (EIRP)
WiFi	2412-2472 MHz	16.78 dBm
	5180-5240 MHz	13.19 dBm
	5745-5825 MHz	13.19 dBm
Bluetooth BLE	2402-2480 MHz	6.73 dBm
Bluetooth BR+EDR	2402-2480 MHz	7.45 dBm

Model No. : TW1623A

Function	Frequency	Maximum Output Power (EIRP)
WiFi	2412-2472 MHz	16.77 dBm
	5180-5240 MHz	13.86 dBm
	5745-5825 MHz	13.46 dBm
Bluetooth BLE	2402-2480 MHz	8.31 dBm
Bluetooth BR+EDR	2402-2480 MHz	8.86 dBm

Model No. : TW2223A

Function	Frequency	Maximum Output Power (EIRP)
WiFi	2412-2472 MHz	15.87 dBm
	5180-5240 MHz	13.33 dBm
	5745-5825 MHz	13.64 dBm
	5955-6415 MHz	14.32 dBm
Bluetooth BLE 1M	2402-2480 MHz	6.9 dBm
Bluetooth BLE 2M	2402-2480 MHz	6.5 dBm
Bluetooth BR+EDR	2402-2480 MHz	3.42 dBm

The device complies with RF specifications when the device used at 20cm from your body.

Operations in the 5.15-5.25GHz band and 5945-6425MHz band are restricted to indoor usage only.

According to Article 10(2) of Directive 2014/53/EU, the Tablet can be used in Europe with restriction. Restrictions in the 5 GHz band: According to Article 10 (10)of Directive 2014/53/EU, the packaging shows that this radio equipment will be subject to some restrictions when placed on the market in Belgium (BE), Bulgaria (BG), the Czech Republic (CZ), Denmark (DK), Germany (DE), Estonia (EE), Ireland (IE), Greece (EL), Spain(ES), France (FR), Croatia (HR), Italy (IT), Cyprus (CY), Latvia (LV), Lithuania(LT), Luxembourg (LU), Hungary (HU), Malta (MT), Netherlands (NL), Austria(AT), Poland (PL), Portugal(PT), Romania (Ro), Slovenia (SI), Slovakia (SK),Finland (FI), Sweden (SE), Turkey (TR), Norway(NO), Switzerland(CH), Iceland (IS),and Liechtenstein (LI).

EU																
BE	BG	CZ	DK	DE	EE	IE	EL	ES	FR	HR	IT	CY	LV	LT	LU	
HU	MT	NL	AT	PL	PT	RO	SI	SK	FI	SE	NO	IS	LI	CH	TR	



THIS PRODUCT CONTAINS A LITHIUM BUTTON BATTERY



Do not heat battery.

Do not deform battery.

Do not recharge battery.

Do not dispose of battery in fire.

Keep battery out of reach of children.

Keep battery away from direct sunlight and heat sources, do not storage in high temperature and humidity environment.

Swallowing battery can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

ENGLISH



Please familiarize yourself with the local regulations regarding the separate collection of electrical and electronic products. It is important to follow these guidelines and avoid disposing of old products with regular household waste. Proper disposal helps prevent potential negative impacts on the environment and human health.

This product contains batteries that are subject to the European Regulation (EU) 2023/1542, which prohibits disposal with regular household waste. For more information, please visit our recycling page at https://iiyama.com/gl_en/support/#recycling



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: <https://iiyama.com>

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.

- All trademarks used in this user manual are the property of their respective owners.

• **ProLite TW1623AS**

Battery Model	CR1220
Battery Voltage/Typical Capacity	3V, 40mAh
Battery Manufacturer	Fujian Nanping Nanfu New Energy Co., Ltd 109 Industry Road, Nanping, Fujian, P.R.China P.C. 353000
Tel	(0086)-599-873-3158
Battery Europe Representative	Apex CE Specialists GmbH
Address	Grafenberger Allee 277, 40237 Düsseldorf, Germany
Contact Person	Wells, Yan
E-mail	Info@apex-ee.de

Battery Model	CR1220
Battery Voltage/Typical Capacity	3V, 38mAh
Battery Manufacturer	DONGGUANG TIANQIU ENTERPRISE CO., LTD.
Tel	020-36322277
Battery Europe Representative	Apex CE Specialists GmbH
Address	Grafenberger Allee 277, 40237 Düsseldorf, Germany
Contact Person	Wells Yan
Postal Code	40237
E-mail	Info@apex-ce.com

• **ProLite TW1023ASC / ProLite TW2223AS**

Battery Model	CR2032
Battery Voltage/Typical Capacity	3V, 240mAh
Battery Manufacturer	Fujian Nanping Nanfu New Energy Co., Ltd 109 Industry Road, Nanping, Fujian, P.R.China P.C. 353000
Tel	(0086)-599-873-3158
Battery Europe Representative	Apex CE Specialists GmbH
Address	Grafenberger Allee 277, 40237 Düsseldorf, Germany
Contact Person	Wells, Yan
E-mail	Info@apex-ee.de

Battery Model	CR2032
Battery Voltage/Typical Capacity	3V, 210mAh
Battery Manufacturer	DONGGUANG TIANQIU ENTERPRISE CO., LTD.
Tel	020-36322277
Battery Europe Representative	Apex CE Specialists GmbH
Address	Grafenberger Allee 277, 40237 Düsseldorf, Germany
Contact Person	Wells Yan
Postal Code	40237
E-mail	Info@apex-ce.com

TABLE OF CONTENTS

FOR YOUR SAFETY	1
SAFETY PRECAUTIONS	1
SPECIAL NOTES ON LCD SCREEN	3
CUSTOMER SERVICE	4
CLEANING	4
SPECIAL NOTES ON TOUCH PANEL	4
BEFORE YOU OPERATE THE TOUCH PANEL PC	5
FEATURES	5
CHECKING THE CONTENTS OF THE PACKAGE	5
INSTALLATION	7
CONTROLS AND CONNECTORS : ProLite TW1023ASC	9
CONTROLS AND CONNECTORS : ProLite TW1623AS	10
CONTROLS AND CONNECTORS : ProLite TW2223AS	11
CONNECTING YOUR TOUCH PANEL PC : ProLite TW1023ASC	12
CONNECTING YOUR TOUCH PANEL PC : ProLite TW1623AS	13
CONNECTING YOUR TOUCH PANEL PC : ProLite TW2223AS	14
FITTING AND REMOVAL OF CABLE COVER : ProLite TW1023ASC	16
FITTING AND REMOVAL OF CABLE COVER : ProLite TW1623AS	17
FITTING AND REMOVAL OF CABLE COVER : ProLite TW2223AS	18
OPERATING THE TOUCH PANEL PC	19
KIOSK MODE CONFIGURATION GUIDE	22
TROUBLE SHOOTING	25
RECYCLING INFORMATION	25
APPENDIX	26
SPECIFICATIONS : ProLite TW1023ASC-B3P	26
SPECIFICATIONS : ProLite TW1623AS-B3P	27
SPECIFICATIONS : ProLite TW2223AS-B3P	28
DIMENSIONS : ProLite TW1023ASC	29
DIMENSIONS : ProLite TW1623AS	29
DIMENSIONS : ProLite TW2223AS	30

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE TOUCH PANEL PC WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the Touch Panel PC and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the Touch Panel PC. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE TOUCH PANEL PC

Do not put any solid objects or liquids such as water into the Touch Panel PC. In case of an accident, unplug your Touch Panel PC immediately and contact your dealer or iiyama service center. Using the Touch Panel PC with any object inside may cause fire, electric shock or damage.

INSTALL THE TOUCH PANEL PC ON A FLAT, STABLE SURFACE

The Touch Panel PC may cause an injury if it falls or is dropped.

DO NOT USE THE TOUCH PANEL PC NEAR WATER

Do not use where water may be splashed or spilt onto the Touch Panel PC as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the Touch Panel PC only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

CORRECT USE OF THE AC ADAPTER

Use only the AC Adapter provided by iiyama. Any deviation from this by using another type of adapter may result in damage to the accessory and the Touch Panel PC by fire or electric shock.

DO NOT DISASSEMBLE THE AC ADAPTER

Disassembling the AC Adapter may expose you to the danger of fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the AC adapter, the power cable and signal cable. Do not place the Touch Panel PC or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the Touch Panel PC during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the Touch Panel PC where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. It also shall not be exposed to excessive heat such as sunshine, fire or the like.

DO NOT PLACE THE TOUCH PANEL PC IN A HAZARDOUS POSITION

The Touch Panel PC may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the Touch Panel PC, and that all cables are routed such that children may not pull the cables and possibly cause injury.

DISCONNECT THE CABLES WHEN YOU MOVE THE TOUCH PANEL PC

When you move the Touch Panel PC, turn off the power switch, unplug the Touch Panel PC and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE TOUCH PANEL PC

If the Touch Panel PC is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the AC adapter, the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

CAUTIONARY NOTICE ABOUT BATTERY

Battery can not be replaceable. If you need to replace the battery, contact your dealer or iiyama service center for safety concern.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the Touch Panel PC against a bright background or in a dark room. For optimal viewing comfort, the Touch Panel PC should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the Touch Panel PC over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD SCREEN

The following symptoms are normal with LCD screen and do not indicate a problem.

NOTE

- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for some hours.
- HDMI CEC functionality is not supported
- Wake on active source is not supported
- When the HDMI signal is lost/absent, the device will switch to the Android Home screen
- There is no option to set HDMI as a default signal input. After rebooting, the device will always boot into Android, either the Home Screen or the default app e.g. ii signage2

USAGE

This product can be used 24 hours a day with limited lifetime. If you use this product with reduced brightness to 50% of the maximum value, the lifetime of the LED backlight is typically 30,000 hours. This product supports Landscape, Portrait and Face-Up (Tabletop) orientations.

HOSTING (HOST IMAGE)

Please be aware that on all LCD screens you can experience ghosting. The ghost image occurs when a residual image remains visible on a screen when static images are displayed for a long period of time. The ghost image is not permanent, but still images being displayed for a long period of time should be avoided.

TO PREVENT GHOSTING (HOST IMAGE)

To prevent ghosting and promote a longer life expectancy of the Panel PC, we recommend the following:

- Use a screensaver that has moving graphics or blank and white images.
- Switch desktop backgrounds regularly.
- Lower the brightness of the Panel PC.
- Turn off the Panel PC when not in use or manage the power-off time by utilizing the multifunction clock.
- When the Panel PC is installed in high ambient temperature environment(s) or is completely enclosed, we strongly recommend using an active ventilating system or cooling fans.

TO ELIMINATE GHOSTING (HOST IMAGE)

- Turn off the Panel PC for an extended period of time. It can be several hours or several days.
- Use a screen saver (black and/or white) and run it for an extended period of time.

CUSTOMER SERVICE

NOTE

- If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

WARNING

- If you drop any materials or liquids such as water into the Touch Panel PC when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

NOTE

- To protect the Touch screen surface, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the Touch screen surface.

Thinner	Benzine	Abrasive cleaner
Spray-type cleaner	Wax	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

CABINET

Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.

**TOUCH
SCREEN**

Touch screen surface may be cleaned using a soft clean cloth moistened with mild window glass commercial cleaners or 50/50 mixture of water and IPA (ISO-propyl-alcohol). Don't use acid or alkaline solvent to clean the surface of the panel (or screen).

SPECIAL NOTES ON TOUCH PANEL

CAUTION

- Permanent damage can occur if Sharp Edged, Pointed or Metal items are used to activate Touch.
This could invalidate any remaining warranty.
We recommend you use a conductive stylus (tip R0.8 or over) or finger.

BEFORE YOU OPERATE THE TOUCH PANEL PC

FEATURES

- ◆ Supports Resolutions up to 1280 × 800 : ProLite TW1023ASC
- ◆ Supports Resolutions up to 1920 × 1080 : ProLite TW1623AS, ProLite TW2223AS
- ◆ High Contrast 1000:1 (Typical) / Brightness 450cd/m² (Typical), 387cd/m² (with Touch panel) : ProLite TW1023ASC, ProLite TW1623AS
- ◆ High Contrast 1500:1 (Typical) / Brightness 500cd/m² (Typical), 450cd/m² (with Touch panel) : ProLite TW2223AS
- ◆ Power Over Ethernet
- ◆ Auto-Rotation
- ◆ 2 × 1.5W Stereo Speakers : ProLite TW1023ASC
- ◆ 2 × 2W Stereo Speakers : ProLite TW1623AS, ProLite TW2223AS
- ◆ Android OS
- ◆ VESA Mounting Standard (100mm×100mm) Compliant

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the Touch Panel PC. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

■ AC Adapter * ¹	■ Interchangeable Plugs (Type: EU/UK) * ²
■ Power Cable (Type: EU/UK) * ³	■ Cable Cover
■ Screws for Cable Cover (2pcs)	■ M4 Screws for VESA Mount (5pcs)
■ Safety Guide	■ Quick Start Guide

CAUTION

*¹ Applicable AC Adapter

ProLite TW1023ASC / ProLite TW1623AS

Type Name	FJ-SW1202000N
Manufacturer	SHENZHEN FUJIA APPLIANCE CO., LTD. 5F of Building F, Hengchangrong(xinghui) Sci-Tech. Park, Huaning Road, Longhua District, Shenzhen, Guangdong, P. R. China
Input Voltage	100-240VAC
Input AC Frequency	50/60Hz
Output Voltage	12.0VDC
Output Current	2.0A
Output Power	24.0W
Average Active Efficiency	86.2% minimum
Efficiency at Low Load (10%)	72.88% minimum
No-Load Power Consumption	0.10W maximum

ProLite TW2223AS

Type Name	FJ-SW20171205000
Manufacturer	SHENZHEN FUJIA APPLIANCE CO., LTD. 5F of Building F, Hengchangrong(xinghui) Sci-Tech. Park, Huaning Road, Longhua District, Shenzhen, Guangdong, P. R. China
Input Voltage	100-240VAC
Input AC Frequency	50/60Hz
Output Voltage	12.0VDC
Output Current	5.0A
Output Power	60.0W
Average Active Efficiency	88.32% minimum
Efficiency at Low Load (10%)	88.06% minimum
No-Load Power Consumption	0.20W maximum

*² All guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.

Model TW2223A: An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.

Accessory for ProLite TW1023ASC / ProLite TW1623AS


*³ Accessory for ProLite TW2223AS

INSTALLATION

CAUTION Before installation, please make sure the wall or desktop arm is strong enough to hold the necessary weight of the Touch Panel PC and the mount.

[WALL MOUNTING]

CAUTION Use four M4 x 6 mm screws to fix a VESA mounting bracket to the monitor. Make sure that all screws are tightened and secured properly.
When using the wall mounting, consideration of thickness of the VESA mounting bracket needs to be taken.
The thickness of the VESA mounting bracket is assumed to be approx. 2.5 mm.
Using a screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

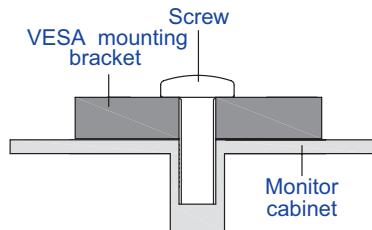

[BUILT-IN EQUIPMENT]


CAUTION This product is not designed for the purpose of being used in high temperature environment.
If the product is placed in an external cabinet, you need to design cooling fans and vents to keep the temperature low enough to fit in the product temperature specification.

[ROTATING THE TOUCH PANEL PC]


This Touch Panel PC is designed to be compatible in landscape, portrait and face-up modes.

* Only for ProLite TW1023ASC


ENGLISH

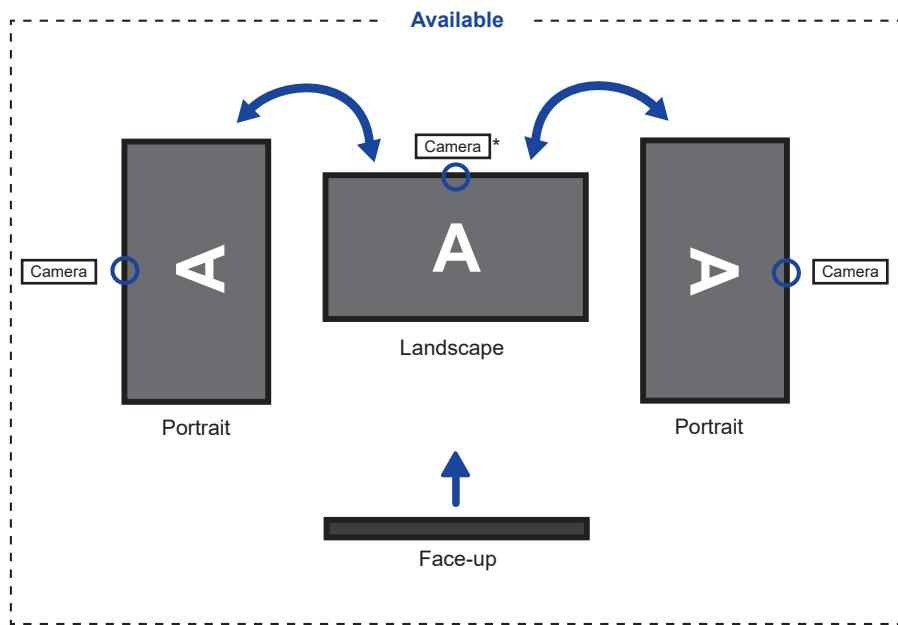

Not Available

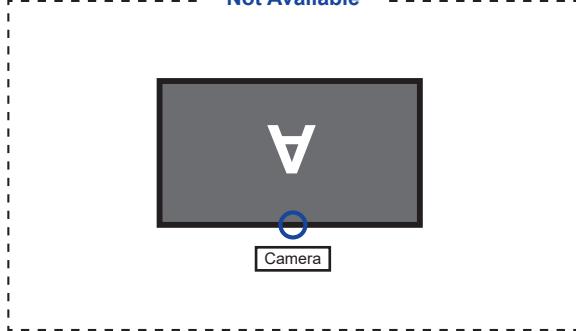

CONTROLS AND CONNECTORS : ProLite TW1023ASC

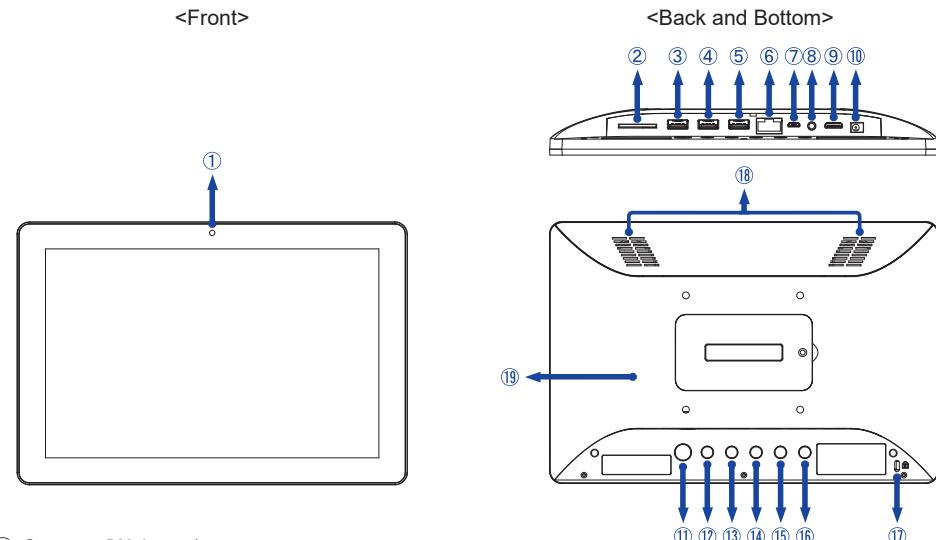

- ① Camera (Webcam)
- ② SD Card Slot (SD Card)
- ③ USB Connector (USB3.2 Gen 1: 5Gbps, 5V, 900mA) (USB 3.2)
- ④ USB Connector (USB 2.0: DC5V, 500mA) (USB 2.0)
- ⑤ USB Connector (USB 2.0: DC5V, 500mA) (USB 2.0)
- ⑥ RJ45 Connector (LAN)
- ⑦ Micro USB Connector (OTG)
- ⑧ Headset Microphone Connector (Ω)
- ⑨ Mini HDMI Connector (HDMI OUT)
- ⑩ Connector for AC Adapter (--- : Direct current) (DC in)
- ⑪ Power Switch (⊕)

Hot Key Sleep mode: Press while the power is turned on. Press it again or press any other button or touch the screen for wake-up.

Shut-down: Keep pressing for 2 seconds while the power is turned on.

Screenshot: Press ⊕ and ⊲- at the same time.

Camera: Triple click quickly.

- ⑫ Home Button (⊜)
- ⑬ Brightness + Button (※)
- ⑭ Brightness - Button (※)
- ⑮ Volume + Button (⊲+)
- ⑯ Volume - Button (⊲-)
- ⑰ Keyhole for Security Lock


NOTE You can fasten a security lock and cable to prevent the Touch Panel PC from being removed without your permission.

⑲ Speakers

⑳ Microphone

CONTROLS AND CONNECTORS : ProLite TW1623AS

ENGLISH

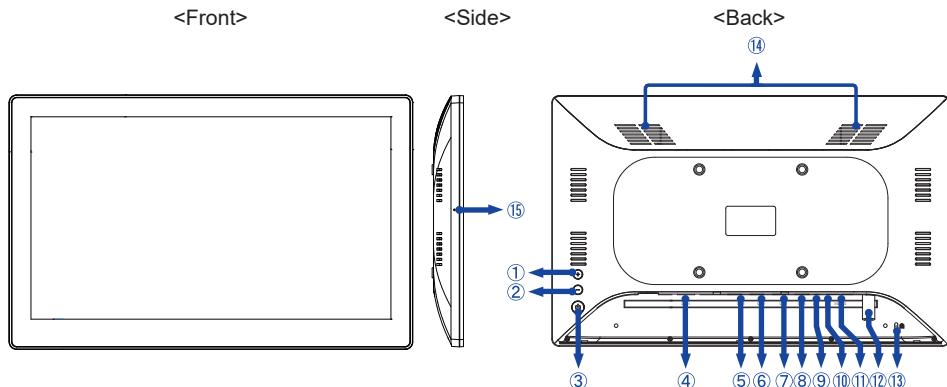

① Volume + Button (+)

② Volume – Button (–)

③ Power Switch (⏪)

Hot Key Sleep mode: Press while the power is turned on. Press it again or press any other button or touch the screen for wake-up.

Shut-down: Keep pressing for 2 seconds while the power is turned on.

Screenshot: Press ⏪ and – at the same time.

④ RJ45 Connector (LAN)

⑤ USB Connector (USB 2.0: DC5V, 500mA) (USB 2.0)

⑥ USB Slave Connector : For maintenance personnel use (USB Slave)

⑦ USB Connector (USB3.2 Gen 1: 5Gbps, 5V, 900mA) (USB 3.2)

⑧ USB Connector (USB 2.0: DC5V, 500mA) (USB 2.0)

⑨ Headset Microphone Connector (Ω)

⑩ MicroSD Card Slot (TF Card)

⑪ Mini HDMI Connector (HDMI OUT)

⑫ Connector for AC Adapter (— : Direct current) (DC)

⑬ Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the Touch Panel PC from being removed without your permission.


⑭ Speakers

⑯ Microphone


CONTROLS AND CONNECTORS : ProLite TW2223AS

ENGLISH

<Front>

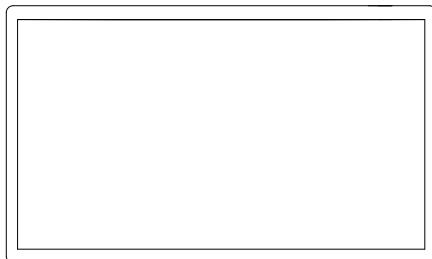

<Back and Bottom>

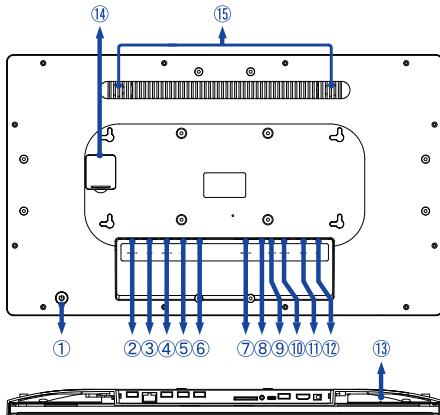

① Power Switch (↓)

Hot Key Sleep mode: Press the power or touch the screen for wake-up.

Shut-down: Keep pressing for 3 seconds while the power is turned on.

② USB Connector (USB 2.0: DC5V, 500mA) (USB 2.0)

③ RJ45 Connector (LAN)

④ USB Connector (USB 2.0: DC5V, 500mA) (USB 2.0)

⑤ Not available for this model

⑥ Not available for this model

⑦ SD Card Slot (SD Card)

⑧ Headset Microphone Connector (Ω)

⑨ USB Type-C Connector (USB3.2 Gen 1: 5Gbps, video output only) (USB C)

NOTE The computer connected to this port can access to the Micro SD Card / internal or external storage of the Touch Panel PC.

⑩ USB Connector (USB3.2 Gen 1: 5Gbps, 5V, 900mA) (USB 3.2)

⑪ HDMI Connector (HDMI IN)*

⑫ Connector for AC Adapter (⎓ : Direct current) (DC)

⑬ Microphone

⑭ Not available for this model

⑮ Speakers

* HDMI input (doesn't support wake on active source, no signal standby, CEC).

CONNECTING YOUR TOUCH PANEL PC : ProLite TW1023ASC


- ① Connect the AC Adapter to the Touch Panel PC first and then connect to the power source.
- ② Turn on your Touch Panel PC.

NOTE

- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.
- The initial setup of the operating system takes approximately 5-10 minutes.
- To setup the Android OS for the Touch Panel PC, turn on the Touch Panel PC and follow the instructions on the screen.

[Example of Connection]

<Back>

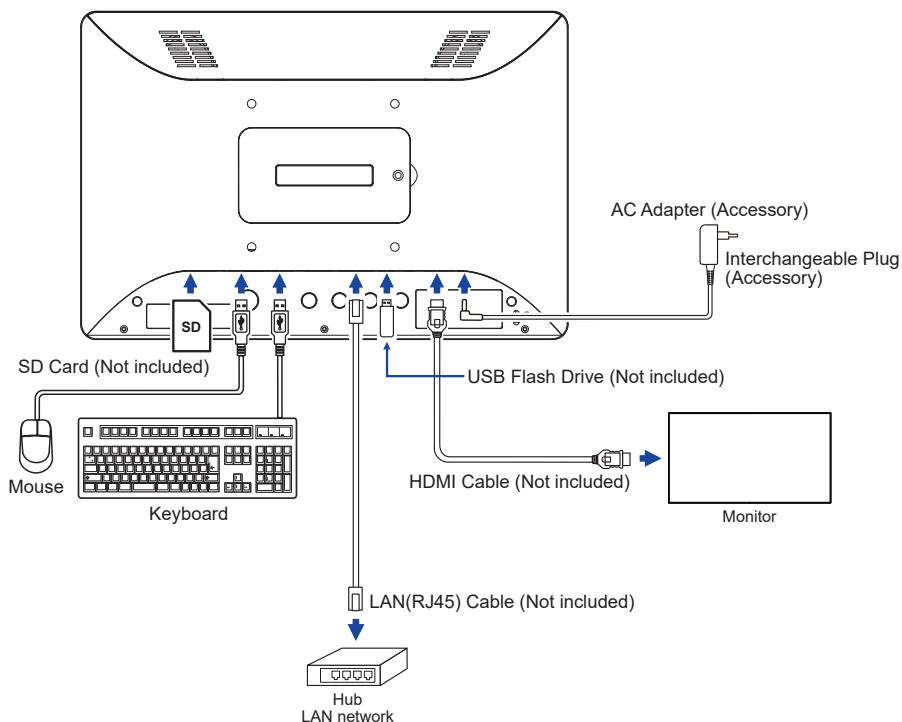

CONNECTING YOUR TOUCH PANEL PC : ProLite TW1623AS


- ① Connect the AC Adapter to the Touch Panel PC first and then connect to the power source.
- ② Turn on your Touch Panel PC.

NOTE

- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.
- The initial setup of the operating system takes approximately 5-10 minutes.
- To setup the Android OS for the Touch Panel PC, turn on the Touch Panel PC and follow the instructions on the screen.

[Example of Connection]

[<Back>](#)

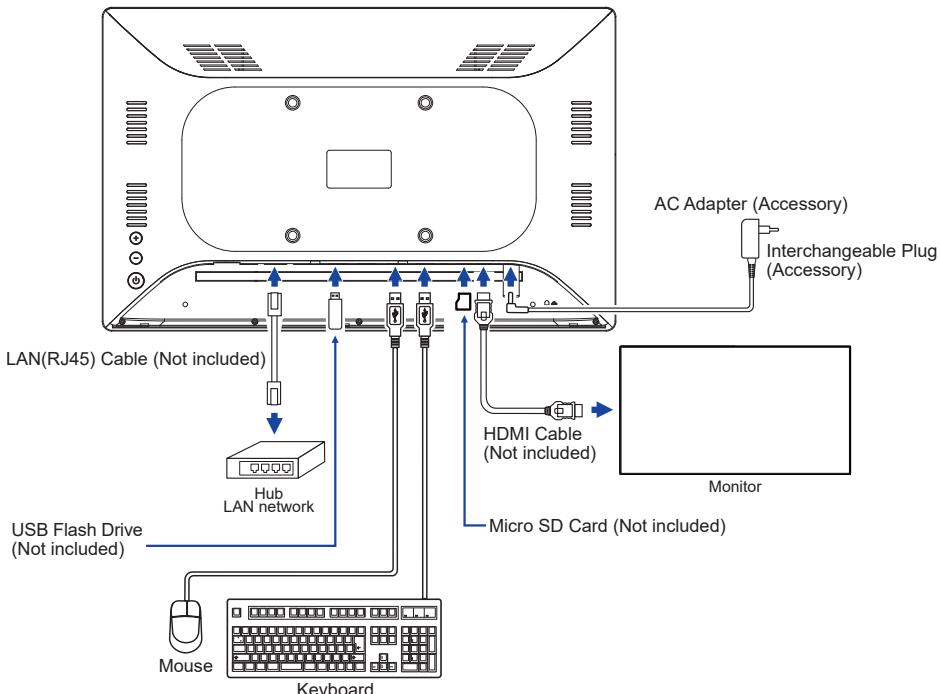


CONNECTING YOUR TOUCH PANEL PC : ProLite TW2223AS

- ① Connect the AC Adapter to the Touch Panel PC first and then connect to the power source.
- ② Turn on your Touch Panel PC.

NOTE


- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.
- The initial setup of the operating system takes approximately 5-10 minutes.
- To setup the Android OS for the Touch Panel PC, turn on the Touch Panel PC and follow the instructions on the screen.

[Example of Connection]

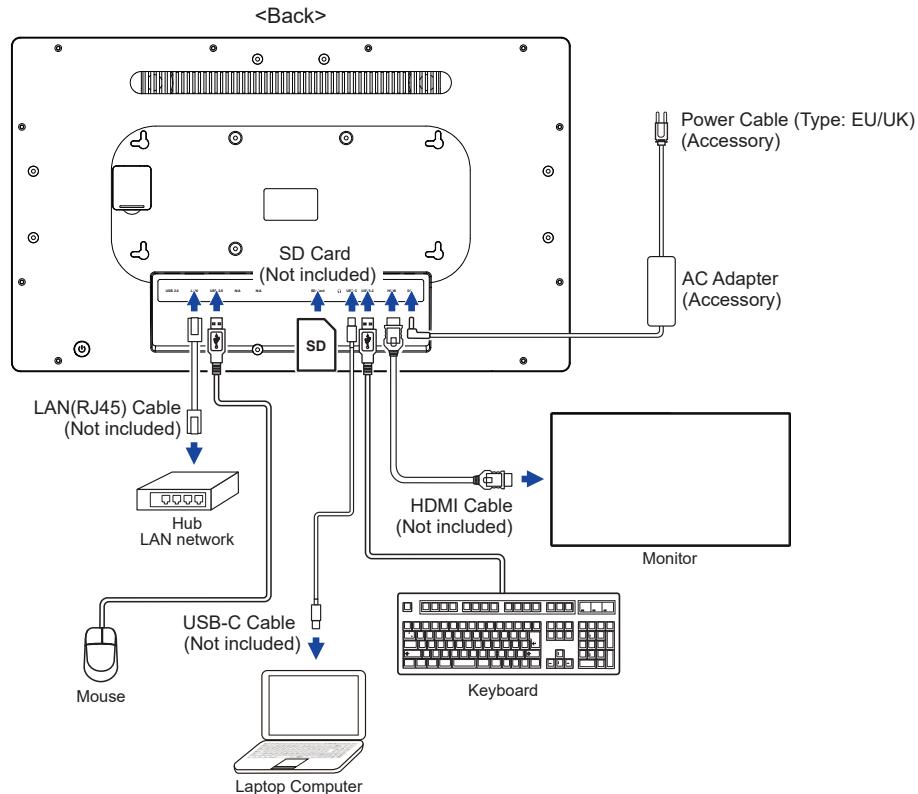

[ATTACHING THE AC ADAPTER PLUG : ProLite TW1023ASC / ProLite TW1623AS]

- ① Attach the appropriate type of plug to the AC Adapter in the correct orientation.
- ② Push the tab to detach the plug from the AC Adapter.

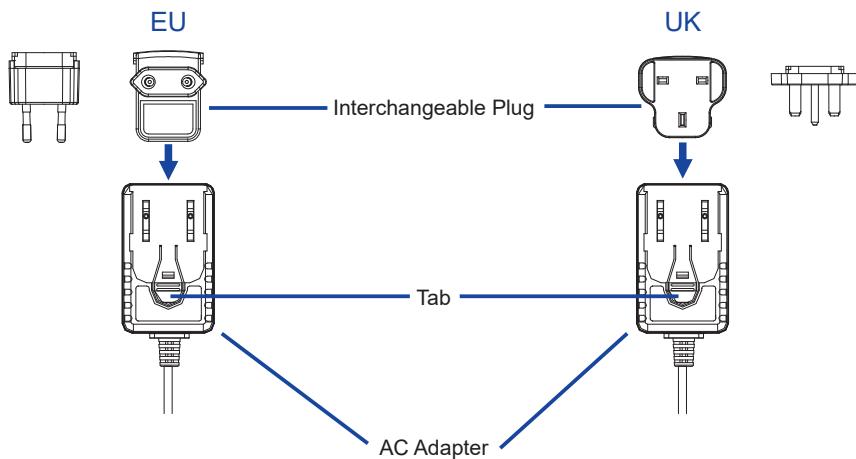

FITTING AND REMOVAL OF CABLE COVER : ProLite TW1023ASC

ENGLISH


Put a piece of soft cloth on the table beforehand to prevent the Touch Panel PC from being scratched.
Lay the Touch Panel PC flat on a table with front face down.

[Fitting]

- ① Put the connected cables through the holes of the cable cover.
- ② Fix the cable cover firmly with the screws.

[Removal]

Unscrew to remove the cable cover.

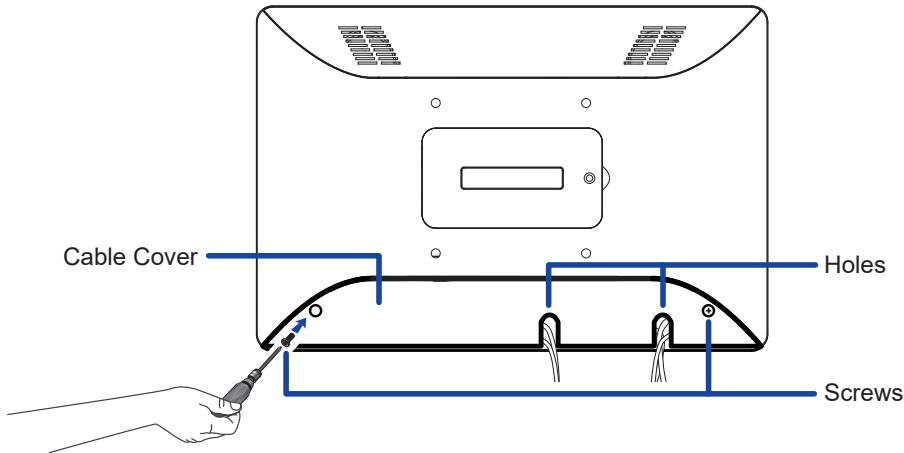

FITTING AND REMOVAL OF CABLE COVER : ProLite TW1623AS

ENGLISH


Put a piece of soft cloth on the table beforehand to prevent the Touch Panel PC from being scratched.
Lay the Touch Panel PC flat on a table with front face down.

[Fitting]

- ① Put the connected cables through the holes of the cable cover.
- ② Fix the cable cover firmly with the screws.

[Removal]

Unscrew to remove the cable cover.

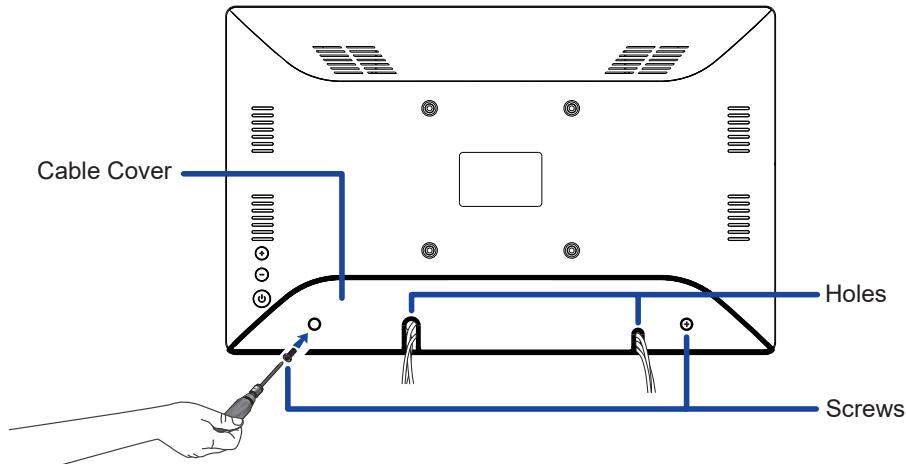

FITTING AND REMOVAL OF CABLE COVER : ProLite TW2223AS

Put a piece of soft cloth on the table beforehand to prevent the Touch Panel PC from being scratched.
Lay the Touch Panel PC flat on a table with front face down.


ENGLISH

[Fitting]

- ① Put the connected cables through the holes of the cable cover.
- ② Fix the cable cover firmly with the screws.


[Removal]

Unscrew to remove the cable cover.

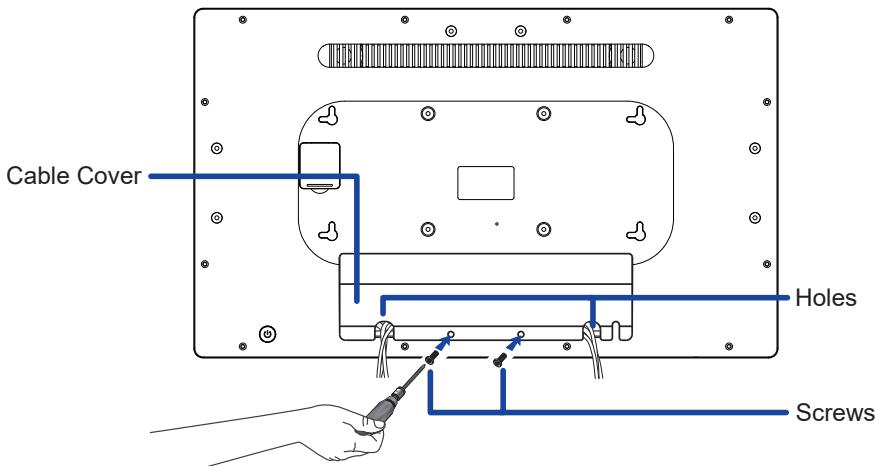

OPERATING THE TOUCH PANEL PC

The home screen is displayed when the Touch Panel PC is turned on.

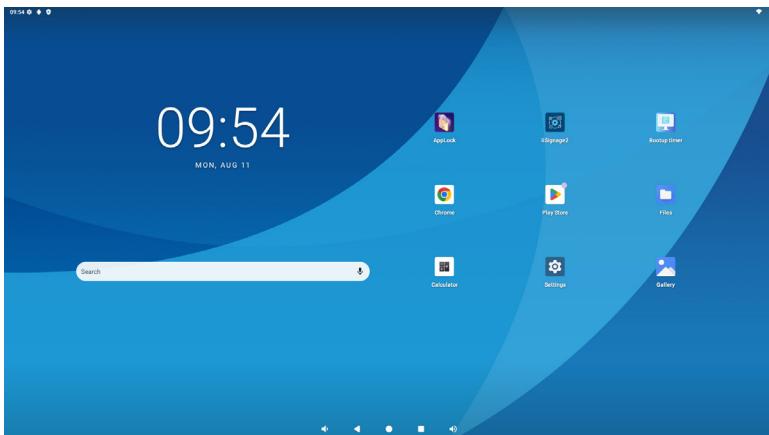

<System bar icons>

🔉 : Volume down


⟲ : Return to exit and the previous page.

⟳ : Return to the home screen.

◻ : Show a list of recently run applications.

🔊 : Volume up

▲ : Display all apps.

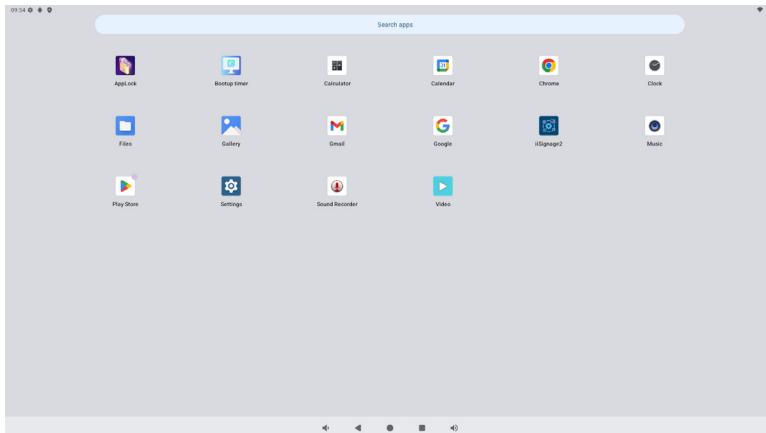


<Applications>


-  : Lock application by entering 4 digits password.
-  : Manage power-on/off time.
-  : Calculator
-  : Calendar
-  : Chrome
-  : Alarm / Clock / Timer / Stopwatch
-  : Manage files and folders on the device.
-  : Organize albums.
-  : Gmail
-  : Google
-  : iiSignage 2
-  : Play audio files.
-  : Play store.
-  : System preferences
-  : Sound recorder
-  : Play video files.

[AppLock]

- ① On the Home screen, open AppLock .
- ② Enter the 4-digit password and tap **CONFIRM**.

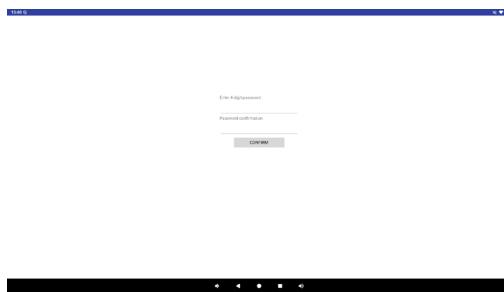

- ③ The AppLock main page will appear, showing a list of apps that can be locked. Click the Settings icon at the top right corner to access additional AppLock options.

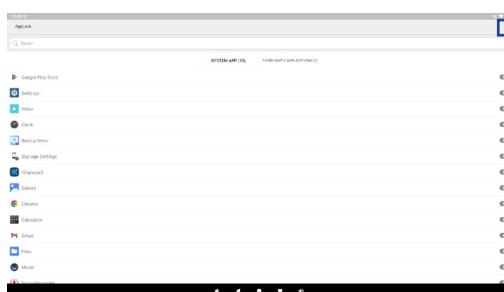


- ④ **USB Slave Lock:** Disables access to the internal or external storage of the Panel PC via the USB Slave port.
- Key Lock:** Disables Power Switch, Volume + and Volume – Buttons.



KIOSK MODE CONFIGURATION GUIDE

Navigation Path: Settings > System > Kiosk Mode

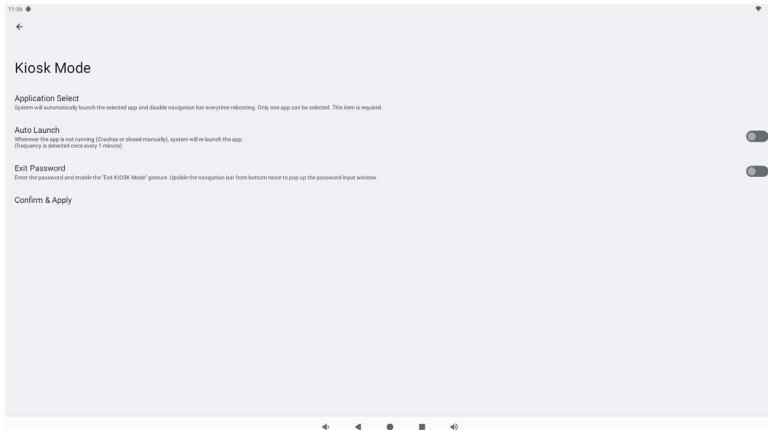


1. Function Overview

Kiosk Mode enables a secure, streamlined user experience by locking down the system to a single application or webpage, suitable for public or commercial use cases. This guide outlines the configuration steps and system behaviors.

1.1 Application Selection

- Allows the user to designate a single App or URL (via WebView) to auto-launch upon each system reboot.
- To disable Kiosk Mode, select “NULL.”

Note: If you prefer to launch the selected app or URL **without** hiding the status bar, simply select the item and exit the page **without clicking** the “Confirm & Apply” button.

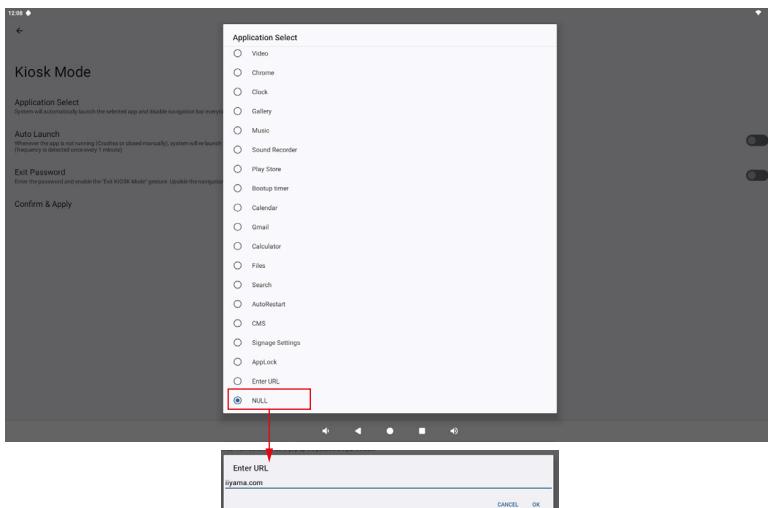

1.2 Auto Launch

- In the event the designated app or URL crashes or is not actively running, the system will automatically attempt to relaunch it.
- The status check and relaunch cycle occurs every 1 minute.

1.3 Exit Password Configuration


Gesture Activation:

To enable gesture-based exit from Kiosk Mode:

1. Enter a password.
2. Enable the “Exit Kiosk Mode” gesture feature.
3. Swipe upward from the bottom navigation bar twice to prompt the password entry window.

Exit Mode Options:

Option	Description
Enabled	Allows Kiosk Mode to be exited via password entry or HID (Human Interface Device). Upon successful password input, Kiosk Mode is reset to NULL , requiring reconfiguration.
Disabled	Restricts exit to HID-only methods. Gesture and password methods are disabled.

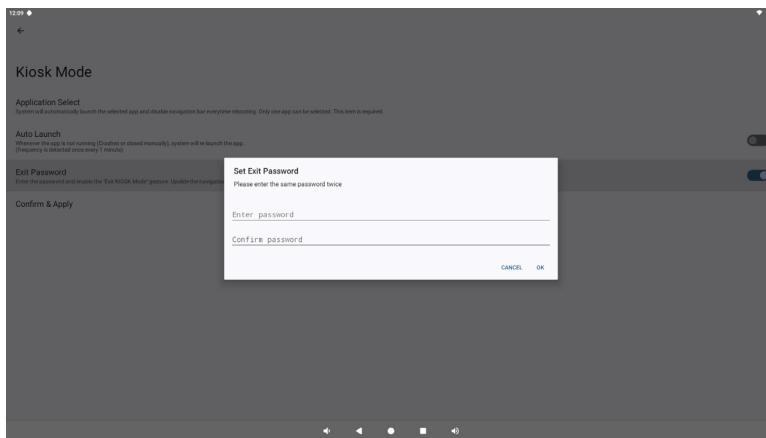

HID Device Controls:

• Keyboard Shortcuts:

Windows + Backspace → Acts as the “**Back**” button
 Windows + Enter → Acts as the “**Home**” button

• Mouse Input:


Right-click → Acts as the “**Back**” button

Important:

Exiting via HID devices may result in partial system instability. After exiting, it is strongly recommended to reset Kiosk Mode to ensure optimal functionality.

1.4 Confirm & Apply

- Select "**Confirm & Apply**" to activate Kiosk Mode immediately.
- **Caution:** Ensure all configurations are properly set **before** confirming, as Kiosk Mode will instantly:
 - Launch the selected App or URL at system boot.
 - Hide** both the **navigation bar** and **status bar**.
 - Disable the system gesture: Double-tap the power button to toggle the status bar.

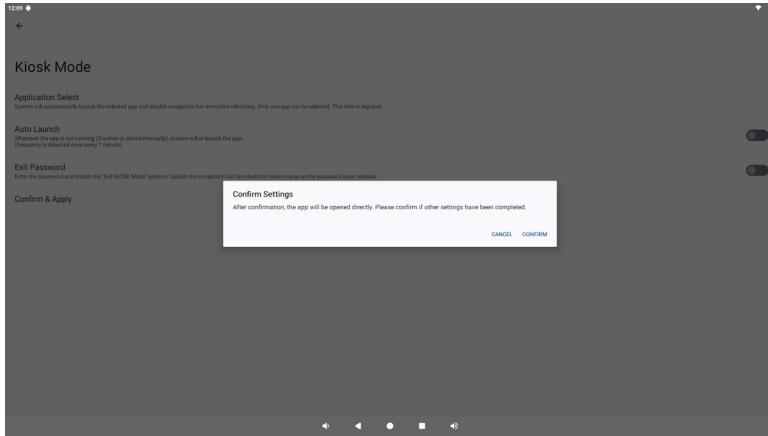

TROUBLE SHOOTING

If the Touch Panel PC fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in OPERATING THE TOUCH PANEL PC, depending on the problem you have. If the Touch Panel PC does not get a picture, skip to 2.
2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE TOUCH PANEL PC or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the Touch Panel PC and contact your dealer or iiyama service center for further assistance.

Problem	Check
① The picture does not appear.	<input type="checkbox"/> The AC Adapter and Power Cable are firmly seated in the connector and the socket. <input type="checkbox"/> The Power Switch is turned ON. <input type="checkbox"/> The AC socket is live. Please check with another piece of equipment. <input type="checkbox"/> If the Touch Panel PC is in sleep mode, press the Power Switch or any other button or touch the screen.
	NOTE By default, the Touch Panel PC enters into sleep mode after 10 minutes of no operation. You can choose "Never" in the application of Settings / Display / Screen timeout.
	<input type="checkbox"/> Increase the Brightness. <input type="checkbox"/> The pins of the connectors are not crooked or broken.
② The screen is shaking.	<input type="checkbox"/> The power voltage is within the specification of the Touch Panel PC.
③ No sound	<input type="checkbox"/> The Volume is turned up. <input type="checkbox"/> Check the sound settings.
④ The touch screen does not work.	<input type="checkbox"/> It takes about 15 seconds or more to activate the P-CAP touch screen function after power is turned off and on. This is normal operation. Please wait for a certain period.

RECYCLING INFORMATION

For better environment protection please don't dispose your Touch Panel PC.
 Please visit our web site: <https://iiyama.com> for Touch Panel PC recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : ProLite TW1023ASC-B3P

Touch Screen	Technology	Projected capacitive 10pt touch	
	Light transmission	86%	
	Hardness	>6H	
	Thickness	1.25mm	
Size Category		10.1"	
LCD Panel	Panel technology	IPS (AAS)	
	Size	Diagonal: 10.1" (25.5cm)	
	Pixel pitch	0.1692mm H × 0.1692mm V	
	Brightness	450cd/m ² (Typical), 387cd/m ² (with Touch panel)	
	Contrast ratio	1000 : 1 (Typical: with Touch panel)	
	Viewable angle	Horizontal: 160 degrees, Vertical: 160 degrees (Typical)	
	Response time	>25ms (Gray to Gray)	
Display Colors		Approx.16.7M	
Maximum Resolution		1280 × 800, 1 MegaPixel	
SOC		Rockchip RK3568 Quad-core, up to 2GHz	
GPU		Mali-G52	
Storage		32GB eMMC	
Memory		4GB LPDDR4X	
Wi-Fi	LAN(POE)	IEEE802.11a/b/g/n/ac	10M/100M/1000M (IEEE802.3at/30W)
Bluetooth		5.2	
Microphone		Single Microphone	
Camera		5 MegaPixel	
External IO Port		SD Card × 1, USB3.2 Gen 1 (5Gbps, DC5V, 900mA) × 1, USB2.0 (DC5V, 500mA) × 2, Micro USB (OTG) × 1, RJ45 (LAN) (PoE IEEE 802.3 at/Max. 30W) × 1, Mini HDMI (output, 1280×800 60Hz) × 1, Headset Microphone (ø3.5mm mini jack) × 1	
OS version		Android 13	
Speakers		1.5W × 2 (Stereo speakers)	
Maximum Screen Size		216.6mm W × 135.4mm H / 8.5" W × 5.3" H	
Power Source		12VDC, 2,0A	
Power Consumption *		7W typical	
Dimensions / Net Weight		255.0 × 172.0 × 30.5mm / 10.0 × 6.8 × 1.2" (W×H×D) 0.8kg / 1.8lbs (Excluding the AC Adapter)	
Environmental Considerations		Operating: Temperature	0 to 40°C / 32 to 104°F
		Humidity	10 to 80% (No condensation)
Environmental Considerations		Storage: Temperature	-10 to 60°C / 14 to 140°F
		Humidity	10 to 90% (No condensation)
Approvals		CE, UKCA, EAC	

NOTE * USB peripherals are not connected.

SPECIFICATIONS : ProLite TW1623AS-B3P

Touch Screen	Technology	Projected capacitive 10pt touch
	Light transmission	86%
	Hardness	>6H
	Thickness	1.8mm
Size Category		15.6"
LCD Panel	Panel technology	IPS (ADS)
	Size	Diagonal: 39.5cm (15.6")
	Pixel pitch	0.17925mm H × 0.17925mm V
	Brightness	450cd/m ² (Typical), 387cd/m ² (with Touch panel)
	Contrast ratio	1000 : 1 (Typical: with Touch panel)
	Viewable angle	Horizontal: 170 degrees, Vertical: 170 degrees (Typical)
	Response time	>30ms (Gray to Gray)
Display Colors		Approx. 16.7M
Maximum Resolution		1920 × 1080, 2 MegaPixel
SOC		Rockchip RK3568 Quad-core, up to 2GHz
GPU		Mali-G52
Storage		32GB eMMC
Memory		4GB LPDDR4X
Wi-Fi		IEEE802.11a/b/g/n/ac
LAN(POE)		10M/100M/1000M (IEEE802.3at/30W)
Bluetooth		5.2
Microphone		Single Microphone
External IO Port		MicroSD Card × 1, USB3.2 Gen 1 (5Gbps, DC5V, 900mA) × 1, USB2.0 (DC5V, 500mA) × 2, RJ45 (LAN) (PoE IEEE 802.3 at/Max. 30W) × 1, Mini HDMI (output, 1920×1080 60Hz) × 1, Headset Microphone (ø3.5mm mini jack) × 1
OS version		Android 13
Speakers		2W × 2 (Stereo speakers)
Maximum Screen Size		344.2mm W × 193.6mm H / 13.5" W × 7.6" H
Power Source		12VDC, 2.0A
Power Consumption *		9W typical
Dimensions / Net Weight		387.0 × 244.0 × 30.5mm / 15.2 × 9.6 × 1.2" (W×H×D) 1.5kg / 3.3 lb (Excluding the AC Adapter)
Environmental Considerations		Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 10 to 80% (No condensation) Storage: Temperature -10 to 60°C / 14 to 140°F Humidity 10 to 90% (No condensation)
Approvals		CE, UKCA, EAC

NOTE * USB peripherals are not connected.

SPECIFICATIONS : ProLite TW2223AS-B3P


Touch Screen	Technology	Projected capacitive 10pt touch
	Light transmission	86%
	Hardness	>6H
	Thickness	2.9mm
Size Category	21.5"	
Panel	Panel technology	IPS (ADS)
	Size	Diagonal: 54.6cm (21.5")
	Pixel pitch	0.248mm H x 0.248mm V
	Brightness	500cd/m ² (Typical), 450cd/m ² (with Touch panel)
	Contrast ratio	1500 : 1 (Typical: with Touch panel)
	Viewable angle	Horizontal: 178 degrees, Vertical: 178 degrees (Typical)
	Response time	14ms (Gray to Gray)
Display Colors	Approx. 16.7M	
Maximum Resolution	1920 x 1080, 2 MegaPixel	
SOC	Rockchip RK3576 Octo-core, up to 2.2GHz	
GPU	ARM G52 MC3	
Storage	32GB eMMC	
Memory	4GB LPDDR4	
Wi-Fi	IEEE802.11ax/ac/a/b/g/n	
LAN (POE)	10M/100M/1000M (IEEE802.3bt/60W)	
Bluetooth	5.3	
Microphone	Single Microphone	
External IO Port ^{*1,2}	SD Card x 1, USB3.2 Gen 1 (5Gbps, DC5V, 900mA) x 1, USB2.0 (DC5V, 500mA) x 2, USB C3.2 Gen 1 (5Gbps, video output only, touch board function) x 1, RJ45 (LAN) x 1, HDMI (input, 1920x1080 60Hz) x 1, Headset Microphone (ø3.5mm mini jack) x 1	
OS version	Android 14	
Speakers	2W x 2 (Stereo speakers)	
Maximum Screen Size	476.1mm W x 267.8mm H / 18.7" W x 10.5" H	
Power Source	12VDC, 5.0A	
Power Consumption ^{*3}	15.4W typical	
Dimensions / Net Weight	504.5 x 302.0 x 32.0mm / 19.8 x 11.8 x 1.2" (WxHxD) 3.64kg / 8.0 lbs (Excluding the AC Adapter)	
Environmental Considerations	Operating: Temperature	0 to 40°C / 32 to 104°F
	Humidity	10 to 80% (No condensation)
Environmental Considerations	Storage: Temperature	-20 to 60°C / 14 to 140°F
	Humidity	10 to 90% (No condensation)
Approvals	CE, UKCA, EAC	

NOTE ^{*1} USB C support only mirroring mode in video output, touch mode only support Win 10 and 11 Operating System.


^{*2} HDMI input (doesn't support wake on active source, no signal standby, CEC).

^{*3} When the USB devices are not connected.

DIMENSIONS : ProLite TW1023ASC

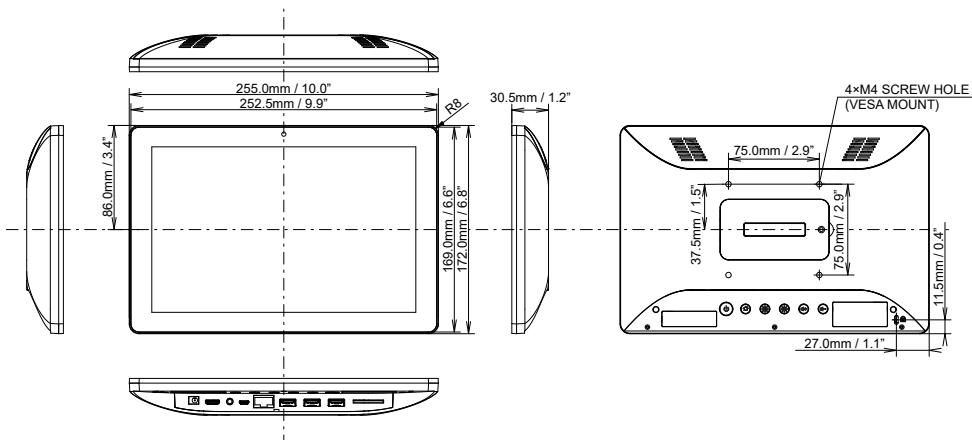

DIMENSIONS : ProLite TW1623AS

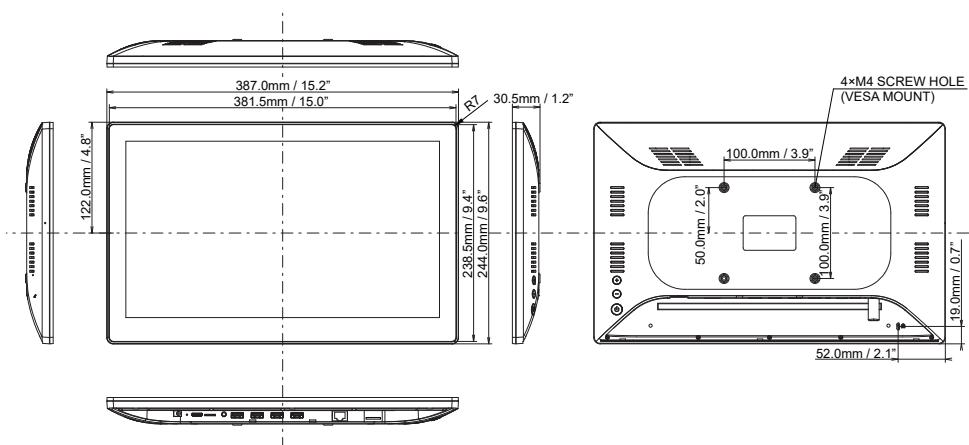

DIMENSIONS : ProLite TW2223AS

ENGLISH

