


FocalPoint™ Projection Screen by Draper—Assembly Map

81" x 144" (206 x 366 cm) Image Area—16:9 Format


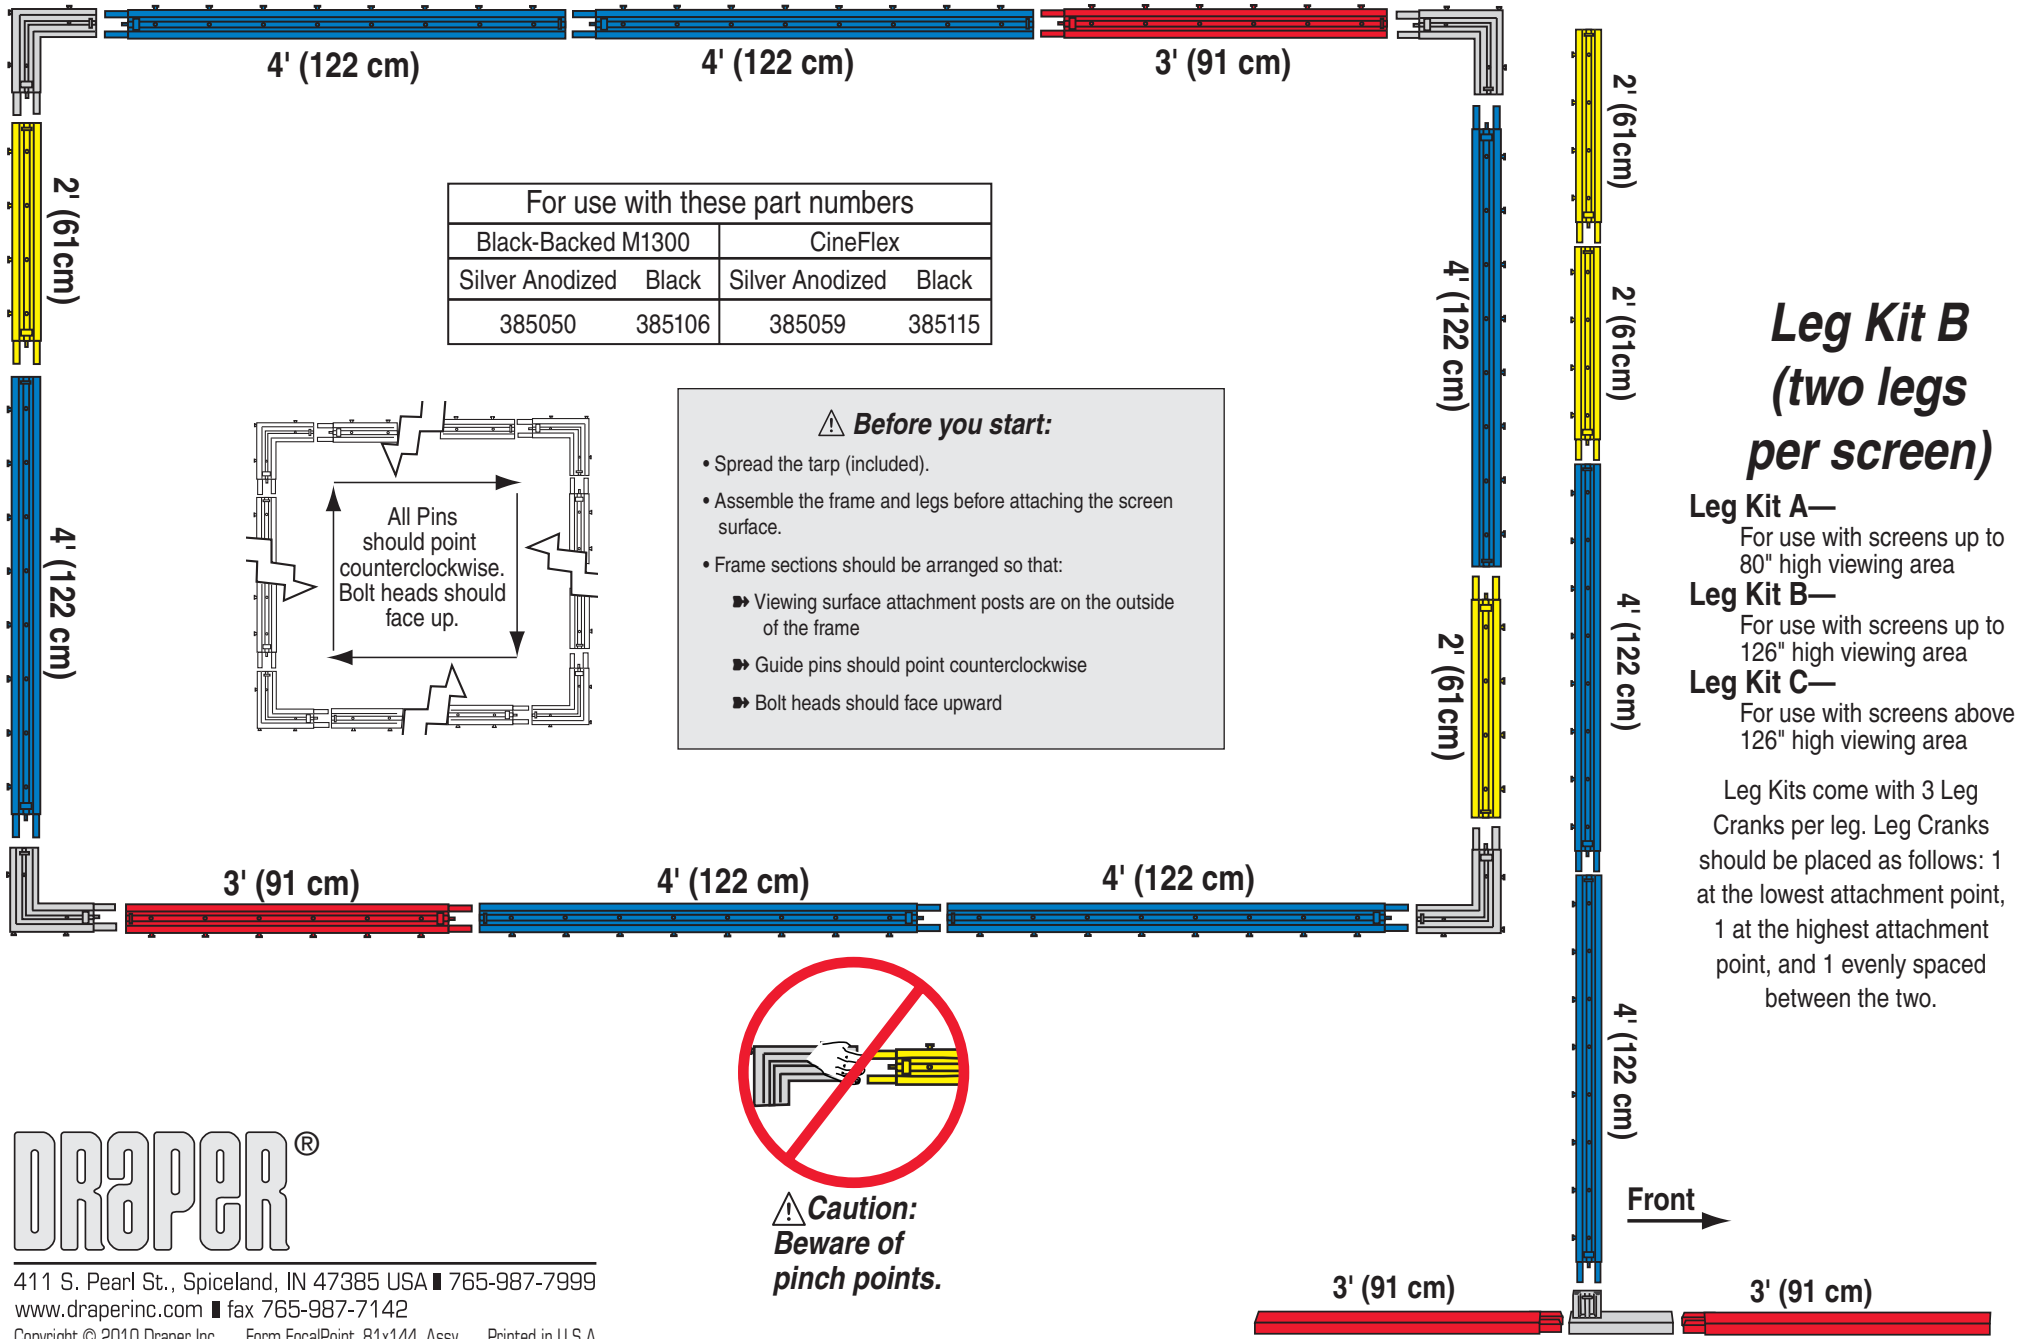


For use with these part numbers

Black-Backed M1300		CineFlex	
Silver Anodized	Black	Silver Anodized	Black
385050	385106	385059	385115

⚠ Before you start:

- Spread the tarp (included).
- Assemble the frame and legs before attaching the screen surface.
- Frame sections should be arranged so that:
 - ▶ Viewing surface attachment posts are on the outside of the frame
 - ▶ Guide pins should point counterclockwise
 - ▶ Bolt heads should face upward

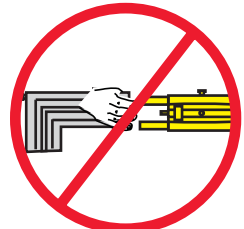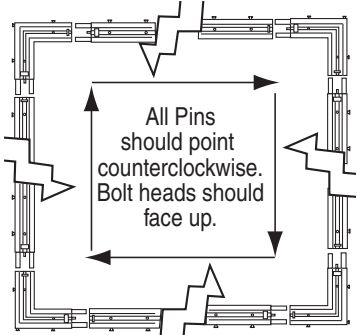

⚠ Caution:
Beware of
pinch points.

Leg Kit B
(two legs
per screen)

Leg Kit A—
For use with screens up to 80" high viewing area

Leg Kit B—
For use with screens up to 126" high viewing area

Leg Kit C—
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

DRAPER®