


# WR-XX-XX UNPACKING INSTRUCTIONS

## TOOLS REQUIRED

- #2 Phillips Head Driver
- #3 Phillips Head Driver
- 7/16" Wrench
- Hammer or Mallet


## REMOVING FRAME

- 1) Disconnect the bonding wire located on the top of the enclosure and frame. Gently pull apart the quick connect/disconnect in the center of the wire.

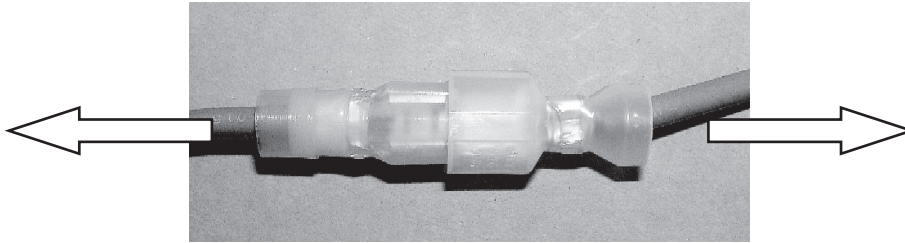

- 2) Remove the #2 Phillips Head screws from the two wood blocks that secure the frame to the host enclosure (two screws per block).

SCREWS  
(4 Places)

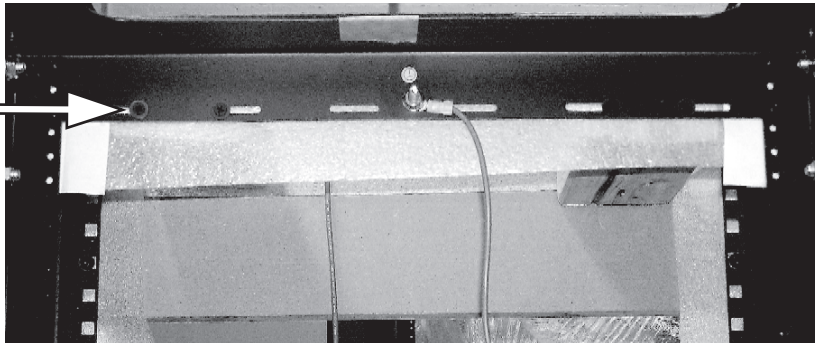


TOP REAR INSIDE OF FRAME

- 3) Remove frame from host enclosure. Place aside until further instruction

## UNPACKING ENCLOSURE

- 4) Remove the four #2 Phillips Head screws holding the upper rear squaring panel in place on host enclosure. Remove the panel (tap out, from inside-out using a hammer).

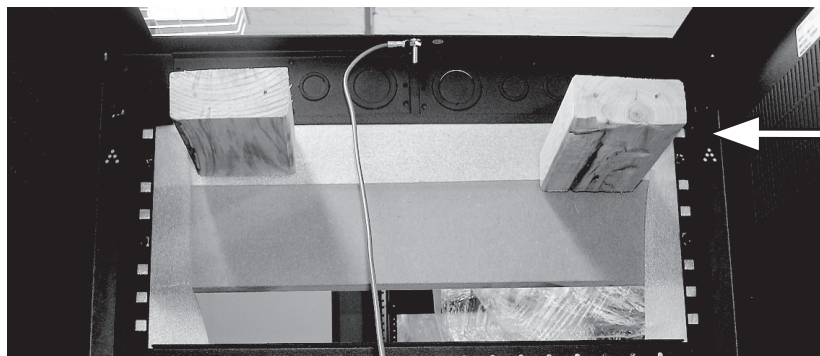


SCREWS  
(4 Places)

TOP REAR INSIDE OF ENCLOSURE

## INSTRUCTIONS CONTINUED


- 6) Remove the four #3 Phillips Head Screws and Washers holding the host enclosure to the skid.  
Remove the Enclosure from skid. (If desired, move host Enclosure to it's final location)

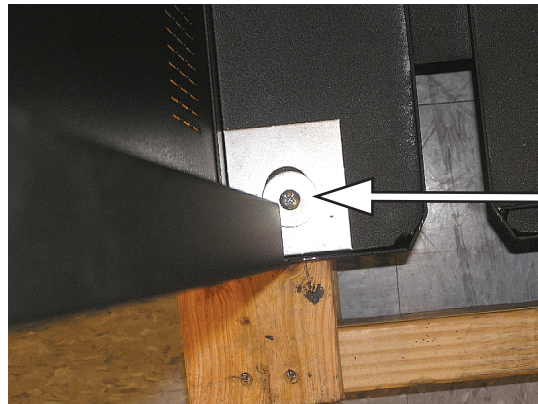

SCREW/WASHER (4 Places)


## UNPACKING FRAME

- 7) Remove the three Wood Squaring Panels from the frame. Each panel has four #2 Phillips Head Screws.

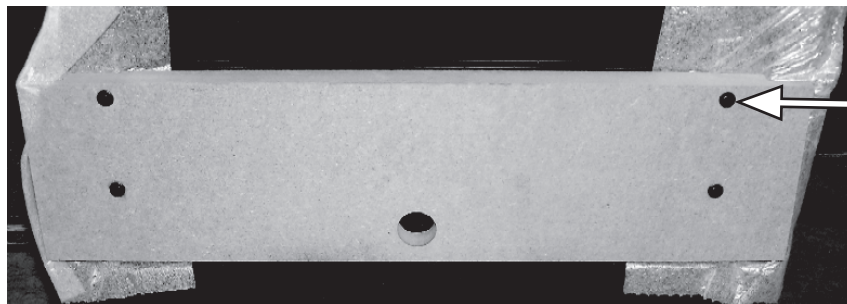

SCREWS (4 Places)

- 8) Remove protective sheets from the top.  
9) Remove the two Wooden Shims from the rear of the frame by pulling them out towards rear.

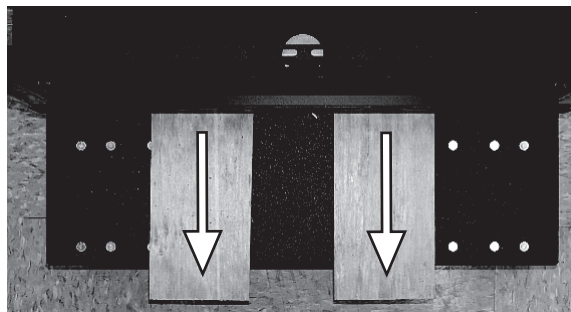

**NOTE: Ensure bottom of host enclosure is free of debris.**

- 10) Place frame back into host Enclosure.  
11) Reconnect the bonding wire.