


INSTRUCTION SHEET

SR SERIES

PIVOTING RACK

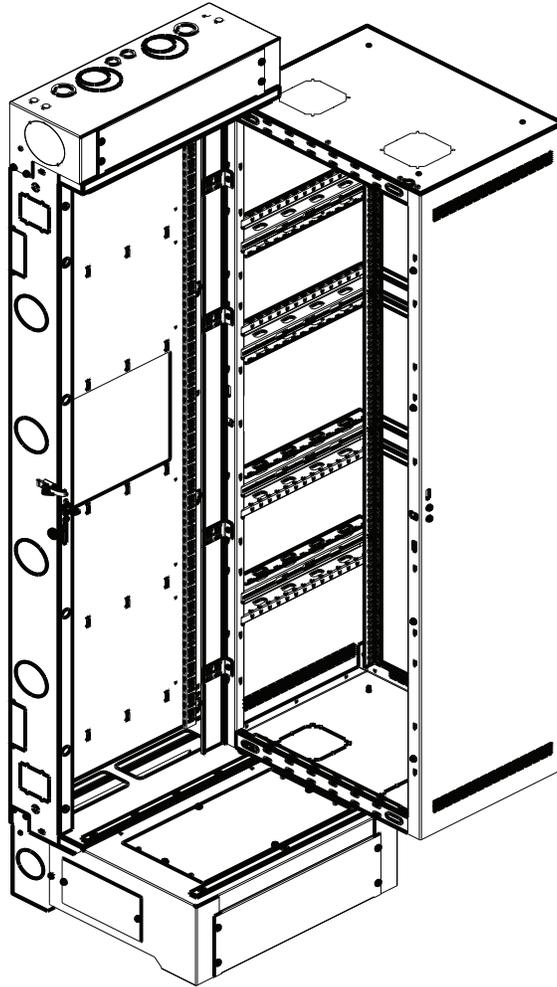

THANK YOU

Thank you for purchasing the SR Series Pivoting Rack. Please read these instructions thoroughly before installing or assembling this product.

PRODUCT FEATURES

- Lever Lock™ compatible in center section and back pan for small device mounting and cable management.
- Forward Compatible for 5x faster tool free system integration.
- Available in 23.5" and 29" widths.
- 29" Widths include front vertical cable management for clean and organized look.
- Tool-Free Quick-Mount system for easy mounting of the center section to the backpan.
- Pivots 90 off the wall for access to rear connections.
- Zero Clearance Latch (Optional) allows side-by-side mounting or interior corner mounting.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Heed all warnings.
- Clean only with dry cloth.
- Keep these instructions.
- Follow all instructions.
- Only use attachments/accessories specified by the manufacturer.



DANGER HAZARDOUS VOLTAGE: The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



WARNING: A warning alerts you to a situation that could result in serious personal injury or death.



CAUTION: A caution alerts you to a situation that may result in minor personal injury or damage to the product and/or property.

NOTE: A note is used to highlight procedures pertaining to the installation, operation, or maintenance of the product.



WARNING: Failure to read, understand and follow the following information can result in serious personal injury, damage to the equipment or voiding of the warranty.



CAUTION: To avoid an unstable condition, place heavier components at the bottom of the enclosure. When more than one component is placed in the enclosure, begin at the bottom of the enclosure and place equipment at the lowest available point, evenly distribute weight (horizontally) within the enclosure.

Component weight should be distributed as follows:

- 1/2 of the total component weight (at a minimum) placed in the bottom third of the cabinet.
- 1/4 of the total component weight (at a maximum) placed in the middle third of the cabinet.
- 1/4 of the total component weight (at a maximum) placed in the top third of the cabinet.



CAUTION: All installation and assembly steps must be performed by qualified personnel.



CAUTION: Ensure that the wall has a structural load capacity that will support the weight of the cabinet fully loaded with equipment.



CAUTION: The following parts are not effectively bonded to the protective earth terminal: rack rails, lace bars, Lever Lock™, shelves, baffle, blanking panels, and cable management. If any part needs to be bonded to the protective earth terminal it shall be done in accordance with Article 250 of the National Electrical Code.



CAUTION: To reduce the risk of personal injury and conform to the UL listing, the system must be grounded and bonded in accordance with Article 250 of the National Electrical Code.



CAUTION: Power cord, for fans or other accessories, need to be secured to ensure that they are routed away from pinch points and moving parts.



CAUTION: Do not attempt to unload or move the enclosures alone. Make sure to have sufficient amount of personnel and equipment to safely move this product.



CAUTION: Watch hands and fingers around pinch points.



CAUTION: Individual components mounted inside of the wall mount rack must have their own fire enclosure.



SEISMIC COMPLIANCE: An engineered system is vital to achieve seismic rating requirements. A licensed professional engineer must approve the type of fasteners used for where the rack will be mounted. Braced according to specifications set forth by licensed architects and engineers, the Middle Atlantic Products rack/enclosure you purchased is capable of sustaining a phenomenal lateral load. Refer to the seismic data published on seismic letter on the Middle Atlantic Product website.

INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ

- Lire ces instructions.
- Respectez tous les avertissements.
- Nettoyer uniquement avec un chiffon sec.
- Conservez ces instructions.
- Suivez toutes les instructions.
- N'utilisez que des accessoires spécifiés par le fabricant.



DANGER TENSION DANGEREUSE: Le symbole de la pointe de flèche, dans un triangle équilatéral, est destiné à alerter l'utilisateur sur la présence de tension dangereuse non isolée dans l'enceinte du produit qui peut être d'une ampleur suffisante pour constituer un risque d'électrocution.



AVERTISSEMENT: Un avertissement vous avertit d'une situation pouvant entraîner des blessures graves ou la mort.



ATTENTION: Une attention vous avertit d'une situation pouvant entraîner des blessures mineures ou des dommages au produit et/ou à la

REMARQUE: Une remarque est utilisée pour mettre en évidence les procédures relatives à l'installation, au fonctionnement ou à l'entretien du produit.



AVERTISSEMENT: Ne pas lire, comprendre et suivre les informations suivantes peut entraîner des blessures graves, des dommages à l'équipement ou de la nullité de la garantie.



ATTENTION: Pour éviter un état instable, placez composants les plus lourds au fond de l'enceinte. Lorsque plus d'un composant est placé dans la enceinte, commencer par le bas de l'enceinte et placer l'équipement à la point le plus bas disponible, de distribuer uniformément le poids (horizontalement) dans le enceinte.

Le poids des composants devrait être réparti comme suit:

- 1/2 du poids total de la composante (au minimum) placé dans le tiers inférieur de l'armoire.
- 1/4 du poids total de la composante (au maximum) placé dans le tiers médian de l'armoire.
- 1/4 du poids total de la composante (au maximum) placé dans le tiers supérieur de l'armoire.



ATTENTION: Toutes installation et de montage étapes doivent être effectuées par du personnel qualifié.



ATTENTION: Veiller à ce que le mur a une capacité de charge structurelle qui supporter le poids de le cabinet entièrement chargé avec l'équipement.



ATTENTION: Les pièces suivantes ne sont pas correctement liées à la borne de terre de protection: rails de rack, barres à lacets, Lever Lock™, étagères, déflecteur, panneaux obturateurs et gestion des câbles. Si une partie doit être reliée à la borne de terre de protection, cela doit être fait conformément à l'article 250 du Code national de l'électricité.



ATTENTION: Pour réduire le risque de blessure et se conformer à la liste UL, le système doit être mis à la terre et collé conformément à l'article 250 du Code national de l'électricité.



ATTENTION: Le cordon d'alimentation, pour les fans ou autres accessoires, doivent être fixé à veiller à ce que ils sont acheminés loin des points de pincement et des pièces mobiles.



ATTENTION: Ne essayez pas de décharger ou déplacer les enceintes seul. Assurez-vous d'avoir quantité suffisante de personnel et de matériel pour déplacer ce produit en toute sécurité.



ATTENTION: Observez les mains et les doigts autour des points de pincement.



ATTENTION: Les composants individuels montés à l'intérieur de montage mural doivent avoir leur propre armoire à incendie.



CONFORMITÉ SISMIQUE: Un système d'ingénierie est essentiel pour répondre aux exigences d'évaluation sismique. Un ingénieur professionnel agréé doit approuver le type de fixations utilisées pour le montage du rack. Contreventé conformément aux spécifications établies par des architectes et ingénieurs agréés, le rack/boîtier Middle Atlantic Products que vous avez acheté est capable de supporter une charge latérale phénoménale. Reportez-vous aux données sismiques publiées sur la lettre sismique sur le site Web du produit Middle Atlantic.

WEIGHT RATINGS

Model	Weight Rating
All	500 lbs. Maximum Total Rated Load



WARNING: This product is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Total equipment weight must not exceed 500 lbs. (226.8 kg).

WEIGHT RATINGS (CONTINUED)



AVERTISSEMENT: Cette produit est conçu pour être utilisé uniquement avec les produits et les poids maximum indiqué. uniquement avec les produits et les poids maximaux indiqués. En cas d'utilisation avec d'autres produits ou des produits plus lourds que le poids maximal indiqué, le chariot peut devenir instable et causer des blessures. Le poids total de l'équipement ne doit pas dépasser 226.8 kg (500 lbs).

SPEICIFICATIONS


Width: 23.5" (597 mm) and 29" (737 mm)

Height: 24, 40, and 46 RU


Depth: 22" (559 mm), 28" (711 mm), and 32" (813 mm)

NOTE: Not all depths available in all heights.


SUPPLIED COMPONENTS AND HARDWARE

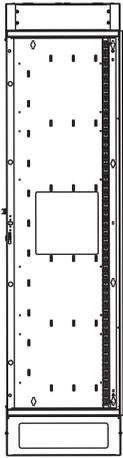

Backpan
A

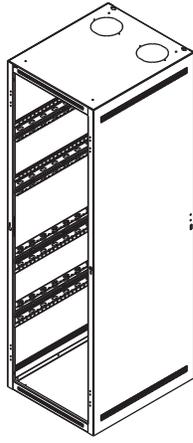

Center Section
B

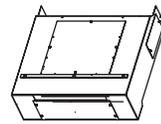

Support Base
C



(2x)
Key
D



Trim
E



(16x)
10-32 Cage Nut
F

NOTE: Cage nuts are included for installations where center hole mounting is required.

REQUIRED TOOLS

- Power Driver
- 1/2" Socket
- 3/8" Socket
- 5/16" Deep Socket
- 3/16" Drill Bit
- Slip Joint Pliers
- Level
- 3' Step Ladder (Optional)



WARNING: Use tools with caution and follow all necessary safety protocols.

AVERTISSEMENT: Utiliser des outils avec prudence et suivre tous les protocoles de sécurité nécessaires.

- #2 Phillips Screwdriver
- 9/16" Socket
- 7/16" Socket

INTRODUCTION

NOTE:

- Images of enclosures shown in this instruction sheet may include the zero clearance latch (model number: DWRSR-ZL) and sub plate (model number: SR-SUB) options, which may or may not be a part of your configuration.
- Not all options available for the enclosure are included in these instructions and separate instruction sheets are available for the individual options.
- Topics in this guide indicate that the zero clearance latch and sub plate options must be installed prior to the enclosure assembly.

For more information, refer to the Zero Clearance Latch (I-00142) and Sub Plate (I-00003) instruction sheets at www.legrandav.com.


REVERSING THE PIVOT DIRECTION

This rack is factory configured for a right-hand pivot and may be reversed using the following procedure:

1. If upper wire chamber is already installed, use power driver and 5/16" socket to remove (4x) screws and take it off the backpan (A). (**FIGURE A**)

NOTE: Verify your power driver torque is on the lightest setting and only increase as necessary.

2. Remove (4x) screws from the backpan foot to take it off the backpan.
3. Carefully rotate the backpan 180°.
4. Replace the upper wire chamber using previously removed hardware.
5. Replace the backpan foot using previously removed hardware.

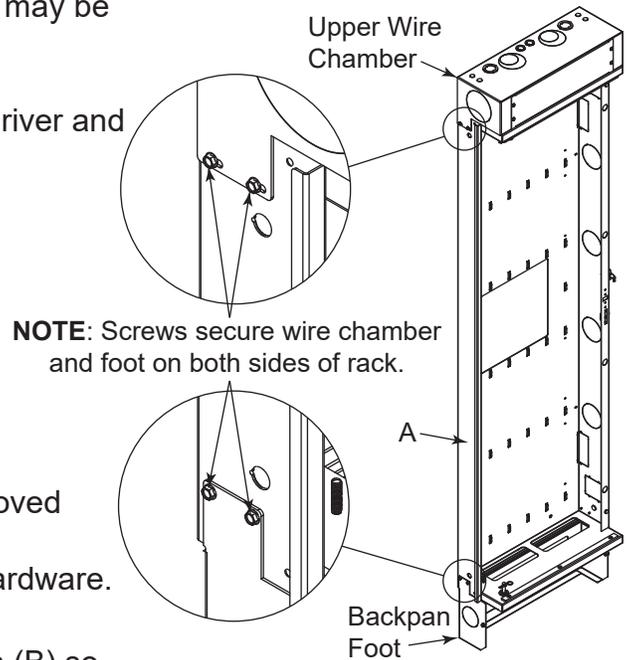

NOTE: Screws secure wire chamber and foot on both sides of rack.


NOTE: Holes are provided on both sides of center section (B) so bushing can be moved if rack is loaded and backpan is mounted with pivot on wrong side. Top and bottom may need to be removed to access bushings.

FIGURE A

ZERO CLEARANCE LATCH OPTION (DWRSR-ZL)

NOTE:


- Install the Zero Clearance Latch option before mounting the backpan (A) to the wall and loading equipment into the rack.
- For installation instructions, refer to the DWRSR-ZL Zero Clearance Latch instruction sheet (I-00142).
- The DWRSR-ZL must be installed for seismic compliance.

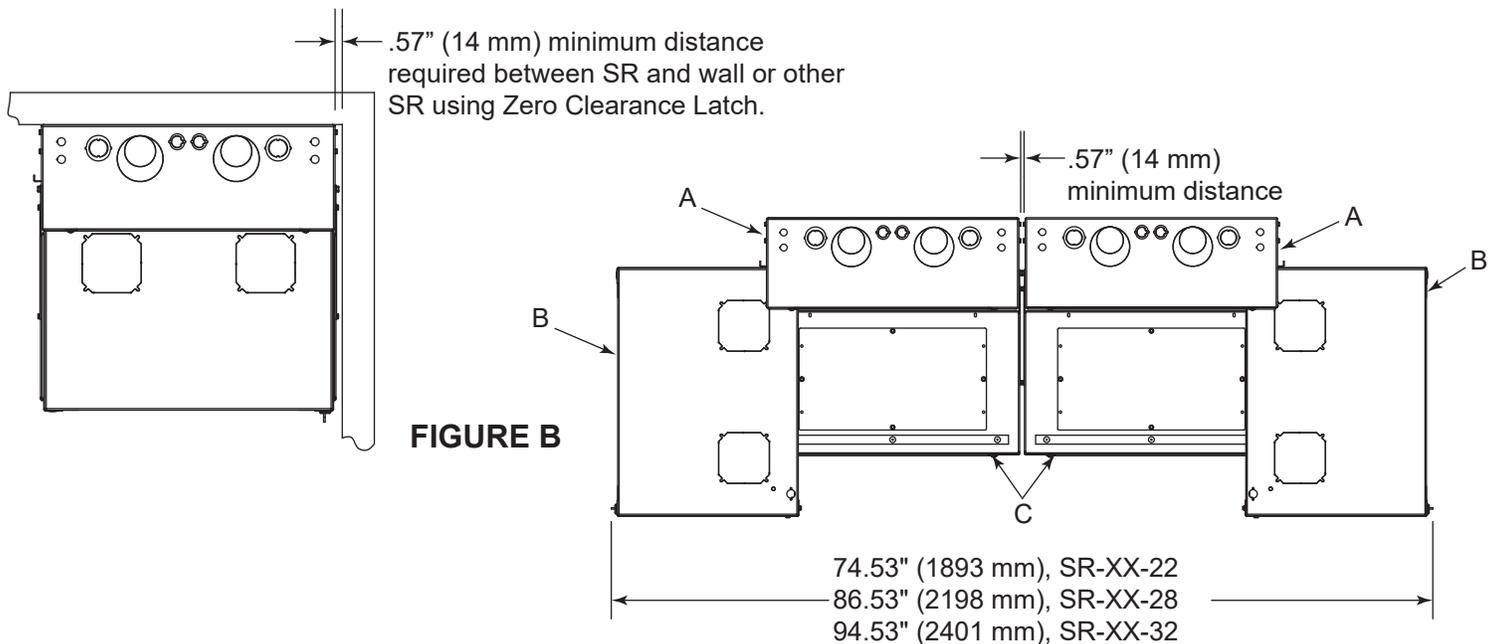

ZERO CLEARANCE LATCH OPTION (DWRSR-ZL, CONTINUED)

The zero clearance latch option saves valuable wall space by allowing wall racks to be placed side-by-side, in a corner, or wherever side clearance is an issue. This easy to install option upgrades new SR Series enclosures to allow the center section (B) to lock closed without the need for side latches.


Open by pulling the convenient front-mounted handle as shown. **(FIGURE C)**

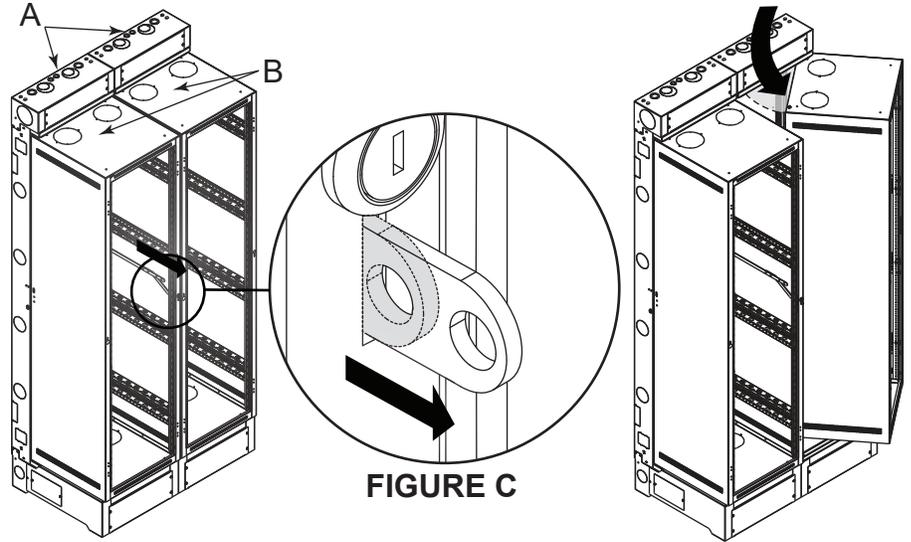

Unlike time-consuming threaded rods, the unique latch provides keylocked security from the front and is keyed differently than the front door option.


INSTALLING THE SUB PLATE MOUNTING OPTION (SR-SUB)

NOTE: Install the Sub Plate Mounting option (model number: SR-SUB, sold separately) before mounting the backpan (A) to the wall and loading equipment into the rack.

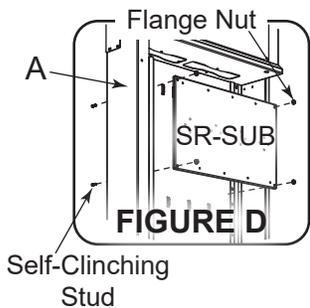


- Insert self-clinching stud through mounting holes in backpan (A), through SR-SUB, and then tighten flange nuts on self-clinching studs. **(FIGURE D)**

NOTE: Hardware included with option.

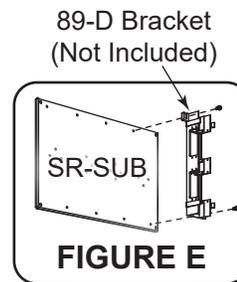

- Each SR-SUB allows for the mounting of up to (4x) 89-D type brackets, (4x) 1900 boxes or (1x) Raco 3 gang box. **(FIGURE E)**

NOTE: Hardware included with option.

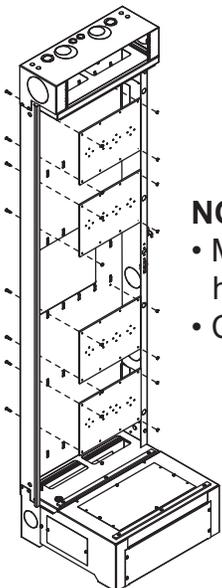

NOTE:

- Mount up to (4x) SR-SUB plates to each backpan (depending on model) using mounting holes and included hardware. **(FIGURE F)**
- Center section (B) of enclosure removed for clarity.

FIGURE F

PRIOR TO MOUNTING BACKPAN TO WALL

NOTE:

- When installing next to another SR or wall using the zero clearance latch option, perform the support base (C) installation for access to the base screws before mounting the backpan (A). For more information, see “Installing the Base” on page 9.
- On 46 space SR enclosures, you may install either a dust cover or upper wire chamber option on top of the rack. For more information, refer to the Dust Cover and Upper Wire Chamber Options instruction sheet (I-00155) at www.legrandav.com.

MOUNTING THE BACKPAN TO STUDS



CAUTION: The backpan must be installed plumb and level for proper operation.

ATTENTION: La plaque profilée doit être aplomb et de niveau pour un fonctionnement.

NOTE:

- Ensure the backpan (A) is screwed to the studs. **(FIGURE H)**
- Use 5/16" diameter lag bolts with a minimum length of 2" and standard flat washers for hardware (not provided).
- The standard flat washers must be installed under the lag bolt heads.

1. Align backpan (A) to selected wall location and mark pilot holes through wall mounting points as shown. **(FIGURE G)**

2. Use power driver and 3/16" bit to drill pilot holes on stud center markings. **(FIGURE H)**

3. Use 1/2" socket, 5/16" lag bolts and washers (not provided) in 6 places: (4x) on pivot side and (2x) on latch side. **(FIGURE G)**


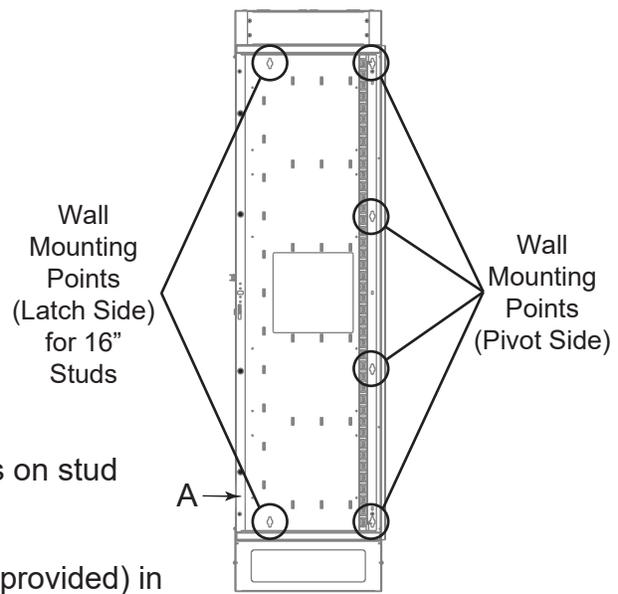


FIGURE G

NOTE: Verify your power driver torque is on the lightest setting and only increase as necessary.

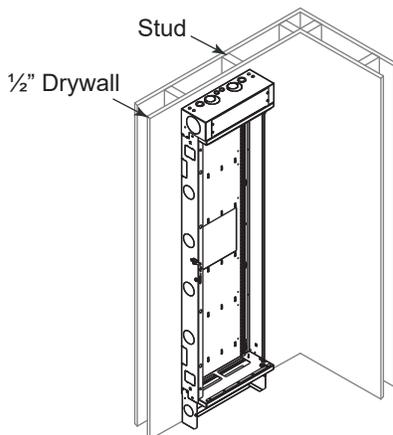

Lag bolt must protrude 2" into the stud.

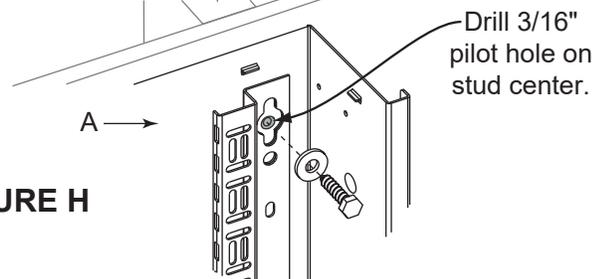


FIGURE H

MOUNTING THE BACKPAN TO CONCRETE BLOCK (INSTALL NOT EVALUATED BY UL)



CAUTION: The backpan must be installed plumb and level for proper operation.

ATTENTION: La plaque profilée doit être aplomb et de niveau pour un fonctionnement.

1. Align backpan (A) to selected wall location and mark pilot holes through wall mounting points as shown. (**FIGURE J**)

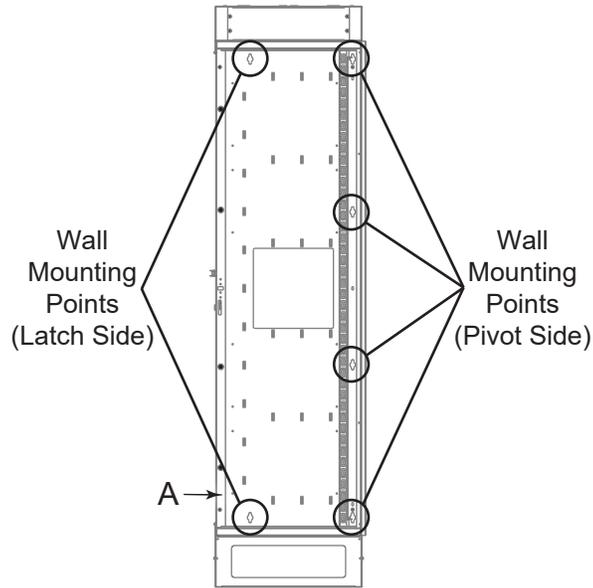


FIGURE J

2. Drill at least 1" into concrete block for your selected hardware (not provided). (**FIGURE K**)
3. Use toggle bolts and washers (or other appropriate hardware, not provided) in 6 places: (4x) on pivot side and (2x) on latch side. (**FIGURE J**)

NOTE: Verify your power driver torque is on the lightest setting and only increase as necessary.

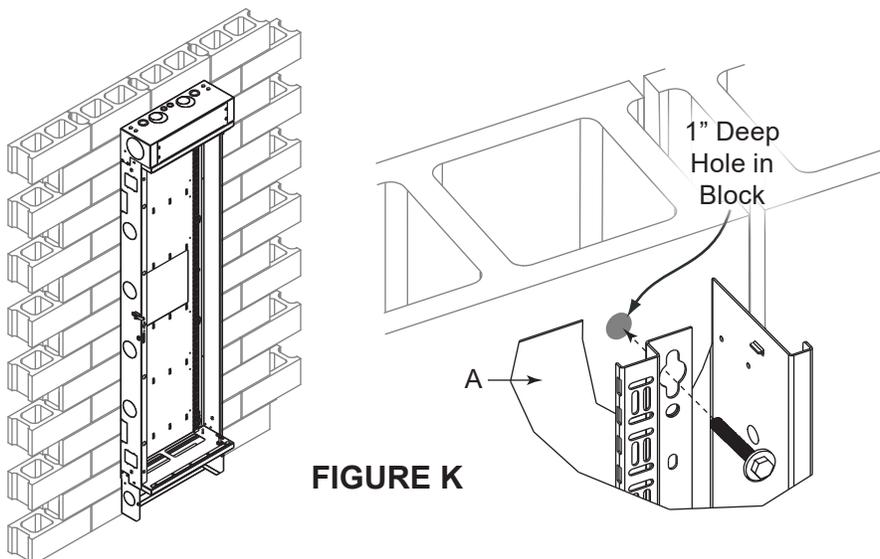


FIGURE K

INSTALLING THE BASE

1. Use power driver and 3/8" socket to remove (2x) 3/8" screws pre-installed on the bottom foot of the backpan (A). **(FIGURE L)**

NOTE: If using power driver, verify the torque is on the lightest setting and only increase as necessary.

2. Position the support base (C) to the outside of the backpan foot (A).

3. Use hardware from previous step to attach the base to the backpan foot.

Base mounts to outside of foot.

Pivoting support base compensates for variations in floor.

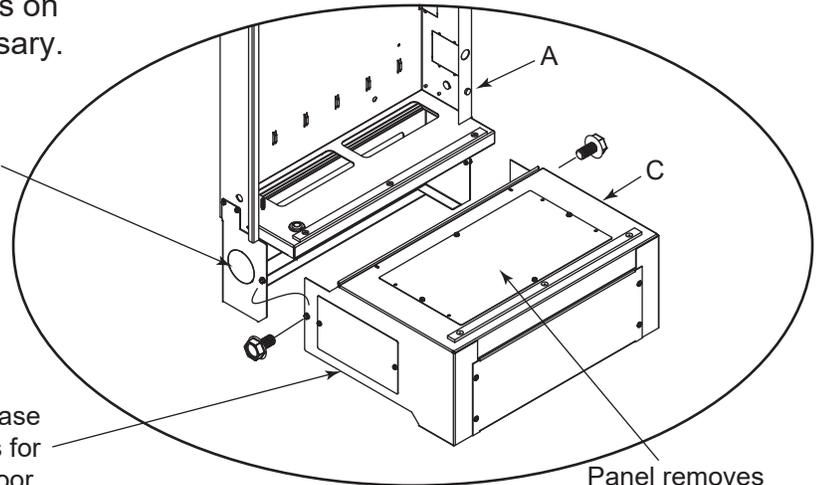


FIGURE L

Panel removes for wire access.

PREPARING TO MOUNT CENTER SECTION

1. Use power driver and #2 Phillips bit to remove (4x) screws and take the top access panel off the upper wire chamber. **(FIGURE M)**

NOTE: If using power driver, verify the torque is on the lightest setting and only increase as necessary.

2. **FOR 46 SPACE SR ENCLOSURES ONLY:**

Remove dust cover option, if installed, before proceeding. For more information, refer to the Dust Cover and Upper Wire Chamber Options instruction sheet (I-00155) at www.middleatlantic.com.

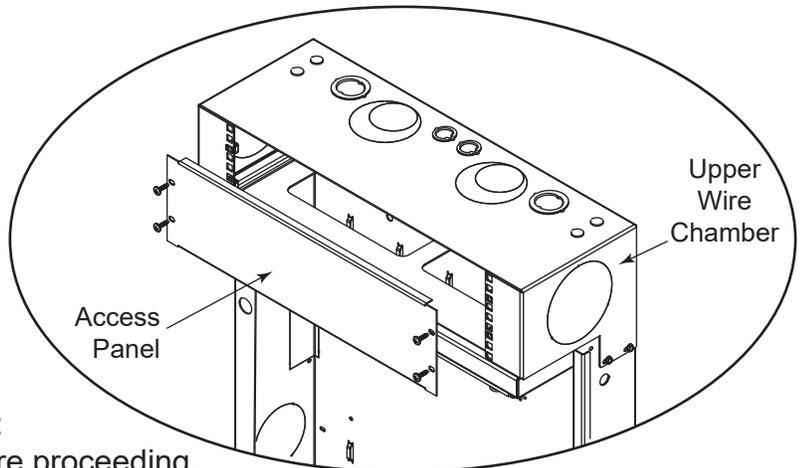


FIGURE M

Upper Wire Chamber

Access Panel

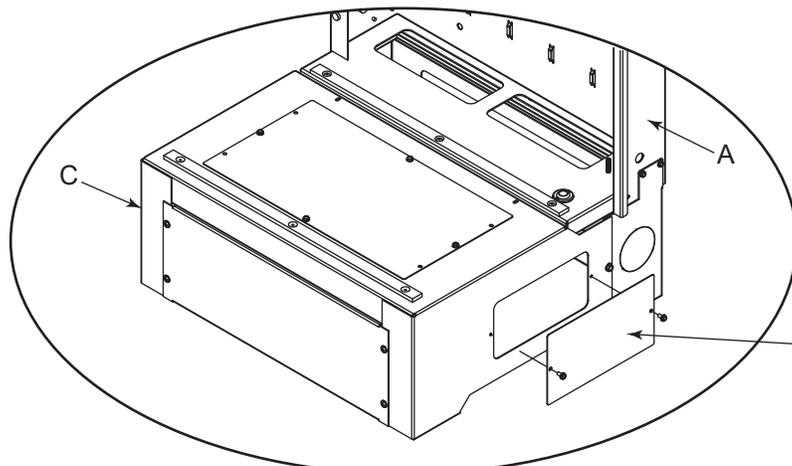


FIGURE N

3. Use 5/16" socket to remove (2x) screws and bottom access panel on the pivot side of the base (C) only. **(FIGURE N)**

Access Panel

MOUNTING THE CENTER SECTION TO THE BACKPAN

NOTE: The pivot pins and security clips needed to mount the center section (B) to the backpan (A) are pre-installed in the bushings on the backpan top and bottom. **(FIGURE P)**

1. Remove the clips and unscrew the pins.

NOTE: Use slip joint pliers to carefully remove the pins, if necessary.

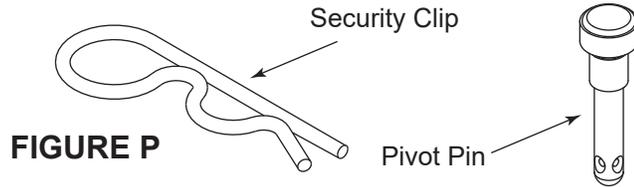


FIGURE P

2. Remove wire-tied trim inside of center section and set aside for installation.

3. Place center section (B) up on support base (C) with pivot bushing hanging over side of support base approximately 3" to 6". **(FIGURE R)**

4. Push center section (B) back. **(FIGURE S)**

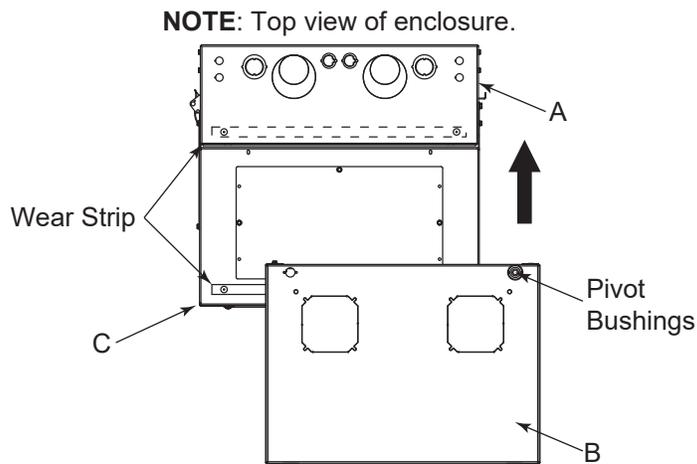


FIGURE R

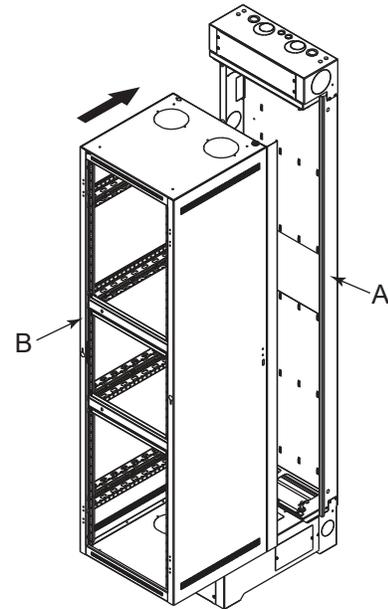


FIGURE S

5. Once pivot has passed lower and upper wear strips located on backpan (A), slide center section (B) over to engage the pivot bushing. **(FIGURE T)**


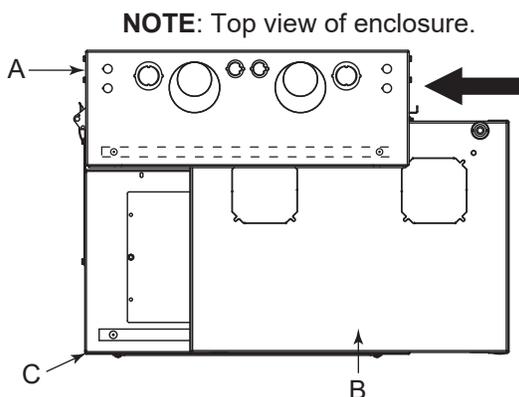


FIGURE T

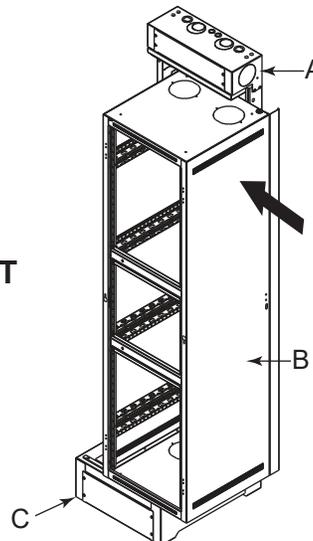

MOUNTING THE CENTER SECTION TO THE BACKPAN (CONTINUED)

6. Keeping the center section (B) in the closed position, insert a pivot pin through the bottom access hole into bushing, hand tighten fully, and then back out one turn. **(FIGURE U)**
7. Open center section (B) slightly for top pin alignment.
8. Going through the upper wire chamber, drop the pivot pin into the top bushing (use tip of pin to find alignment) and insert, hand tighten fully, and then back out one turn.

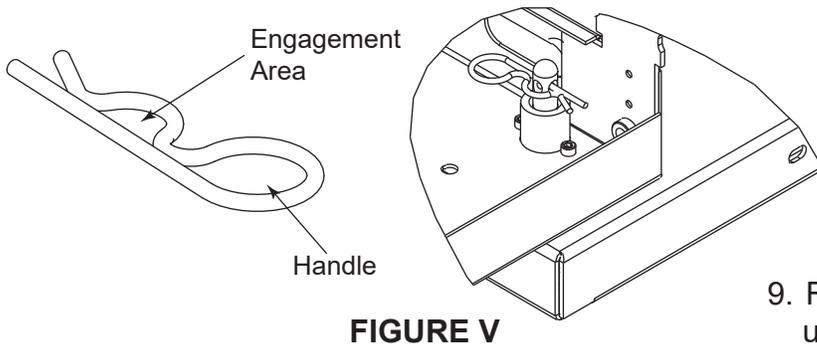


FIGURE V

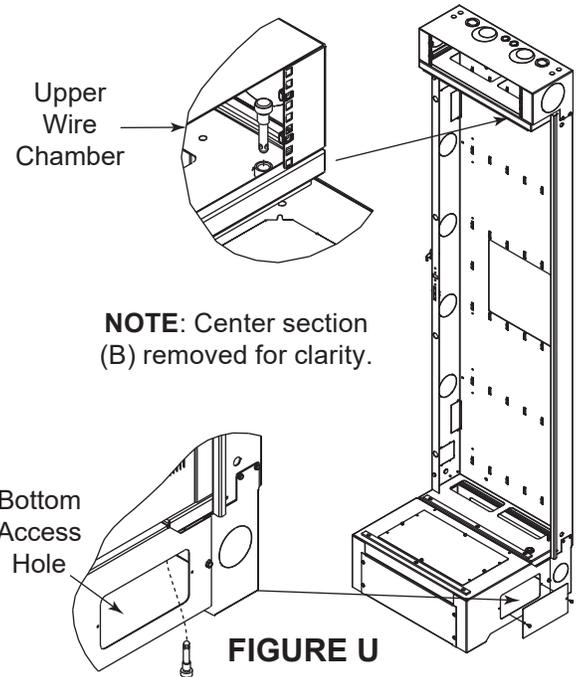


FIGURE U

9. Re-install the security clips to prevent unintentional pivot pin removal. **(FIGURE V)**

NOTE:

- Slide security clip into engagement area. Do not push pin in all the way. **(FIGURE V)**
- The center section (B) may be secured to the backpan (A) using the latch.
- The keys (D) may be used for additional security when securing your enclosure in the closed position.

10. Re-install access panels by reversing the steps in "Preparing to Mount Center Section" on page 9.
11. **FOR 46 SPACE SR ENCLOSURES ONLY:** Install dust cover or upper wire chamber option. For more information, refer to the Dust Cover and Upper Wire Chamber Options instruction sheet (I-00155) at www.legrandav.com.

INSTALLING THE TRIM TO THE BACK, PIVOT SIDE OF THE CENTER SECTION

1. Pivot center section (B) into fully open position.
2. Use power driver, 5/16" socket, and the screws pre-installed on the back of the center section (B) to install trim (E) on the pivot side of the center section as shown. **(FIGURE W)**

NOTE:

- If using power driver, verify the torque is on the lightest setting and only increase as necessary.
- Thread cutting screws are provided on both sides of the center section for convenience. Leave unused thread cutting screws in place on opposite side.


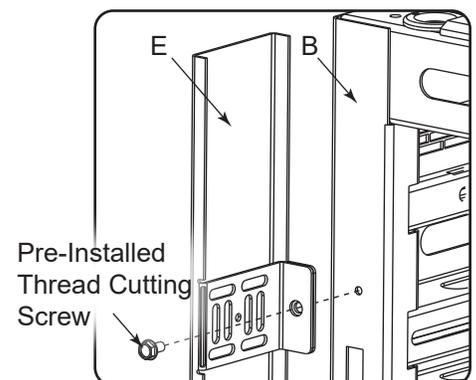


FIGURE W

INSTALLING POWER STRIPS

Compatible Middle Atlantic Products power strips can be mounted inside the trim (E) with the included hardware. This simplifies cable management by requiring no additional accessories.

NOTE: Reference which power strip models are compatible with your specific size enclosure at www.legrandav.com.

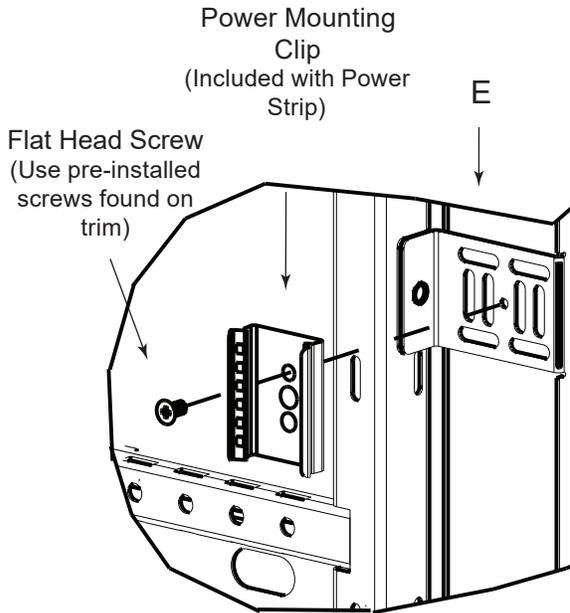

1. Use power driver and #2 Phillips bit to remove pre-installed flat head screw. **(FIGURE X)**
2. Use driver, phillips bit and the flat head screw to secure each power mounting clip to the trim.



NOTE:

- Reference the compatible power strip models for your specific size enclosure at www.legrandav.com to determine whether yours requires the use of 1 or 2 power mounting clips.
- Verify your power driver torque is on the lightest setting and only increase as necessary.

3. Use a rubber mallet and gently tap your power strip into the power mounting clip(s), if needed.

TIP: To remove your power strip from the mounting clip(s), carefully wedge a #2 flat head screwdriver between the side of your power strip and mounting clip, and gently pry the strip from the clip(s) as shown. **(FIGURE Y)**

FIGURE X

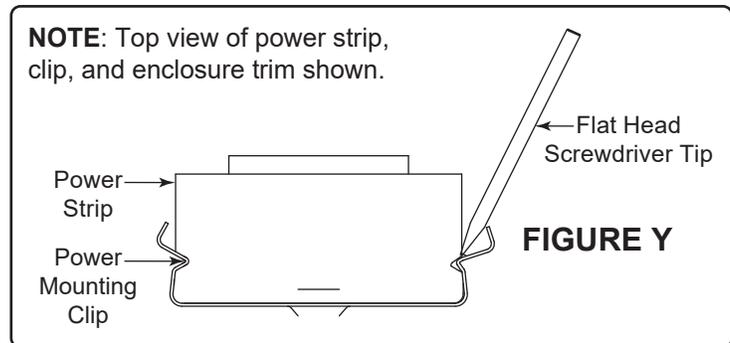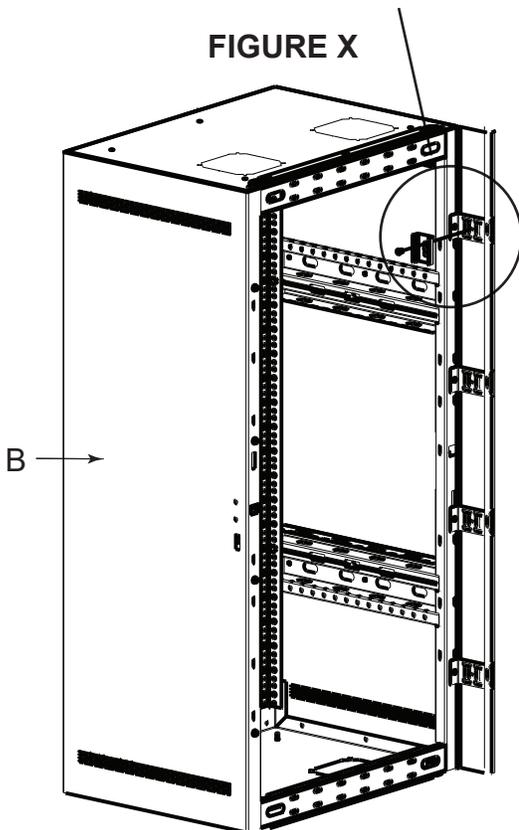

GROUNDING AND BONDING

Protective Earth Terminals (PET) are located in backpan of the wall rack. These terminals are marked with the symbol . Wall rack parts, center section and door, contain or are provided with bonding points for connection to the backpan / PET. Protective earth and bonding connections shall be in accordance with Article 250 of the National Electric Code.

PROTECTIVE EARTH TERMINAL KIT (MODEL NO. PET-K-D/EWR, OPTIONAL)



12 Gauge Backpan Bonding Wire
14" (356 mm) Length
(#10 to 1/4" ring terminals)



1/4-20
Flange
Nut



10-32
Locking
Nut

PROTECTIVE EARTH TERMINAL KIT (MODEL NO. PET-K-SR, OPTIONAL)



(2x) 12 Gauge Door Bonding Wire
9" (227 mm) Length
(#10 to 1/4" ring terminals)



1/4-20
Flange
Nut



(2x) 10-32
Locking
Nut

1. Use 7/16" and 3/8" wrenches, and 1/4"-20 and 10-32 nuts to attach the backpan bonding wire from the 1/4"-20 backpan protective earth terminal (PET) to nearest 10-32 center section (B) bonding stud. **(FIGURE Z)**

NOTE: The main protective earth ground needs to be the first terminal placed on the PET and this terminal needs to be secured on its own with a nut. The bonding wire for the center section (B) can be added to the PET after securing the nut for the main ground.

2. Use 7/16" and 3/8" wrenches, and 1/4"-20 and 10-32 nuts to attach a door bonding wire from a 10-32 upper wire chamber bonding stud to the nearest 10-32 center section (B) stud.
3. Use 7/16" and 3/8" wrenches, and 1/4"-20 and 10-32 nuts to attach a door bonding wire from a 10-32 support base (C) bonding stud to the nearest 10-32 center section (B) stud.



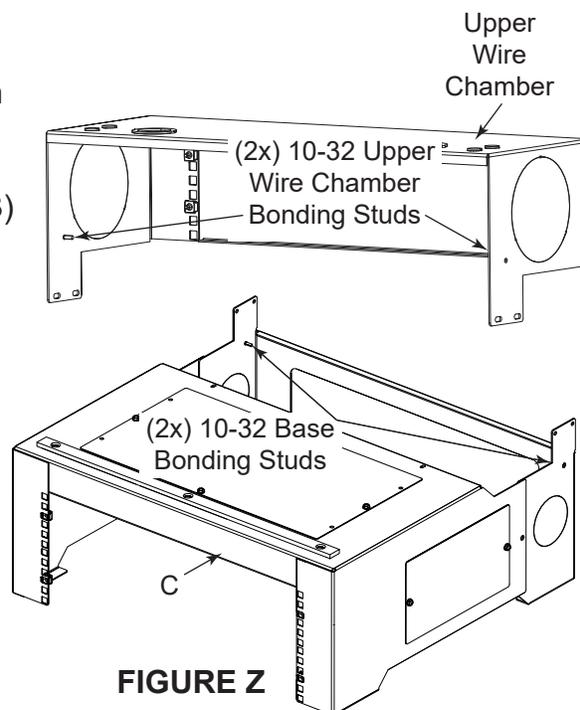


FIGURE Z

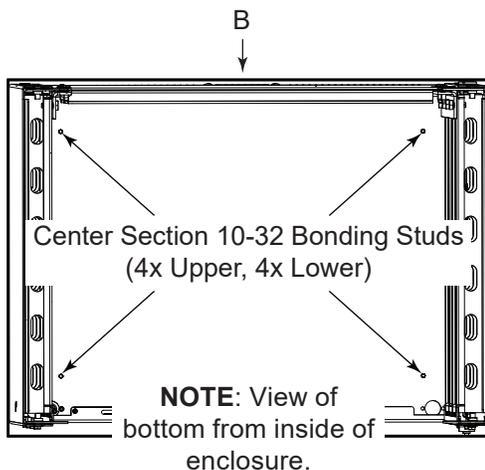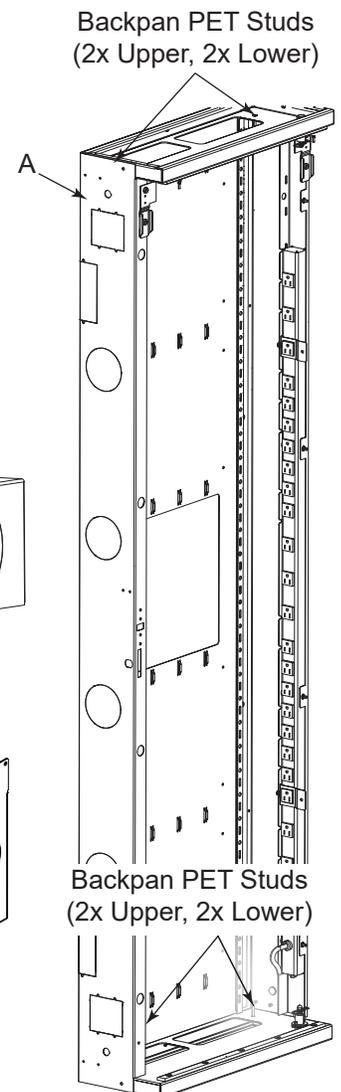

THERMAL KNOCKOUTS BASED ON ENCLOSURE DEPTHS

Thermal knockout sizes vary based on the following enclosure depths:

- Enclosure 22" (559 mm) deep accept (2x) 4" fans. (**FIGURE AA**)
- Enclosures 28" (660 mm) and 32" (813 mm) deep accept (2x) 6" fans. (**FIGURE AB**)

NOTE: Use a hammer to carefully clear any knockouts you wish to use.

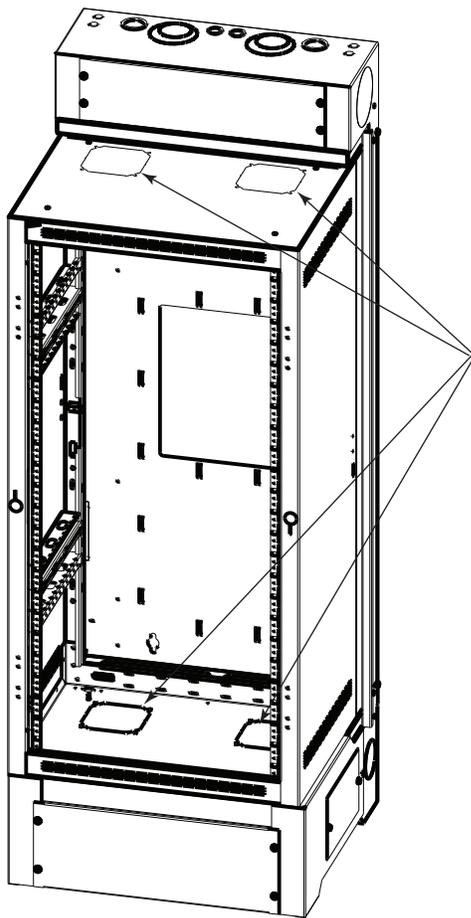


FIGURE AA

KNOCKOUTS
FOR 4" FANS

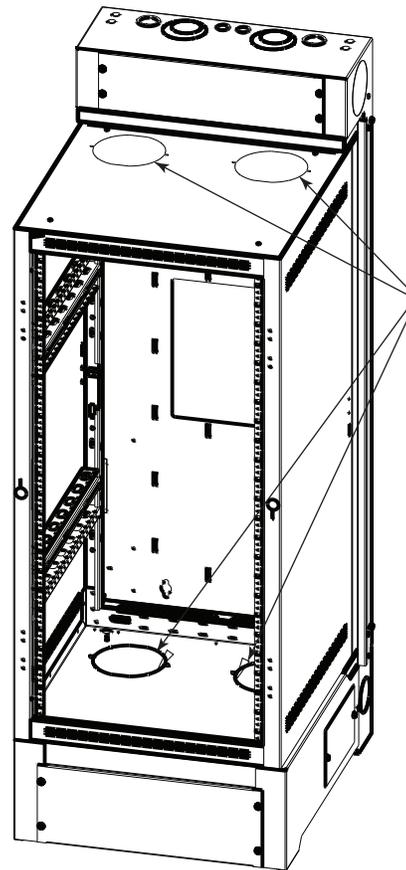


FIGURE AB

KNOCKOUTS
FOR 6" FANS

WARRANTY

For warranty information, refer to legrandav.com/policies/warranty_information.

Corporate Headquarters

P: (866) 977-3901 | F: (877) 894-6918 | legrandav.com | av.support@legrand.com

Middle Atlantic Canada

P: (888) 766-9770 | F: (888) 599-5009 | ca.legrandav.com | av.canada.customerservice@legrand.com

Middle Atlantic EMEA Technical Support

P: +31 495-726-003 | av.emea.middleatlantic.support@legrand.com

Factory Distribution

United States: New Jersey, California, and Illinois | Canada: Ontario | The Netherlands: Weert

At Legrand AV Inc. we are always listening. Your comments are welcome.

Legrand AV is an ISO 9001 and ISO 14001 Registered Company.

**MIDDLE
ATLANTIC®**

A brand of  **legrand®**