

QUICKSTART GUIDE

Elite Universal Tablet & iPad Teleprompter



What's Included

- □ 1 x Glass Assembly
- □ 1 x Magnetic Hood
- □ 2 x 12-Inch Rods
- □ 1 x Baseplate Assembly
- 1 x Tablet Holder





What's Included





```
Magnetic Sunhood
```

2 x 12-Inch Rods



Baseplate Assembly





How to Assemble

1. Attach tablet mount to glass frame assembly. Figures 1a, 1b, 1c.





- 2. Insert rods into rail mount on glass frame assembly.
- 3. Slide baseplate onto rods.
- 4. Adjust spacing for your camera.
- 5. Tighten & loosen thumb screws to adjust glass frame. Ideal angle is 45 degrees.



6. Attach magnetic hood to glass frame.

7. Remove quick release plate & attach your camera. Reattach.

DO NOT THROW AWAY FOAM INSERT.

8. The PT-ELITE-v2 comes packaged in high quality custom-cut foam. It is sized perfectly to fit inside an SKB-i Series 1914-8 waterproof case.

Software Options

Windows: Choose from PrompterPro from Ikan, or from multiple third party options in the Windows Store or on the Web.

iOS: Choose from multiple 3rd party options on Apple Store **Android:** Choose from multiple 3rd party options on Google Play Store *Visit www.ikancorp.com for a list of recommended apps.*

Learn More

More dynamic information at official website: www.ikancorp.com

Support

Contact email: support@ikancorp.com

Conditions of warranty service

Free service for one year from the day of purchase if the problem is caused by manufacturing errors.

• The components and maintenance service fee will be charged if the warranty period is expired.

Free Service will not be Provided in the Following Situations:(*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.