
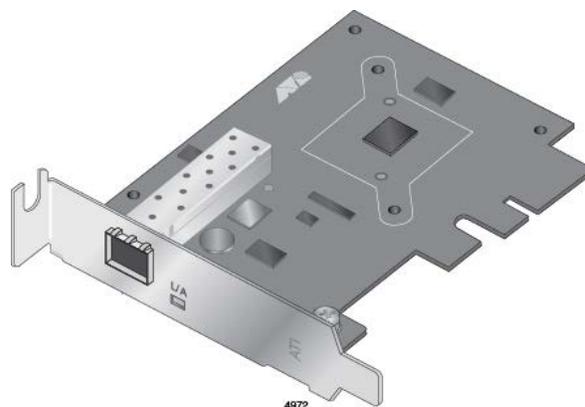
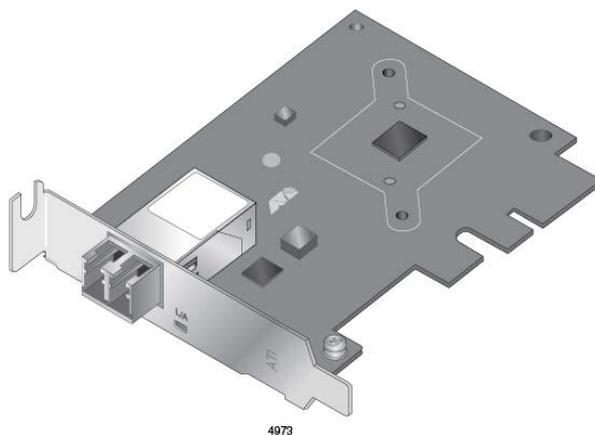


DNCI0 Series

Single 10G Port Network Adapter Cards
with PCIe x4 Express Interface

- ❑ DNCI0T
- ❑ DNCI0LC
- ❑ DNCI0SP

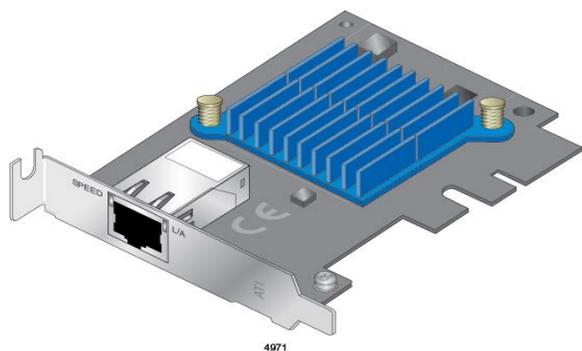

Installation and User Guide

Copyright © 2024 Allied Telesis, Inc.

All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc. Allied Telesis and the Allied Telesis logo are trademarks of Allied Telesis, Incorporated. All other product names, company names, logos or other designations mentioned herein are trademarks or registered trademarks of their respective owners.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

Electrical Safety and Emissions Standards

This product meets the following standards.

Federal Communications Commission Interference Statement

Declaration of Conformity

Manufacturer Name: Allied Telesis, Inc.

Declares that the product: **DNC10 Series 1 Port 10G Network Interface Card (w/PCI x4 Express Interface)**

Model Numbers: **DNC10LC, DNC10SP, and DNC10T**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device must not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

Industry Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union Restriction of the Use of Certain Hazardous Substances (RoHS) in Electrical and Electronic Equipment

This Allied Telesis RoHS-compliant product conforms to the European Union Restriction of the Use of Certain Hazardous Substances (RoHS) in Electrical and Electronic Equipment. Allied Telesis ensures RoHS conformance by requiring supplier Declarations of Conformity, monitoring incoming materials, and maintaining manufacturing process controls.

RFI Emissions FCC Class B, EN55032 Class B, VCCI Class B, ICES-003 Issue 6

Immunity EN55035

Electrical Safety EN2368-1 (TUV), UL 62368-1 (cUL_{US})



Laser Safety EN60825

Contents

Preface	11
Safety Symbols Used in this Document	12
Translated Safety Statements	13
Chapter 1: Introduction	15
Functional Description	16
DNC10LC Adapter Card	18
DNC10SP Adapter Card	19
DNC10T Adapter Card	21
Features	23
Hardware	23
Software	23
Chapter 2: Installing the Hardware	25
System Requirements	26
Reviewing Safety Precautions	27
Pre-Installation Checklist	29
Replacing the Bracket	30
Installing a Network Adapter	32
Connecting the Network Cable	35
DNC10LC Network Adapter	35
DNC10SP Network Adapter	35
DNC10T Network Adapter	36
Chapter 3: Installing the Driver Software	37
Overview	38
Guidelines	38
Installing the Driver with the Device Manager	39
Installing the Driver with the Silent Installation Method	39
Downloading the Driver Software	40
Accessing the Device Manager	42
Installing the Driver Software	44
Updating the Driver Software	47
Performing the Silent Installation	48
Silently Installing the Driver	48
Viewing Supported DPInst Options	49
Chapter 4: Modifying Advanced Properties	51
Overview	53
Guidelines	53
Accessing Advanced Properties	54
ARP Offload	56
Downshift Retries	57
Energy-Efficient Ethernet	58
Flow Control	59
Interrupt Moderation	60
Interrupt Moderation Rate	61
IPv4 Checksum Offload	63

Jumbo Packet	64
Large Send Offload v1 (IPv4)	66
Large Send Offload v2 (IPv4)	67
Large Send Offload v2 (IPv6)	68
Link Speed	69
Locally Administered Address	71
Log Link State Event	73
Maximum Number of RSS Queues	74
NS Offload	75
Priority & VLAN	76
Receive Buffers	78
Receive Side Scaling	79
Recv Segment Coalescing (IPv4)	80
Recv Segment Coalescing (IPv6)	81
TCP/UDP Checksum Offload (IPv4)	82
TCP/UDP Checksum Offload (IPv6)	84
Transmit Buffers	86
VLAN ID	87
VLAN Monitor Mode	88
Wait for Link	89
Wake from Power Off State	91
Wake on Link	92
Wake on Magic Packet	93
Wake on Pattern Match	94
Wake on Ping	95
Chapter 5: Uninstalling the Driver Software	97
Overview	98
Guidelines	98
Uninstalling the Driver Software Using Device Manager	99
Uninstalling the Driver Software Silently	100
Chapter 6: Troubleshooting	101
Troubleshooting Checklist	102
General Troubleshooting	102
DNC10LC Adapter	103
DNC10SP Adapter	103
DNC10T Adapter	104
Testing Network Connectivity	105
Appendix A: Technical Specifications	107
Physical Specifications	107
Environmental Specifications	108
Power Specifications	108
RJ-45 Twisted Pair Port Pinouts	109

Tables

Table 1. DNC10 Series of 10G Adapter Cards	16
Table 2. LED Status on the DNC10LC Adapter Card	18
Table 3. LED Status on the DNC10SP Adapter Card	20
Table 4. Link and Activity LEDs on the DNC10T Adapter Card	22
Table 5. Adapter Drivers for the DNC10 Series	38
Table 6. Weights	107
Table 7. Dimensions	107
Table 8. Environmental Specifications	108
Table 9. Operating Voltages and Maximum Power Consumption	108
Table 10. Pin Signals on the RJ-45 Twisted Pair Port at 100Mbps	109
Table 11. Pin Signals on the Twisted Pair Port at 1/2.5/5/10Gbps	110

Figures

Figure 1: DNC10LC Adapter Card.....	18
Figure 2: Duplex LC Fiber Optic Port on the DNC10LC Adapter Card.....	18
Figure 3: DNC10SP Adapter Card.....	20
Figure 4: SFP+ Port on the DNC10SP Adapter Card.....	20
Figure 5: DNC10T Adapter Card.....	21
Figure 6: Twisted Pair Cable Port on the DNC10T Adapter Card.....	21
Figure 7: Removing the Low-Profile Bracket.....	30
Figure 8: Installing the Standard Bracket.....	31
Figure 9: Removing the PC Cover.....	33
Figure 10: Removing the Faceplate From PCIe Slot.....	33
Figure 11: Inserting the Network Adapter.....	34
Figure 12: Securing the Network Adapter.....	34
Figure 13: Software Downloads Window on the Allied Telesis Web Site.....	40
Figure 14: Drivers for DNC10 Series Network Adapters Download Window.....	41
Figure 15: Windows Menu.....	42
Figure 16: Device Manager Window.....	43
Figure 17: Searching for Device Manager.....	43
Figure 18: Update Drivers Window.....	44
Figure 19: Selecting the DNC10 Series Adapter in the Device Manager.....	45
Figure 20: Browse for Drivers on Your Computer.....	46
Figure 21: Advanced Properties Window.....	55
Figure 22: ARP Offload Page.....	56
Figure 23: Downshift Retries Page.....	57
Figure 24: Energy-Efficient Ethernet Page.....	58
Figure 25: Flow Control Page.....	59
Figure 26: Interrupt Moderation Page.....	60
Figure 27: Interrupt Moderation Rate Page.....	61
Figure 28: IPv4 Checksum Offload Page.....	63
Figure 29: Jumbo Packet Page.....	64
Figure 30: Large Send Offload v1 (IPv4) Page.....	66
Figure 31: Large Send Offload v2 (IPv4) Page.....	67
Figure 32: Large Send Offload (IPv6) Page.....	68
Figure 33: Link Speed Page.....	69
Figure 34: Locally Administered Address Page.....	71
Figure 35: Log Link State Event Page.....	73
Figure 36: Maximum Number of RSS Queues Page.....	74
Figure 37: NS Offload Page.....	75
Figure 38: Priority & VLAN Page.....	76
Figure 39: Receive Buffers Page.....	78
Figure 40: Receive Side Scaling Page.....	79
Figure 41: Receive Segment Coalescing (IPv4) Page.....	80
Figure 42: Receive Segment Coalescing (IPv6) Page.....	81
Figure 43: TCP/UDP Checksum Offload (IPv4) Page.....	82
Figure 44: TCP/UDP Checksum Offload (IPv6) Page.....	84
Figure 45: Transmit Buffers Page.....	86
Figure 46: VLAN ID Page.....	87
Figure 47: VLAN Monitor Mode Page.....	88
Figure 48: Wait for Link Page.....	89
Figure 49: Wake from Power Off State Page.....	91

List of Figures

Figure 50: Wake on Link Page.....	92
Figure 51: Wake on Magic Packet Page.....	93
Figure 52: Wake on Pattern Match Page.....	94
Figure 53: Wake on Ping Page.....	95
Figure 54: Device Manager Shortcut Menu	99
Figure 55: IPCONFIG Command.....	106
Figure 56: Ping Command.....	106
Figure 57: Pin Layout (Front View) of the Twisted Pair Port on the DNC10T Adapter	109

Preface

This guide contains the installation and management instructions for the following DNC10 Series of single port, 10G network adapter cards, with Wake-on-LAN (WoL):

- ❑ DNC10SP
- ❑ DNC10LC
- ❑ DNC10T

The Preface contains the following sections:

- ❑ “Safety Symbols Used in this Document” on page 12
- ❑ “Translated Safety Statements” on page 13

Safety Symbols Used in this Document

This document uses the following conventions:

Note

Notes provide additional information.



Caution

Cautions inform you that performing or omitting a specific action may result in equipment damage or loss of data.



Warning

Warnings inform you that performing or omitting a specific action may result in bodily injury.



Warning

Laser warnings inform you that an eye or skin hazard exists due to the presence of a Class 1 laser device.

Translated Safety Statements

Important: The  indicates that translations of the safety statement are available in the PDF document **Translated Safety Statements** posted on the Allied Telesis website at alliedtelesis.com/library/search.

- Übersetzte Sicherheitserklärungen

Wichtig: Das  zeigt an, dass Übersetzungen der Sicherheitserklärung in den PDF-**Translated Safety Statements** auf der Allied Telesis-Website unter alliedtelesis.com/us/en/library/search verfügbar sind.

- Declaraciones de seguridad traducidas

Importante: El  indica que las traducciones de la declaración de seguridad están disponibles en las **Translated Safety Statements** en PDF publicadas en el sitio web de Allied Telesis en alliedtelesis.com/us/en/library/search.

- Consignes de sécurité traduites

Important: Le symbole  indique que les traductions de la déclaration de sécurité sont disponibles dans le PDF **Translated Safety Statements** publiées sur le site Web de Allied Telesis à l'adresse alliedtelesis.com/us/en/library/search.

- Dichiarazioni di sicurezza tradotte

Importante:  indica che le traduzioni della dichiarazione di sicurezza sono disponibili nelle **Translated Safety Statements** in PDF pubblicate sul sito Web di Allied Telesis all'indirizzo alliedtelesis.com/us/en/library/search.

- Översatta säkerhetsförklaringar

Viktig:  anger att översättningar av säkerhetsförklaringen finns tillgängliga i PDF-dokumentet **Translated Safety Statements** som publicerats på Allied Telesis webbplats på alliedtelesis.com/us/en/library/search.

Chapter 1

Introduction

This chapter provides an introduction to the DNC10 Series of single port, 10G network adapter cards, with Wake-on-LAN (WoL). This chapter contains the following sections:

- ❑ “Functional Description” on page 16
- ❑ “DNC10LC Adapter Card” on page 18
- ❑ “DNC10SP Adapter Card” on page 19
- ❑ “DNC10T Adapter Card” on page 21
- ❑ “Features” on page 23

Functional Description

The 10G network adapters cards in the DNC10 Series have 10 Gigabit Ethernet (10GbE) interface controllers that are based on the Aquantia AQC100 10GbE media access controller (MAC), with integrated serializer/deserializer (SerDes).

The Aquantia diagnostic tool can be used with the device to provide firmware programming and a first level of diagnostics and fault isolation.

The cards have Peripheral Component Interconnect Express (PCIe) bus connectors that support PCIe x4 v3.0, 2.1 and 1.1a compliant interfaces.

The DNC10 Series can perform accelerated Ethernet data networking and storage networking simultaneously for all popular protocols used in the data center, and includes features such as Data Center Bridging.

Enterprise networks that use multiple protocols and multiple network fabrics benefit from the ability of the network interface cards to combine data communications, storage, and clustering over a single Ethernet fabric and to boost server CPU performance and memory utilization while alleviating I/O bottlenecks.

Wake-on-LAN (WoL) is a protocol for remotely turning on a computer from a low power mode with a network message. A magic packet is a network message that a WoL-enabled computer receives and wakes up when the computer's MAC address matches one in the magic packet.

As part of the company's green range, the adapter is engineered to reduce power consumption. It incorporates centralized power management features that automatically place idle circuitry into a lower power mode to save energy.

The basic characteristics of the adapter cards are listed in Table 1.

Table 1. DNC10 Series of 10G Adapter Cards

Adapter	Port	Speed	Cable Type	Maximum Distance	System Connection
DNC10SP	SFP+	10G/1G	Varies by SFP+ transceiver	Varies by SFP+ transceiver	PCIe x4 (Gen 3)
DNC10LC	Duplex LC	10G	OM1	33m	PCIe x4 (Gen 3)
			OM2	82m	
			OM3	300m	
			OM4	550m	

Table 1. DNC10 Series of 10G Adapter Cards (Continued)

Adapter	Port	Speed	Cable Type	Maximum Distance	System Connection
DNC10T	RJ45	10G	CAT6A	100m	PCIe x4 (Gen 3)
		5G/2.5G/ 1G/100M	CAT5e or CAT6A		

Note

The maximum operating distance of the SFP+ port in the DNC10SP Adapter Card depends on the transceiver. Refer to the product's data sheet on the Allied Telesis web site for a list of supported transceivers.

After physically installing the DNC10 Network Adapter in your computer, install the driver software by referring to Chapter 3, "Installing the Driver Software" on page 37.

DNC10LC Adapter Card

The DNC10LC Adapter Card has one 10G fiber optic port with a duplex LC connector. The port has a maximum operating distance of 300m with OM3 fiber optic cable. The card links at 10G only. It has one LED to show the networking state.

The DNC10LC Adapter Card has a PCIe x4 motherboard bus interface. Refer to Figure 1.

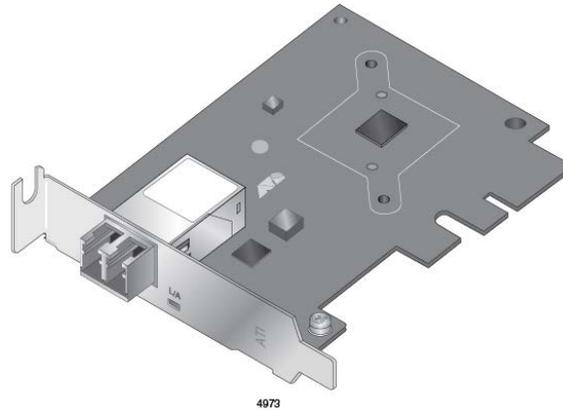


Figure 1. DNC10LC Adapter Card

The duplex LC fiber optic port is shown in Figure 2.

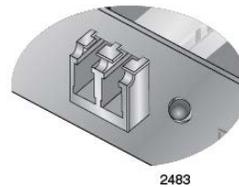


Figure 2. Duplex LC Fiber Optic Port on the DNC10LC Adapter Card

Table 2 describes the link states of the port LED.

Table 2. LED Status on the DNC10LC Adapter Card

Port LED	LED State	Description
L/A (Link/Activity)	Solid Green	The port has established a link with a network device.
	Off	The port has not established a link with a network device.
	Flashing Green	The port is receiving or transmitting network packets.

DNC10SP Adapter Card

The DNC10SP Adapter Card has a single port that supports 1G and 10G SFP+ transceivers. The card can automatically detect the speed of the transceiver. You cannot change the speed or duplex mode of the transceiver port. The maximum operating distance of an SFP+ port will vary depending on the SFP+ transceiver and type of fiber optic cabling. The card has one LED to show the networking state.

The port supports the following types of transceivers:

Note

See the Allied Telesis website for supported SFP models.

- ❑ 1Gbps SPSX and SPLX short and long distance SFP transceivers using multi-mode or single mode fiber optic cable.
- ❑ 10Gbps SP10SR and SP10LR SFP+ short and long distance SFP+ transceivers using multi-mode or single mode fiber optic cable.
- ❑ 10Gbps SP10BD series of bidirectional transceivers for single mode fiber optic cable with maximum operating distances of 10 to 40 kilometers.
- ❑ 10Gbps SP10TW series of direct connect twinax cables with SFP+ transceiver-style connectors, in lengths of 1, 3, and 7 meters.
- ❑ 10Gbps SP10T transceiver with RJ-45 connector for links up to 20 meters (depending on SFP) with Category 6a twisted pair cable, or 100 meters at 1Gbps.

Guidelines for the port are listed here:

- ❑ It does not support 100Mbps-FX transceivers.
- ❑ It supports full-duplex mode only.
- ❑ The adapter sets the speed automatically with Auto-Negotiation. The default is Auto-Negotiation.

The DNC10SP Adapter Card has a PCIe x4 motherboard bus interface. Refer to Figure 3.

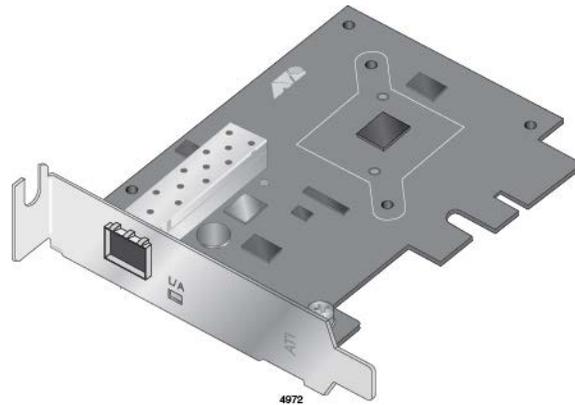


Figure 3. DNC10SP Adapter Card

Note

The SFP+ transceiver is sold separately. For a list of supported transceivers, refer to the product's data sheet on the Allied Telesis web site.

The SFP+ port is shown in Figure 4.



Figure 4. SFP+ Port on the DNC10SP Adapter Card

Table 2 describes the link states that the LED indicates.

Table 3. LED Status on the DNC10SP Adapter Card

Port LED	LED State	Description
L/A (Link/Activity)	Solid Green	The port has established a link with a network device.
	Off	The port has not established a link with a network device.
	Flashing Green	The port is receiving or transmitting network packets.

DNC10T Adapter Card

The DNC10T Adapter Card has one copper port that can operate at 100M or 1/2.5/5/10G. The card uses Auto-Negotiation to automatically set port speed and supports full-duplex mode only. The port has two status LEDs.

The adapter has a PCIe x4 motherboard bus connector. Refer to Figure 5.

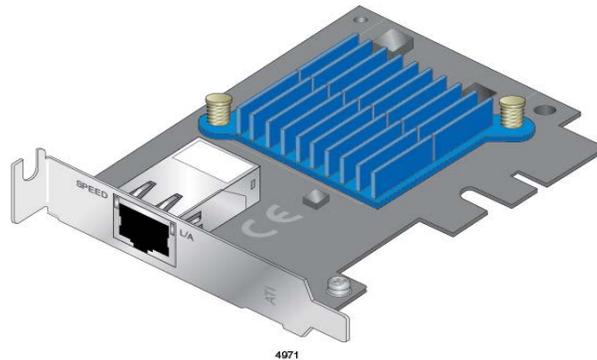


Figure 5. DNC10T Adapter Card

The twisted pair cable port is shown in Figure 6.

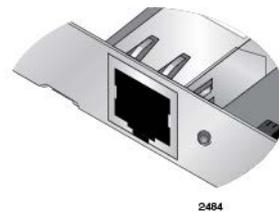


Figure 6. Twisted Pair Cable Port on the DNC10T Adapter Card

Minimum cable requirements are listed here:

- 100Mbps - Standard TIA/EIA 568-A-compliant Category 5 twisted pair cabling
- 1/2.5/5Gbps - Standard TIA/EIA 568-B-compliant Category 5e twisted pair cabling
- 10Gbps - Standard TIA/EIA 568-C-compliant Category 6A twisted pair cabling

The port has a maximum operating distance of 100 meters (328 feet).

The LEDs for the twisted pair port are described in Table 4.

Table 4. Link and Activity LEDs on the DNC10T Adapter Card

Port LEDs	LED State	Network State
Left	Green Steady On	The port has established a 10G link to a remote device.
	Amber Steady On	The port has established a 100M or 1/2.5/5G link to a remote device. The user will need to check connection properties in the operating system to determine the actual link speed.
	Off	The port has not established a link.
Right	Green Steady On	The port has established a link to a remote device.
	Green Blinking	The port is transmitting or receiving network traffic.
	Off	The port has not established a link.

Features

Here are the key features of the DNC10 Series of 10G network adapter cards:

Hardware

- The DNC10SP Adapter Card supports one SFP+ port
- The DNC10LC Adapter Card supports one fiber optic port with a duplex LC connector
- The DNC10T Adapter Card supports one twisted pair port
- PCIe v3.0, 2.1, and 1.1a compliant
- TCP, IP, and UDP checksum
- Virtual LANs (VLANs) - 802.1q VLAN tagging
- Jumbo Frame support up to 16 KBytes
- Advanced Configuration and Power Interface (ACPI) power management compliant
- Low profile form factor
- RoHS compliant
- Preboot Execution Environment (PXE) v2.1
- Unified Extensible Firmware Interface (UEFI)
- Low profile and standard bracket
- Wake-on-LAN (WoL)
- Quality of Service (QoS) support up to eight traffic classes
- Data Center Bridging (DCB)

Software

- Windows 11
- Windows 10
- Windows Server 2022
- Windows Server 2019
- Linux

Chapter 2

Installing the Hardware

This chapter contains the following sections:

- ❑ “System Requirements” on page 26
- ❑ “Reviewing Safety Precautions” on page 27
- ❑ “Pre-Installation Checklist” on page 29
- ❑ “Replacing the Bracket” on page 30
- ❑ “Installing a Network Adapter” on page 32
- ❑ “Connecting the Network Cable” on page 35

System Requirements

Before installing the DNC10 Network Adapter, verify that your system meets the following requirements:

- ❑ Computer has one of the following operating systems:
 - Windows 11
 - Windows 10
 - Windows Server 2022
 - Windows Server 2019
 - Linux
- ❑ One open PCIe x4 or larger slot

Reviewing Safety Precautions

Important: Safety statements that have the ⚡ symbol are translated into multiple languages in the *Translated Safety Statements* document at www.alliedtelesis.com/library. Refer to “Translated Safety Statements” on page 13.

**Warning**

Do not stare into the laser beam. ⚡ **L2**

**Warning**

The fiber optic ports contain a Class 1 laser device. When the ports are disconnected, always cover them with the provided plug. Exposed ports may cause skin or eye damage. ⚡ **L4**

**Warning**

Do not look directly at the fiber optic cable ends or inspect the cable ends with an optical lens. ⚡ **L6**

**Warning**

Do not work on this equipment or cables during periods of lightning activity. ⚡ **E2**

**Warning**

Operating Temperature: This product is designed for a maximum ambient temperature of 40 degrees C. ⚡ **E7**

Note

All Countries: Install this product in accordance with local and National Electric Codes. ⚡ **E8**



Warning

The module is being installed in a system that operates with voltages that can be lethal. Before you remove the cover of your system, you must observe the following precautions to protect yourself and to prevent damage to the system components.

- Remove any metallic objects or jewelry from your hands and wrists.
 - Make sure to use only insulated or nonconducting tools.
 - Verify that the system is powered OFF and unplugged before accessing internal components.
 - Installation or removal of modules must be performed in a static-free environment. The use of a properly grounded wrist strap or other personal antistatic devices and an antistatic mat is strongly recommended. ⚡ **E39**
-



Caution

Do not use excessive force when seating the card, as the force may damage the system or the adapter card. If the card resists seating, remove it from the system, realign it, and try again. ⚡ **E47**

Pre-Installation Checklist

Before installing the DNC10 Network Adapter, check the following list:

1. Check that your computer has an appropriate open PCIe slot.
2. Verify that your system is using the latest BIOS.
3. When you download the driver software from the Allied Telesis website, record the path to where the driver file resides on your system.
4. If your system is active, shut it down.
5. When system shutdown is complete, unplug your system.
6. Holding the adapter card by the edges, remove it from its shipping package and place it on an antistatic surface.
7. Check the adapter for visible signs of damage, particularly on the card's edge connector.

Note

Do not install the adapter card if it is damaged. Report it to your Allied Telesis sales representative.

Replacing the Bracket

The DNC10 Network Adapter is shipped with the low-profile bracket installed on the adapter. A standard bracket is supplied in the shipping box. Depending on your system, you may need to replace the low-profile bracket with the standard bracket.

The following procedure describes how to remove the low-profile bracket from the network adapter and replace it with the standard bracket. You can also use this procedure to remove the standard bracket and replace it with the low-profile bracket.

To replace the low-profile bracket with the standard bracket, perform the following procedure:

1. Remove the screws that attach the bracket to the network adapter. See Figure 7.

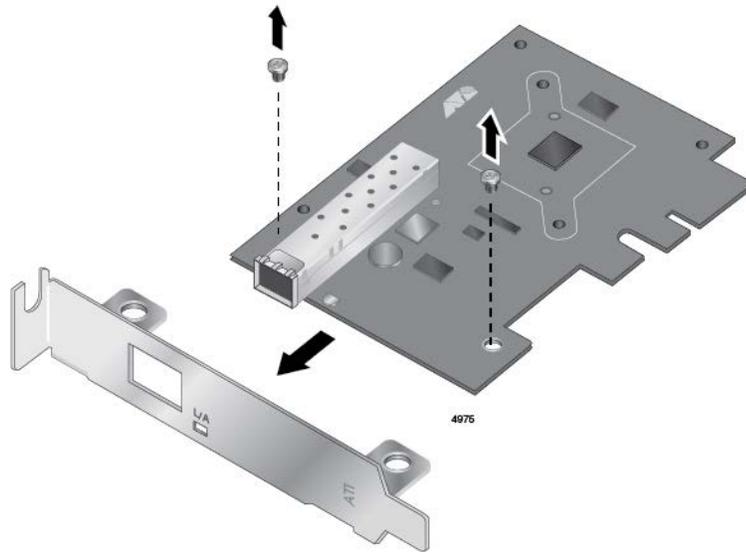


Figure 7. Removing the Low-Profile Bracket

2. Align the tabs of the standard bracket with the holes on the network adapter and fasten the screws onto the network adapter. See Figure 8 on page 31.

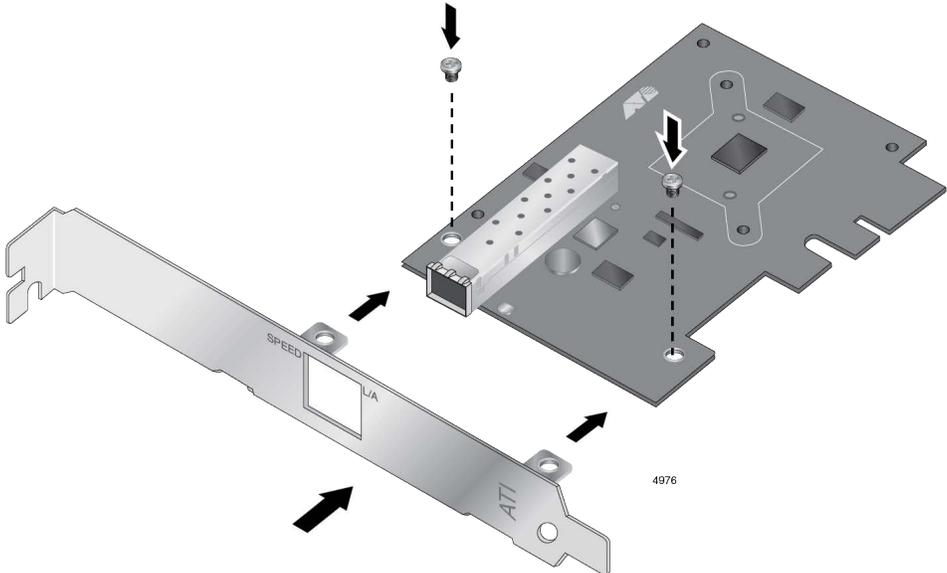


Figure 8. Installing the Standard Bracket

Installing a Network Adapter

The following installation instructions for the DNC10 Network Adapter apply to most systems. Refer to the manuals that are supplied with your system for specific installation instructions for network adapters.

To install the network adapter, perform the following procedure:

1. Review the “Pre-Installation Checklist” on page 29 and “Reviewing Safety Precautions” on page 27.

Before installing the network adapter, ensure the system power is OFF and unplugged from the power outlet, and that proper electrical grounding procedures have been followed.



Warning

The module is being installed in a system that operates with voltages that can be lethal. Before you remove the cover of your system, you must observe the following precautions to protect yourself and to prevent damage to the system components.

- Remove any metallic objects or jewelry from your hands and wrists.
 - Make sure to use only insulated or nonconducting tools.
 - Verify that the system is powered OFF and unplugged before accessing internal components.
 - Installation or removal of modules must be performed in a static-free environment. The use of a properly grounded wrist strap or other personal antistatic devices and an antistatic mat is strongly recommended. ⚡ E39
-

2. Remove the system cover and select any empty PCIe slot. See Figure 9 on page 33.

If you do not know how to identify a PCIe x4 or larger slot, refer to your system documentation.

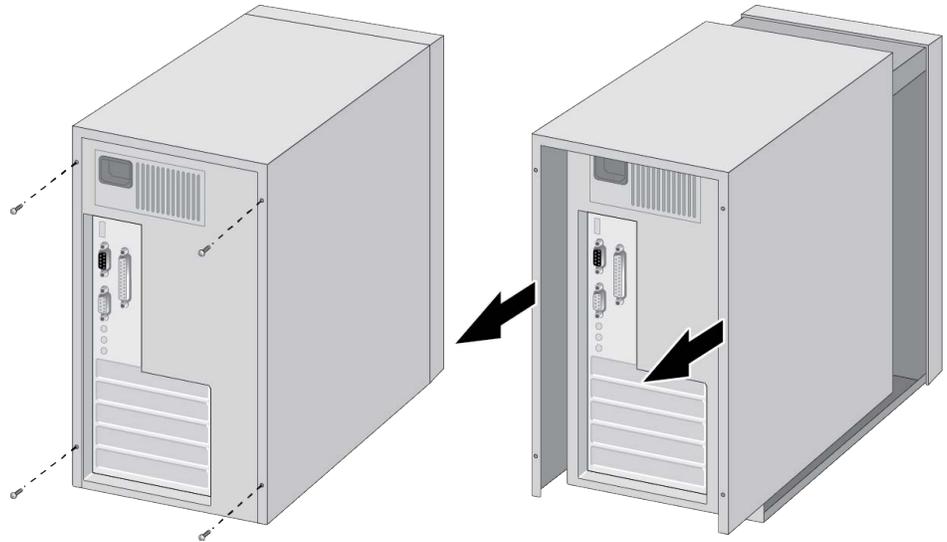


Figure 9. Removing the PC Cover

3. Select an empty, non-shared PCIe slot and remove the faceplate.

Keep the faceplate in a safe place. You may need it for future use. See Figure 10.

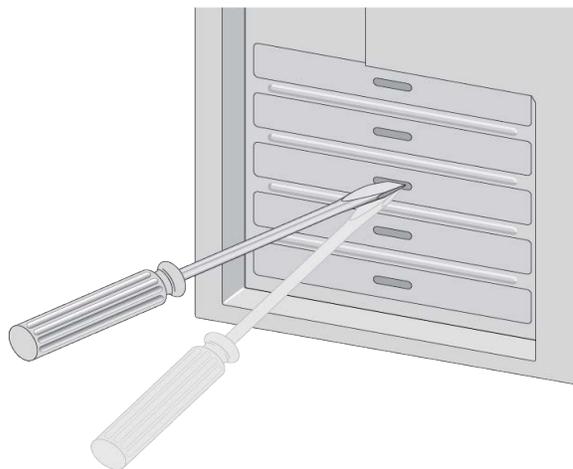


Figure 10. Removing the Faceplate From PCIe Slot

4. Remove the network adapter from the shipping package and store the packaging material in a safe location.

5. Applying even pressure at both corners of the network adapter, push the adapter until it is firmly seated in the PCIe slot. Refer to Figure 11.

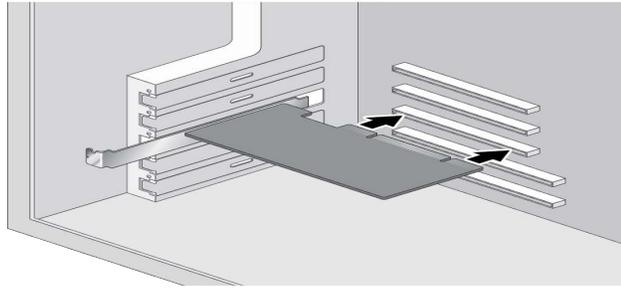


Figure 11. Inserting the Network Adapter



Caution

Do not use excessive force when seating the adapter, as the force may damage the system or the adapter. If the adapter resists seating, remove it from the system, realign it, and try again. E47

6. Visually inspect that the adapter is fully and securely seated in the slot.
7. Secure the network adapter to the chassis with a Phillips-head screw (not provided). Refer to Figure 12.

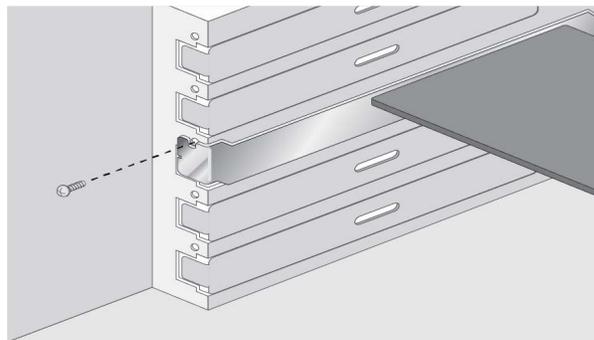


Figure 12. Securing the Network Adapter

8. Replace the system's cover and secure it with the screws removed in step 2.
9. Disconnect any personal antistatic devices.
10. Power the system on.
11. Go to "Connecting the Network Cable" on page 35.

Connecting the Network Cable

The port type and cable requirements differ depending on the DNC10 Network Adapter. Refer to the following sections for instructions.

DNC10LC Network Adapter

To connect a fiber optic network cable to the duplex LC connector on the DNC10LC Network Adapter, perform the following procedure:

1. Prepare a fiber optic cable with a duplex LC connector. Refer to Table 1, “DNC10 Series of 10G Adapter Cards” on page 16 for the types of fiber optic cables and maximum distances.



Warning

The fiber optic ports contain a Class 1 laser device. When the ports are disconnected, always cover them with the provided plug. Exposed ports may cause skin or eye damage. ⚠ L4

2. Remove the dust cover from the duplex LC connector on the fiber optic port.
3. Connect one end of the cable to the network adapter.
4. Connect the other end of the cable to the fiber optic port on a remote network device.
5. Load the driver as described in Chapter 3, “Installing the Driver Software” on page 37.

DNC10SP Network Adapter

The network adapter requires an SFP+ transceiver and an appropriate cable to connect to the network.

1. Insert an SFP+ transceiver into the SFP+ port on the network adapter until the SFP+ transceiver snaps into place in the port.
2. Remove the dust cover from the SFP+ transceiver.
3. Connect one end of the cable to the SFP+ transceiver.
4. Connect the other end of the cable to the appropriate fiber optic port on a remote network device.
5. Load the driver as described in Chapter 3, “Installing the Driver Software” on page 37.

DNC10T Network Adapter

To connect a copper network cable to the network adapter, perform the following procedure.

1. Prepare a twisted-pair copper cable.
2. Connect one end of the cable to the network adapter.
3. Connect the other end of the cable to the appropriate port on a remote network device.
4. Load the driver as described in Chapter 3, “Installing the Driver Software” on page 37.

Chapter 3

Installing the Driver Software

This chapter describes how to install the driver software for the DNC10 Network Adapters onto your operating system. It contains the following topics:

- ❑ “Overview” on page 38
- ❑ “Downloading the Driver Software” on page 40
- ❑ “Accessing the Device Manager” on page 42
- ❑ “Installing the Driver Software” on page 44
- ❑ “Updating the Driver Software” on page 47
- ❑ “Performing the Silent Installation” on page 48

Overview

Allied Telesis provides the drivers for the DNC10 Series of network adapter cards in a zip file on its web site. The file contains the following two folders and drivers

- ❑ Win10 - Windows 10 driver
- ❑ Win11 - Windows 11 driver

Table 5 lists the supported operating systems for the adapter cards and the appropriate drivers.

Table 5. Adapter Drivers for the DNC10 Series

Operating System	Driver
Windows 10	Windows 10
Windows 11	Windows 11
Windows Server 2019	Windows 10 or 11 (Windows 10 recommended)
Windows Server 2022	Windows 10 or 11 (Windows 10 recommended)

Note

Linux systems come with the driver for the DNC10 Series pre-installed. Driver installation is not required for Linux systems.

You can install the driver software using the Device Manager or the silent installation method. If you use the Device Manager, dialog boxes guide you through the installation process. In contrast, the silent installation method suppresses the dialog boxes, thereby eliminating user interactions.

Guidelines

Here are the guidelines for installing or updating the driver software on your operating system:

- ❑ Installing or updating driver software requires administrative privileges on the computer.
- ❑ When you start the computer for the first time with the DNC10 Network Adapter installed, it might install a default driver. You should install the driver software for the DNC10 Network Adapter regardless of whether or not the computer loads a default driver.

**Installing the
Driver with the
Device Manager**

To install or update the driver software with the Device Manager, follow these steps:

- ❑ “Downloading the Driver Software” on page 40
- ❑ “Accessing the Device Manager” on page 42
- ❑ “Installing the Driver Software” on page 44

Or

- ❑ “Updating the Driver Software” on page 47

**Installing the
Driver with the
Silent Installation
Method**

To install or update the driver software with the silent installation, follow these steps:

- ❑ “Downloading the Driver Software” on page 40
- ❑ “Performing the Silent Installation” on page 48

Downloading the Driver Software

The driver software for the DNC10 Network Adapters is available on the Allied Telesis website. The driver is the same for all adapters.

To download the software:

1. Open a web browser, such as Internet Explorer or FireFox, on your computer and enter the following:

<http://www.alliedtelesis.com/support/software>

The Allied Telesis Software Download page is displayed as shown in Figure 13.

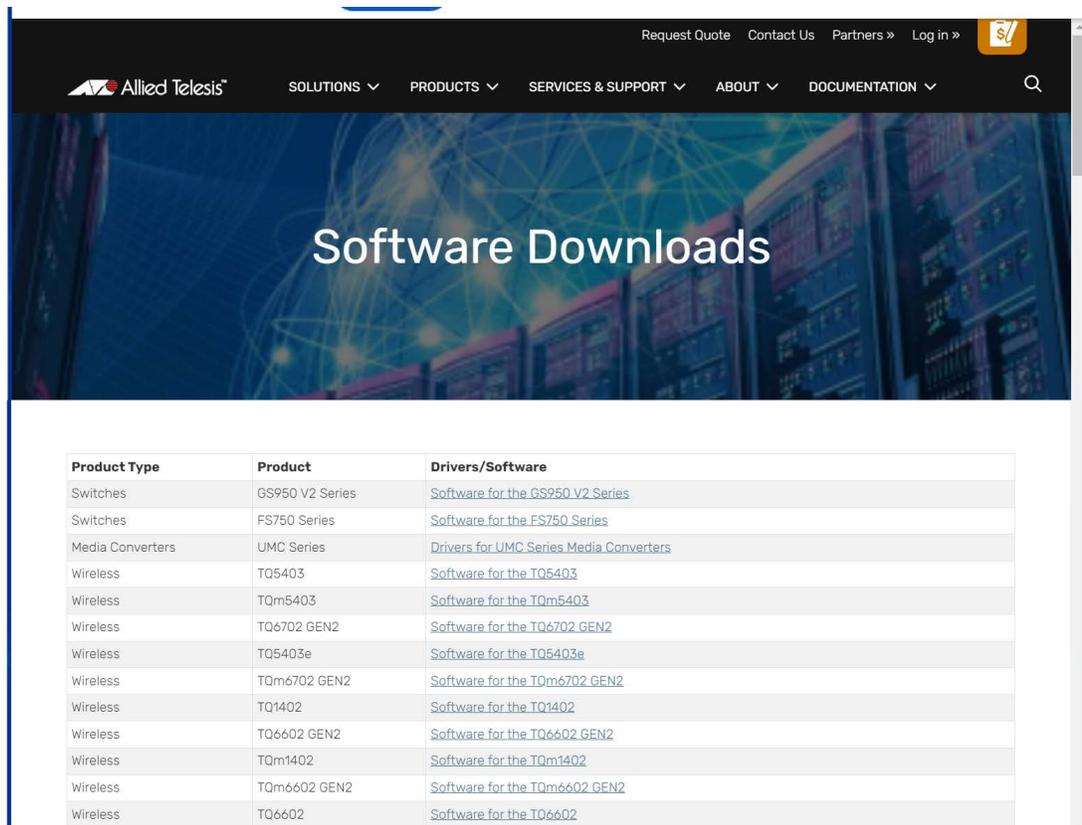


Figure 13. Software Downloads Window on the Allied Telesis Web Site

2. Select the **Drivers for DNC10 Series Network Adapters** link from the list.

Note

If the DNC10 Series is not included in the list, log on to the Download Center at the bottom of the window. If you do not have an account, go to the **Customer Support Portal** to create one.

The Drivers for DNC10 Series Network Adapters download window is displayed. Refer to Figure 14.

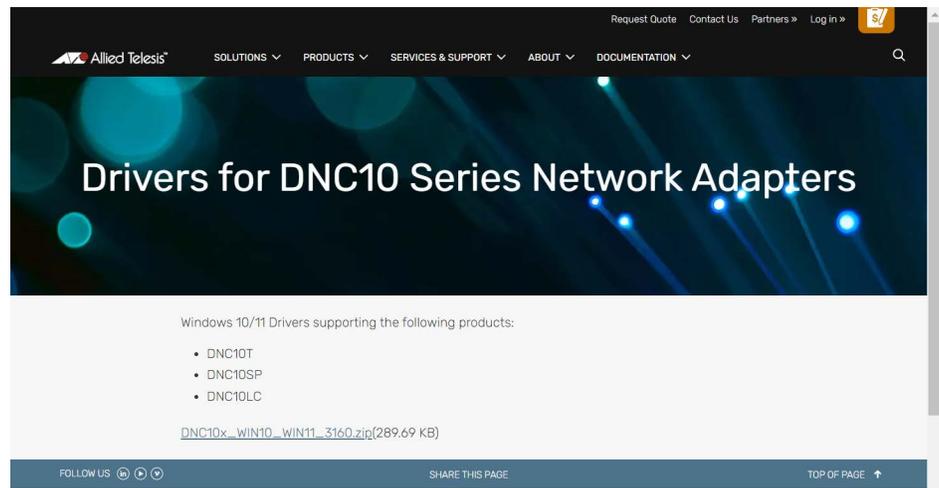


Figure 14. Drivers for DNC10 Series Network Adapters Download Window

3. Click **DNC10X_WIN10_WIN11_3160.zip** and download the zip file onto your computer.
4. Unpack the zip file.
5. Note the location of the unpacked files and go to “Accessing the Device Manager” on page 42.

Accessing the Device Manager

To install or update the driver software for DNC10 Network Adapters on your computer, you need to access the Device Manager. The procedures for accessing the Device Manager are slightly different among Windows operating systems. To access the Device Manager on your operating system, follow one of the procedures below:

Option 1

To access the Device Manager on a Windows platform, do the following:

1. Right-click the start button at the bottom left corner.

The Windows menu appears. Refer to Figure 15.



Figure 15. Windows Menu

2. Select **Device Manager** in the search box.

The Device Manager window is displayed. Refer to Figure 16.

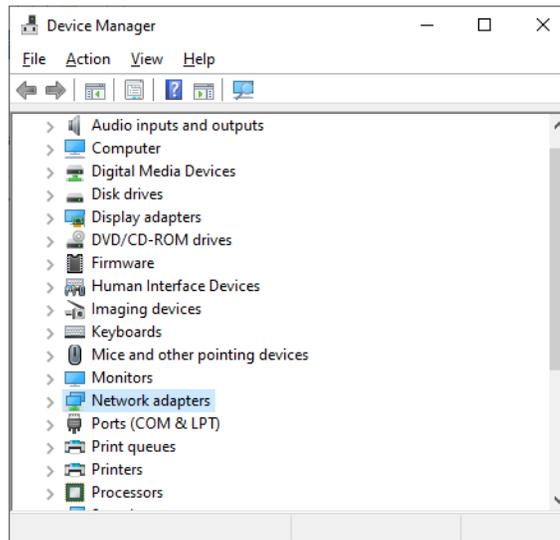


Figure 16. Device Manager Window

Option 2

Another option to accessing the Device Manager is given here:

1. Type **Device Manager** in the search field at the bottom left corner of the screen. Refer to Figure 17.



Figure 17. Searching for Device Manager

2. Click on **Device Manager**.

The Device Manager window is displayed. Refer to Figure 16.

Installing the Driver Software

Once you physically install the DNC10 Series network card, the system detects the new hardware and creates an entry in the Device Manager when the Windows operating system first boots up. Shortly after you log in, you need to install the driver software for your network adapter.

Note

To install the driver software, you must have administrative privileges.

To install the driver software, do the following:

1. Access the Device Manager, see “Accessing the Device Manager” on page 42.
2. In the Device Manager window, double-click **Network Adapters** to expand the field.
3. **Option 1** - If the system has another network connection to provide Internet access:
 - a. Right-click on **Aquantia device** or **Ethernet Controller** (if no driver was installed).
 - b. Select **Update Driver Software**.

The Update Driver Software window appears. See Figure 18 as an example.

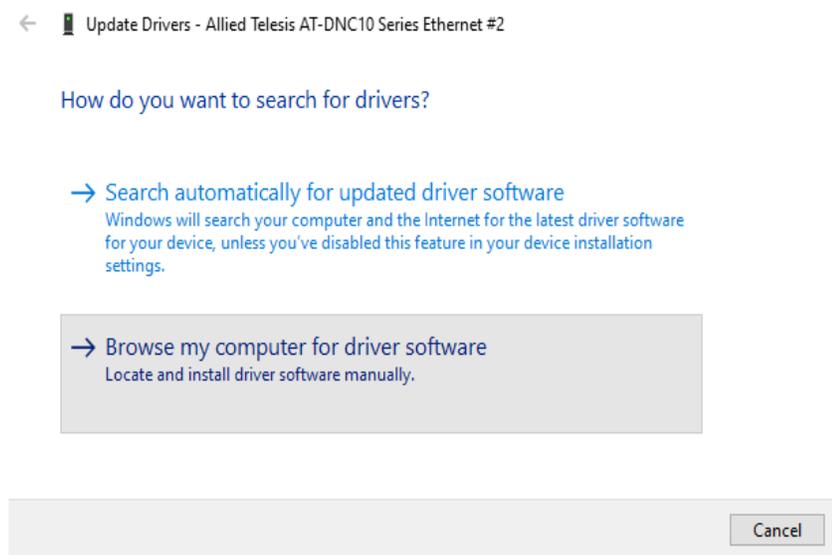


Figure 18. Update Drivers Window

- c. Select **Search automatically for updated driver software**.

Windows will download the driver from Windows Update.

Option 2 - If the system does not have another network connection to provide Internet access:

- a. Right-click on **Allied Telesis DNC10 Series Fiber Ethernet**.

Note

The Device Manager may identify the new DNC10 adapter as an Ethernet Controller, Aquantia device, or Allied Telesis device.

The shortcut menu appears. See Figure 19 as an example.

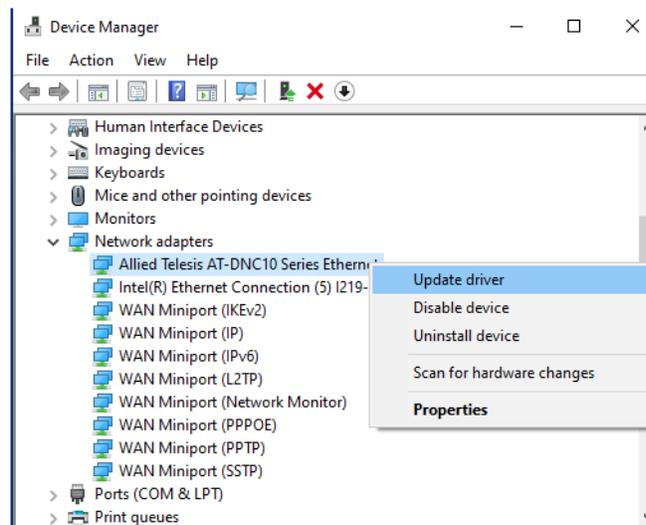


Figure 19. Selecting the DNC10 Series Adapter in the Device Manager

- b. Select **Update Driver Software**.

The Update Driver Software window appears. See Figure 18 on page 44 as an example.

- c. Select **Browse my computer for driver software**.

The Browse for Drivers on Your Computer window prompts you to enter the location of the driver folder. See Figure 20 as an example.

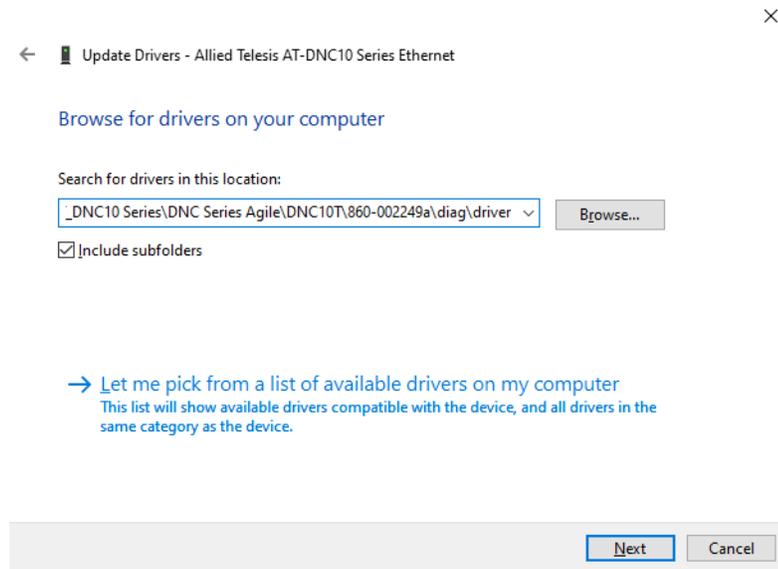


Figure 20. Browse for Drivers on Your Computer

4. Specify the location of the driver software. See “Downloading the Driver Software” on page 40 for details.

5. Click **Next**.

A confirmation message appears when the driver software is successfully updated.

6. Click **Close**.

Updating the Driver Software

If your operating system automatically installs a default driver or Aquantia driver, you need to update the driver software with the driver that you downloaded from the Allied Telesis website. To obtain the latest version of the DNC10 Series network adapter driver, see “Downloading the Driver Software” on page 40.

To update the driver software, you use the same procedure for installing the driver software for the first time. The only difference between updating and installing the driver software is the name of your adapter that the Device Manager detects and lists.

The Device Manager lists your adapter card entry as Allied Telesis DNC10 Series Fiber Ethernet once you installed the driver software. Before you installed the driver software, the Device Manager may list your adapter entry as an Ethernet Controller, Aquantia device, or Allied Telesis device.

To update the driver software for your DNC10 Series network adapter, see “Installing the Driver Software” on page 44.

Performing the Silent Installation

To simplify the driver installation process, you may perform a silent installation when installing driver software for the DNC10 Network Adapters. The silent installation is a method of installing software in the silent mode without constant interactions by suppressing dialog boxes.

Note

You can apply the silent installation method only to Microsoft certified drivers. The drivers that Allied Telesis provides for the DNC10 Network Adapters are Microsoft certified.

Use a command line utility called Driver Package Installer (DPInst) for the silent installation. DPInst is included in the Windows Developer Kit (WDK) provided by Microsoft. You can obtain the latest DPInst by downloading and installing the latest WDK from the Microsoft website.

Silently Installing the Driver

To silently install the driver, perform the following instructions:

1. Create a folder in your Windows system.
2. Download the driver software for the DNC10 Series network adapter. Refer to “Downloading the Driver Software” on page 40.
3. Place the driver files that you downloaded into the folder that you created in step 1.

The folder should include the following driver files:

- .sys**
- .inf**
- .cat**

4. Download the latest WDK to obtain the **dpinst** utility.

Consult Microsoft websites to download WDK.

5. Place the **dpinst.exe** and its supporting files in the same folder where you placed the driver files.

You must place the 64-bit **dpinst** utility if your operating system is the 64-bit version. Place the 32-bit for **dpinst** utility for the 32-bit version operating system.

6. Open a command prompt window with administrator privileges.

7. Change the directory to the folder where the **dpinst** utility and the driver files reside.
8. Install the driver in the silent mode by entering the following command:

```
> dpinst /S
```

Note

Adding the /S switch to the `dpinst` command suppresses the display of wizard pages, user dialog boxes, and other user intervention requests.

The driver is installed silently.

Viewing Supported DPInst Options

You can display help information about the **dpinst** command-line options.

View all supported **dpinst** options by performing the following procedure:

1. Open a command prompt window with administrator privileges.
2. Change the directory to the folder where the **dpinst** utility and the driver files reside.

```
> dpinst /?
```

The command displays the help text.

Chapter 4

Modifying Advanced Properties

This chapter includes the following topics:

- ❑ “Overview” on page 53
- ❑ “Accessing Advanced Properties” on page 54
- ❑ “ARP Offload” on page 56
- ❑ “Downshift Retries” on page 57
- ❑ “Energy-Efficient Ethernet” on page 58
- ❑ “Flow Control” on page 59
- ❑ “Interrupt Moderation” on page 60
- ❑ “Interrupt Moderation Rate” on page 61
- ❑ “IPv4 Checksum Offload” on page 63
- ❑ “Jumbo Packet” on page 64
- ❑ “Large Send Offload v1 (IPv4)” on page 66
- ❑ “Large Send Offload v2 (IPv4)” on page 67
- ❑ “Large Send Offload v2 (IPv6)” on page 68
- ❑ “Link Speed” on page 69
- ❑ “Locally Administered Address” on page 71
- ❑ “Log Link State Event” on page 73
- ❑ “Maximum Number of RSS Queues” on page 74
- ❑ “NS Offload” on page 75
- ❑ “Priority & VLAN” on page 76
- ❑ “Receive Buffers” on page 78
- ❑ “Receive Side Scaling” on page 79
- ❑ “Recv Segment Coalescing (IPv4)” on page 80
- ❑ “Recv Segment Coalescing (IPv6)” on page 81
- ❑ “TCP/UDP Checksum Offload (IPv4)” on page 82
- ❑ “TCP/UDP Checksum Offload (IPv6)” on page 84
- ❑ “Transmit Buffers” on page 86
- ❑ “VLAN ID” on page 87
- ❑ “VLAN Monitor Mode” on page 88
- ❑ “Wait for Link” on page 89

- ❑ “Wake from Power Off State” on page 91
- ❑ “Wake on Link” on page 92
- ❑ “Wake on Magic Packet” on page 93
- ❑ “Wake on Pattern Match” on page 94
- ❑ “Wake on Ping” on page 95

Overview

The DNC10 Network Adapters allow you to modify advanced properties to meet your requirements. To access the advanced properties, access Device Manager, then go to each advanced property page.


Guidelines Here are the guidelines to modifying the advanced properties:

- ❑ To change the advanced property settings, you must have Administrator privileges.
- ❑ When you upgrade the driver software, the settings of the advanced properties may change. Verify the settings after upgrading the driver software.


Accessing Advanced Properties

To modify advanced properties, first access Device Manager, open the properties of your adapter, and select a feature you want to change its setting.

1. Access the Device Manager. See “Accessing the Device Manager” on page 42.
2. In the Device Manager window, click **Network Adapters**.

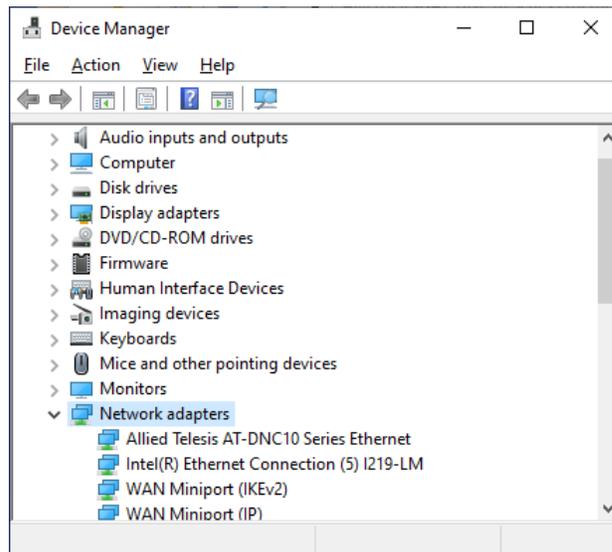

3. Double-click **Allied Telesis AT-DNC10 Series Ethernet**.

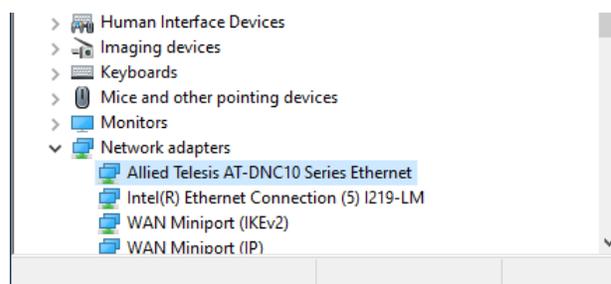

The properties window pops up.

4. Click the **Advanced** tab.

The Advanced Properties window opens as shown in Figure 21.

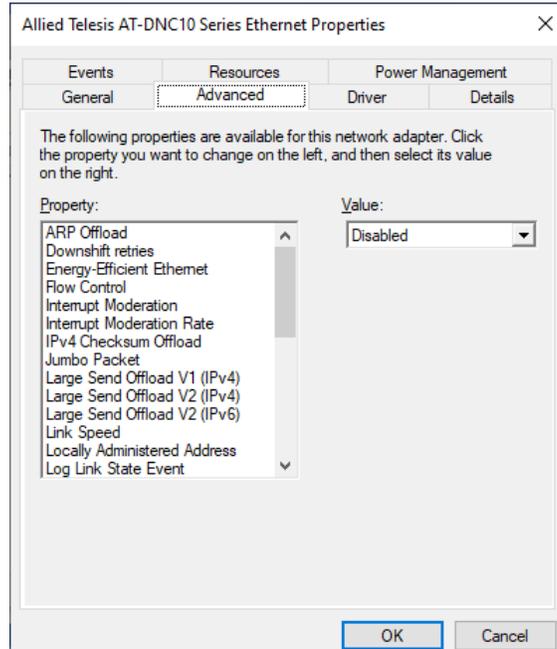


Figure 21. Advanced Properties Window

ARP Offload

The ARP Offload feature enables the adapter not to wake up when responding to an ARP request. ARP is used to verify whether a computer is still present on the network and resolve an IP address into a MAC address.

To enable or disable the ARP Offload feature, do the following:

1. Access the Advanced Properties.
See “Accessing Advanced Properties” on page 54.
2. Select **ARP Offload** in the Property box.

The ARP Offload page is displayed as shown in Figure 22.

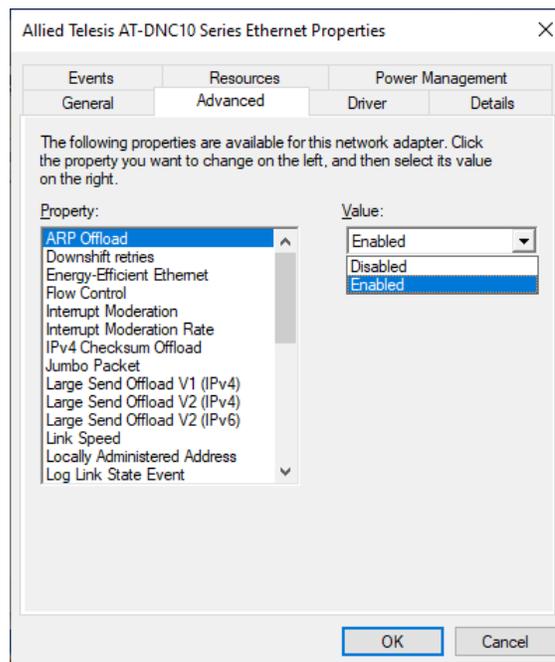


Figure 22. ARP Offload Page

3. Select one of the following options:
 - Disabled** — This feature is disabled.
 - Enabled** — The adapter does not wake up when responding to an ARP request. This is the default setting.
4. Click **OK**.

Downshift Retries

This feature offers a way for the network systems to reliably select the best speed that the cabling plant can support. When `on`, it enables a link speed downgrade in case the currently selected speed is constantly failing. This only applies to DNC10T.

To specify or change the Downshift Retries feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Downshift Retries** in the Property box.

The Downshift Retries page is displayed as shown in Figure 23.

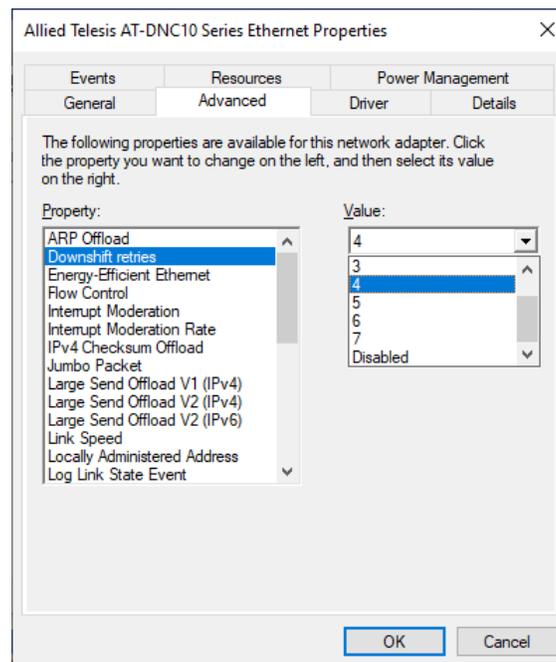


Figure 23. Downshift Retries Page

3. Select one of the following options:
 - 1 through 7** — Enables the specified amount of tries before attempting to reduce the speed.
 - Disable** — This feature is disabled.
4. Click **OK**.

Energy-Efficient Ethernet

The Energy-Efficient Ethernet property allows you to optimize the energy usage of the interface over Ethernet.

Note

This feature is valid only for copper ports.

To view the Energy-Efficient Ethernet feature, do the following:

1. Access the Advanced Properties.
See “Accessing Advanced Properties” on page 54.
2. Select **Energy-Efficient Ethernet** in the Property box.

The Energy-Efficient Ethernet page is displayed as shown in Figure 24.

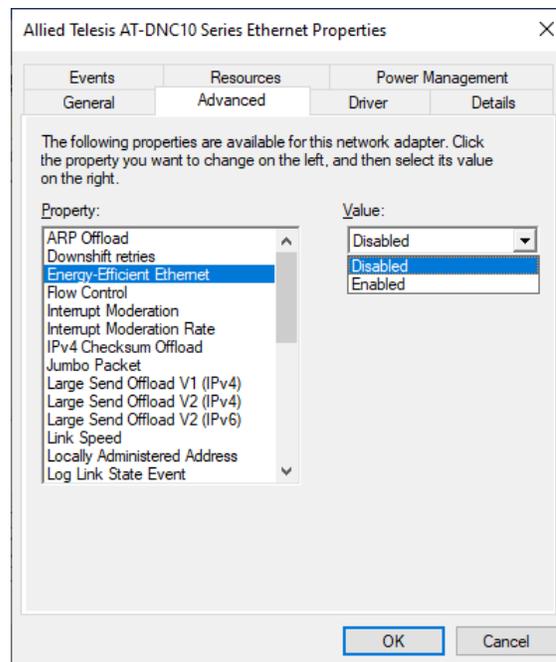


Figure 24. Energy-Efficient Ethernet Page

3. Select one of the following options:
 - Disabled** — For the DNC10LC and DNC10SP network adapter ports are fiber connectors and the setting is always disabled.
 - Enabled** — For the DNC10T network adapter has copper ports and can be set to Energy-Efficient Ethernet enabled.
4. Click **OK**.

Flow Control

The Flow Control feature allows you to control the flow between the DNC10 adapter port and its link partner. You can enable or disable the adapter port to process received PAUSE frames and transmit PAUSE frames. To specify or change the Flow Control feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Flow Control** in the Property box.

The Flow Control page is displayed as shown in Figure 25.

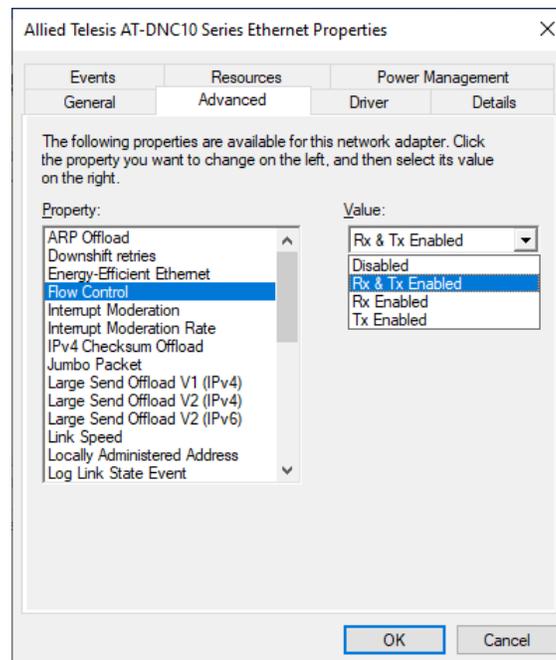


Figure 25. Flow Control Page

3. Select one of the following options if available:
 - Disabled** — The adapter ignores PAUSE frames.
 - Tx & Rx Enabled** — The adapter processes PAUSE frames when receiving and transmits PAUSE frames.
 - Rx Enabled** — The adapter processes PAUSE frames when receiving, but does not transmit PAUSE frame.
 - Tx Enabled** — The adapter transmits PAUSE frames, but ignores PAUSE frames when receiving.
4. Click **OK**.

Interrupt Moderation

The Interrupt Moderation feature allows you to limit the rate of interrupts to the CPU during packet transmission and packet reception. When this feature is enabled, interrupts are handled as a group so that the CPU utilization decreases; however, the latency may increase.

To enable or disable the Interrupt Moderation feature, do the following:

1. Access the Advanced Properties.
See “Accessing Advanced Properties” on page 54.
2. Select **Interrupt Moderation** in the Property box.

The Interrupt Moderation page is displayed as shown in Figure 26.

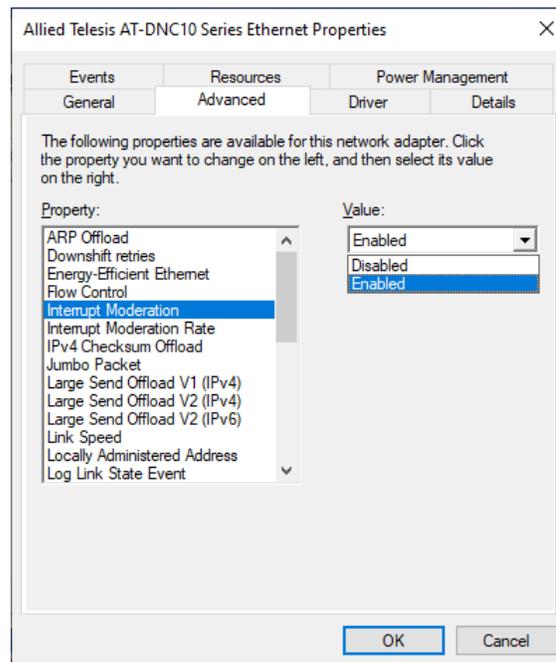


Figure 26. Interrupt Moderation Page

3. Select one of the following options:
 - Disabled** — The Interrupt Moderation feature is disabled. The adapter generates one interrupt for every packet transmission and packet reception.
 - Enabled** — The Interrupt Moderation feature is enabled. This is the default setting.
4. Click **OK**.

Interrupt Moderation Rate

To improve system performance, you can configure the interrupt moderation rate. This setting defines the maximum number of interrupts per second that the adapter is allowed to generate. Note that decreasing this value decreases the CPU usage.

To specify or change the Interrupt Moderation Rate feature, do the following:

1. Access the Advanced Properties.
See “Accessing Advanced Properties” on page 54.
2. Select **Interrupt Moderation Rate** in the Property box.

The Interrupt Moderation Rate page is displayed as shown in Figure 27.

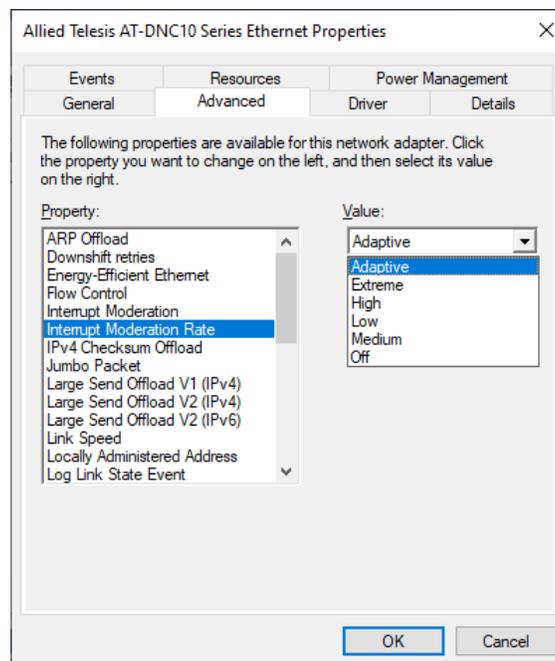


Figure 27. Interrupt Moderation Rate Page

3. Select one of the following options:
 - Adaptive** — Interrupt throttle rate (ITR) = -1, no interrupts/sec, it is dynamically changed by the driver. This is the default setting.
 - Extreme** — ITR = 3600.
 - High** — ITR = 2000.

- Medium** — ITR = 950.
- Low** — ITR = 400.
- Off** — ITR = 0, no limit.

4. Click **OK**.

IPv4 Checksum Offload

To specify or change the IPv4 Checksum Offload feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **IPv4 Checksum Offload** in the Property box.

The IPv4 Checksum Offload page is displayed as shown in Figure 28.

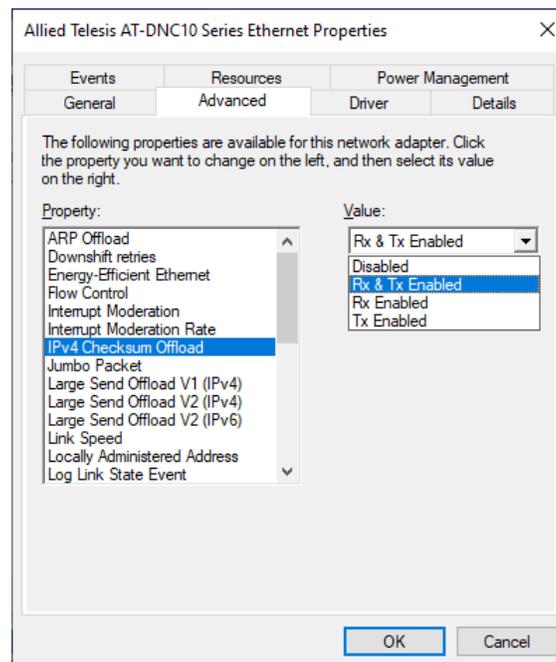


Figure 28. IPv4 Checksum Offload Page

3. Select one of the following options:

- Disabled** — Disables the IPv4 Checksum Offload function for both receiving and transmitting.
- Rx & Tx Enabled** — Enables the IPv4 Checksum Offload function for both receiving and transmitting IPv4 packets. This is the default setting.
- Rx Enabled** — Enables the IPv4 Checksum Offload function only for receiving IPv4 packets.
- Tx Enabled** — Enables the IPv4 Checksum Offload function only for transmitting IPv4 packets.

4. Click **OK**.

Jumbo Packet

Enables the network adapter to transmit and receive oversized Ethernet frames that are greater than 1500 bytes, but less than or equal to 16348 bytes in length. This property requires the presence of a switch that is able to process jumbo frames. Maximum frame size is set at 1500 bytes by default (Jumbo Packet disabled). To increase the maximum frame size, choose one of the values from the drop-down list.

To change the Jumbo Packet setting, do the following:

1. Access the Advanced Properties.
See “Accessing Advanced Properties” on page 54.
2. Select **Jumbo Packet** in the Property box.

The Jumbo Packet page is displayed as shown in Figure 29.

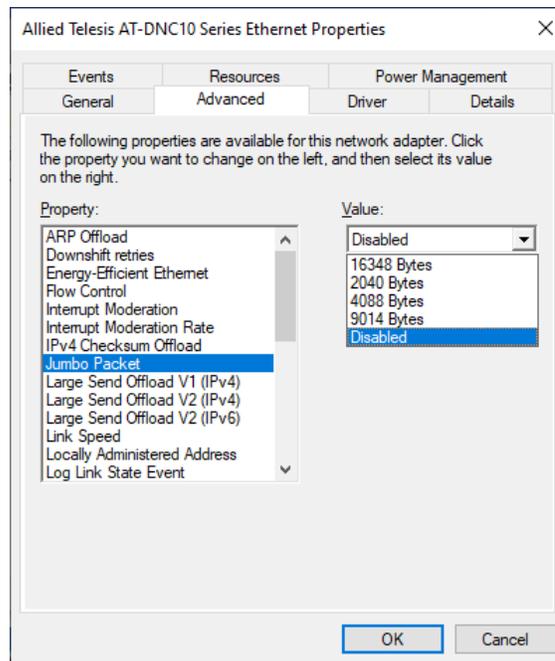


Figure 29. Jumbo Packet Page

3. Select the desired jumbo frame size from the list. The options are:
 - 2040 bytes
 - 4088 bytes
 - 9014 bytes
 - 16348 bytes

- Disabled — The adapter does not handle jumbo frames.

4. Click **OK**.

Large Send Offload v1 (IPv4)

Normally, the TCP segmentation is done by the protocol stack. When you enable the Large Send Offload property, the TCP segmentation can be done by the network adapter. The default setting for this property is Enabled.

To enable or disable the Large Send Offload v1 (IPv4) feature, do the following:

1. Access the Advanced Properties.
See “Accessing Advanced Properties” on page 54.
2. Select **Large Send Offload v1 (IPv4)** in the Property box.

The Large Send Offload v1 (IPv4) page is displayed as shown in Figure 30.

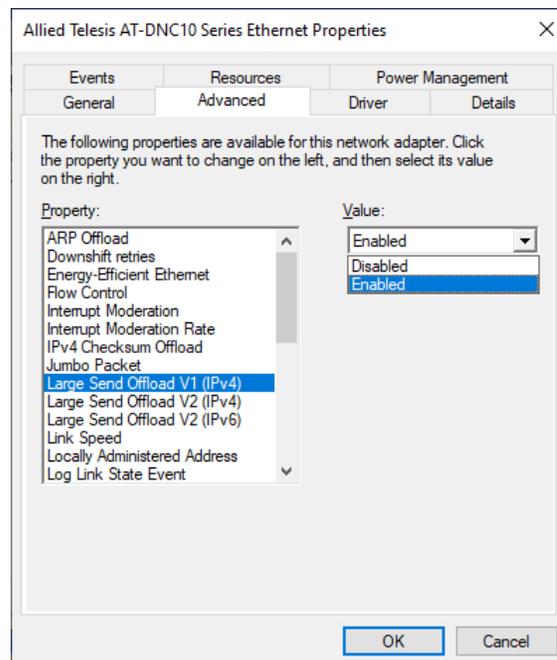


Figure 30. Large Send Offload v1 (IPv4) Page

3. Select one of the following options:
 - Disabled** — The Large Send Offload v1 (IPv4) feature is disabled
 - Enabled** — The Large Send Offload v1 (IPv4) feature is enabled. This is the default setting.
4. Click **OK**.

Large Send Offload v2 (IPv4)

Normally, the TCP segmentation is done by the protocol stack. When you enable the Large Send Offload property, the TCP segmentation can be done by the network adapter. The default setting for this property is Enabled.

To enable or disable the Large Send Offload v2 (IPv4) feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Large Send Offload v2 (IPv4)** in the Property box.

The Large Send Offload v2 (IPv4) page is displayed as shown in Figure 31.

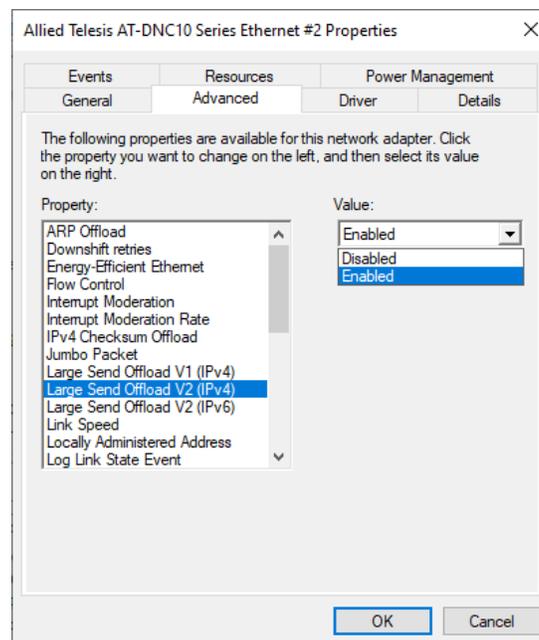


Figure 31. Large Send Offload v2 (IPv4) Page

Select one of the following options:

- Disabled** — The feature is disabled.
- Enabled** — The adapter port segments large packets up to 256Kb for IPv4 traffic before sending them out. This is the default setting.

3. Click **OK**.

Large Send Offload v2 (IPv6)

The Large Send Offload v2 (IPv6) feature allows you to control the load of sending out large packets. When this feature is enabled, the adapter port segments large packets for IPv6 traffic and reduces the CPU load.

To enable or disable the Large Send Offload v2 (IPv6) feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Large Send Offload v2 (IPv6)** in the Property box.

The Large Send Offload v2 (IPv6) page is displayed as shown in Figure 32.

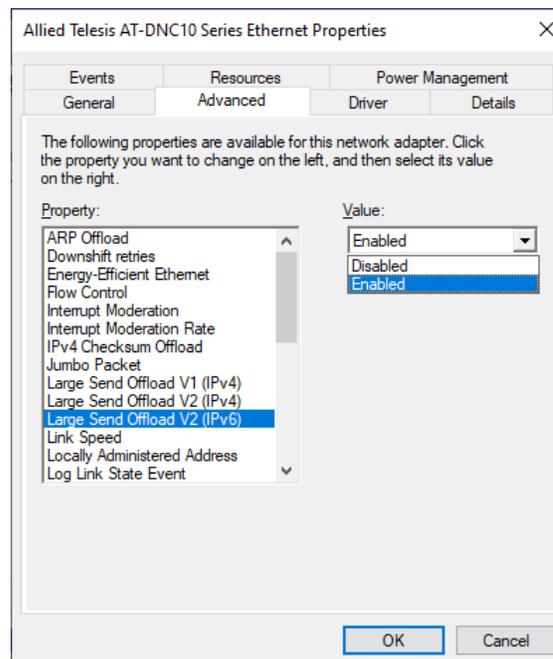


Figure 32. Large Send Offload (IPv6) Page

3. Select one of the following options:
 - Disabled** — The adapter does not segment packets for IPv6 traffic.
 - Enabled** — The adapter port segments large packets up to 256Kb for IPv6 traffic before sending them out. This is the default setting.
4. Click **OK**.

Link Speed

To specify or change the port speed, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Link Speed** in the Property box.

The Link Speed page is displayed as shown in Figure 33.

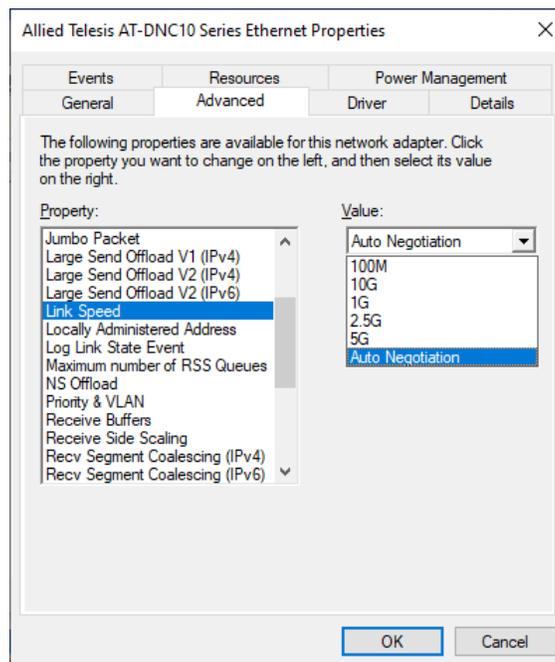


Figure 33. Link Speed Page

3. Select one of the following options:

Note

Allied Telesis recommends leaving this value set to the default Auto Negotiation. For the fiber versions of the DNC10, auto-negotiation does not refer to traditional speed and duplex auto-negotiation that is commonly used on copper-based NIC products. It simply means that the NIC will automatically detect the speed of the fiber module and set the controller's speed to match.

DNC10LC

- Auto Negotiation - Link speed will be set to 10G
- 10G - Link speed is 10G per second

All other settings are invalid.

DNC10SP

- Auto Negotiation - The NIC will auto-detect the SFP speed and link speed will be set to 10G or 1G accordingly
- 10G - Link speed is 10G per second
- 1G - Link speed is 1G per second

All other settings are invalid.

Note

The DNC10T uses standard auto-negotiation to determine link speed in all cases. Forced speed is disallowed by IEEE 802.3 for any speed of 1Gbps and above. When choosing a single speed from the drop-down list, only that speed will be advertised by the NIC; if the link partner does not also advertise the chosen speed, no link will be established.

DNC10T

- Auto Negotiation - The NIC will advertise all supported speeds and negotiate the highest common speed with the link partner.
- 10G - Only 10Gbps speed will be advertised.
- 5G - Only 5Gbps speed will be advertised.
- 2.5G - Only 2.5Gbps speed will be advertised.
- 1G - Only 1Gbps speed will be advertised.
- 100M - Only 100Mbps speed will be advertised.

4. Click **OK**.

Locally Administered Address

The Locally Administered Address is a user-defined MAC address that is used in place of the MAC address originally assigned to the network adapter. Every adapter in the network must have its own unique MAC address. This locally administered address consists of a 12-digit hexadecimal number.

To specify or change the Locally Administered Address, do the following:

1. Access the Advanced Properties.
See “Accessing Advanced Properties” on page 54.
2. Select **Locally Administered Address** in the Property box.

The Locally Administered Address page is displayed as shown in Figure 34.

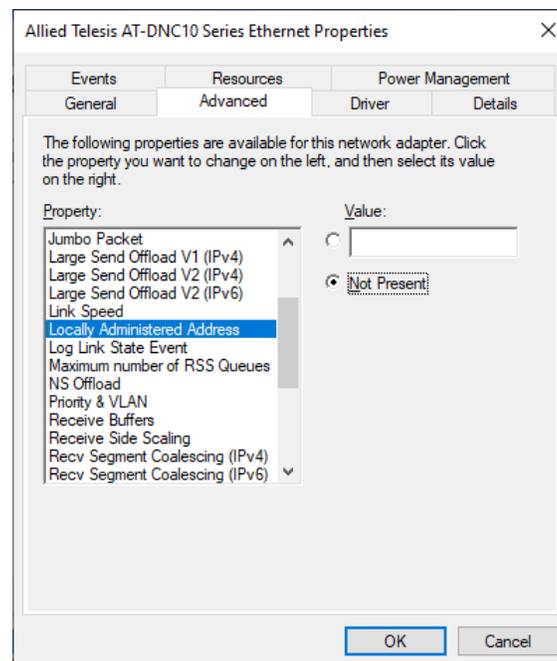


Figure 34. Locally Administered Address Page

3. Select one of the following options:
 - Value** — Used to manually assign a MAC address to the adapter.
 - Not Present** — Uses the factory-assigned address on the adapter. This is the default.

Note

The appropriate assigned ranges and exceptions for the locally administered address include the following:

The range is 00:00:00:00:00:01 to FF:FF:FF:FF:FF:FD.

Do not use a multicast address (least significant bit of the high byte = 1).

Do not use all 0s or all Fs.

4. Click **OK**.

Log Link State Event

This feature allows you to enable or disable logging of the adapter's link state changes (such as changes to the port link state or duplex mode mismatch) in the system logs.

To enable or disable the Log Link State Event feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Log Link State Event** in the Property box.

The Log Link State Event page is displayed as shown in Figure 35.

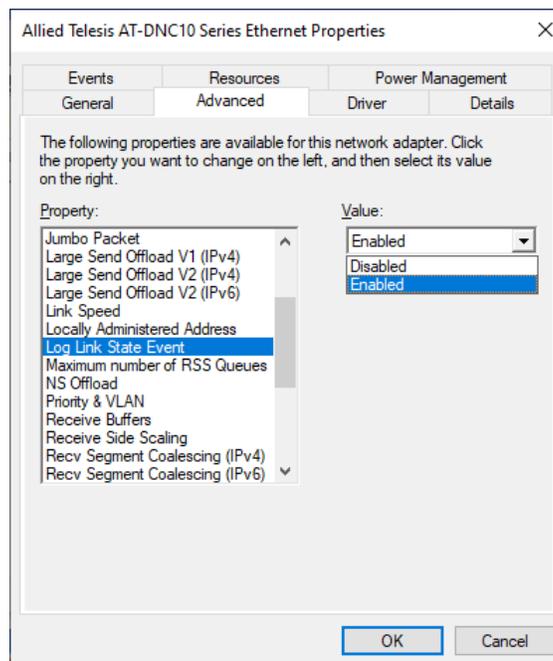


Figure 35. Log Link State Event Page

3. Select one of the following options:

- Disabled** — This feature is disabled.
- Enabled** — The adapter generates link state events. This is the default setting.

4. Click **OK**.

Maximum Number of RSS Queues

The RSS Queues feature assigns data to queues associated with physical CPU cores. You can specify the maximum number of RSS queues that the network adapter assigns receiving data to.

To specify or change the maximum number of RSS Queues, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Maximum Number of RSS Queues** in the Property box.

The Maximum Number of RSS Queues page is displayed as shown in Figure 36.

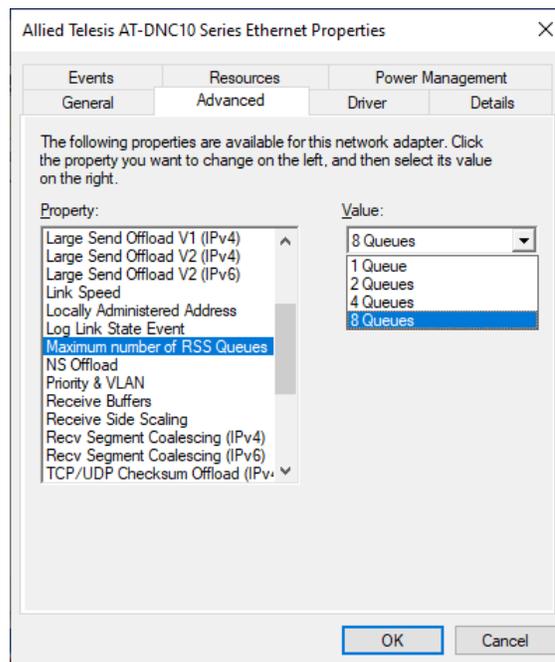


Figure 36. Maximum Number of RSS Queues Page

3. Select one of the following options:

- 1 Queue** — The system allocates up to one RSS queue.
- 2 Queues** — The system allocates up to two RSS queues.
- 4 Queues** — The system allocates up to four RSS queues.
- 8 Queues** — The system allocates up to eight RSS queues.

4. Click **OK**.

NS Offload

The NS (Neighbor Solicitation) Offload feature enables the adapter not to wake up when responding to an NS request.

To enable or disable the NS Offload feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **NS Offload** in the Property box.

The NS Offload page is displayed as shown in Figure 37.

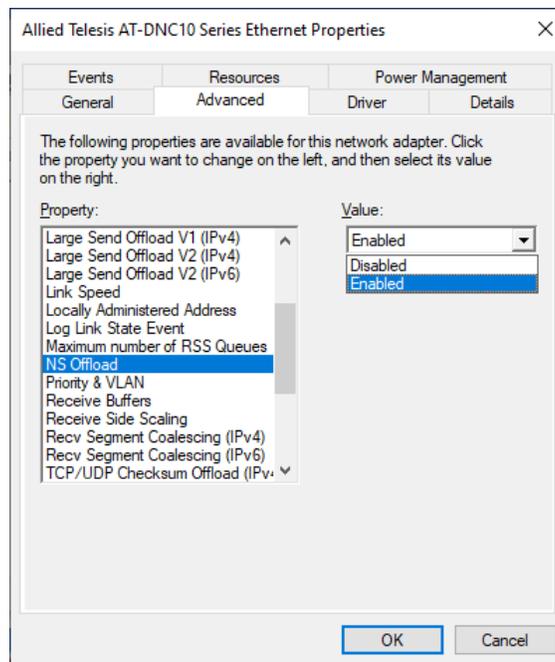


Figure 37. NS Offload Page

3. Select one of the following options:

- Disabled** — This feature is disabled.
- Enabled** — The adapter does not wake up when responding to an NS request. This is the default setting.

4. Click **OK**.

Priority & VLAN

The Priority & VLAN feature allows you to control sending and receiving tagged frames of QoS and VLAN.

When the property is set to Priority & VLAN Enabled, the adapter sends and receives QoS and VLAN tagged frames; with Priority Enabled, the adapter sends and receives QoS tagged frames; with VLAN Enabled, the adapter sends and receives VLAN tagged frames. To assign a VLAN ID to the adapter, see “VLAN ID” on page 87.

To enable or disable the Priority & VLAN feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Priority & VLAN** in the Property box.

The Priority & VLAN page is displayed as shown in Figure 38.

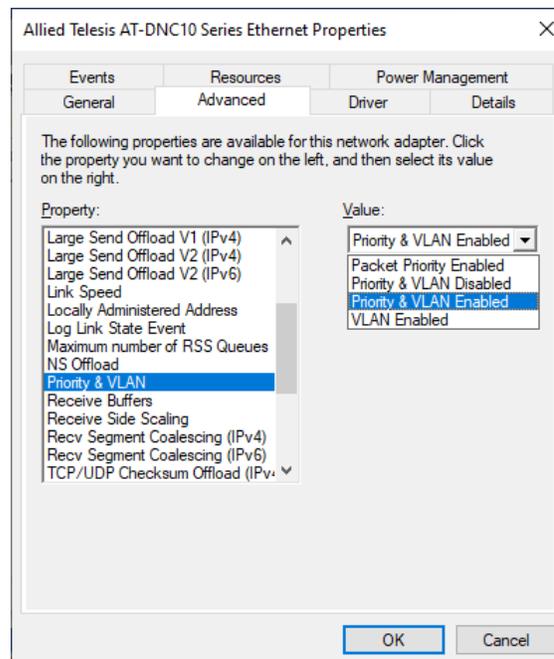


Figure 38. Priority & VLAN Page

3. Select one of the following options:

- Priority & VLAN Enabled** — Allows for packet prioritization and VLAN tagging. This is the default setting.

- Priority & VLAN Disabled** — Prevents packet prioritization and VLAN tagging.
- Packet Priority Enabled** — Allows packet prioritization only.
- VLAN Enabled** — Allows VLAN tagging only.

4. Click **OK**.

Receive Buffers

Receive buffers are data segments that allow the network adapter to allocate receive packets to memory.

To specify or change the Receive Buffers feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Receive Buffers** in the Property box.

The Receive Buffers page is displayed as shown in Figure 39.

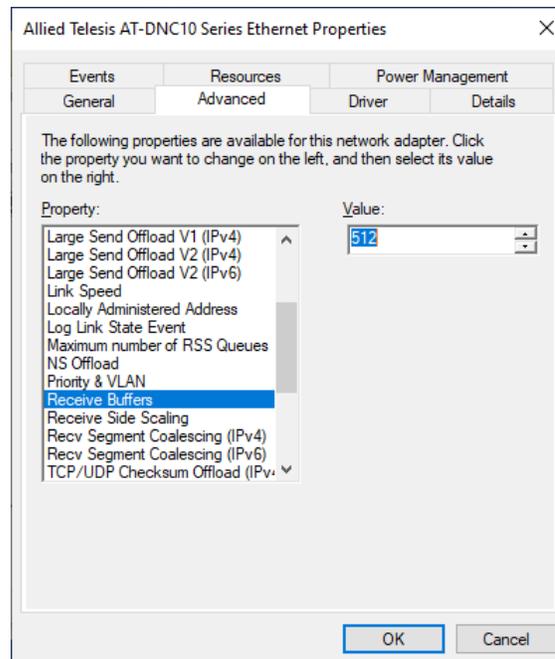


Figure 39. Receive Buffers Page

3. Specify the buffer size in the Value box.

The range of valid receive buffers is 128 to 4096 in increments of 8 with 512 receive buffers as the default value.

4. Click **OK**.

Receive Side Scaling

The Receive Side Scaling (RSS) feature allows the adapter to efficiently distribute receive processing across multiple CPU's so as to prevent overloading a single CPU. To make this feature effective, the computer must have multiple CPU's in a multiprocessor system.

To enable or disable the Receive Side Scaling feature, do the following:

1. Access the Advanced Properties.

See "Accessing Advanced Properties" on page 54.

2. Select **Receive Side Scaling** in the Property box.

The Receive Side Scaling page is displayed as shown in Figure 40.

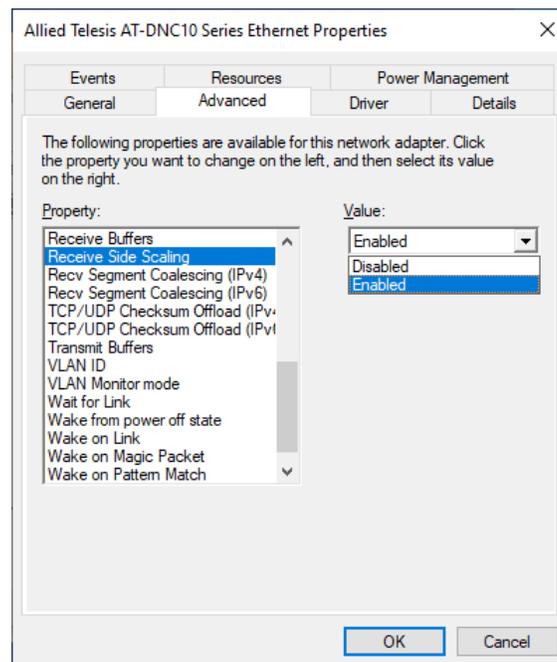


Figure 40. Receive Side Scaling Page

3. Select one of the following options:

- Enabled** — Receiving data is processed by multiple CPU's. This is the default setting.
- Disabled** — Receiving data is processed by a single CPU.

4. Click **OK**.

Recv Segment Coalescing (IPv4)

When receiving data, the miniport driver, NDIS, and TCP/IP must all look at each segment's header information separately. When large amounts of data are being received, this creates a large amount of overhead. Receive segment coalescing (RSC) reduces this overhead by coalescing a sequence of received segments and passing them to the host TCP/IP stack in one operation, so that NDIS and TCP/IP need only look at one header for the entire sequence.

To enable or disable the Receive Segment Coalescing (IPv4) feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Receive Segment Coalescing (IPv4)** in the Property box.

The Receive Segment Coalescing (IPv4) page is displayed as shown in Figure 41.

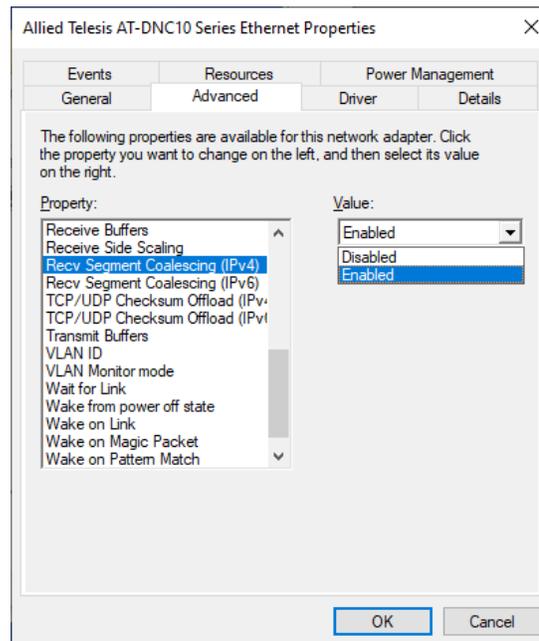


Figure 41. Receive Segment Coalescing (IPv4) Page

3. Select one of the following options:

- Enabled** — RSC is enabled. This is the default setting.
- Disabled** — RSC is disabled.

4. Click **OK**.

Recv Segment Coalescing (IPv6)

When receiving data, the miniport driver, NDIS, and TCP/IP must all look at each segment's header information separately. When large amounts of data are being received, this creates a large amount of overhead. Receive segment coalescing (RSC) reduces this overhead by coalescing a sequence of received segments and passing them to the host TCP/IP stack in one operation, so that NDIS and TCP/IP need only look at one header for the entire sequence.

To enable or disable the Receive Segment Coalescing (IPv6) feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Receive Segment Coalescing (IPv6)** in the Property box.

The Receive Segment Coalescing (IPv6) page is displayed as shown in Figure 42.

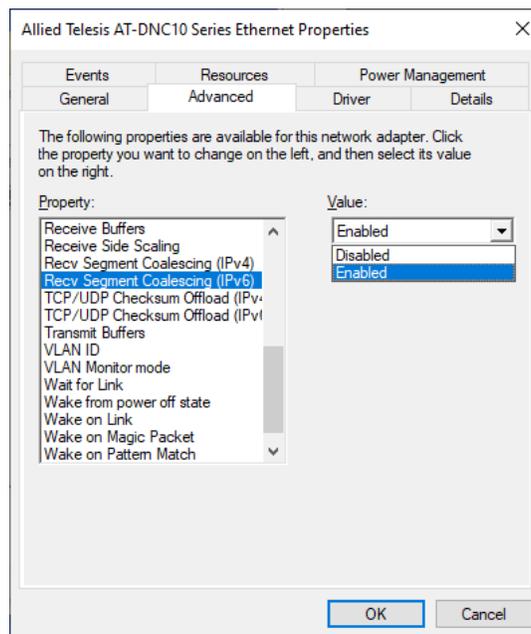


Figure 42. Receive Segment Coalescing (IPv6) Page

3. Select one of the following options:

- Enabled** — RSC is enabled. This is the default setting.
- Disabled** — RSC is disabled.

4. Click **OK**.

TCP/UDP Checksum Offload (IPv4)

The TCP/UDP Checksum Offload (IPv4) function enables the adapter port to compute the checksum of transmitting IPv4 packets and verify the checksum of receiving IPv4 packets, taking load off from the CPU.

To modify the TCP/UDP Checksum Offload (IPv4) setting, do the following:

1. Access the Device Manager on your operating system.

See “Accessing Advanced Properties” on page 54.

2. Select **TCP/UDP Checksum Offload (IPv4)** in the Property box.

The TCP/UDP Checksum Offload (IPv4) page is displayed as shown in Figure 43.

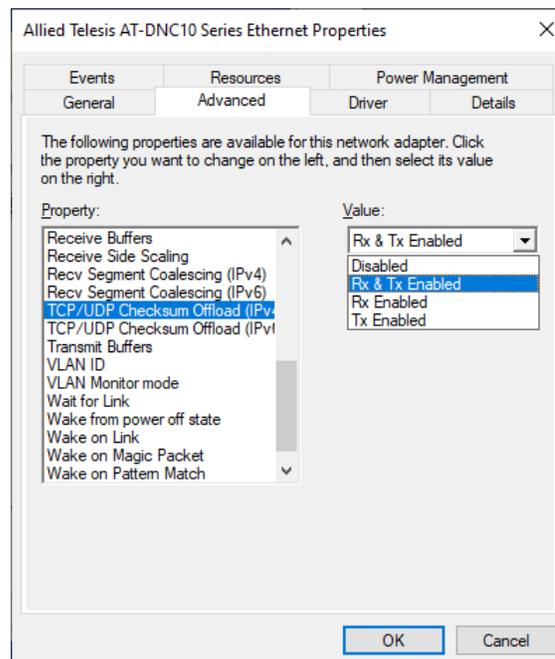


Figure 43. TCP/UDP Checksum Offload (IPv4) Page

3. Select one of the following options:
 - Rx & Tx Enabled** — Enables the TCP/UDP Checksum Offload (IPv4) function for both receiving and transmitting IPv4 packets. This is the default setting.
 - Disabled** — Disables the TCP/UDP Checksum Offload (IPv4) function for both receiving and transmitting.

- ❑ **Rx Enabled** — Enables the TCP/UDP Checksum Offload (IPv4) function only for receiving IPv4 packets.
- ❑ **Tx Enabled** — Enables the TCP/UDP Checksum Offload (IPv4) function only for transmitting IPv4 packets.

4. Click **OK**.

TCP/UDP Checksum Offload (IPv6)

The TCP/UDP Checksum Offload (IPv6) function enables the adapter port to compute the checksum of transmitting IPv6 packets and verify the checksum of receiving IPv6 packets, taking load off from the CPU.

To enable or disable the TCP/UDP Checksum Offload (IPv6) feature, do the following:

1. Access the Device Manager on your operating system.

See “Accessing Advanced Properties” on page 54.

2. Select **TCP/UDP Checksum Offload (IPv6)** in the Property box.

The TCP/UDP Checksum Offload (IPv6) page is displayed as shown in Figure 44.

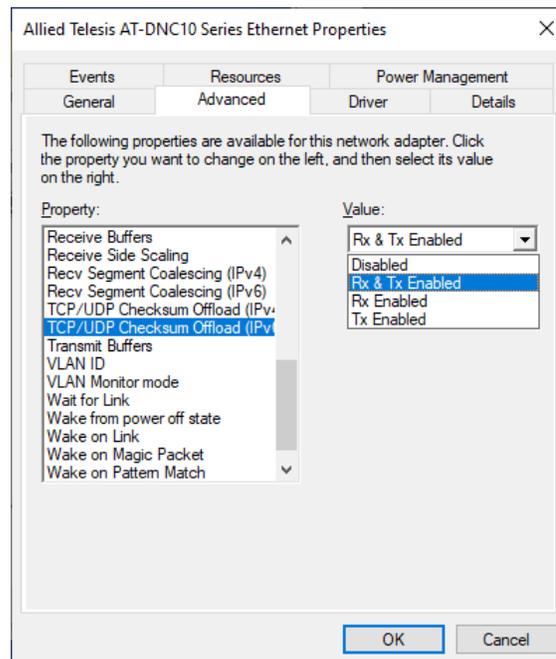


Figure 44. TCP/UDP Checksum Offload (IPv6) Page

3. Select one of the following options:
 - Rx & Tx Enabled** — Enables the TCP/UDP Checksum Offload (IPv6) function for both receiving and transmitting IPv6 packets. This is the default setting.
 - Disabled** — Disables the TCP/UDP Checksum Offload (IPv6) function for both receiving and transmitting.

- ❑ **Rx Enabled** — Enables the TCP/UDP Checksum Offload (IPv6) function only for receiving IPv6 packets.
- ❑ **Tx Enabled** — Enables the TCP/UDP Checksum Offload (IPv6) function only for transmitting IPv6 packets.

4. Click **OK**.

Transmit Buffers

The number of transmit buffers. Transmit buffers are data segments that allow the network adapter to monitor transmit packets in the system memory.

To specify or change the Transmit Buffers feature, do the following:

1. Access the Device Manager on your operating system.

See “Accessing Advanced Properties” on page 54.

2. Select **Transmit Buffers** in the Property box.

The Transmit Buffers page is displayed as shown in Figure 45.

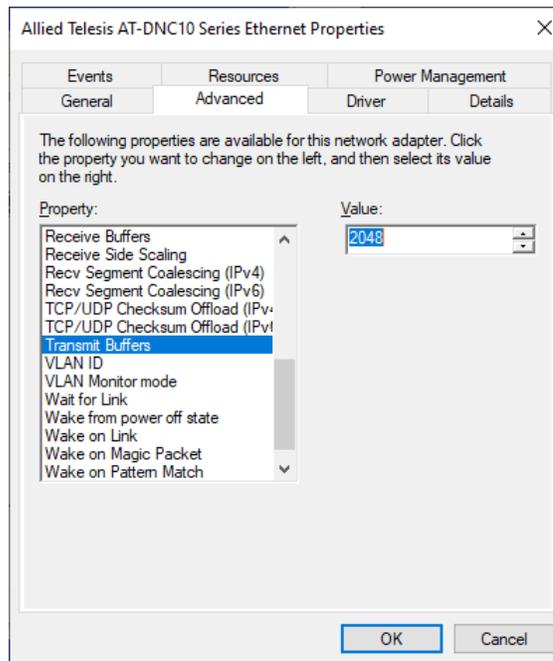


Figure 45. Transmit Buffers Page

3. Specify the buffer size in the Value box. The valid range is 256 to 8184 in increments of 8. The default value is 2048
4. Click **OK**.

VLAN ID

The VLAN ID property allows you to specify a VLAN ID on your network to the adapter port. The adapter port adds the value of the VLAN ID to a frame in the VLAN tag before transmitting the frame.

To change the VLAN ID value, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **VLAN ID** in the Property box.

The VLAN ID page is displayed as shown in Figure 46.

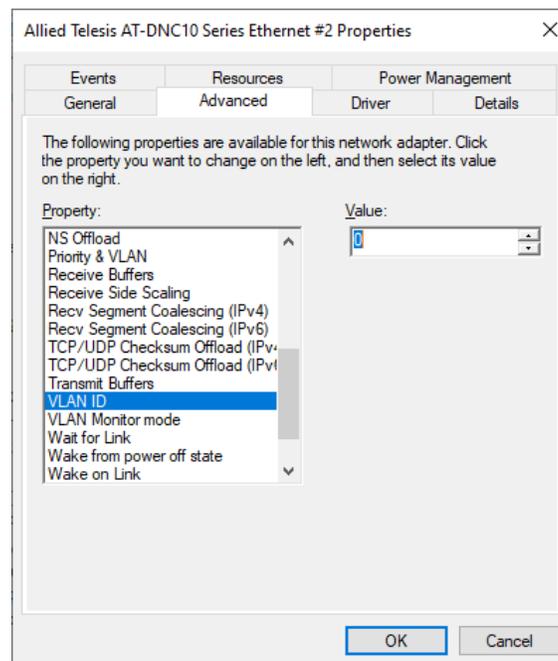


Figure 46. VLAN ID Page

3. Specify a VLAN ID in the Value box.

The range of the value is from 0 to 4094. The default value is 0. Leaving the VLAN ID set to 0 will result in no VLAN tag being added to egress packets, even if VLAN is enabled. This field must be set to the desired VLAN ID if VLAN headers are desired.

4. Click **OK**.

VLAN Monitor Mode

The VLAN Monitor Mode controls VLAN stripping.

Note

Allied Telesis recommends setting this feature as Disabled. This property will be removed in future driver versions.

To change the VLAN Monitor Mode feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **VLAN Monitor Mode** in the Property box.

The VLAN Monitor Mode page is displayed as shown in Figure 47.

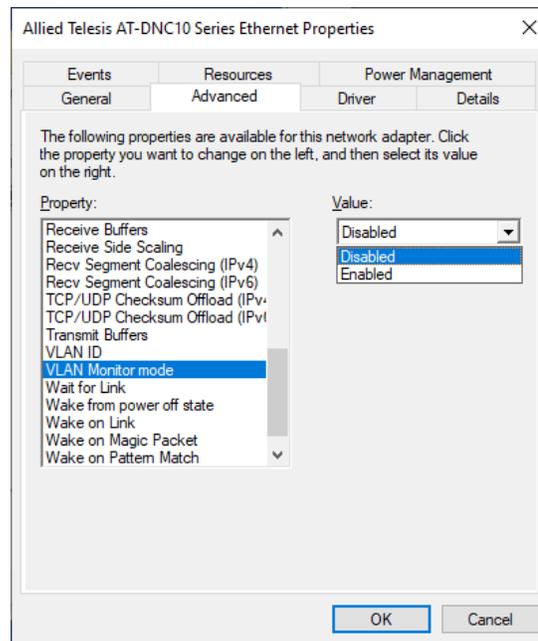


Figure 47. VLAN Monitor Mode Page

3. Select one of the following options:
 - Enabled** — If set to enabled, the VLAN tags may be stripped.
 - Disabled** — If set to disabled, the VLAN tags will not be stripped and packets will be passes to OS as is. This is the default setting.
4. Click **OK**.

Wait for Link

Decides if the driver waits for the link status of the interface before reporting the link state to the OS.

Note

Allied Telesis recommends setting this feature as Auto or On. This property will be removed in future driver versions.

To change the Wait for Link feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Wait for Link** in the Property box.

The Wait for Link page is displayed as shown in Figure 48.

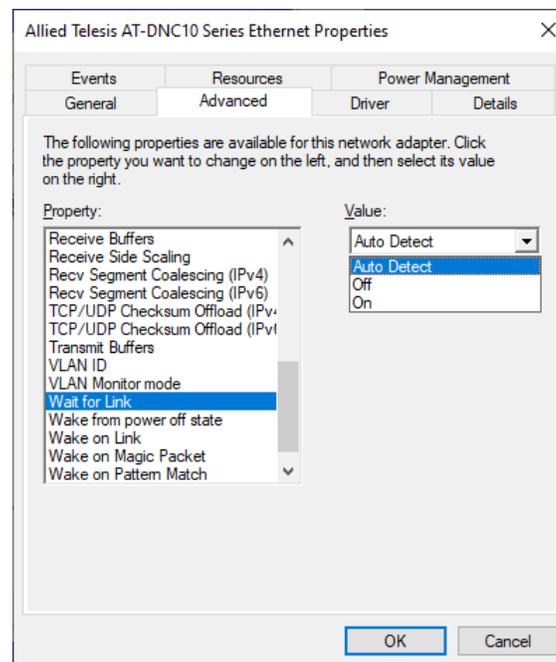


Figure 48. Wait for Link Page

3. Select one of the following options:

- ❑ **Auto Detect** — If set to Auto Detect, it is the same as on. This is the default setting.
- ❑ **Off** — If set to Off, driver will not wait for link negotiation on copper side and will report link state as connected to OS.

- On** — If set to On, driver will report only actual link state of the network interface.

4. Click **OK**.

Wake from Power Off State

When enabled this feature directs the NIC to wake the computer from sleep/power off for Wake on LAN support.

To enable or disable the Wake from Power Off State feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Wake from Power Off State** in the Property box.

The Wake from Power Off State page is displayed as shown in Figure 49.

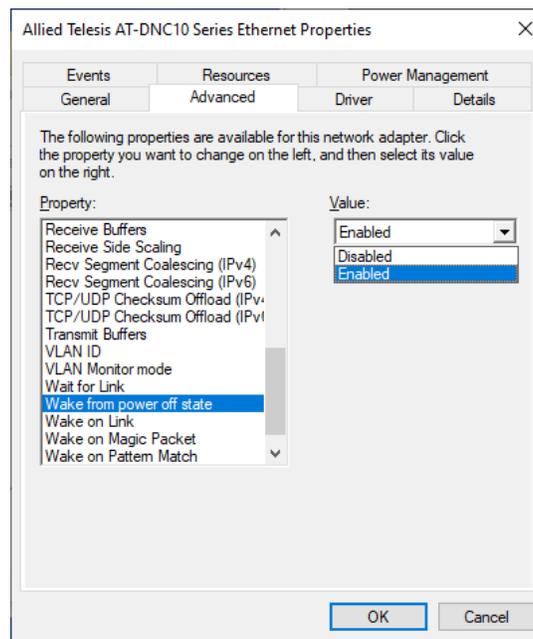


Figure 49. Wake from Power Off State Page

3. Select one of the following options:

- Enabled** — Wakes the computer from sleep/power off for Wake on LAN support. This is the default setting.
- Disabled** — The feature is disabled.

4. Click **OK**.

Note

This feature may require addition settings in the OS and/or BIOS.

Wake on Link

This is part of the Wake on LAN feature. The adapter wakes the computer from a low-power mode when the link state on the adapter's port changes from no link to link.

To enable or disable the Wake on Link feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Wake on Link** in the Property box.

The Wake on Link page is displayed as shown in Figure 50.

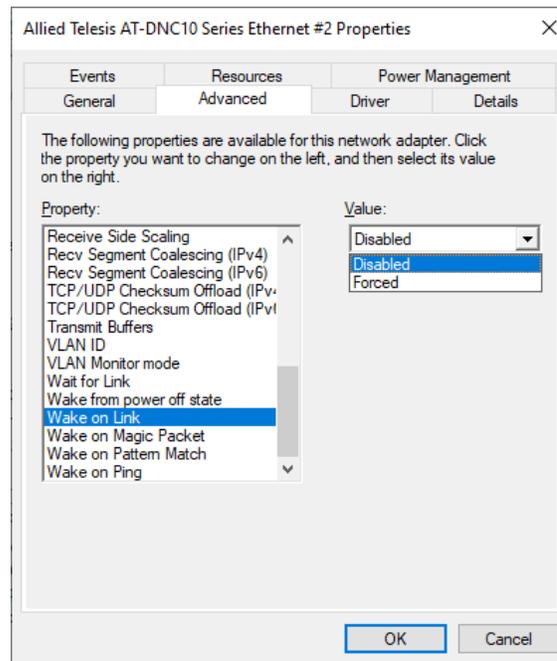


Figure 50. Wake on Link Page

3. Select one of the following options:

- Disable** — This feature is disabled. This is the default setting.
- Forced** — The adapter wakes the computer when the status of the port changes from no link to link.

4. Click **OK**.

Wake on Magic Packet

The Wake on Magic Packet feature enables the adapter to wake up from a low-power mode when the adapter port receives a Magic packet.

To enable or disable the Wake on Magic Packet feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Wake on Magic Packet** in the Property box.

The Wake on Magic Packet page is displayed as shown in Figure 51.

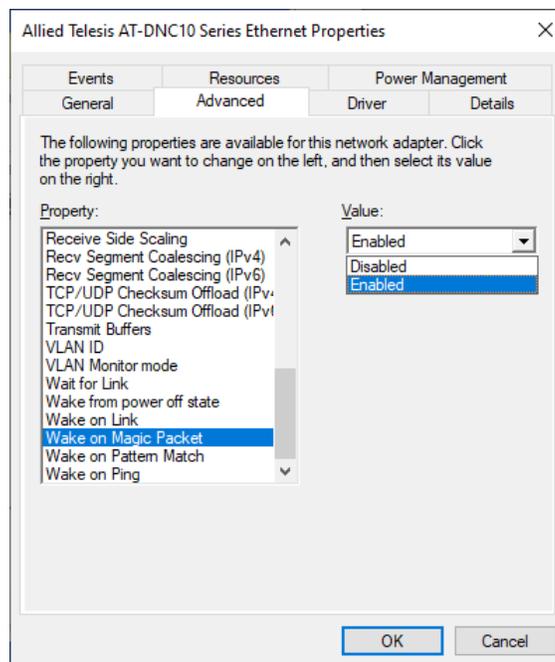


Figure 51. Wake on Magic Packet Page

3. Select one of the following options:

- Enabled** — The adapter wakes up from a low-power mode when receiving a Magic Packet. This is the default setting.
- Disabled** — The adapter stays in a low-power mode when receiving a Magic Packet.

4. Click **OK**.

Wake on Pattern Match

The Wake on Pattern Match feature enables the network adapter to wake up the computer from a low-power mode when it receives a packet that matches the wake patterns specified in the operating system.

To enable or disable the Wake on Pattern Match feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Wake on Pattern Match** in the Property box.

The Wake on Pattern Match page is displayed as shown in Figure 52.

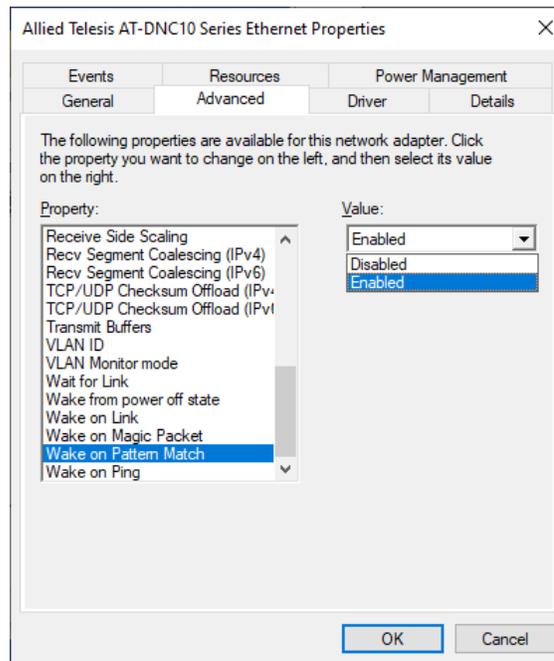


Figure 52. Wake on Pattern Match Page

3. Select one of the following options:

- Enabled** — The adapter wakes up from a low-power mode when receiving a packet that matches one of the patterns specified in the operating system.
- Disabled** — The adapter stays in a low-power mode.

4. Click **OK**.

Wake on Ping

This is part of the Wake on LAN feature. The adapter wakes the computer from a low-power mode when it receives a Ping packet on its port.

To enable or disable the Wake on Ping feature, do the following:

1. Access the Advanced Properties.

See “Accessing Advanced Properties” on page 54.

2. Select **Wake on Ping** in the Property box.

The Wake on Ping page is displayed as shown in Figure 47.

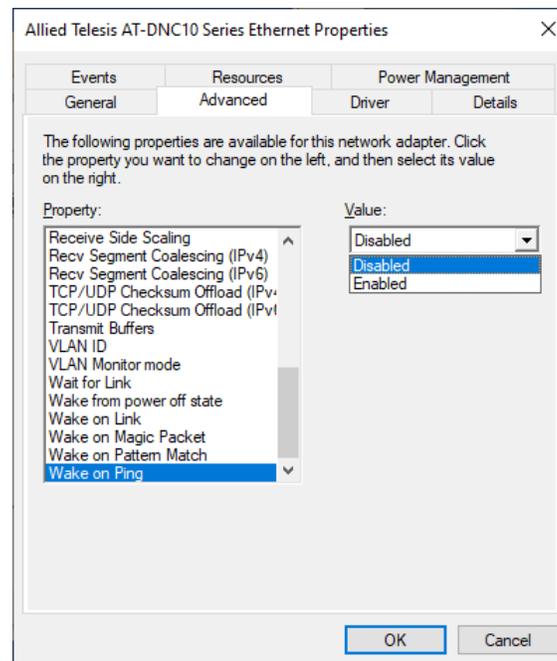


Figure 53. Wake on Ping Page

3. Select one of the following options:

- Disabled** — This feature is disabled. This is the default setting.
- Enabled** — The adapter wakes the computer when it receives a Ping packet.

4. Click **OK**.

Chapter 5

Uninstalling the Driver Software

This chapter describes how to uninstall the driver software for the DNC10 Series network adapter.

This chapter contains the following topics:

- ❑ “Overview” on page 98
- ❑ “Uninstalling the Driver Software Using Device Manager” on page 99
- ❑ “Uninstalling the Driver Software Silently” on page 100

Overview

When you no longer use the DNC10 Series network adapter for your computer, you can uninstall the driver software from your operating system.

As you can install driver software for the DNC10 Series network adapter using Device Manager or the silent installation method, you can also uninstall driver software in two ways:

- ❑ “Uninstalling the Driver Software Using Device Manager” on page 99
- ❑ “Uninstalling the Driver Software Silently” on page 100

Guidelines

Here are the guidelines for uninstalling the driver software from your system:

- ❑ You must have Administrator privileges to remove the driver software.
- ❑ Before uninstalling the network adapter, capture all of the Advanced Property settings for later use. The properties are lost during the uninstall process.

Uninstalling the Driver Software Using Device Manager

To uninstall the driver software from your operating system, do the following:

1. Start your Windows operating system and log in.
2. Access the Device Manager.

See “Accessing the Device Manager” on page 42.

3. In the Device Manager window, expand the Network Adapters folder.
4. Right-click the **Allied Telesis AT-DNC10 Series Series Ethernet**.

The shortcut menu appears as shown in Figure 54.

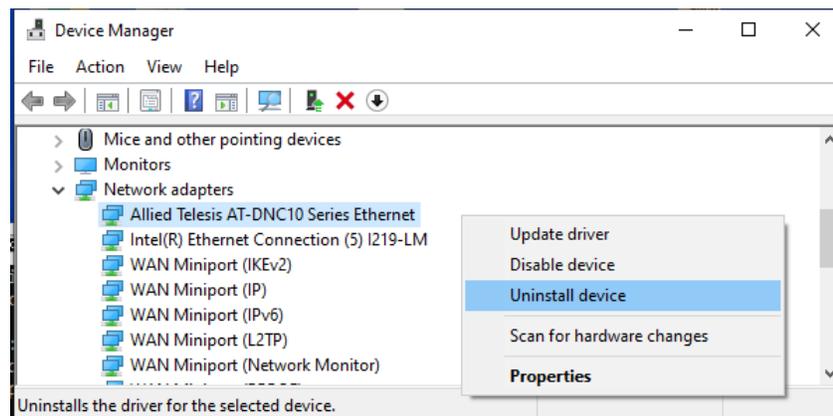


Figure 54. Device Manager Shortcut Menu

5. Select **Uninstall device**.

The Confirm Device Uninstall window pops up.

6. Check the check box if you want to remove the driver software for your adapter.
7. Click **OK** to complete the uninstall.

Uninstalling the Driver Software Silently

You can apply the silent installation method to uninstall the driver.

To uninstall the driver without user-intervention, perform the following steps:

1. Open a command prompt window with administrator privileges.
2. Change the directory to the folder where the `dpinst` utility and the driver files reside.
3. Uninstall the driver silently by executing the following command:

```
> dpinst /U inf_file_name.inf /S
```

Note

Replace *inf_file_name* with the name of `.inf` file.

The driver is uninstalled without user-intervention.

Chapter 6

Troubleshooting

This chapter describes troubleshooting procedures. It contains the following sections:

- ❑ “Troubleshooting Checklist” on page 102
- ❑ “Testing Network Connectivity” on page 105

Troubleshooting Checklist

The following checklist provides recommended actions to take to resolve problems installing the DNC10 series adapter card or running it in your system.

Note

Before opening the cabinet of your system to remove or install the adapter card, review all precautions outlined under “Reviewing Safety Precautions” on page 27.

General Troubleshooting

Here are general troubleshooting suggestions:

- Inspect all cables and connections. Verify that the cable connections on the network adapter and network device are attached securely.
- Verify that the fiber strand connected to TX of the port is connected to the RX of the link partner and vice versa.
- Verify that the remote network device is powered on and operating properly.
- Try connecting the adapter to another network device.
- Repeat the procedure for installing the adapter driver. Refer to “Installing the Driver Software” on page 44.
- If the remote device is a management device, use its management software to confirm that the port connected to the adapter is enabled.
- Verify that the computer with the adapter has the latest BIOS.

Note

The following items require removing the cover from the computer.

- Inspect the adapter for damage.
- Verify that the adapter is completely inserted in the PCIe connector in the system.
- Try installing the adapter in a different PCIe slot in the system.
- Try installing the adapter in a different system.

DNC10LC Adapter

Here are troubleshooting suggestions for the DNC10LC adapter:

- ❑ Verify that the fiber optic cable is securely connected to the duplex LC ports on the DNC10LC adapter and remote network device.
- ❑ Verify that you are using the correct type of fiber optic cable and that the cable length does not exceed the maximum length. Refer to Table 10 on page 109.
- ❑ Verify that the duplex LC ports on the DNC10LC adapter and the remote network device have the same operating properties, such as wavelength, fiber optic cable type, and maximum operating distance. Refer to Table 1 on page 16.
- ❑ Test the attenuation of both directions on the fiber optic cable with a fiber optic tester to determine whether the optical signal is too weak (sensitivity) or too strong (maximum input power). Table 10 on page 109. If there is no link, try creating a loopback between the TX port and the RX port of the fiber connector. A successful link may indicate an incompatibility or fault with the connected cables or equipment.

DNC10SP Adapter

Here are troubleshooting suggestions for the DNC10SP adapter:

- ❑ Verify that the SFP+ transceiver is fully inserted in the port in the adapter.
- ❑ Verify that the fiber optic ports on the fiber optic transceiver and remote network device have the same operating properties, including wavelength, fiber optic cable type, and maximum operating distance. Refer to the specifications included with the transceiver.
- ❑ Verify that the SFP or SFP+ module is of a supported type.
- ❑ If the problem is with two BiDi (bi-directional) transceivers, refer to their data sheets to verify that their transmission and reception frequencies are opposite each other. For instance, a BiDi transceiver that transmits and receives at 1310nm and 1550nm, respectively, has to be connected to a transceiver that transmits and receives at 1550nm and 1310nm, respectively. Two BiDi transceivers will not establish a link if they transmit and receive at the same frequencies.
- ❑ Test the attenuation of both directions on the fiber optic cable with a fiber optic tester to determine whether the optical signal is too weak (sensitivity) or too strong (maximum input power). If there is no link, try creating a loopback between the TX port and the RX port of the fiber connector. A successful link may indicate an incompatibility or fault with the connected cables or equipment.

DNC10T Adapter

Here are troubleshooting suggestions for the DNC10T adapter:

- ❑ Verify that the Ethernet cable is securely connected to the ports on the network adapter and network device.
- ❑ Verify that the cable is correct for the link speed. Refer to “DNC10T Adapter Card” on page 21.
- ❑ Verify that the cable does not exceed 100 meters (328 feet).

Testing Network Connectivity

This section describes how to test the network connectivity of the new adapter with the operating system TCP/IP Ping command. This test assumes the following:

- ❑ The adapter is connected to your network.
- ❑ The computer has an IP address. The address can be a static address that you manually assigned it or a dynamic address from a DHCP server.
- ❑ You know the IP address of another network device.
- ❑ If the new DNC10 adapter is the only network adapter in the computer, you may test it either by having it ping another device or by having another device ping the adapter. However, if there is more than one network adapter in the computer, you should test the new adapter by having another device ping it.

To test the network connectivity, perform the following procedure.

1. Click the Start icon in the left bottom corner of the computer screen.
2. In the search box, type **cmd** and click **OK**.
3. If you are performing the ping command at the system with the new network adapter, type **ipconfig /all** to display its IP address configuration.

An example of the command output is shown in Figure 55.

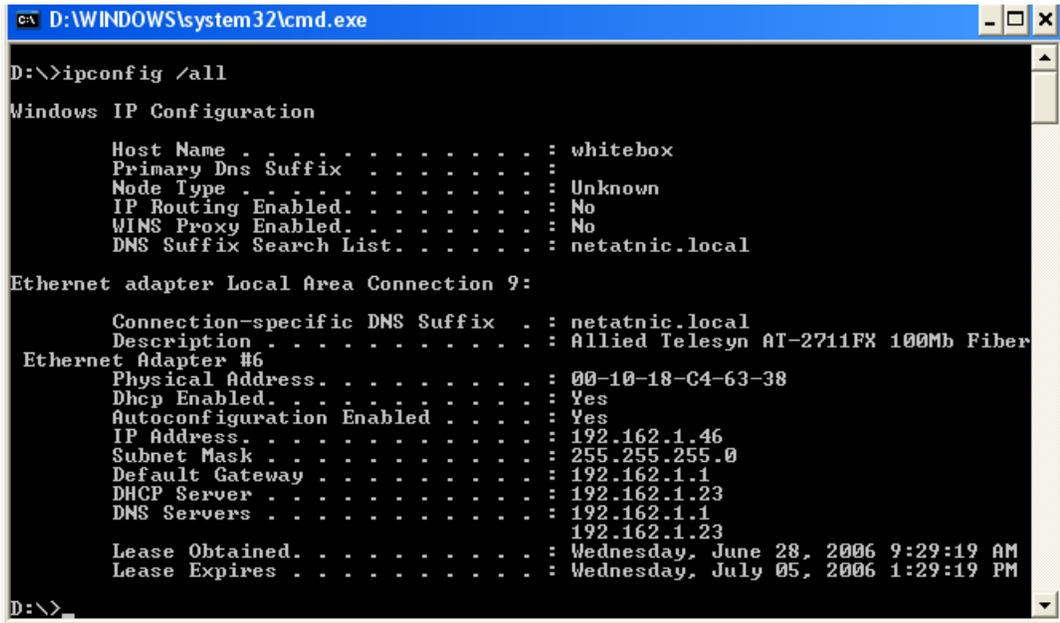


Figure 55. IPCONFIG Command

4. Type **ping** and the IP address of another network device from the command line, then press **Enter**. If you are performing the ping command at the system with the new adapter, specify the IP address of a remote device the adapter should ping. If you are performing the command at another system, enter the IP address of the new adapter.

The results of the Ping command are displayed, as shown in Figure 56. The output should indicate that the system received a reply to its ping from the destination system.

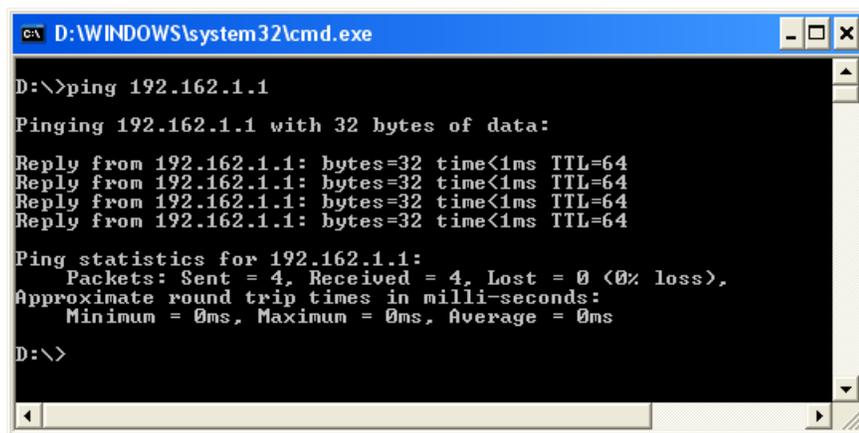


Figure 56. Ping Command

Appendix A

Technical Specifications

This appendix contains the following sections:

- ❑ “Physical Specifications” on page 107
- ❑ “Environmental Specifications” on page 108
- ❑ “Power Specifications” on page 108
- ❑ “RJ-45 Twisted Pair Port Pinouts” on page 109

Physical Specifications

Table 6 contains the weights of the adapter cards.

Table 6. Weights

Network Interface Card	Weight
DNC10LC	4.25 g (0.15 oz)
DNC10SP	2.83 g (0.10 oz)
DNC10T	2.83 g (0.10 oz)

Table 7 contains the dimensions of the adapter cards.

Table 7. Dimensions

Network Interface Card	Dimension (H x D x W)
DNC10LC	82.55 mm x 101.6 mm x 9.05 mm (3.25 in x 4.0 in x 0.75 in)
DNC10SP	82.55 mm x 101.6 mm x 9.05 mm (3.25 in x 4.0 in x 0.75 in)
DNC10T	82.55 mm x 101.6 mm x 9.05 mm (3.25 in x 4.0 in x 0.75 in)

Environmental Specifications

Table 8 contains the environmental specifications of the adapter cards.

Table 8. Environmental Specifications

Environmental Specification	Value
Operating Temperature	<u>DNC10LC</u> : 0° C to 50° C (32° F to 122° F) <u>DNC10SP</u> : 0° C to 50° C (32° F to 122° F) <u>DNC10T</u> : 0° C to 40° C (32° F to 104° F)
Storage Temperature	-25° C to 70° C (-13° F to 158° F)
Operating Humidity	5% to 95% non-condensing
Storage Humidity	5% to 95% non-condensing
Maximum Operating Altitude	Up to 3,048 m (10,000 ft)
Maximum Storage Altitude	Up to 3,048 m (10,000 ft)

Power Specifications

Table 9 contains the power specifications of the adapter cards:

Table 9. Operating Voltages and Maximum Power Consumption

Operating Voltage	3.3V
Maximum Power Consumption	<u>DNC10SP</u> Typical: 2W (with SP10SR) Maximum: 4.5W (with SP10ZR80/I) <u>DNC10LC</u> Typical: 1.75W Maximum: 3W <u>DNC10T</u> Typical: 4W Maximum: 7W

RJ-45 Twisted Pair Port Pinouts

Figure 57 illustrates the pin layout of the RJ-45 connector on the DNC10T adapter.

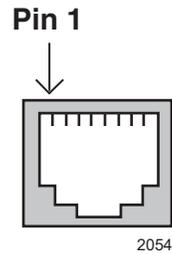


Figure 57. Pin Layout (Front View) of the Twisted Pair Port on the DNC10T Adapter

Table 10 lists the pin signals at 100Mbps.

Table 10. Pin Signals on the RJ-45 Twisted Pair Port at 100Mbps

Pin	MDI Signal	MDI-X Signal
1	TX+	RX+
2	TX-	RX-
3	RX+	TX+
4	Not used	Not used
5	Not used	Not used
6	RX-	TX-
7	Not used	Not used
8	Not used	Not used

Table 11 lists the pin signals at 1/2.5/5/10Gbps.

Table 11. Pin Signals on the Twisted Pair Port at 1/2.5/5/10Gbps

Pin	Pair	Signal
1	1 +	TX and RX+
2	1 -	TX and RX-
3	2 +	TX and RX+
4	3 +	TX and RX+
5	3 -	TX and RX-
6	2 -	TX and RX-
7	4 +	TX and RX+
8	4 -	TX and RX-