

# Assembly Instructions

## Dress Kit for StageScreen Projection Screen by Draper

### ⚠ Caution

- ① Read instructions through completely before proceeding; retain for future reference.
- ② Be careful when handling drapes—they can become a tripping hazard during handling and installation.
- ③ These instructions are based on assembly by a minimum of two people.
- ④ If attaching hardware and drapes while the StageScreen is still on the floor, use caution not to stand on the drapes when raising the screen to a vertical position.
- ⑤ If attaching hardware and drapes after raising StageScreen to a vertical position, be safe. Use a motorized lift if possible. If using a ladder, make sure to have a spotter to hold the ladder, and do not lean against the StageScreen while attaching the hardware, Drapes and Valance.

- ① Assemble Drapery Bars by sliding the extrusion on the horizontal extension into the slot on the attachment angle (see Fig. 1).

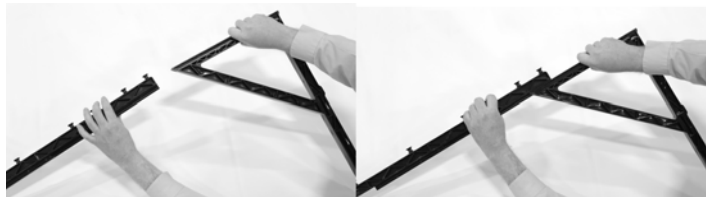


Figure 1

- ② Attach Drapery Bars to StageScreen frame by placing slots in the arms over studs on the frame sides (see Fig. 1). Please make sure to place in the proper position to allow the drapes to hang naturally down to the floor.



Figure 2

- ③ Place Universal Valance Bars along top of StageScreen frame (see Fig. 3).



Figure 3

**Please Note: Start on both ends of the frame and space Universal Valance Bars evenly along the top of the frame. If there are not enough to cover the entire length of the frame, gaps should be located toward the center of the frame (see Fig. 4).**



Figure 4

- ④ Attach Valance to Universal Valance Bars using DuraLoop attachment system. Make sure the Side Drapes OVERLAP the Valance (see Fig. 5).



Figure 5

- ⑤ Attach Skirt to bottom of StageScreen frame. First, secure the ends using the DuraLoop attachment system, then attach the Skirt to the frame by placing the magnetic attachments on the studs (see Fig. 6).



Figure 6

# DRAPER<sup>®</sup>

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
 www.draperinc.com ■ fax 765-987-7142  
 Copyright © 2010 Draper Inc. Form StageScreen-DressKit\_Inst10 Printed in U.S.A.



**⚠ Caution:**  
**Beware of**  
**pinch points.**

*If you encounter any difficulties assembling your StageScreen Dress Kit, call your dealer or Draper, Inc. in Spiceland, Indiana, 765-987-7999, or fax 765-987-7142.*