


For use with these part numbers:

| | |
|---------------|---------------|
| 383290 | 383499 |
| 383323 | 383565 |


Inventory

| | |
|---|---|
| 2' (61cm) | 0 |
| 3' (91cm) | 0 |
| 3½' (107cm) | 2 |
| 4' (122cm) | 0 |
| 5' (162cm) | 2 |
| 6' (183cm) | 6 |
| Stiffener | 8 |
|  | 4 |

Caution:



Beware of Pinch Points

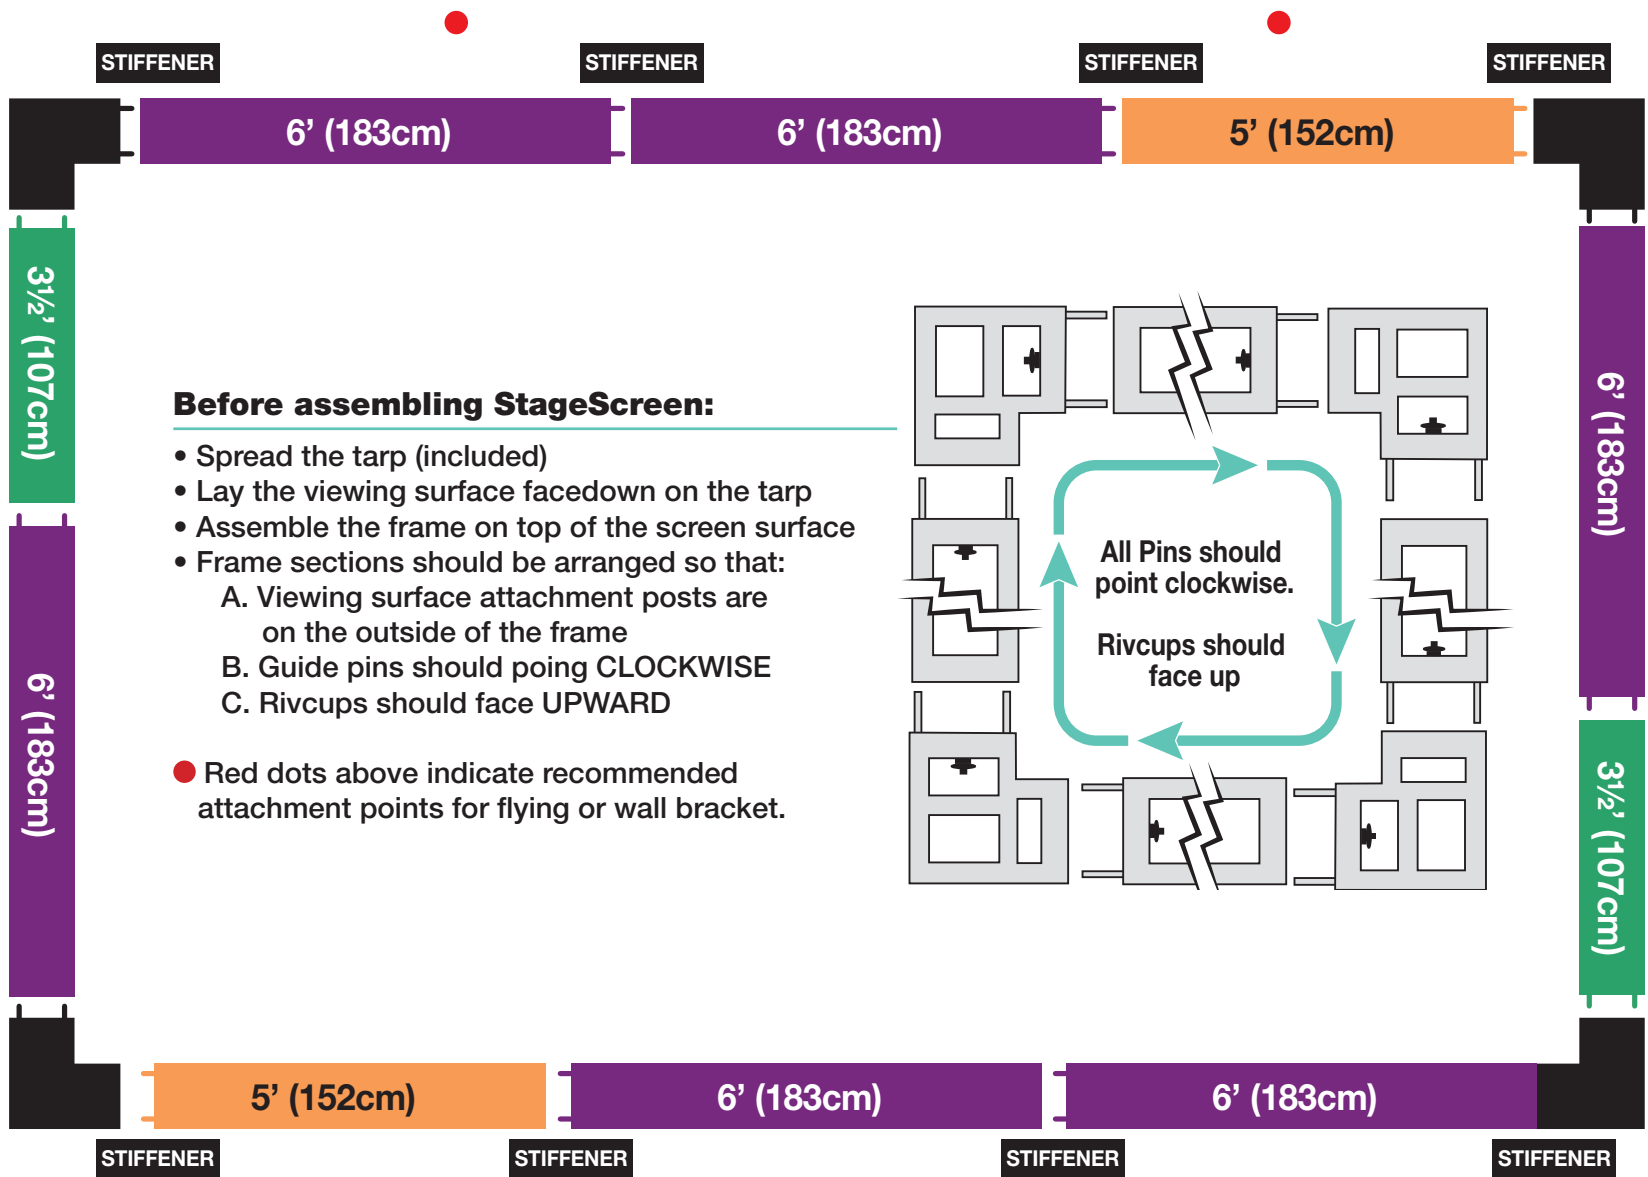

Before assembling StageScreen:

- Spread the tarp (included)
- Lay the viewing surface facedown on the tarp
- Assemble the frame on top of the screen surface
- Frame sections should be arranged so that:
 - A. Viewing surface attachment posts are on the outside of the frame
 - B. Guide pins should point **CLOCKWISE**
 - C. Rivcups should face **UPWARD**
- Red dots above indicate recommended attachment points for flying or wall bracket.

