




POWERBANK FOR SMARTPHONES & LAPTOPS



Features

1.1 Product appearance

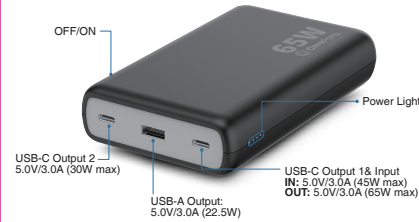

1.2 Specifications

- **Battery type:** A grade high-energy density Polymer cell
- **Capacity:** 20 000mAh - 74Wh
- **USB-C Input:** DC 5V \pm 3.0A (45W max)
- **USB-C Output 01:** DC 5V \pm 3.0A (65W max)
- **USB-C Output 02:** DC 5V \pm 3.0A (30W max)
- **Size & Weight:** 135*80*30mm - 377g

1.3 Into the box

- 1* Powerbank
- 1*USB-C to USB-C Cable 100CM
- 1*User Guide

Display light

Indicator light

4 lights on the device to show the capacity

"○" Flashing

"○" Switch off

"●" Lighting

○ ○ ○ ○ Power bank will check and show the percentage of capacity when power on.

| CHARGE THE POWER BANK | | | |
|------------------------|---------|----------|--|
| Display | Lights | Level | Notes |
| 1 Flashing / clignotte | ○ ○ ○ ○ | 0%~25% | Powerbank is fully charged when all the lights are ON. |
| 1 | ● ○ ○ ○ | 25%~50% | |
| 2 | ● ● ○ ○ | 50%~75% | |
| 3 | ● ● ● ○ | 75%~100% | |
| 4 | ● ● ● ● | 100% | |

| CHARGE THE DEVICES | | | |
|------------------------|---------|----------|--|
| Display | Lights | Level | Notes |
| 1 Flashing / clignotte | ○ ○ ○ ○ | 0%~25% | When the power is close to 5%, the last light flashes until power runs out |
| 1 | ● ○ ○ ○ | 25%~50% | |
| 2 | ● ● ○ ○ | 50%~75% | |
| 3 | ● ● ● ○ | 75%~100% | |
| 4 | ● ● ● ● | 100% | |

Storage

If you don't use the battery

- 1/ Recharge the battery to half capacity and keep it in a cool and dry place
- 2/ It is recommended to perform a complete charging and discharging every 3 months.

Safety instruction

- Do not throw the battery into fire, it might burn, explode or release toxic gas.
- Do not connect positive and negative poles.
- Do not store battery with other metallic materials.
- Do not open the battery and do not drop it into water, the battery needs to keep dry.
- Stop using the battery if leaking, heating itself, out of shape, smelling or any abnormal phenomenon.
- Use the battery at room temperature between 10°C and 30°C.
- Do not charge with a non certified device.


| Product Name | Toxic and Hazardous Substances or Elements | | | | | |
|--|--|----|----|--------|-----|------|
| | Pb | Hg | Cd | Cr(VI) | PBB | PBDE |
| Portable Battery Pack | X | O | O | O | O | O |
| O: Means (that) the content of this harmful substances in all the parts of homogeneous material is under 5/711363-2006 required standards. | | | | | | |
| X: Means (that) the content of this harmful substances at least in parts of a homogeneous material is within 5/711363-2006 required standards. | | | | | | |

Charging instructions

How to use the battery

- Connect your device on the battery with the appropriate cable. The battery will discharge automatically and the power indicator will turn off after 5s.

- **USB-A Output** : Charge your device (Smartphone / Tablet...)
- **USB-C Outputs** : Charge your device (Laptop / Smartphone...)
- **USB-C Input** : Charge your Powerbank

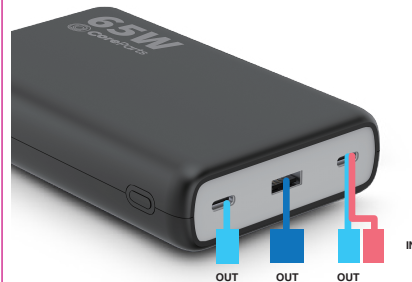

Warning

- 1/ Do not charge the battery and your external device at the same time.
- 2/ Do not let cables connected to the USB outputs if the battery is not in use.
- 3/ If your device required higher voltage than the battery, your device might not charge or not fully charge.
- 4/ If your device required lower voltage than the battery, the battery might overcharge or damage your device.

