

Dell Pro 27 Monitor

E2726H

User's Guide

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Safety instructions	5
About your monitor	6
Package contents	6
Information available on the packaging	7
Product features	7
Operating system compatibility	10
Identifying parts and controls	10
Front view	10
Back view	11
Side view	12
Bottom view	12
Monitor specifications	13
Resolution specifications	14
Supported video modes	14
Preset display modes	15
Electrical specifications	16
Physical characteristics	17
Environmental characteristics	18
Pin assignments	19
DisplayPort port	19
HDMI port	20
VGA Port	21
Plug and play capability	21
LCD monitor quality and pixel policy	21
Ergonomics	22
Handling and Moving Your Display	23
Maintenance guidelines	24
Cleaning your monitor	24
Setting up the monitor	25
Attaching the stand	25
Using tilt	26
Connecting your monitor	26
Connecting DP cable	26
Connecting HDMI cable	27
Organizing your cables	27
Securing your monitor using Security lock (optional)	28
Removing the monitor stand	28
VESA wall mounting (optional)	29
Operating the monitor	30
Turn on the monitor	30
Using the joystick control	30
Using the On-Screen Display (OSD) menu	33
OSD warning messages	40
Setting the maximum resolution	42
Troubleshooting	43

Self-test	43
Built-in diagnostics	43
Common problems	44
Regulatory information	46
TCO Certified	46
FCC notices (U.S. only) and other regulatory information	46
EU product database for energy label and product information sheet	46
Contacting Dell	47
Revision History	48

Safety instructions

Use the following safety guidelines to protect your monitor from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that is shipped with your monitor.

 **NOTE:** Before using the monitor, read the safety information that is shipped with your monitor and printed on the product. Keep the documentation at a secure location for future reference.

 **WARNING:** Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

 **CAUTION:** The possible long-term effect of listening to audio at high volume through the headphones (on monitor that supports it) cause damage to your hearing ability.

- Place the monitor on a solid surface and handle it carefully.
- The screen is fragile and can be damaged if dropped or pressed with a sharp object.
- Ensure that your monitor is electrically rated to operate with the AC power available in your location.
- Keep the monitor in room temperature. Excessive cold or hot conditions can have an adverse effect on the liquid crystal of the display.
- Connect the power cable from the monitor to a wall outlet that is near and accessible. See [Connecting your monitor](#).
- Do not place and use the monitor on a wet surface or near water.
- Do not subject the monitor to severe vibration or high impact conditions. For example, do not place the monitor inside a car trunk.
- Unplug the monitor when it is going to be left unused for an extended period.
- To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor.
- Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on the product.
- Certain monitors can be wall mounted using the VESA mount that is sold separately. Ensure to use the correct VESA specifications as mentioned in the wall mounting section of the User's Guide.

For information about safety instructions, see the Safety, Environmental, and Regulatory Information (SERI) document that is shipped with your monitor.


About your monitor

Package contents

The following table provides the list of components that are shipped with your monitor. If any component is missing, contact Dell. For more information, see [Contacting Dell](#).

- NOTE:** Some components, features, and included cables are optional and vary by country.
- NOTE:** To set up stand from any other source, refer to the documentation that comes with the stand for instructions.

Table 1. Monitor components and descriptions.

Component image	Component description
	Monitor
	Stand riser
	Stand base
	Power cable
	DisplayPort to DisplayPort 1.4 cable (1.80 m)
	HDMI 1.4 cable (1.80 m)
	- QR Card - Safety, Environmental, and Regulatory Information

Information available on the packaging

Before you open the box, ensure that the box is oriented correctly:

1. Lay the packaging box horizontally on a flat surface, ensure the opening flap is right in front of you.
2. Pull out the paper-plastic horizontally and remove the components.

The ports on the monitor are as follows:

- 1 DP port
- 1 HDMI port
- 1 VGA port

The following are the accessories that ship within the box:

- Power cable
- DisplayPort to DisplayPort 1.4 cable (1.80 m)
- HDMI 1.4 cable (1.80 m)

For information about recycling, see the [Dell recycling](#) website.

Product features

The Dell **E2726H** flat panel monitor has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD), anti-static and LED backlight. The monitor has the following features:

- **E2726H:** 686.0 mm (27.0 in.) viewable area display (measured diagonally).
- 1920 x 1080 resolution, with full-screen support for lower resolutions.
- Wide viewing angle of 178 degrees in vertical and horizontal directions.
- Contrast ratio (1000:1).
- Color gamut of NTSC Min.72% (CIE 1931).
- Digital connectivity with DisplayPort and HDMI.
- Analog connectivity with VGA.
- Support FHD @ 120 Hz.
- Removable pedestal stand and Video Electronics Standards Association (VESA) 100 mm mounting holes for flexible mounting solutions.
- Plug-and-play capability (if supported by your computer).
- On-Screen Display (OSD) adjustments for easy setup and screen optimization.
- Power and OSD buttons lock.
- Security-lock slot.
- ≤ 0.3 W in Off mode.
- Supports Dell Display and Peripheral Manager.
- Arsenic-free glass and a mercury-free panel.
- Circuit boards made from BFR/PVC-free laminates.
- TCO Certified and TCO Certified Edge.
- EPEAT registered where applicable, varies by country or region.
See [EPEAT's official website](#) for registration status by country or region.
- RoHS-compliant.
- Energy Star Certified.
- Optimize eye comfort with a flicker-free screen and low blue light feature to minimize hazard of blue light emission.
- This monitor comes with an integrated low blue light screen feature that improves eye comfort by reducing potentially harmful blue light emissions without compromising color. Through the feature, Dell has reduced harmful blue light exposure to ≤50%.
- This monitor is certified with TÜV Rheinland Eye Comfort 3.0 with a 3-star rating. It incorporates key technologies that also deliver a flicker-free screen, up to 120 Hz refresh rate, a color gamut of NTSC Min.72% (CIE 1931). The low blue light screen feature is enabled by default on your monitor.
- This monitor uses a low blue light panel. When the monitor is reset to factory settings or default setting, it is compliance with TÜV Rheinland Hardware Low blue light Category 3.

Blue light ratio:

The ratio of light in the range from 415nm-455nm compared to 400nm-500nm shall be less than 50%.

Table 2. Blue light ratio.

Category	Blue light ratio
1	$\leq 20\%$
2	$20\% < R \leq 35\%$
3	$35\% < R \leq 50\%$

- Decreases the level of hazard blue light emitted from the screen to make viewing more comfortable for your eyes without distortion of color accuracy.
- The monitor adopts Flicker-Free technology, which clears the eye visible flicker, brings comfort viewing experience and preventing users suffer from eye strain and fatigue.

About TÜV Rheinland Eye Comfort 3.0

TÜV Rheinland Eye Comfort 3.0 certification program presents a consumer-friendly star rating scheme to the display industry promoting eye wellness from safety to eye care. Compared to existing certifications, the 5-star-rating program adds rigorous testing requirements on overall eye care attributes such as low blue-light, flicker-free, refresh rate, color gamut, color accuracy and ambient light sensor performance. It lays out requirement metrics and rates the product performance on five levels, and the sophisticated technical assessment process provides consumers and buyers with indicators that are easier to judge.

The eye wellness factors being considered remain constant, however, the standards for the various star ratings are different. The higher the star rating, the more stringent the standards. The table below lists the major eye comfort requirements which apply in addition to the basic eye comfort requirements (such as pixel density, uniformity of luminance and color, and freedom of movement).

For more information around **TÜV Eye Comfort certification** see: [Eye Comfort Certification](#).



Table 3. Eye comfort 3.0 requirements

Eye Comfort 3.0 Requirements and Star Rating Scheme for Monitors				
Category	Test item	Star Rating Scheme		
		3-star	4-star	5-star
Eye Care	Low Blue Light	TÜV Hardware LBL Category III ($\leq 50\%$) or Software LBL solution ¹	TÜV Hardware LBL Category II ($\leq 35\%$) or Category I ($\leq 20\%$)	TÜV Hardware LBL Category II ($\leq 35\%$) or Category I ($\leq 20\%$)
	Flicker Free	TÜV Flicker Reduced or TÜV Flicker Free	TÜV Flicker Reduced or TÜV Flicker Free	Flicker Free
Ambient Light Management	Ambient Light Sensor performance	No sensor	No sensor	Ambient light sensor
	Intelligent CCT control	No	No	Yes
	Intelligent Luminance control	No	No	Yes
Image quality	Refresh Rate	≥ 60 Hz	≥ 75 Hz	≥ 120 Hz
	Luminance uniformity	Luminance uniformity $\geq 75\%$		
	Color Uniformity	Color uniformity $\Delta u'v' \leq 0.02$		
	Freedom of movement	Luminance changes shall decrease less than 50%; The colour shift is less than 0.01		
	Gamma difference	Gamma difference $\leq \pm 0.2$	Gamma difference $\leq \pm 0.2$	Gamma difference $\leq \pm 0.2$
	Wide color gamut ²	NTSC ³ Min.72% (CIE 1931) or sRGB ⁴ Min 95% (CIE 1931)	sRGB ⁴ Min.95% (CIE 1931)	DCI-P3 ⁵ Min. 95% (CIE 1976) & sRGB ⁴ Min.95% (CIE 1931) or Adobe RGB ⁶ Min.95% (CIE 1931) & sRGB ⁴ Min.95% (CIE 1931)
Eye Comfort User Guide	User guide	Yes	Yes	Yes
Remark	¹ Software controls the blue light emission by reducing excessive blue light, resulting in a more yellow tone. ² Color gamut describes the availability of colors in the display. Various standards were developed for specific purposes. 100% corresponds to the full color space as defined in the standard. ³ NTSC stands for National Television Standards Committee, which developed a color space for the television system that is used in the United States. ⁴ sRGB is a standard red, green, and blue color space that is in use on monitors, printers, and the World Wide Web. ⁵ DCI-P3, short for Digital Cinema Initiatives - Protocol 3, is a color space used in digital cinema that encompasses a wider range of colors than the standard RGB color space. ⁶ Adobe RGB is a color space created by Adobe Systems that encompasses a broader range of colors than the standard RGB color model, particularly in the cyans and greens.			

Operating system compatibility

- Windows 10/Windows 11 and later*
*The operating system compatibility on Dell branded monitors may vary based on factors such as:
 1. Specific release date(s) when operating system versions, patches, or updates are available.
 2. Specific release date(s) when Dell branded monitor firmware, software application, or driver updates are available on the Dell support website.

Identifying parts and controls

Front view

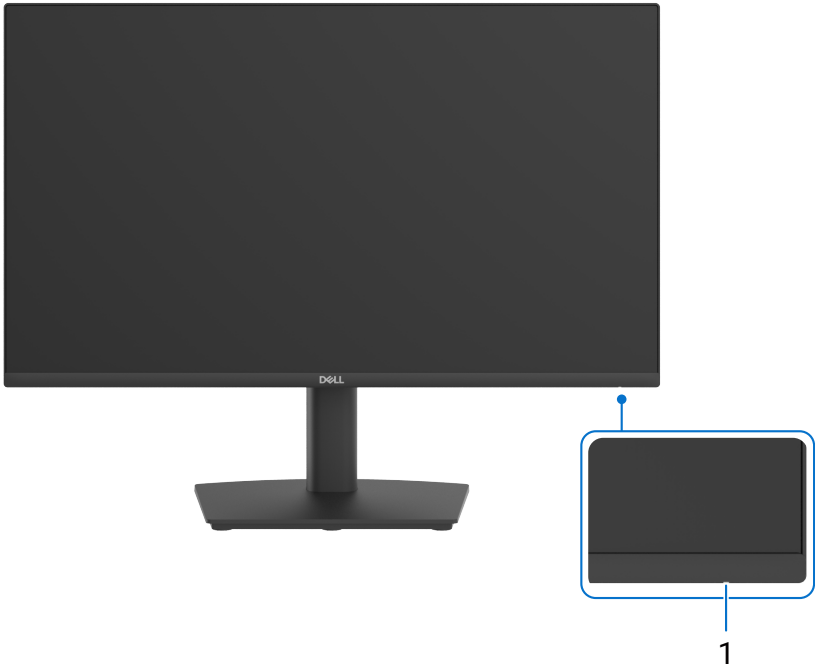


Figure 1. Front view

Table 4. Components and descriptions.

Label	Description	Function
1	Power LED indicator	A solid white light indicates that the monitor is turned on and is functioning. Blinking white light indicates that the monitor is in Standby Mode.

Back view

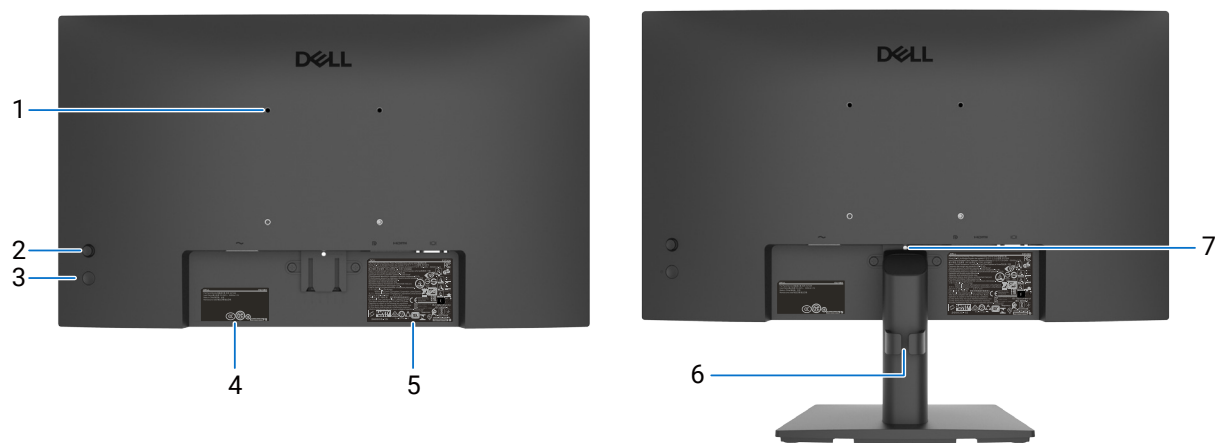


Figure 2. Back view

Table 5. Components and descriptions.

Label	Description	Function
1	VESA mounting 4 holes (100 mm x 100 mm) - behind attached VESA cover	Wall-mount the monitor using VESA-compatible wall mount kit .
2	Joystick	Use it to control the OSD menu. For more information, see Operating the monitor .
3	Power button	To turn the monitor on or off.
4	Regulatory label (including MyDell QR code, serial number, and Service Tag label)	See this label if you need to contact Dell for technical support. The Service Tag is a unique alphanumeric identifier that allows Dell service technicians to identify your monitor's specifications and access warranty information.
5	Regulatory information label	Lists the regulatory approvals.
6	Cable-management guide	To organize the cables.
7	Stand release button	Release stand from the monitor.

Side view



Figure 3. Side view

Bottom view

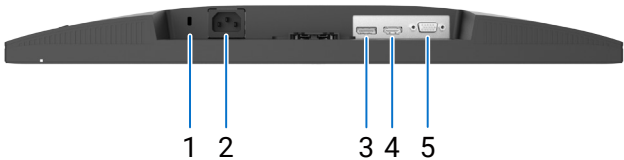


Figure 4. Bottom view

Table 6. Components and descriptions.

Label	Description	Function
1	Security-lock slot	Secures the monitor with a security cable lock (sold separately).
2	 Power connector	Connects the power cable.
3	 DisplayPort 1.4 port	Connects to your computer with the DisplayPort cable.
4	 HDMI 1.4 port	Connects your computer with the HDMI cable.
5	 VGA port	Connects to your computer with the VGA cable.

Dell Display and Peripheral Manager (DDPM) for Windows

- DDPM is a software application that helps you set up and configure the Dell monitors and peripherals. Some of its features include:
- 1. Adjusting the monitor On-Screen Display (OSD) settings such as brightness, contrast, and resolution without needing to use the joystick on the monitor.
 - 2. Arranging multiple applications on your screen by placing them into a template of your choice using Easy Arrange.
 - 3. Assign applications or files to the partitions of Easy Arrange, save the layout as a profile, and restore the profile automatically with Easy Arrange Memory when needed.
 - 4. Connect the Dell Monitor to multiple input sources and manage these video inputs using the Input Source feature.
 - 5. Customize each application with its own distinct color mode using the Color Preset feature.
 - 6. Replicate software application settings from one monitor to another identical monitor using the Import/Export application settings feature.
-  **NOTE:** Some features of the DDPM mentioned above are available only on select monitor models. For more information about DDPM, and the recommended computer configuration to install it, go to [DDPM](#).

Monitor specifications

Table 7. Monitor specifications.

Description	Value
Screen type	Active matrix-TFT LCD
Panel technology	In-Plane Switching (IPS) Technology
Aspect ratio	16:9
Viewable image dimensions	
Diagonal	686.0 mm (27.0 in.)
Active area	
Horizontal	597.89 mm (23.54 in.)
Vertical	336.31 mm (13.24 in.)
Area	201076.91 mm ² (311.67 in. ²)
Pixel pitch	
Horizontal	0.3114 mm
Vertical	0.3114 mm
Pixel per inch (PPI)	82
Viewing angle	
Horizontal	178° (typical)
Vertical	178° (typical)
Brightness	300 cd/m ² (typical)
Contrast ratio	1000:1 (typical)
Display screen coating	Anti-glare (AG) with hard-coating 3H
Backlight	LED Edgelight System
Response time (Gray to Gray)	5 ms (fast mode) 8 ms (normal mode)
Color depth	16.70 million colors
Color gamut	NTSC 72% (CIE 1931) (mininum)
Dell Display and Peripheral Manager (DDPM) Compatibility	Easy Arrange and other key features
Connectivity	1 x DisplayPort 1.4 (HDCP 1.4) port (supports up to FHD 1920 x 1080, 120 Hz) 1 x HDMI port (HDCP 1.4) (supports up to FHD 1920 x 1080, 120 Hz as perspecified in HDMI 1.4) 1 x VGA port(Support up to FHD 1920 x 1080 60Hz)
Bezel width (edge of the monitor to active area)	6.40 mm (0.25 in.) (Top) 6.40 mm (0.25 in.) (Left/Right) 12.30 mm (0.48 in.) (Bottom)
Security	Security-lock slot (cable lock sold separately)
Tilt angle	-5° to 21°

Resolution specifications

Table 8. Resolution specifications.

Description	Value
Horizontal scan range	- VGA: 30 kHz to 83 kHz - DisplayPort/HDMI: 30 kHz to 138 kHz
Vertical scan range	- VGA: 48 Hz to 76 Hz - DisplayPort/HDMI: 48 Hz to 120 Hz
Default preset resolution	- VGA: 1920 x 1080 at 60 Hz - DisplayPort/HDMI: 1920 x 1080 at 60 Hz
Maximum preset resolution	- VGA: 1920 x 1080 at 60 Hz - DisplayPort/HDMI: 1920 x 1080 at 120 Hz

Supported video modes

Table 9. Supported video modes.

Description	Video Identification Code	Value
Video display capabilities (DisplayPort/HDMI)	VIC 1	640x480p 59.94/60Hz 4:3
	VIC 2	720x480p 59.94/60Hz 4:3
	VIC 3	720x480p 59.94/60Hz 16:9
	VIC 4	1280x720p 59.94/60Hz 16:9
	VIC 16	1920x1080p 59.94/60Hz 16:9
	VIC 17	720x576p 50Hz 4:3
	VIC 18	720x576p 50Hz 16:9
	VIC 19	1280x720p 50Hz 16:9
	VIC 31	1920x1080p 50Hz 16:9
	VIC 63	1920x1080p 119.88/120Hz 16:9

Preset display modes

Table 10. Preset display modes.

Display mode	Horizontal frequency (kHz)	Vertical frequency (Hz)	Pixel clock (MHz)	Sync polarity (Horizontal/Vertical)
IBM, 720 x 400	31.47	70.08	28.32	-/+
VESA, 640 x 480	31.47	59.94	25.17	-/-
VESA, 640 x 480	37.50	75.00	31.50	-/-
VESA, 800 x 600	37.88	60.32	40.00	+/+
VESA, 800 x 600	46.88	75.00	49.50	+/+
VESA, 1024 x 768	48.36	60.00	65.00	-/-
VESA, 1024 x 768	60.02	75.03	78.75	+/+
VESA, 1152 x 864	67.50	75.00	108.00	+/+
1280 x 720	45.00	59.94	74.25	-/+
1280 x 720	56.46	74.78	95.75	-/+
VESA, 1280 x 1024	63.98	60.02	108.00	+/+
VESA, 1280 x 1024	79.98	75.02	135.00	+/+
VESA, 1600 x 900	60.00	60.00	108.00	+/+
VESA, 1920 x 1080	67.50	60.00	148.50	+/+
CVT-RB 1920x1080	113.22	99.93	235.5	+/-
CVT-RB 1920x1080	137.26	119.98	285.5	+/-

Electrical specifications

Table 11. Electrical specifications.

Description	Value
Video input signals	- Analog RGB: 0.7 V ± 5 %, 75 Ω input impedance - DP/HDMI for each differential line, 100 Ω input impedance per differential pair
Input voltage/frequency/current	100 VAC to 240 VAC / 50 Hz or 60 Hz ± 3 Hz / 0.7 A (typical)
Inrush current	120 V: 30 A (maximum) at 0°C (cold start) 240 V: 60 A (maximum) at 0°C (cold start)
Power Consumption	0.3 W (Off Mode)¹ 0.3 W (Standby Mode)¹ 14.0 W (On Mode)¹ 36 W (Max)² 10.8 W (P_{on})³ 34.3 kWh (TEC)³

¹ As defined in EU 2019/2021 and EU 2019/2013.

² Max brightness and contrast setting.

³ P_{on}: Power consumption of On Mode as defined in Energy Star 8.0 version.

TEC: Total energy consumption in kWh as defined in Energy Star 8.0 version.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components, and peripherals you have ordered and Dell has no obligation to update such information. Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.

 **NOTE:** This monitor is ENERGY STAR certified. 

This product qualifies for ENERGY STAR in the factory default settings which can be restored by Factory Reset function in the OSD menu. Changing the factory default settings or enabling other features may increase power consumption that could exceed the ENERGY STAR specified limit.

Physical characteristics

Table 12. Physical characteristics.

Description	Value
Signal cable type:	• Analog: VGA cable • Digital: HDMI 1.4 cable (1.80 m) DisplayPort to DisplayPort 1.4 cable (1.80 m)
NOTE: Dell monitors are designed to work optimally with the video cables that are shipped with your monitor. As Dell does not have control over the different cable suppliers in the market, the type of material, connector, and process that is used to manufacture these cables, Dell does not guarantee video performance on cables that are not shipped with your Dell monitor.	
Dimensions (with stand):	
Height	452.72 mm (17.82 in.)
Width	610.68 mm (24.04 in.)
Depth	188.29 mm (7.41 in.)
Dimensions (without stand):	
Height	355.02 mm (13.98 in.)
Width	610.68 mm (24.04 in.)
Depth	47.70 mm (1.88 in.)
Stand dimensions:	
Height	191.26 mm (7.53 in.)
Width	245.19 mm (9.65 in.)
Depth	188.29 mm (7.41 in.)
Base	245.19 mm x 188.29 mm (9.65 in. x 7.41 in.)
Weight:	
Weight with packaging	5.56 kg (12.26 lb)
Weight with stand assembly and cables	3.83 kg (8.44 lb)
Weight without stand assembly and cables	3.02 kg (6.66 lb)
Weight of stand assembly	0.66 kg (1.46 lb)

Environmental characteristics

Table 13. Environmental characteristics.

Description	Value
Compliant standards	• ENERGY STAR certified monitor. • EPEAT registered where applicable. EPEAT registration varies by Country. See EPEAT for registration status by country. • RoHS-compliant. • TCO Certified and TCO Certified edge. • BFR/PVC reduce monitor. (The circuit boards are made from BFR/PVC-free laminates.) • Arsenic-free glass and Mercury-free for the panel only. • Meets NFPA 99 leakage current requirement.
Temperature	
Operating	0°C to 40°C (32°F to 104°F)
Non-operating: Storage/Shipping	–20°C to 60°C (–4°F to 140°F)
Humidity	
Operating	10% to 80% (non-condensing)
Non-operating: Storage/Shipping	5% to 90% (non-condensing)
Altitude	
Operating (maximum)	5,000 m (16,404 ft)
Non-operating (maximum)	12,192 m (40,000 ft)
Thermal dissipation	122.8 BTU/hour (Maximum) 47.8 BTU/hour (On mode)

Pin assignments

DisplayPort port




Figure 5. DisplayPort port

Table 14. DisplayPort port.

Pin number	Signal assignment
1	ML_LANE3_N
2	GND
3	ML_LANE3_P
4	ML_LANE2_N
5	GND
6	ML_LANE2_P
7	ML_LANE1_N
8	GND
9	ML_LANE1_P
10	ML_LANE0_N
11	GND
12	ML_LANE0_P
13	GND
14	GND
15	AUX_CH_P
16	GND
17	AUX_CH_N
18	HPD
19	RETURN
20	DP_PWR

HDMI port

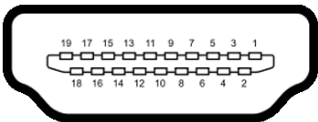


Figure 6. HDMI port

Table 15. HDMI port.

Pin number	Signal assignment
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	TMDS DATA 1 SHIELD
6	TMDS DATA 1-
7	TMDS DATA 0+
8	TMDS DATA 0 SHIELD
9	TMDS DATA 0-
10	TMDS CLOCK+
11	TMDS CLOCK SHIELD
12	TMDS CLOCK-
13	CEC
14	Reserved (N.C. on device)
15	DDC CLOCK (SCL)
16	DDC DATA (SDA)
17	DDC/CEC Ground
18	+5 V POWER
19	HOT PLUG DETECT

VGA Port




Figure 7. VGA port

Table 16. VGA port.

Pin number	Signal assignment
1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B
9	DDC +5 V
10	GND-sync
11	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

Plug and play capability

You can connect the monitor to any Plug and Play-compatible system. The monitor automatically provides the computer with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so that the computer can configure itself and optimize the monitor settings. Most monitor installations are automatic, you can select different settings as required. For more information about changing the monitor settings, see [Operating the monitor](#).

LCD monitor quality and pixel policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state, which are hard to see and do not affect the display quality or usability. For more information about Dell Monitor Quality and Pixel Policy, see [Dell Display Pixel Guidelines](#).

Ergonomics

△ **CAUTION:** Improper or prolonged usage of a keyboard may result in injury.

△ **CAUTION:** Viewing the monitor screen for extended periods of time may result in eye strain.

For comfort and efficiency, observe the following guidelines when setting up and using your computer workstation:

- Position your computer so that the monitor and keyboard are directly in front of you as you work. Special shelves are commercially available to help you correctly position your keyboard.
- To reduce the risk of eye strain and neck, arm, back, or shoulder pain from using the monitor for long periods of time, we recommend you to:
 - Set the distance of the screen between 20 in. to 28 in. (50 cm - 70 cm) from your eyes.
 - Blink frequently to moisten your eyes or wet your eyes with water after prolonged usage of the monitor.
 - Take regular and frequent breaks for 20 minutes every two hours.
 - Look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
 - Perform stretches to relieve tension in the neck, arm, back, and shoulders during the breaks.
- Ensure that the monitor screen is at eye level or slightly lower when you are sitting in front of the monitor.
- Adjust the tilt of the monitor, its contrast, and brightness settings.
- Adjust the ambient lighting around you (such as overhead lights, desk lamps, and the curtains or blinds on nearby windows) to minimize reflections and glare on the monitor screen.
- Use a chair that provides good lower-back support.
- Keep your forearms horizontal with your wrists in a neutral, comfortable position while using the keyboard or mouse.
- Always leave space to rest your hands while using the keyboard or mouse.
- Let your upper arms rest naturally on both sides.
- Ensure that your feet are resting flat on the floor.
- When sitting, make sure that the weight of your legs is on your feet and not on the front portion of your seat. Adjust your chair's height or use a footrest if necessary to maintain a proper posture.
- Vary your work activities. Try to organize your work so that you do not have to sit and work for extended periods of time. Try to stand or get up and walk around at regular intervals.
- Keep the area under your desk clear of obstructions and cables or power cables that may interfere with comfortable seating or present a potential trip hazard.

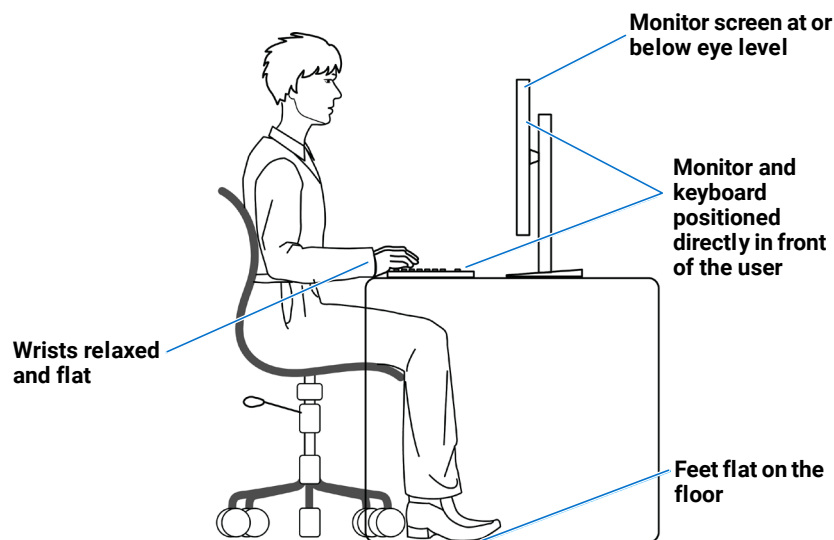


Figure 8. Ergonomics or comfort and efficiency

Handling and Moving Your Display

To ensure that the monitor is handled safely when lifting or moving it, follow the guidelines that are mentioned below::

- Before moving or lifting the monitor, turn off your computer and the monitor.
- Disconnect all cables from the monitor.
- Place the monitor in the original box with the original packing materials.
- Hold the bottom edge and the side of the monitor firmly without applying excessive pressure when lifting or moving the monitor.

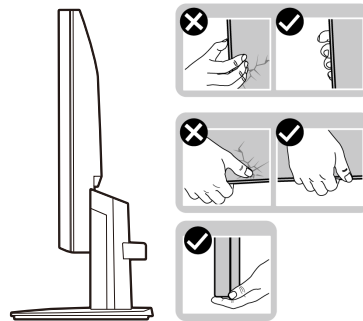


Figure 9. Moving or lifting the monitor

- When lifting or moving the monitor, ensure that the screen is facing away from you and do not press on the display area to avoid any scratches or damage.

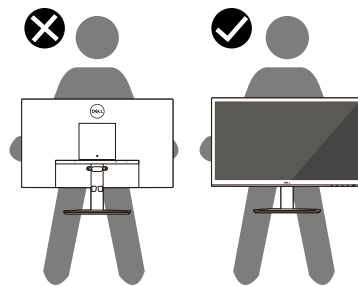


Figure 10. Ensure that the screen is facing away from you

- When transporting the monitor, avoid any sudden shock or vibration to it.
- When lifting or moving the monitor, do not turn the monitor upside down while holding the stand base or stand riser. This may result in accidental damage to the monitor or cause personal injury.

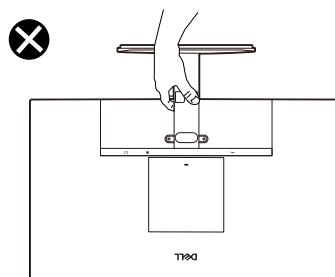


Figure 11. Do not turn the monitor upside down

Maintenance guidelines

Cleaning your monitor

△ **CAUTION:** Read and follow the [Safety instructions](#) before cleaning the monitor.

△ **WARNING:** Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

For best practices, follow the instructions in the list below when unpacking, cleaning, or handling your monitor:

- Use a clean cloth that is slightly dampened with water to clean the stand assembly, the screen, and the chassis of your Dell monitor. If available, use a screen-cleaning tissue or solution for cleaning Dell monitors.
- After cleaning the surface of the table, ensure that it is thoroughly dry and free from any moisture or cleaning agent before placing your Dell monitor on it.

△ **CAUTION:** Do not use detergents or other chemicals such as benzene, thinner, ammonia, abrasive cleaners, alcohol, or compressed air.

△ **CAUTION:** Using chemicals for cleaning may cause changes in the appearance of the monitor, such as color fading, milky film on the monitor, deformation, uneven dark shade, and peeling of screen area.

△ **WARNING:** Do not spray the cleaning solution or even water directly on the surface of the monitor. Doing so allows liquids to accumulate at the bottom of the display panel and corrode the electronics resulting in permanent damage. Instead, apply the cleaning solution or water to a soft cloth and then clean the monitor.

① **NOTE:** Monitor damage due to improper cleaning methods and the use of benzene, thinner, ammonia, abrasive cleaners, alcohol, compressed air, detergent of any kind will lead to a Customer-Induced Damage (CID). CID is not covered under the standard Dell warranty.

- If you notice white residual powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as a darker-colored monitor may get scratched and show white scuff marks more than a lighter-colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.

Setting up the monitor

Attaching the stand

- ① **NOTE:** The stand is not attached when the monitor is shipped from the factory.
 - ① **NOTE:** The following instructions are applicable only for the stand that was shipped with your monitor. If you are attaching a stand that you purchased from any other source, follow the setup instructions that were included with the stand.
1. Open the front flap of the box to get the stand riser and stand base.

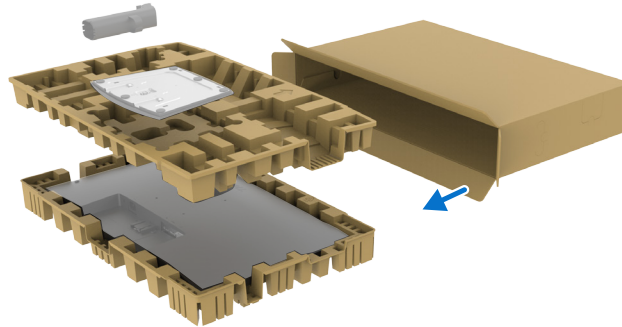


Figure 12. Unboxing

2. Assemble the stand riser to stand base:
 - a. Align and place the stand riser on the stand base.
 - b. Open the screw handle at the bottom of the stand base and rotate it clockwise to secure the stand assembly.
 - c. Close the screw handle.

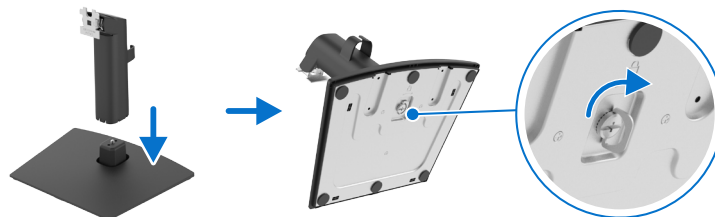


Figure 13. Assemble the stand

3. Attach the stand assembly to the monitor:
 - a. Place the monitor on a soft cloth or cushion near the edge of the desk.
 - b. Align the stand assembly bracket to the monitor groove.
 - c. Insert the bracket towards monitor until it locks in place.

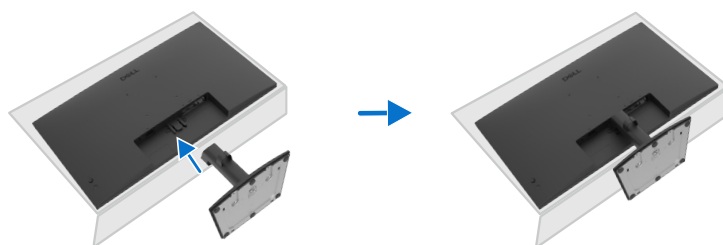


Figure 14. Attach the stand

Using tilt

You can tilt the monitor for the most comfortable viewing angle.

NOTE: The stand is not attached when the monitor is shipped from the factory.

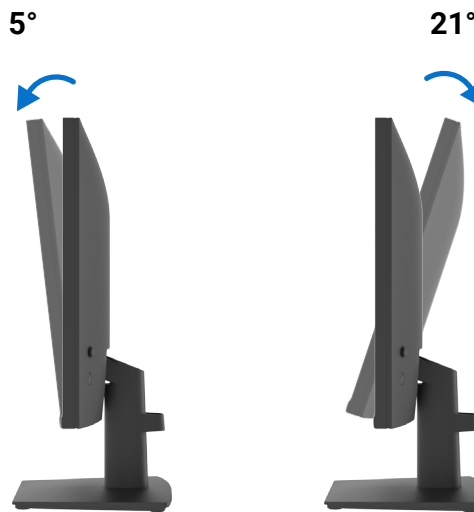


Figure 15. Tilt adjustment

Connecting your monitor

- WARNING:** Before you begin any of the procedures in this section, follow the [Safety instructions](#).
- WARNING:** For your safety, ensure that the grounded power outlet you plug the power cable is accessible to the operator and located as close to the equipment as possible. To disconnect power from the equipment, unplug the power cord from the power outlet by grasping the plug firmly. Never pull on the cord.
- WARNING:** A certified power supply cord has to be used with this equipment. The relevant national installation and/or equipment regulations should be considered. A certified power supply cord not lighter than ordinary polyvinyl chloride flexible cord according to IEC 60227 (designation H05VV-F 3G 0.75 mm² or H05VVH2-F2 3G 0.75 mm²) should be used.
- NOTE:** Dell monitors are designed to work optimally with the Dell supplied cables inside the box. Dell does not guarantee the video quality and performance if non-Dell cables are used.
- NOTE:** Route the cables through the cable management guide before connecting them.
- NOTE:** Do not connect all the cables to the computer simultaneously.
- NOTE:** The images are for the purpose of illustration only. The appearance of the computer may vary.

To connect your monitor to the computer:

1. Turn off your computer and disconnect the power cable.
2. Connect the DP/HDMI from your monitor to the computer.
3. Connect the power cable to the monitor and the wall outlet.
4. Turn on your monitor.
5. Select the correct input source from the OSD Menu on your monitor and then turn on your computer.

Connecting DP cable



Figure 16. Connecting DP cable

Connecting HDMI cable



Figure 17. Connecting HDMI cable

Organizing your cables

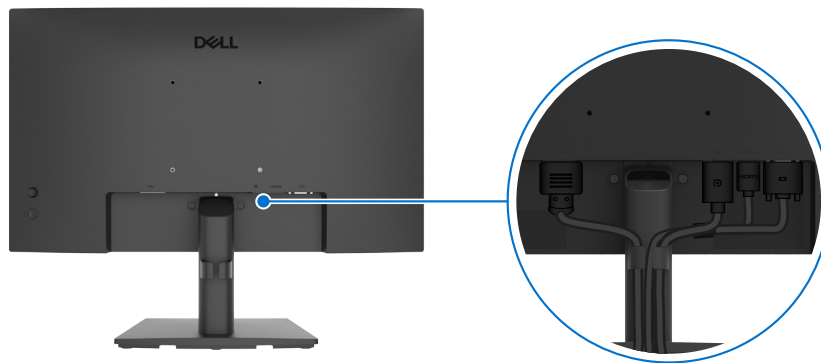


Figure 18. Organizing cables

Use the cable-management guide to route the cables that are connected to your monitor. For more information, see [Connecting your monitor](#).

If your cable is short, connect it directly to the computer without routing through the slot on the monitor stand.

Securing your monitor using Security lock (optional)

The security-lock slot is located at the bottom of the monitor (see [Security-lock slot](#)). Secure your monitor to a table using the Kensington security lock.

For more information on using the Kensington lock (sold separately), see the documentation that is shipped with the lock.

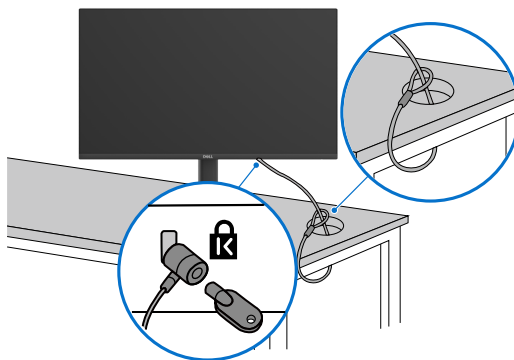


Figure 19. Using Kensington lock

NOTE: The image is for the purpose of illustration only. The appearance of the lock may vary.

Removing the monitor stand

NOTE: To prevent scratches on the LCD screen when removing the stand, ensure that the monitor is placed on a soft surface and handle it carefully.

NOTE: The following instructions are applicable only for the stand that was shipped with your monitor. If you are removing a stand that you purchased from any other source, follow the setup instructions that are included with the stand.

NOTE: Before removing the stand, ensure that you have disconnected all the cables from the monitor.

To remove the stand:

1. Place the monitor on a soft cloth along the desk.



Figure 20. Place the monitor on the desk

2. Use a long and thin screwdriver to push the released button.

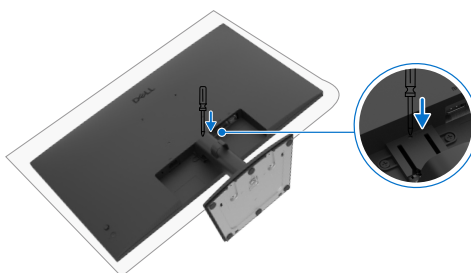


Figure 21. Push the release button

3. While keeping the release button pressed, pull the stand out from the monitor.

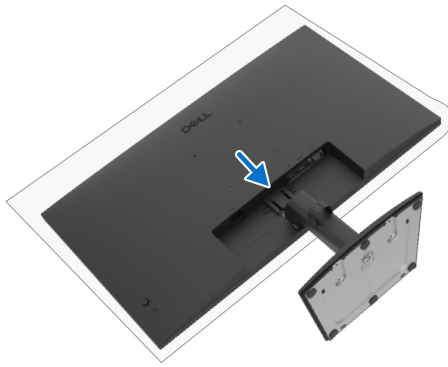


Figure 22. Remove the stand

VESA wall mounting (optional)

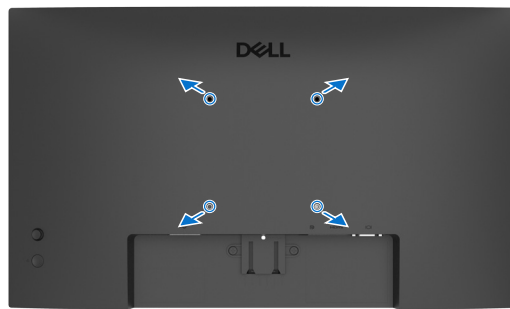


Figure 23. VESA wall mounting

See the instructions that come with the VESA-compatible base mounting kit.

1. Place the monitor panel on a soft cloth or cushion on a stable flat table.
 2. Remove the stand. For more information, see [Removing the monitor stand](#).
 3. Suitable screws need to be selected.
 4. Attach the mounting bracket from the wall mounting kit to the monitor.
 5. Mount the monitor on the wall. For more information, see the documentation that is shipped with the wall mounting kit.
- NOTE:** VESA screws are not included with the monitor. For use only with UL or CSA or GS-listed wall-mount bracket with minimum weight/load bearing capacity of 12.08 kg (26.63 lb).

Operating the monitor

Turn on the monitor

Press the power button to turn on the monitor.



Figure 24. Turn on the monitor

Using the joystick control



Figure 25. Using the joystick control

Use the joystick control on the back of the monitor to make On-Screen Display (OSD) adjustments.

- 1. Press the Joystick to open the OSD Menu Launcher.
- 2. Move the Joystick **Up**, **Down**, **Left**, or **Right** to toggle between the OSD menu options.

Table 17. Joystick functions

Function	Description
	Press Joystick to open the OSD Menu Launcher.
	For right and left navigation.
	For up and down navigation.

Using the Menu Launcher

Press the Joystick to open the OSD Menu Launcher.

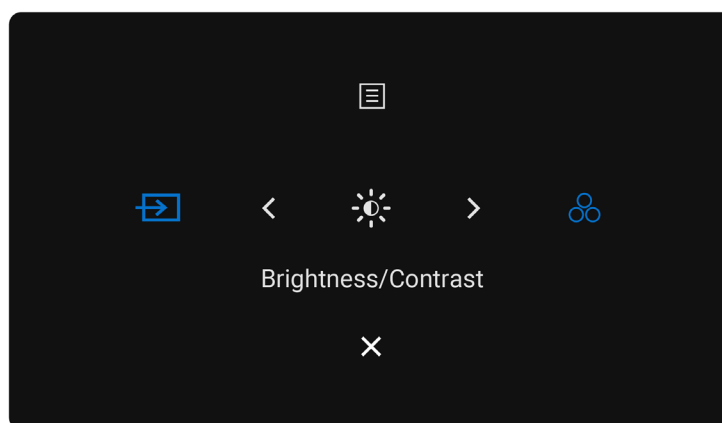


Figure 26. Menu Launcher

- Toggle the Joystick **Up** to open the **Main Menu**.
- Toggle the Joystick **Left** or **Right** to select the desired **Shortcut Keys**.
- Toggle the Joystick **Down** to **Exit**.

Menu Launcher details

The following table describes the Menu Launcher icons:

Table 18. Menu Launcher description

Menu Launcher icon	Description
 Main Menu	Opens the On-Screen Display (OSD). For more information see Using the On-Screen Display (OSD) menu .
 Input Source (Shortcut key 1)	To choose from a list of Input Source .
 Brightness/Contrast (Shortcut key 2)	To access the Brightness/Contrast adjustment sliders.
 Preset Modes (Shortcut key 3)	Allows to choose from a list of Preset color modes .
 Exit	To exit the Menu Launcher.

Using the navigation keys

When the OSD main menu is active, move the joystick to configure the settings, following the navigation keys displayed below the OSD.

NOTE: To exit the current menu item and return to the previous menu, move the joystick to the left until you exit.



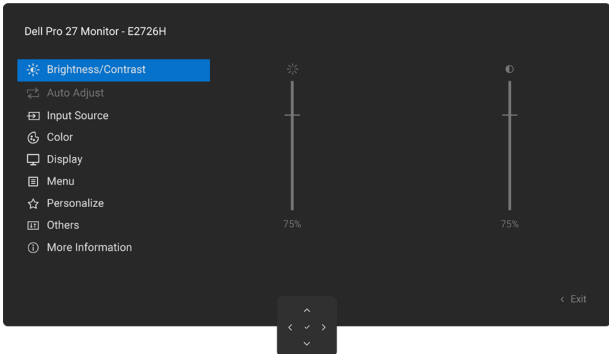
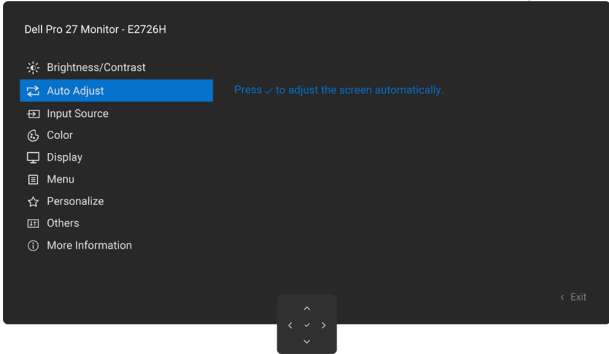

Figure 27. Navigation keys

Table 19. Navigation keys description



Navigation keys icons	Description
^ Down v Up	Use the Up (increase) and Down (decrease) navigation keys to adjust items in the OSD menu.
< Left	Use the Left navigation key to go back to the previous menu.
> Right	Use the Right navigation key to confirm your selection.
✓ OK	Press the joystick to confirm your selection.



Using the On-Screen Display (OSD) menu



Table 20. On-Screen Display (OSD) menu description




Icon	Menu and submenus	Description
	Brightness/Contrast	Adjusts the brightness and contrast of the display. 
	Brightness	Adjusts the luminance of the backlight (Range: 0–100). Use the Up navigation key to increase brightness. Use the Down navigation key to decrease brightness.
	Contrast	Adjust brightness first, and adjust contrast only if you need further adjustment. Use the Up navigation key to increase contrast and Use the Down navigation key to decrease contrast (Range: 0–100). The Contrast function adjusts the degree of difference between darkness and lightness on the monitor screen.
	Auto Adjust	Use this option to activate automatic setup and adjust menu.  The following dialog appears on a black screen as the monitor self-adjusts to the current input:  Auto Adjust allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock (Coarse) and Phase (Fine) controls under Display. NOTE: Auto Adjust does not occur if you press the button while there are no active video input signals or attached cables. This option is available only when you are using the analog (VGA) connector.


Icon	Menu and submenus	Description
	Input Source	Selects between different video inputs that are connected to your monitor.
	VGA	Select VGA input when you are using the VGA port. Press the Joystick to confirm the selection.
	HDMI	Select HDMI input when you are using the HDMI port. Press the Joystick to confirm the selection.
	DP	Select DP input when you are using the DP (DisplayPort) port. Press the Joystick to confirm the selection.
	Rename Inputs	Allows you to Rename Inputs .
	Auto Select	Allows you to scan for available input sources. Press the joystick to confirm the selection.
	Options for DP/HDMI	Allows you to set this feature to: • Prompt for Multiple Inputs: Always show Switch to DP/HDMI Video Input message for user to choose whether to switch or not. • Always Switch: The monitor always switches to DP/HDMI video by default while DP/HDMI is connected. • Off: The monitor does not auto-switch to DP/HDMI video from another available input.
	Reset Input Source	Resets all settings under the Input Source menu to the factory defaults. Press the joystick to confirm the selection.
	Color	Adjusts the color setting mode.

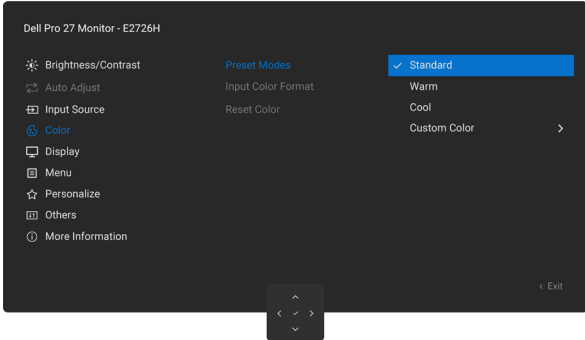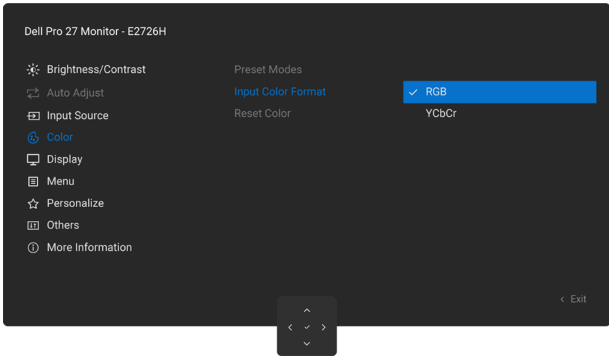Icon	Menu and submenus	Description
	Preset Modes	Allows you to choose from the list of preset color modes.  • Standard: Default Color setting, this monitor uses a low blue light panel, and is certified by TUV to reduce blue light output and create a more relaxing and less stimulating image while reading content on the screen. • Warm: Presents colors at lower color temperatures. The screen appears warmer with a red/yellow tint. • Cool: Presents colors at higher color temperatures. The screen appears cooler with a blue tint. • Custom Color: Allows you to manually adjust the color settings. Press the Joystick up and down buttons to adjust the Red, Green, and Blue values and create your own preset color mode.
	Input Color Format	Allow you to set the video input mode to: • RGB: Select this option if your monitor is connected to a computer or a media player that supports RGB output. • YCbCr: Select this option if your media player supports only YCbCr output. 
	Reset Color	Resets your monitor's Color settings to the factory defaults. Press the joystick to confirm the selection.

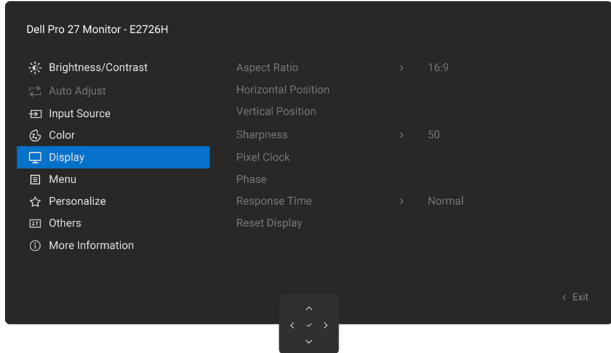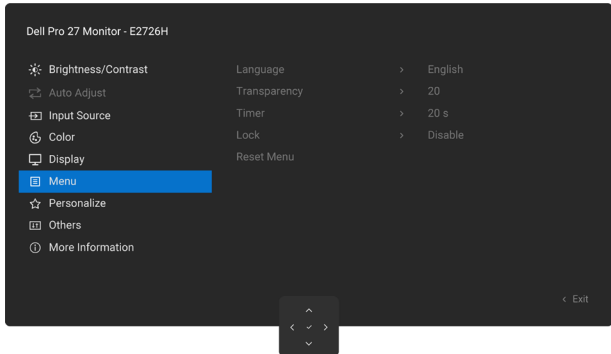Icon	Menu and submenus	Description
	Display	Use the Display menu to adjust the image. 
	Aspect Ratio	Adjust the image ratio to 16:9 , 4:3 , or 5:4 .
	Horizontal Position (VGA input only)	Use Up and Down navigation keys to move image left and right. Minimum is '0' (-). Maximum is '100' (+).
	Vertical Position (VGA input only)	Use Up and Down navigation keys to move image up and down. Minimum is '0' (-). Maximum is '100' (+).
	Sharpness	Adjust the image sharpness to look sharper or softer. Use the Up and Down navigation keys to adjust the sharpness from 0 to 100.
	Pixel Clock (VGA input only)	The Pixel Clock feature enables you to adjust image quality on your monitor according to your preference. Use the Up and Down navigation keys to adjust for the best image quality.
	Phase (VGA input only)	If satisfactory results are not obtained using the Phase adjustment, use the Pixel Clock (coarse) adjustment and then use Phase (fine), again.
	Response Time	Allows you to set the Response Time to Normal or Fast .
	Reset Display	Resets all settings in the Display menu to the factory default settings. Press the joystick to confirm the selection.
	Menu	Select this option to adjust the settings of the OSD such as the languages of the OSD, the duration the menu stays on screen, and so on. 
	Language	Select one of eight languages for the OSD display: English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese.
	Transparency	Select this option to change the menu transparency by moving the Joystick Up or Down (Range: 0–100).

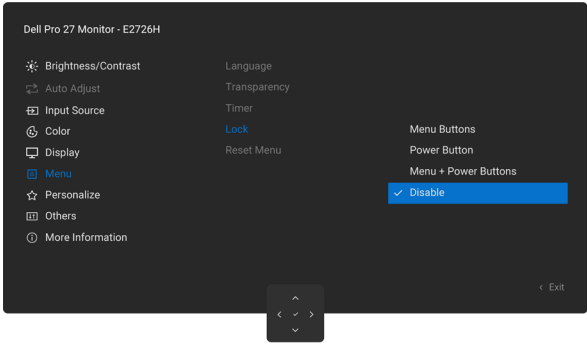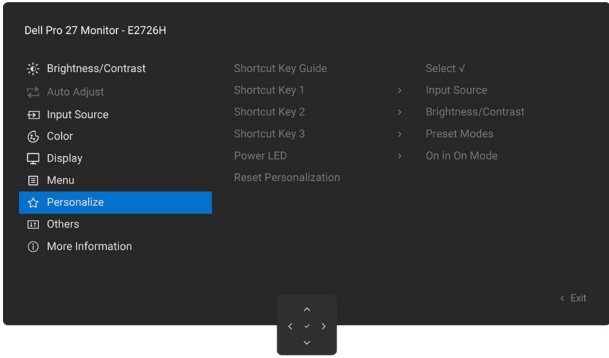Icon	Menu and submenus	Description
☰	Timer	OSD Hold Time: Sets the length of time the OSD remains active after you press a button. Move the Joystick to adjust the slider in one second increments, from 5 to 60 seconds.
	Lock	Locking the control buttons prevents unauthorized access and accidental activation.  • Menu Buttons: Access the Menu in the on-screen display (OSD), select Lock, then choose the Menu Buttons option to lock the menu button. • Power Button: Access the Menu in the on-screen display (OSD), select Lock, then choose the Power Button option to lock the power button. • Menu + Power Buttons: Access the Menu in the on-screen display (OSD), select Lock, then choose the Menu + Power Buttons option to lock the menu button and power button simultaneously. • Disable: After locking the menu button alone or both the menu button or power button, push the device's joystick Left, Right, Up or Down in any direction and hold it for 4 seconds to unlock the aforementioned buttons. If only the power button is locked, access the Menu in the on-screen display (OSD), select Lock, then choose the Disable option to unlock it.
	Reset Menu	Resets all settings under the Menu to the factory defaults. Press the joystick to confirm the selection.
★	Personalize	Select this option to adjust the OSD settings such as the Shortcut Key settings and so on. 
	Shortcut Key Guide	This option allows you to easily set up to three shortcut keys. And contains the introduction of the shortcut key Settings.
	Shortcut Key 1	Allows you to choose a feature from the provided list and set it as a shortcut key. Press the joystick button to confirm the selection.
	Shortcut Key 2	
	Shortcut Key 3	
	Power LED	Allows you to set the state of the power light to save energy.
	Reset Personalization	Resets all settings under the Personalize menu to the factory preset values. Press the joystick to confirm the selection.

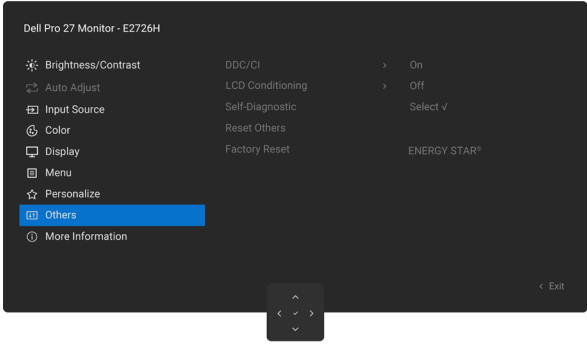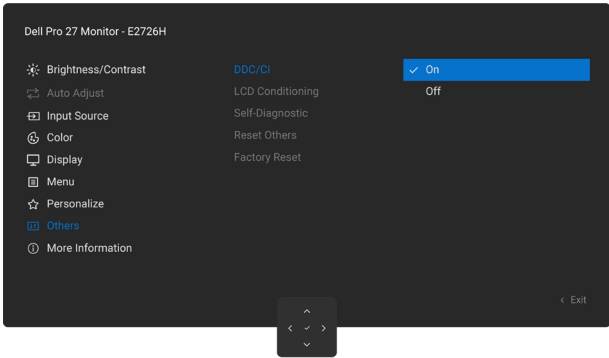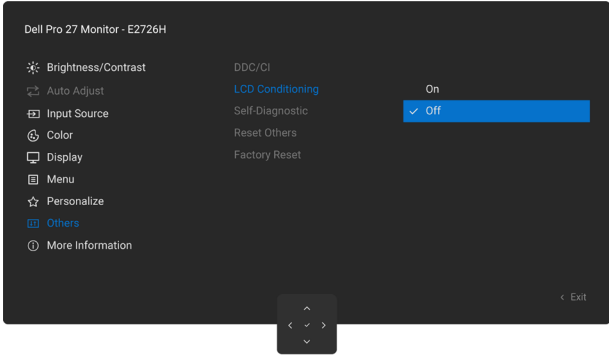Icon	Menu and submenus	Description
	Others	Select this option to adjust the OSD settings such as the DDC/CI, LCD Conditioning, and so on. 
	DDC/CI	DDC/CI (Display Data Channel/Command Interface) allows you to adjust the monitor settings using software on your computer. Enable this function for the best user experience and optimum performance of your monitor. You can disable this function by selecting Off. 
	LCD Conditioning	Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. You can enable this feature by selecting On. 
	Self-Diagnostic	Run the built-in diagnostics, see Built-in diagnostics .
	Reset Others	Resets all settings under the Others menu to the factory default settings. Press the joystick to confirm the selection.
	Factory Reset	Restore all preset values to the factory default setting. These are also the settings for ENERGY STAR tests.

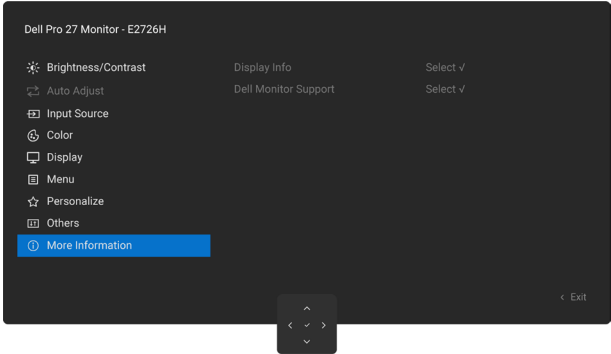Icon	Menu and submenus	Description
	More Information	Select this option for display information and Dell monitor support. 
	Display Info	Displays the current settings of the monitor. Press the joystick to confirm the selection.
	Dell Monitor Support	Use your smartphone to scan the QR code to access the general support materials for your monitor.

Locking the control buttons

You can lock the monitor control buttons to prevent access to the OSD menu and/or power button.

1. Move and hold the joystick up or down or left or right for about 4 seconds until a pop-up menu appears.

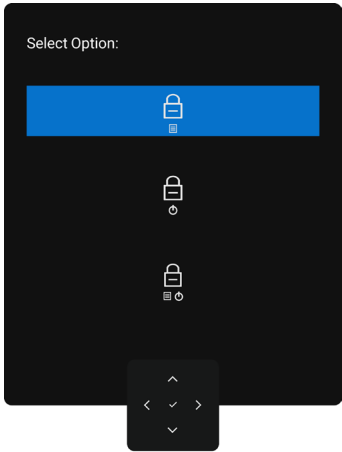


Figure 28. The message of locking the control buttons

2. Move the joystick to select one of the following options:
 -  : The OSD menu settings are locked and not accessible.
 -  : The power button is locked.
 -  : The OSD menu settings are not accessible, and the power button is locked.
3. Press the joystick to confirm the configuration.

To unlock, move and hold the joystick up/down/left/right for about 4 seconds until a menu appears on the screen, and then select  to unlock and close the menu.

OSD warning messages

When you select the enabled Auto Select and set the “Options for DP/HDMI” to “Prompt for Multiple Inputs,” a confirmation message will appear before DP/HDMI port switching occurs.

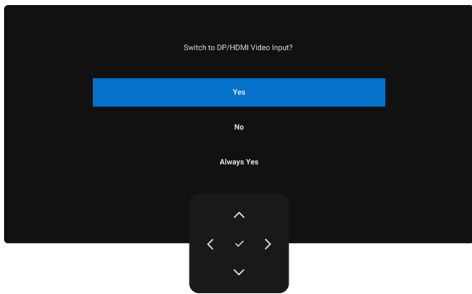


Figure 29. Prompt for Multiple Inputs message

When the monitor does not support a particular resolution mode, you can see the following message:

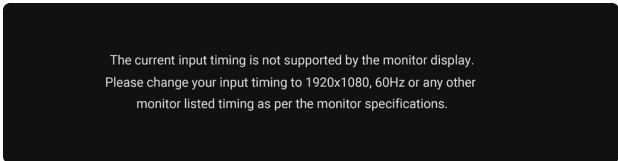


Figure 30. Does not support a particular resolution mode

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor specifications](#) for the horizontal and vertical frequency ranges addressable by this monitor.

NOTE: Recommended mode is **1920 x 1080**.

You can see the following message before the DDC/CI function is disabled:

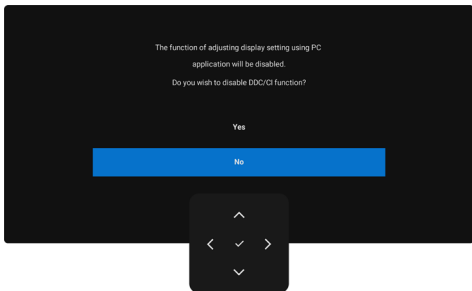


Figure 31. DDC/CI warning message

When the monitor enters the **Standby Mode**, the following message appears:

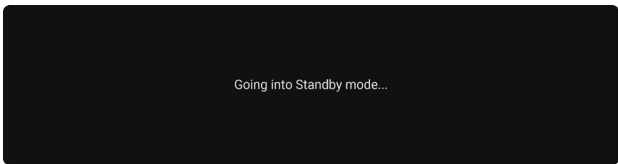


Figure 32. Standby mode warning message

Activate the computer and wake up the monitor to gain access to the [Using the On-Screen Display \(OSD\) menu](#).

The OSD functions only in the normal operation mode. If you press the joystick during the Standby mode, the following message will appear depending on the selected input:

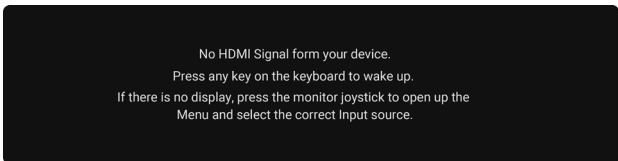


Figure 33. Monitor wake-up warning message

If you adjust the **Brightness** level above the default level over 75%, the following message appears:

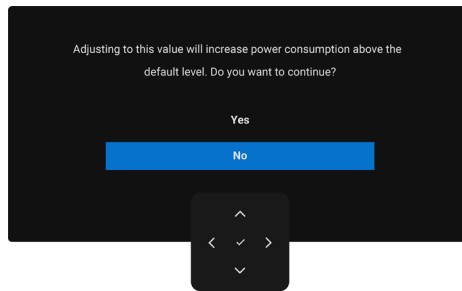


Figure 34. Power warning message

- When you select **Yes**, the power message is displayed only once.
- When you select **No**, the power warning message will pop-up again.
- The power warning message appears again only when you perform a **Factory Reset** from the OSD menu.

If either VGA or DP or HDMI input is selected and the corresponding cable is not connected, a dialog box is displayed. The monitor will enter Standby mode after 4 minutes if left at this state.

NOTE: The message may slightly vary according to the selected input signal.

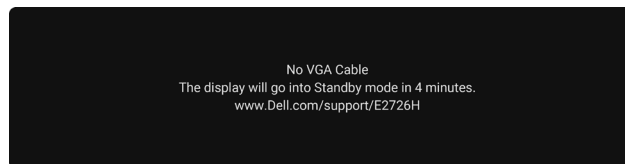


Figure 35. VGA cable disconnected warning message

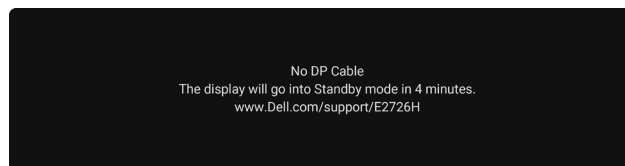


Figure 36. DP cable disconnected warning message

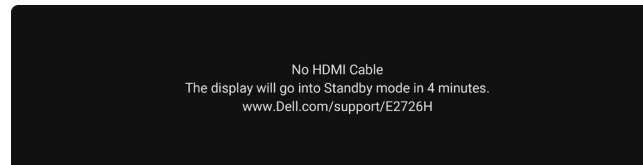


Figure 37. HDMI cable disconnected warning message

For more information, see [Troubleshooting](#).

Setting the maximum resolution

 **NOTE:** The steps may vary slightly depending on the version of Windows you have.

To set the maximum resolution for the monitor:

In Windows 10 and Windows 11:

1. Right-click on the desktop and click **Display settings**.
2. If you have more than one monitor connected, ensure that you select **E2726H**.
3. Click the **Display settings** drop-down list and select **1920 x 1080**.
4. Click **Keep changes**.

If you do not see **1920 x 1080** as an option, you must update your graphics driver to the latest version. Depending on your computer, complete one of the following procedures:

1. If you have a Dell desktop or laptop:
 - Go to [Dell Support Site](#), enter your service tag, and download the latest driver for your graphics card.
2. If you are using a non-Dell computer (laptop or desktop):
 - Go to the support site for your non-Dell computer and download the latest graphic card drivers.
 - Go to the graphics card's website and download the latest graphic card drivers.

Troubleshooting

⚠ WARNING: Before you begin any of the procedures in this section, follow the [Safety instructions](#).

Self-test

Your monitor provides a self-test feature that allows you to check if your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove all digital and the analog cables from the back of computer.
3. Turn on the monitor.

If the monitor cannot sense a video signal and is working correctly, a dialog box appears on the screen (against a black background). While in self-test mode, the power LED remains white. Also, depending upon the selected input, one of the dialogs shown will continuously scroll through the screen.

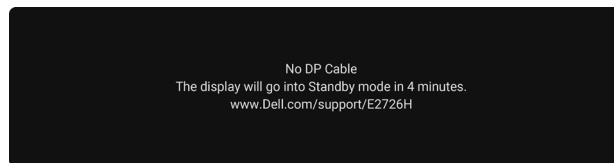


Figure 38. DP cable disconnected warning message

4. This dialog box also appears during normal operation if the video cable is disconnected or damaged.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen still remains blank after performing the above steps, it indicates the monitor is functioning properly. Check the video controller and computer.

Built-in diagnostics

Your monitor includes a built-in diagnostic tool to help you identify whether the screen abnormality is due to an issue with the monitor itself or with your computer and video card.

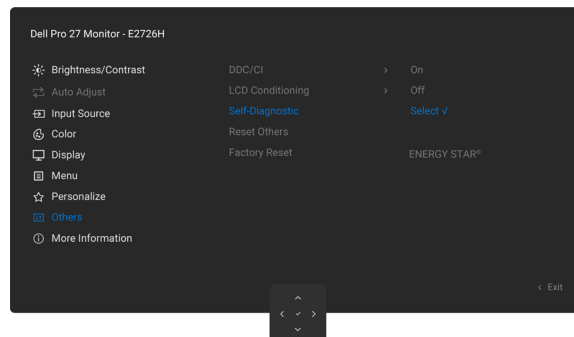


Figure 39. Built-in diagnostics

To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Select OSD items of **Self-Diagnostics** in **Others** feature.
3. Press the Joystick button to start the diagnostics. A gray screen is displayed.
4. Observe if the screen has any defects or abnormalities.
5. Toggle the Joystick once again until a red screen is displayed.
6. Observe if the screen has any defects or abnormalities.
7. Repeat steps 5 and 6 until the screen displays green, blue, black, and white colors. Note any abnormalities or defects.

The test is complete when a text screen is displayed. To exit, toggle the Joystick control again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.

Common problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Table 21. Common problems and solutions.

Common symptoms	What you experience	Possible solutions
No video/power LED off	No picture	- Ensure that the video cable connecting the monitor and the computer is properly connected and secure. - Verify that the power outlet is functioning properly using any other electrical equipment. - Ensure that you have pressed the power button properly. - Ensure that the correct input source is selected in the Input Source menu.
No video/power LED on	No picture or no brightness	- Increase brightness and contrast controls through OSD. - Perform monitor self-test feature check. - Check for bent or broken pins in the video cable connector. - Run the Built-in diagnostics. - Ensure that the correct input source is selected in the Input Source menu.
Missing pixels	LCD screen has spots	- Cycle power on-off. - Pixel that is permanently off is a natural defect that can occur in LCD technology. - For more information on Dell Monitor Quality and Pixel Policy, see Dell Display Pixel Guidelines.
Stuck-on pixels	LCD screen has bright spots	- Cycle power On-Off. - Pixel that is permanently off is a natural defect that can occur in LCD technology. - For more information on Dell Monitor Quality and Pixel Policy, see Dell Display Pixel Guidelines.
Brightness problems	Picture too dim or too bright	- Reset the monitor to factory settings. - Adjust brightness and contrast controls through OSD.
Safety-related issues	Visible signs of smoke or sparks	- Do not perform any troubleshooting steps. - Contact Dell immediately.
Intermittent problems	Monitor malfunctions on and off	- Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. - Reset the monitor to factory settings. - Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing color	Picture missing color	- Perform a monitor Built-in diagnostics. - Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. - Check for bent or broken pins in the video cable connector.
Wrong color	Picture color not good	- Try different Preset Modes in Color settings OSD. - Adjust R/G/B value under Custom Color in the Color menu OSD. - Change the Input Color Format to RGB or YCbCr in the Color settings OSD. - Run the Built-in diagnostics.
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	- Set the screen to turn off after a few minutes of screen idle time. These can be adjusted in the Windows Power Options or Mac Energy Saver setting. - Alternatively, use a dynamically changing screensaver.
The screen image is too small	Image is centered on the screen, but does not fill the entire viewing area	- Check the Aspect Ratio setting in the Display menu OSD. - Reset the display to factory settings.

Common symptoms	What you experience	Possible solutions
Cannot adjust the monitor with the joystick control on the rear of the monitor	OSD does not appear on the screen	• Turn off the monitor, unplug the monitor power cable, plug it back, and then turn on the monitor. • Check whether the OSD menu is locked. If yes, move and hold the joystick Up, Down, Left, or Right navigation keys for 4 seconds to unlock.
No input signal when user controls are pressed	No picture; the LED light is white	• Check the signal source. Ensure that the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard. • Ensure the video cable is securely connected. If needed, disconnect and reconnect the cable to confirm a proper connection. • Reset the computer or video player.
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	• Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen. • Run the built-in diagnostics.

Regulatory information

TCO Certified

Any Dell product bearing a TCO label has been certified to a TCO voluntary environmental certification. TCO certification requirements focus on features that contribute to a healthy work environment such as recyclable design, energy efficiency, ergonomics, emissions, avoidance of hazardous substances, and product take back.

For more information on your Dell product and the TCO certification, please visit: [TCO Certified End User Document](#).

For more information on TCO's environmental certifications, please visit: [Global Sustainability Certification for IT products](#).

FCC notices (U.S. only) and other regulatory information

For FCC notices and other regulatory information, see the regulatory compliance website at [Dell Regulatory Compliance Home Page](#).

EU product database for energy label and product information sheet

For more information about the energy labeling regulations, see the following resources:

- [Energy Labeling Information for E2726H](#)

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Contact Support at Dell Support Site](#).

- ① **NOTE:** Availability varies by country and product, and some services may not be available in your country.
- ① **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.

Revision History

The following table provides the revision history of this document:

Table 22. Revision history

Revision	Date	Description
A00	July 2026	Original publish date.