Contents
1x Power-over-Ethernet (POE) Module
1x VESA mount spacer
2x M3x8 flat-head screws
VESA mounting screws

Power Limitation Note
The Power-over-Ethernet (POE) Module does not provide enough power to support all I-Series system features. Some features are disabled when using the POE Module. See the user guide for a detailed list of available features when using this adaptor kit.

ēlo

Quick Installation Guide

I-Series 4 Android All-In-One

Power-over-Ethernet (POE) Module Kit

Elo Technical Support
Online self-help: www.elotouch.com/support

America	**Europe (EMEA)**	**Asia Pacific**
800-ELO-TOUCH	Tel +32 16 930 136	Tel +86 (21) 3329 1385
Tel +1 408 597 8000	emea.sales@elotouch.com	EloAsia@elotouch.com
elosales.na@elotouch.com		

ISO 9001

ēlo

www.elotouch.com

1   Remove left side cable security cover and unplug ethernet and power cable from the device before installing the Power-over-Ethernet (POE) Module. **DO NOT install or remove the module with either of these cables connected or the I-Series 4 will be damaged**. Damage caused by installation with the cable(s) attached is not covered under Elo warranty.
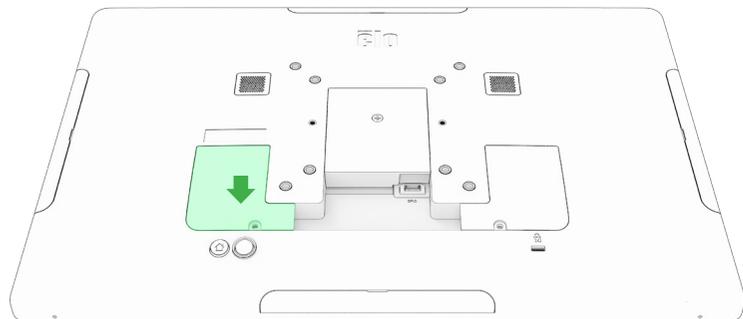
2   Remove screw, then lift off POE docking cover.
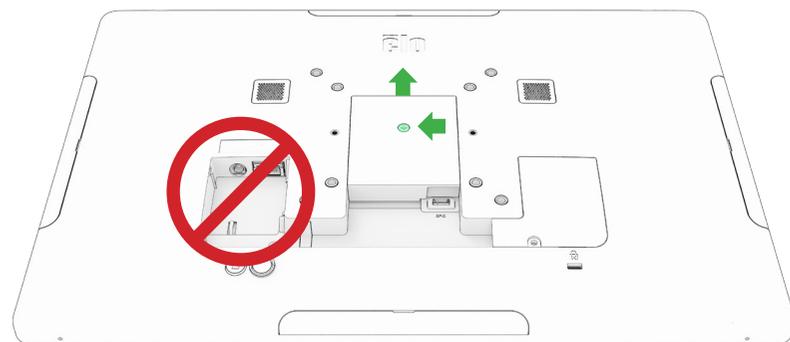
3   Plug Elo POE module into recess, ensuring connector on bottom of adaptor lines up with connector on back of the I-Series 4.
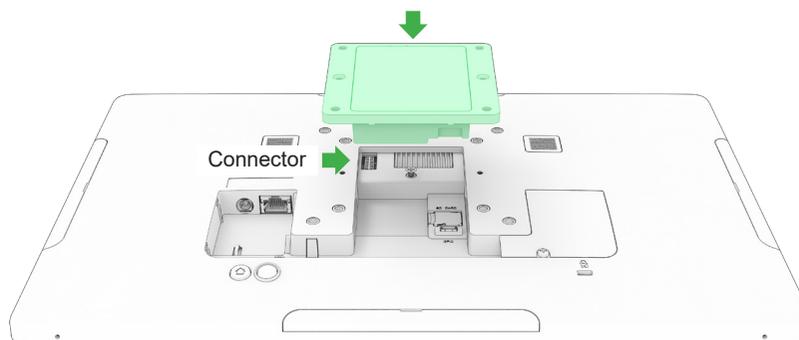
Connector

4   Secure Elo POE module to the I-Series 4 using the included M3x8 screws. The power and ethernet cables can now be reconnected to the system.
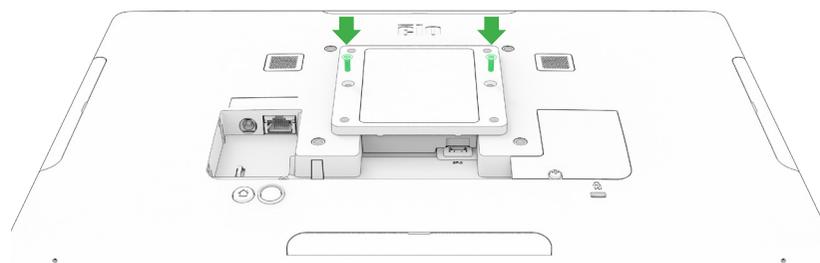
5   **Optional 100x100 VESA spacer mounting:** Place the spacer over the Elo POE module before adding VESA mounting bracket.

VESA spacer
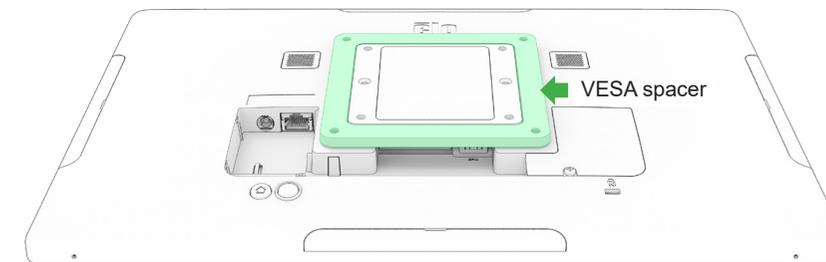
6   Attach wallmount or stand mounting brackets (not included) with screws long enough to pass through the POE module and into the threaded holes of the I-Series 4 VESA mount. Maximum screw depth is 5mm.

Elo includes two types of M4x12mm screws that work with standard 2.6mm thick VESA brackets. Other brackets may require different length screws.