


Montageanleitung für Wandgehäuse SOHO Serie



1

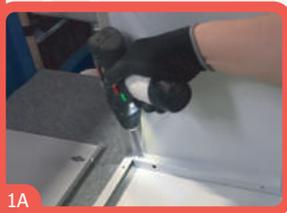

1A

1-Montieren Sie die Seitenteile auf dem unteren Rahmen mit jeweils 2 Stück M5x12-Schrauben.



2



2A

2-Montieren Sie die Rückwand auf dem unteren Rahmen mit jeweils 2 Stück M5x12-Schrauben.



3



3A

3-Montieren Sie den oberen Rahmen auf den Seitenteilen und der Rückwand mit jeweils 2 Stück M5x12-Schrauben.



4

4-Montieren Sie den Kabeleinlass mit Bürstenleiste am oberen Rahmen an der vorgesehenen Stelle.



5



5A

5- Platzieren Sie die Scharniere auf der Seite an der die Türaufhängung gewünscht ist, schrauben Sie diese an der Glasscheibe fest und die Gummistopfen an der gegenüberliegenden Seitenwand.



6

6-Lösen Sie das obere Scharnier, platzieren Sie beide Pins der Glastür im Schrankrahmen und ziehen die Schrauben fest.

Mounting Instruction for wall mounting cabinets SOHO series




1-Mount the side panels on the lower frame with two pieces of M5x12 screws each.



2-Mount the rear panel to the lower frame with two pieces of M5x12 screws each.



3-Mount the upper frame to the rear and side panels with two pieces of M5x12 screws each.

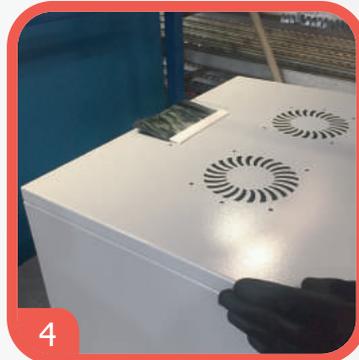

4-Place the cable brush entry to the upper frame.



5-Place the hinges on the side of your favored door opening by screwing them to the glass and the rubber plugs on the other side (put them in the holes of the side panel).



6-Loosen the upper hinge in order to put the pins of both hinges of the glass door into the cabinet frame, then tighten again.