
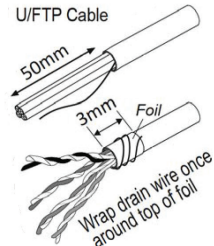
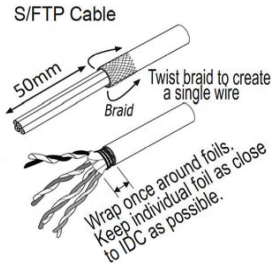
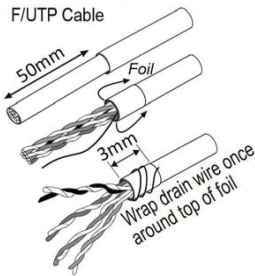



CG35217 - INSTALLATION SHEET

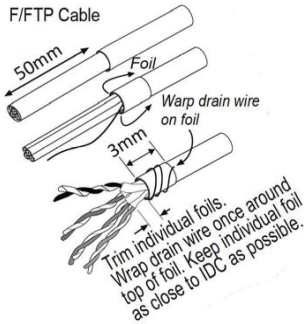


- ① Strip off 50mm of cable jacket. Prepare the cable according to the cable type shown above.

	TIA / EIA T568A	TIA / EIA T568B
1	White/Green	White/Orange
2	Green	Orange
3	White/Orange	White/Green
6	Orange	Green
4	Blue	Blue
5	White/Blue	White/Blue
7	White/Brown	White/Brown
8	Brown	Brown


USE IMPACT
TOOL

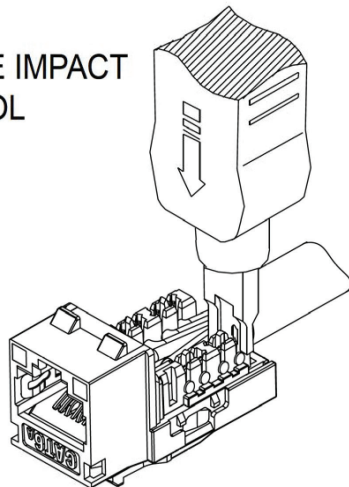


Position first pair according to color code.

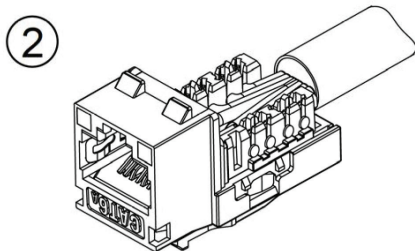

As with the first pair, position and termination each subsequent pair one at a time until termination is completed.

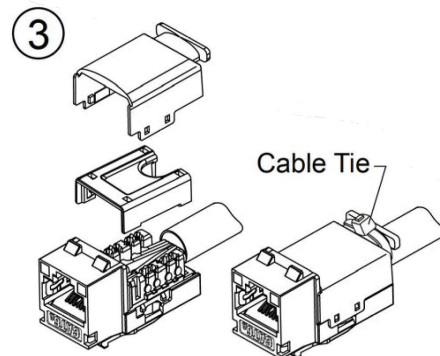

Place the supplied wire cap and final cover on after termination completed. Secure the drain wire on final metal cap by supplied cable tie. The jack is now ready to be snapped into face plate or mounting box.

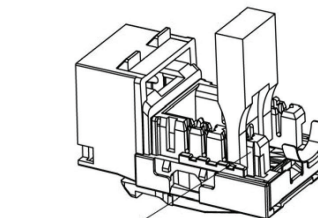

Caution

When using impact tool, ensure the cutting blade of impact tool as close to IDC housing as possible for best conductor cutting effect.