


INSTALLATIONS- VEJLEDNING

VLMW4065T

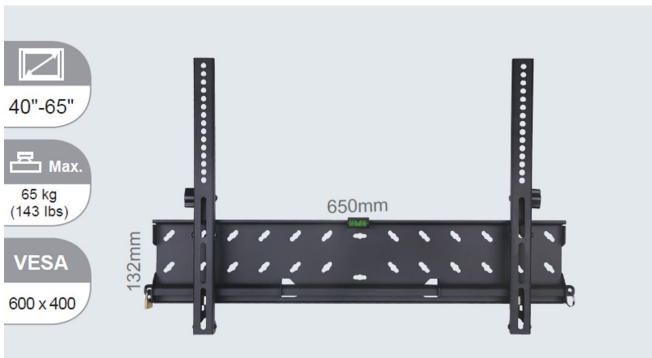

VESA Standarder

Op til 600x400

Vægt:

Op til 65 kg (1453 lbs)

Udpakningsinstruktioner

Åben indpakningen forsigtigt og læg indholdet på et stykke pap eller en anden beskyttende overflade for at undgå beskadigelse. Kontroller at pakkens indhold stemmer overens med tilbehørs-oversigten på næste side. Kontroller også om de medfølgende komponenter er modtaget ubeskadiget. Brug ikke beskadigede eller defekte dele.

Vigtige sikkerhedsoplysninger

Monter og brug dette beslag med varsomhed. Læs venligst vejledningen inden påbegyndelse af montering og følg nøje alle instruktioner. Benyt passende sikkerhedsudstyr under montering. Kontakt venligst en kvalificeret håndværker for hjælp hvis du ikke forstår vejledningen eller er i tvivl om sikkerheden ved montering. Hvis du er i tvivl om konstruktionen af din væg, bedes du konsultere en kvalificeret installatør.

Brug ikke dette produkt til andre formål, eller i andre konfigurationer end de udtrykkeligt angivne i denne vejledning. Vi fraskriver os hermed ethvert ansvar eller skade som følge af forkert montering eller forkert brug af dette produkt.



WARNING

ADVARSEL!

Dette beslag skal være forsvarligt fastgjort til væggen. Hvis beslaget ikke er monteret korrekt, kan det resultere i at skærmen falder ned og eventuelt beskadiger personer eller udstyr.

Nødvendigt
værktøj


- 4 mm træbor
- 8 mm betonbor

- Topnøglesæt
- Lægte søger


- Stjerneskruetrækker
- Tommestok

Bemærk: De skruer og beslag, der følger med denne indpakning, er ikke beregnet til montering i stål konstruktioner og vægge af cementblokke, og du bedes derfor kontakte den lokale AV-installatør for vejledning om hvilket tilbehør, som egner sig bedst til dette formål.


TILBEHØRSOVERSIGT

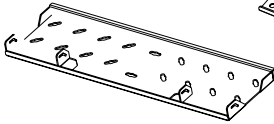

(1) Vægplade – a

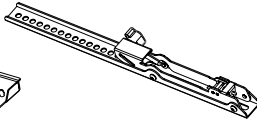

(1) Skærmbeslag – b1

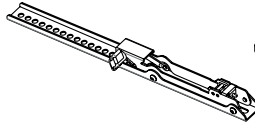

(1) Skærmbeslag - b2



(1) Låsestang – c




(4) M4x12 Bolt - d



(4) M5x12 Bolt - e



(4) M6x12 Bolt - f




(4) M8x20 Bolt - g




(4) M4x30 Bolt - dd



(4) M5x30 Bolt - ee



(4) M6x35 Bolt - ff




(4) M8x40 Bolt - gg




(4) M4 Låseskive - h




(4) M5 Låseskive - i



(4) M6 Låseskive - j




(4) M8 Låseskive - k




(8) M4/M5 Spændeskive - l




(4) M6/M8 Spændeskive - m




(5) Fransk skrue - n



(5) Spændeskive - o




(5) Rawlplugs - p



(1) Vatterpas - q




(4) M4/M5 Afstandsskive - r



(4) M6/M8 Afstandsskive - s

Step 1 Montering af skærmbeslag på en skærm med flad bagside


Fastslå først og fremmest hvilken størrelse bolte (d, e, f, g, dd, ee, ff, gg) din skærm kræver, følg derefter nedenstående tegning. Boltene skrues fast til skærmen ved hjælp af de dertilhørende låseskiver (h, i, j, k) samt spændeskiver (l, m). Vær sikker på at skærmbeslagene (b) er vertikalt centreret og at de er på niveau med hinanden. Brug kun afstandsstykkerne (r, s) hvis boltene er for lange.

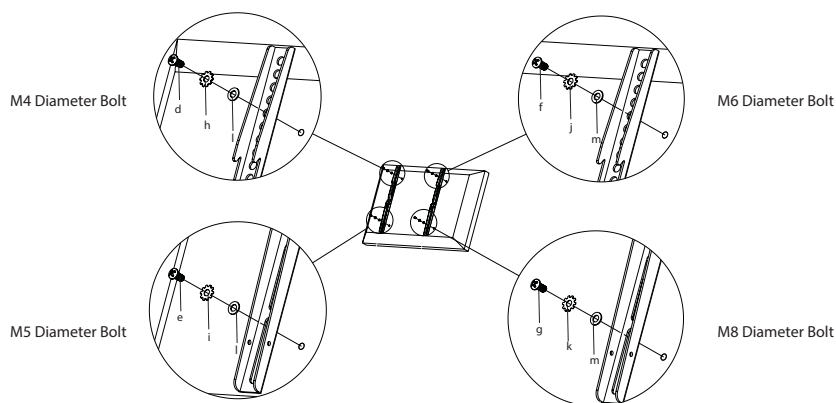

Step 2A Montering af vægpladen

Montering på mursten, fast beton og betonblok:


Brug vægpladen (a) som skabelon til at markere to huller på væggen. Et i øverste venstre hjørne og et i øverste højre hjørne. Vær sikker på at hullerne er i vatter. Forbor hullerne med et 8 mm betonbor til mindst 50 mm i dybden. Indsæt rawlplugs (p) i hvert hul. Sørg for, at alle rawlplugs sidder helt plant med betonoverfladen. Fastgør vægpladen til væggen ved hjælp af to franske skruer (n), to spændeskiver (o) og to rawlplugs (p) som vist i Diagram 2a. Juster niveau som vist i Diagram 2b og skru de franske skruer (n) fast. Bor endnu tre huller som vist i Diagram 2c og skru de 3 sidste franske skruer (n), spændeskiver (o) og rawlplugs (p) fast.

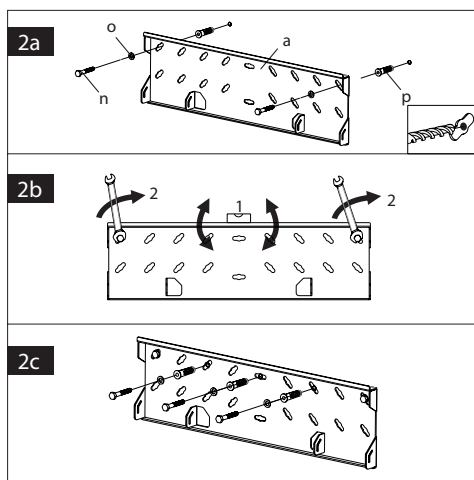

Step 2B Montering af vægpladen

Montering på trælægte



Vægpladen (a) **skal** monteres på to trælægter med mindst 16" (406 mm) mellemrum. Brug en lægtesøger til at finde lægterne. Det kan være en god idé at bruge en syl eller et søm til at bestemme, hvor lægterne er placeret. Forbor, med et 4 mm træbor, et 50 mm dybt hul i den ønskede højde på hver lægte. Sørg for, at hullerne er placeret midt på lægten og at de er på niveau med hinanden. Brug vægpladen som skabelon når du skal markere hullerne. Fastgør vægpladen til væggen ved hjælp af fire franske skruer (n) og fire spændeskiver (o).

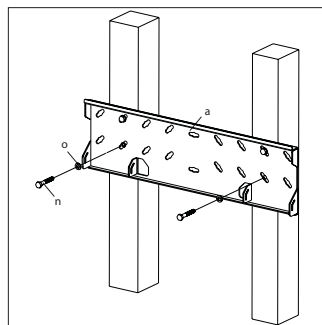

Step 3 Fastgør låsestang og monter skærm på vægpladen

Advarsel: Til nogle skærme kræves to personer til at løfte!

Indsæt låsestangen (c) i vægbeslaget som vist i diagram 3a. Når låsestangen er ført hele vejen igennem vægbeslaget, kan en hængelås benyttes for yderligere sikkerhed. Hægt herefter skærmbeslaget (b) fast til toppen af vægpladen (a) og før bunden af skærmbeslaget ind til bunden af væg-pladen, som vist i diagram 3b. Til sidst låses vægbeslaget til vægpladen ved at trykke bunden af skærmen mod vægpladen, som vist i Diagram 3c. For at justere hældningsvinklen på skærmen, skal du løsne grebene på de to skærmbeslag (b1 og b2). Ønsker du på et tidspunkt at afmontere skærmen fra væg-pladen, skal låsestangen fjernes først.

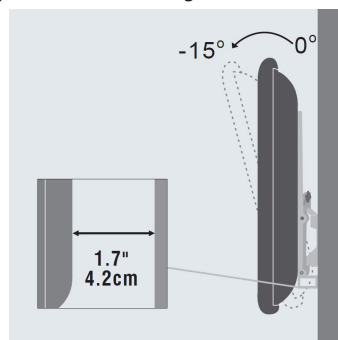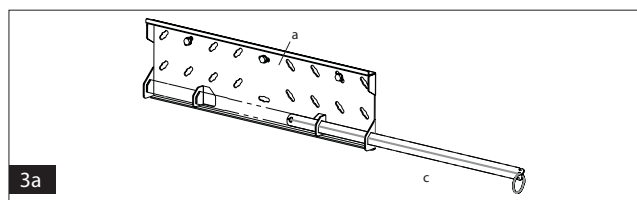


TAK FORDI DU HAR VALGT ET AF VORES PRODUKTER.



INSTALLATION INSTRUCTION

VLMW4065T

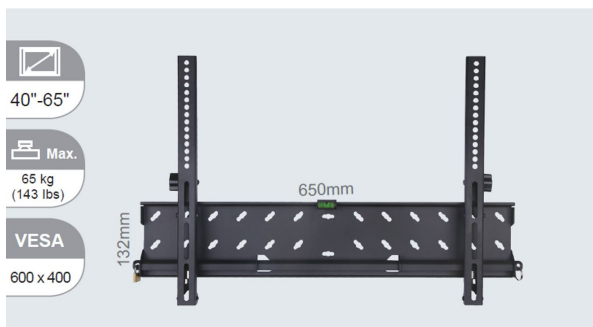

VESA Standard:

Up to 600x400

Weight:

Up to 65 kg (1453 lbs)

Unpacking Instructions

Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage. Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.

Important Safety Information

Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation. Please call a qualified installation contractor for help if you don't understand these directions or have any doubts about the safety of the installation. If you are uncertain about the nature of your wall, consult a qualified installation contractor.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaims any and all liability or damage arising from incorrect assembly, incorrect mounting or incorrect use of this product.



WARNING

CAUTION!

This monitor mount must be securely attached to the vertical wall. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.

Tools Required


- 4 mm Drill bit
- 8 mm Masonry Bit

- Philips Screwdriver
- Stud Finder


- Wrench or Socket Set
- Carpenter's Level

Note: The mounting components and hardware supplied in this package are not designed for installations to walls with steel studs or to cinder block walls. If the hardware you need for your installation is not included, please consult your local hardware store for proper mounting hardware for the application.


SUPPLIED PARTS LIST

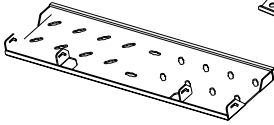

(1) Wall Plate - a

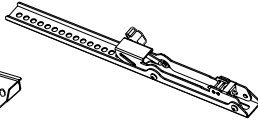

(1) Monitor Bracket - b1

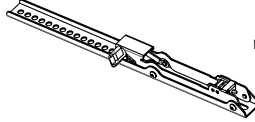

(1) Monitor Bracket - b2



(1) Locking Bar - c




(4) M4x12 Bolt - d



(4) M5x12 Bolt - e



(4) M6x12 Bolt - f



(4) M8x20 Bolt - g




(4) M4x30 Bolt - dd



(4) M5x30 Bolt - ee



(4) M6x35 Bolt - ff



(4) M8x40 Bolt - gg




(4) M4 Lock Washer - h




(4) M5 Lock Washer - i



(4) M6 Lock Washer - j




(4) M8 Lock Washer - k




(8) M4/M5 Washer - l




(4) M6/M8 Washer - m




(5) M6x45 Lag Bolt - n



(5) Lag Bolt Washer - o




(5) Concrete Anchor - p



(1) Bubble Level - q




(4) M4/M5 Spacer - r



(4) M6/M8 Spacer - s

Step 1 Mounting the Monitor Brackets to a Monitor with Flat Back


First of all, make sure which diameter of the Bolt (d, e, f, g, dd, ee, ff, gg) your monitor requires. Once you have determined the correct diameter, please see the relative diagram as below. You will thread the Bolt into the monitor using the correct Lock Washer (h, i, j, k) and Washer (l, m). Please make sure that the Monitor Brackets (b) are vertically centered and level with each other. Use the Spacers (r, s) only if the bolts are too long.

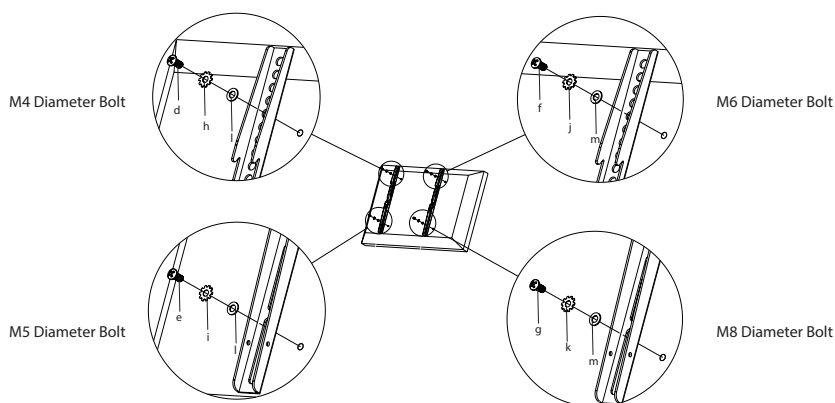

Step 2A Mounting the Wall Plate to the Wall

Brick, Solid Concrete and Concrete Block mounting:


Use the Wall Plate (a) as a template to mark 3 hole locations on the wall. One in the top left slot and another one in the top right slot. Pre-drill these holes with a 8 mm masonry bit to at least 50 mm in depth. Insert a Concrete Anchor (p) into each of these holes. Make sure the anchor is seated completely flush with the concrete surface even if there is a layer of drywall or other material in front. Attach the Wall Plate to the wall using 2 Lag Bolts (n), 2 Lag Bolt Washers (o) and 2 Concrete Anchor (p), as shown in Diagram 2A. Adjust the level as shown in Diagram 2b, fasten the Lag Bolts (n). Drill three more holes as shown in Diagram 2c and attach the rest 3 Lag Bolts (n), Lag Bolt Washers (o) and Concrete Anchor (p).

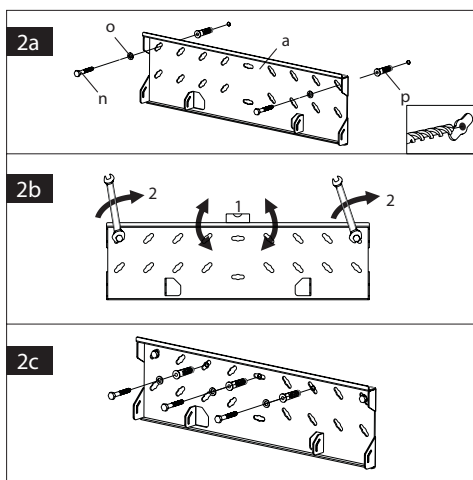

Step 2B Mounting the Wall Plate to the Wall

Wood Stud mounting:



The Wall Plate (a) must be mounted to two studs at least 16" (406 mm) apart. Use a stud finder to locate two adjacent studs. It is a good idea to verify where the studs are located with an awl or thin nail. Pre-drill a 50 mm deep hole at the desired height in each stud using a 4 mm drill bit. Make sure these holes are in the center area of the studs and level with each other. Use the Wall Plate as a template to mark the location of the second hole in each stud. Drill 50 mm deep holes using the 3.8 mm drill bit in the marked locations. Attach the Wall Plate to the wall using the 4 Lag Bolts (n) and 4 Lag Bolt Washers (o).

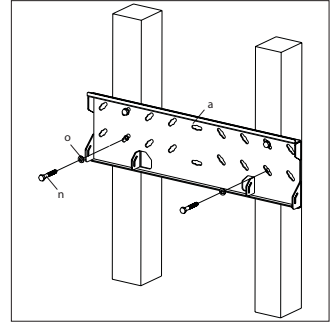

Step 3 Insert the Locking Bar and attach the Monitor to Wall Plate

Warning: Some monitors may require two people to lift!

Insert the Locking Bar (c) to the Wall Plate (a) as shown in the Diagram 3a. If necessary add a padlock (not supplied) at the end of the locking bar. Hook the Monitor Brackets (b) over the top of the Wall Plate (a) and then let the bottom of the Monitor Brackets rotate to the bottom of the Wall Plate as shown in the Diagram 3b. Push the bottom of the monitor to lock the Monitor Brackets on the Wall Plate, as shown in the Diagram 3c. Loosen the knobs on both Monitor Brackets to adjust the tilt angle according to your requirement. Pull out the Locking Bar first if you want to remove the monitor from the Wall Plate.

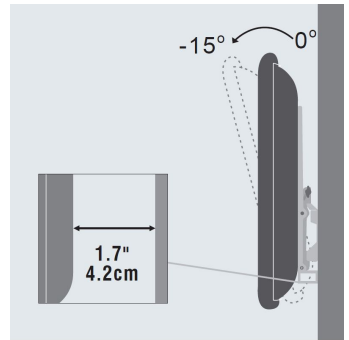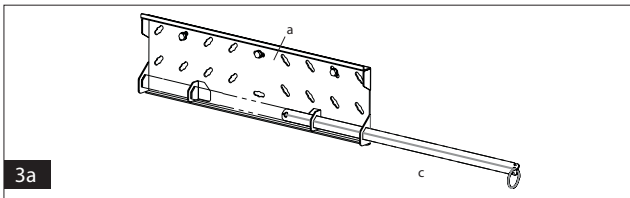

THANKS FOR CHOOSING ONE OF OUR PRODUCTS.

