


Yealink



Unboxing Video

Collaboration Touch Panel

MTouchPlus-EXT

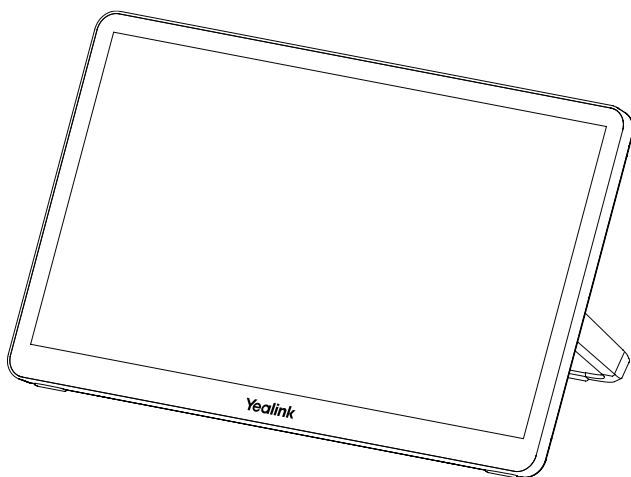

English| 简体中文 |DEUTSCH|FRANÇAIS|ESPAÑOL

Quick Start Guide (V1.2)


Content

English.....	1
简体中文	5
Deutsch.....	9
Français.....	13
Español.....	17

Package Contents




MTouchPlus-EXT




(7.5m, 24.6ft)


CAT5e UTP (RJ45 - RJ45) Cable



PSE

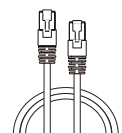


Ethernet Cable
(3m CAT5E FTP cable)



Power Cord

PoE Adapter

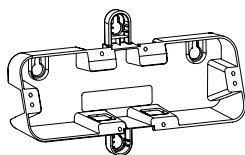

(207.44 mm * 126.99 mm)

Mounting Bracket



× 4

φ6 * 30 mm, white, Polyamide



× 4

4*30 FAHOZN3+ (+)



× 2

M8*60mm,SUS304



(M8,φ30*T2mm, SUS304)

Washer



× 2



× 4

2.5*9.0FMHZN(+)



× 2

(M8,SUS304)

Wing Nuts




(L200*W62.5*T1.2mm)

Double-Coating Tape



(WH-85*3.0mm)


Screwdriver




Quick Start Guide

Connection

• Assemble your MTouchPlus-EXT

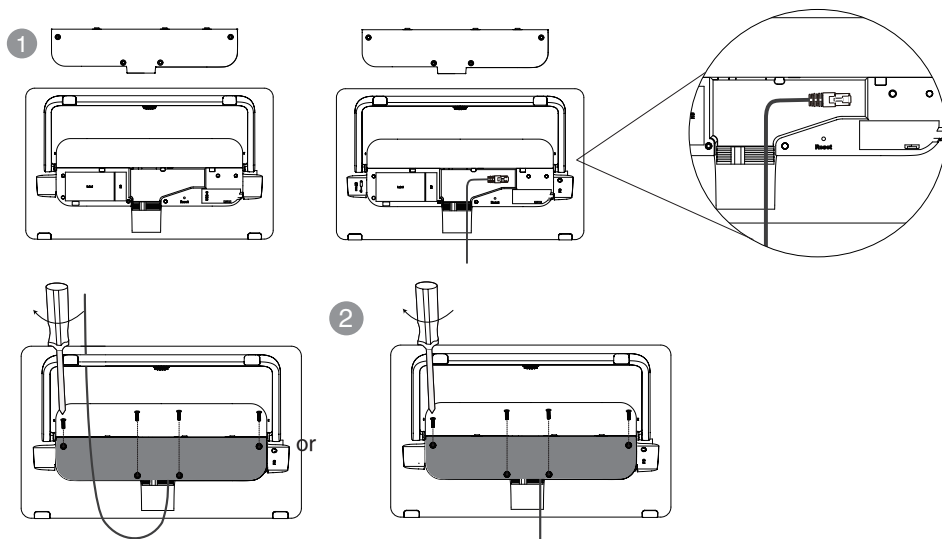

• Connect your MTouchPlus-EXT

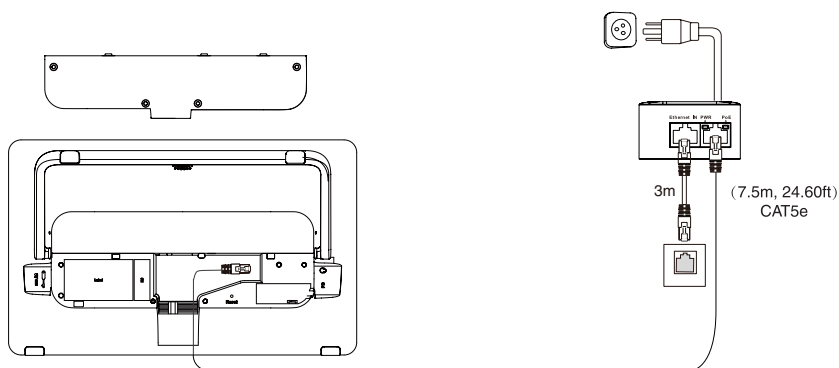

MTouchPlus-EXT needs to be connected to the same LAN as MTouch Plus.

• Pair your MTouchPlus-EXT with endpoint


For MVC endpoints:

Enter the MTouch Plus IP address and PIN code according to the on-screen prompts in the MTouchPlus-EXT, then the system will be automatically paired with the MTouchPlus-EXT.


💡 Go to **Device Status > IP** in Yealink RoomConnect, you can obtain the IP of MTouch Plus.

Table Installation

• Put on a table

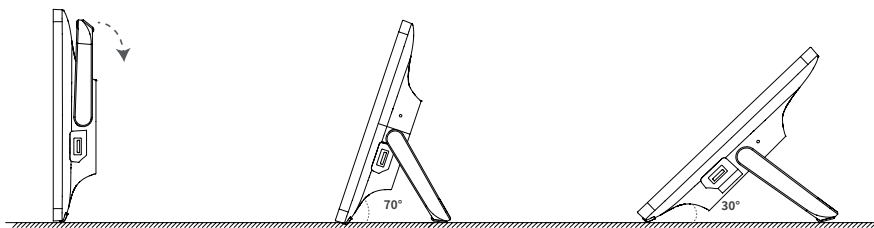


• Paste on a table

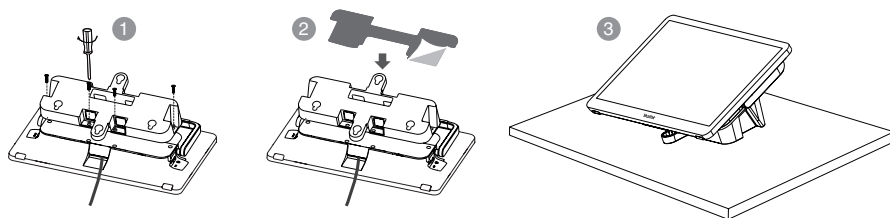


💡 Please select the outlet hole according to your need.

• Fixed on a table

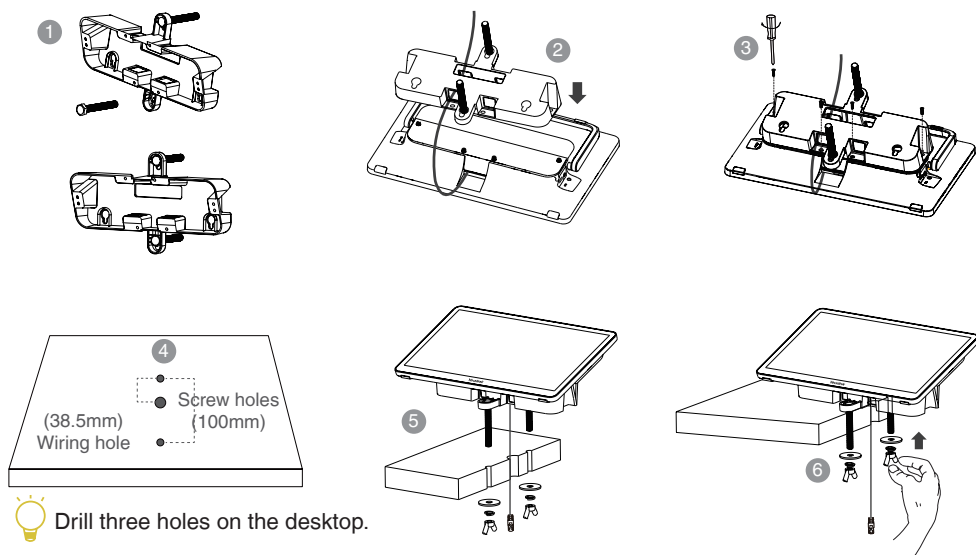


Wall Installation

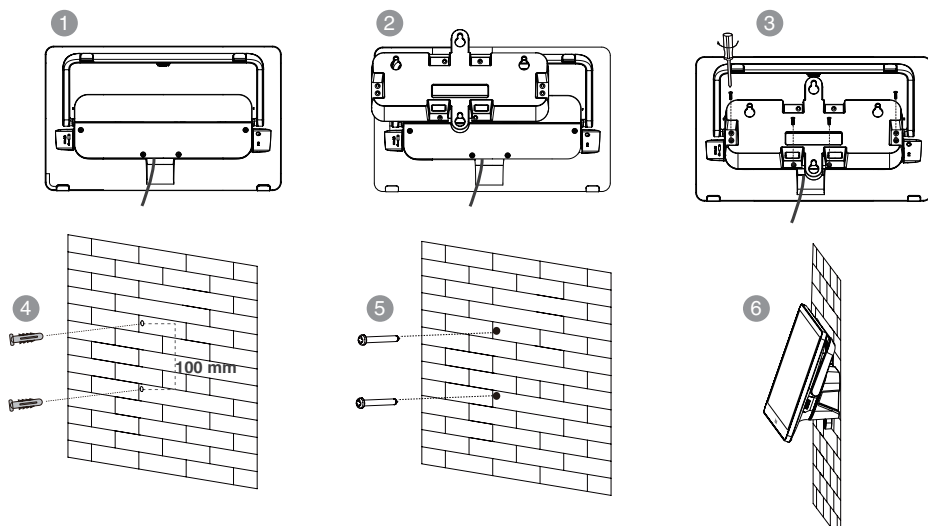


We recommend that the height of the wall installation is 1m~1.5m from the ground. Please select the outlet hole according to your need. If the conference room environment allows, you can also wire through the wall.

包装清单

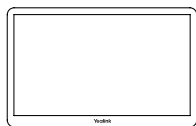


MTouchPlus-EXT




(7,5m, 24,60ft)

Cable Cat5e UTP (RJ45 - RJ45) 线




PSE

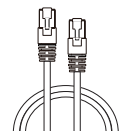


3 米网线
(FTP 超五类以太网线)

POE 电源



电源线

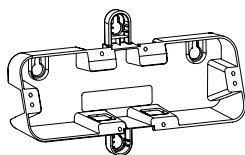

(207.44 mm * 126.99 mm)

挂墙架



× 4

φ6 * 30 mm, 白色, 聚酰胺



× 4

4*30 FAHOZN3+ (+)



× 2

M8*60mm,SUS304



(M8,φ30*T2mm, SUS304)

垫片



× 2



× 4

2.5*9.0FMHZN(+)



(M8,SUS304)

蝶形快锁螺丝

× 2




(L200*W62.5*T1.2mm)

双面胶



(WH-85*3.0mm)


螺丝刀




快速入门指南

连接

• MTouchPlus-EXT 组装

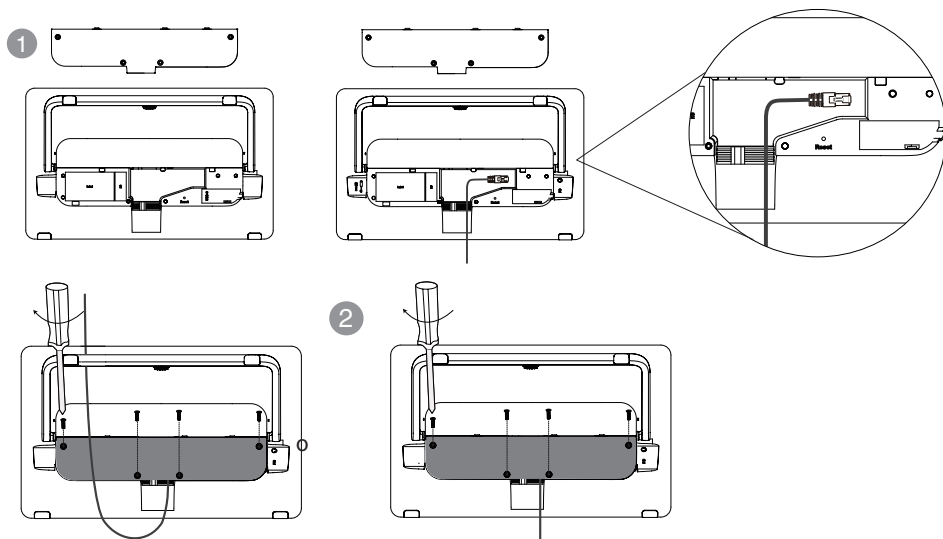

• MTouchPlus-EXT 连接

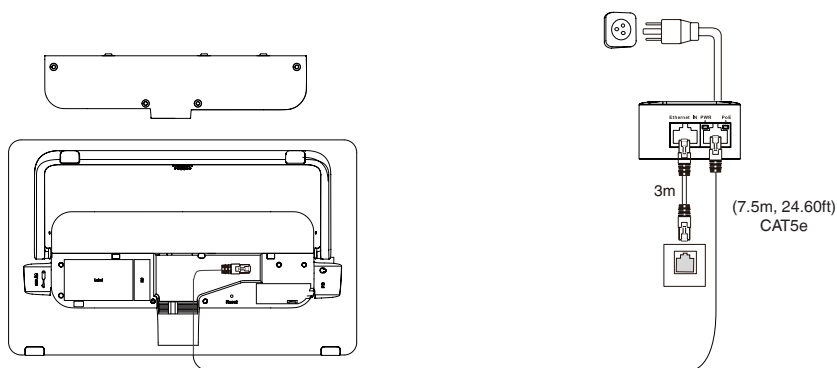

MTouchPlus-EXT 需要和 MTouch Plus 连接到同一局域网。

• MTouchPlus-EXT 与终端配对


对于 MVC 终端：

根据 MTouchPlus-EXT 页面提示内容输入 MTouch Plus 的 IP 与配对码后，系统将自动与终端进行配对。


💡 打开 Yealink RoomConnect, 点击**设备状态 > IP**, 可以获得 MTouch Plus 的 IP。

桌面安装

• 放置在桌面

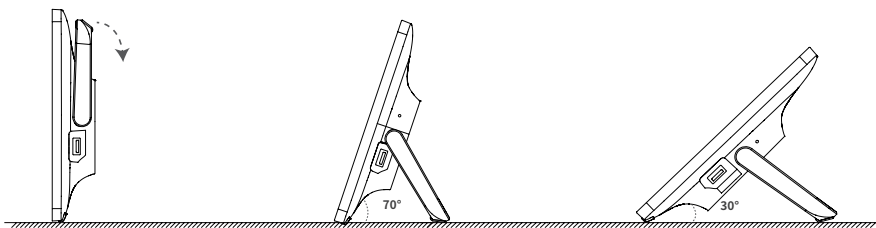


• 粘贴在桌面

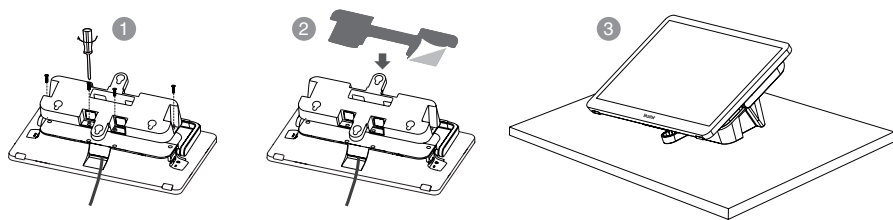


💡 请根据实际需要选择出线口

• 固定在桌面

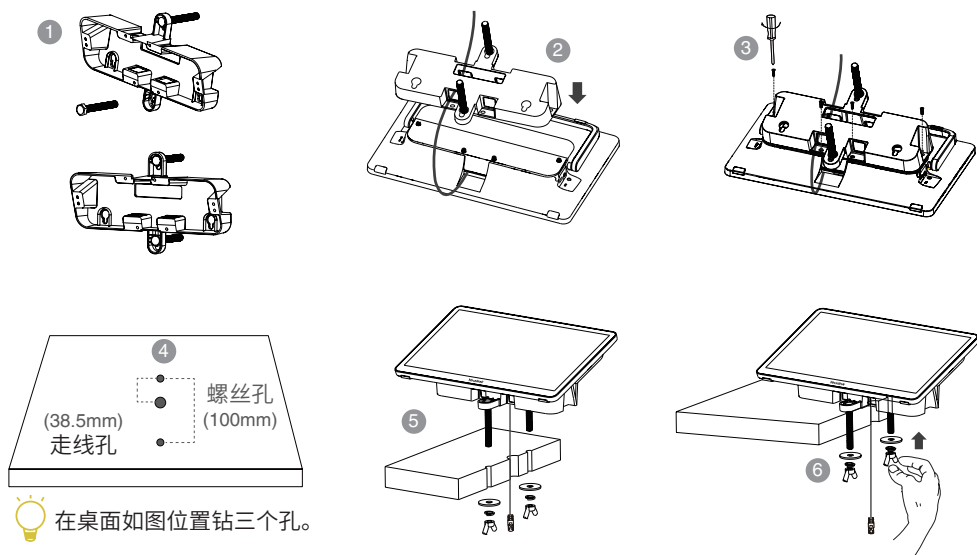


墙装

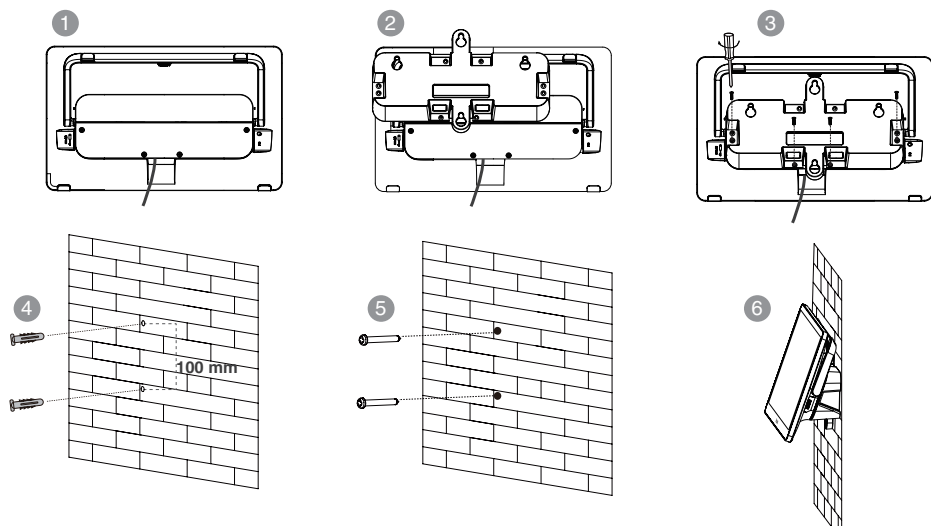


我们建议墙装高度为离地面 1 米~1.5 米。
请根据实际需要选择出线孔, 如果条件允许, 你可以穿墙走线。

Verpackungsinhalt

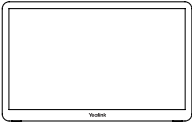

MTouchPlus-EXT




(7,5m, 24,6ft)


CAT5e-Kabel UTP (RJ45 - RJ45)



PSE

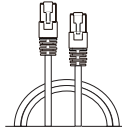


Ethernet-Kabel
(3m CAT5E FTP Kabel)



Stromkabel

PoE-Netzteil

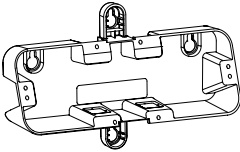

(207.44 mm * 126.99 mm)

halterung



× 4

φ6 * 30 mm, weiß, Polyamid



× 4

4*30 FAHOZN3+ (+)



× 2

M8*60mm,SUS304



(M8,φ30*T2mm, SUS304)



× 2

Unterlegscheiben



× 4

2.5*9.0FMHZN(+)



(M8,SUS304)

× 2

Flügelmuttern




(L200*W62.5*T1.2mm)

Doppelseitiges Band



(WH-85*3.0mm)


Schraubendreher




Kurzanleitung

Verbindung

• Montage des MTouchPlus-EXT

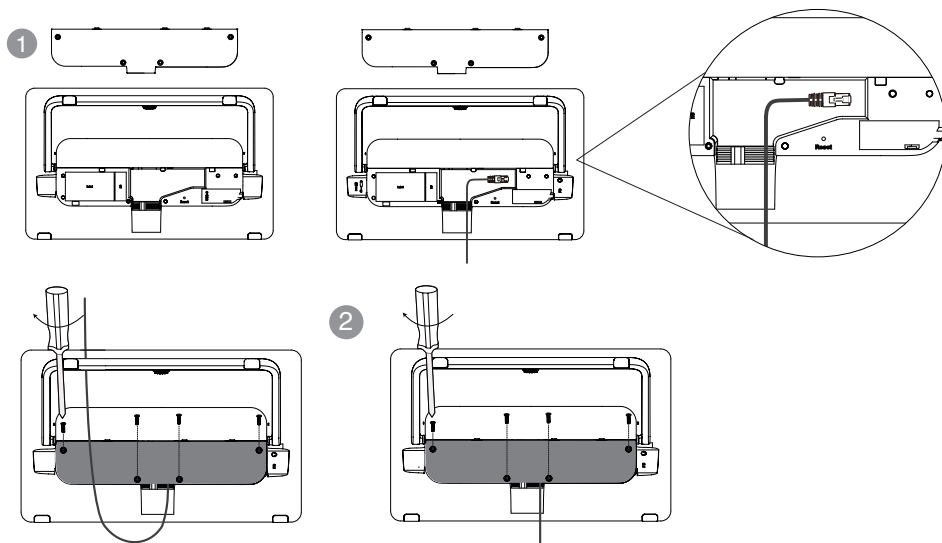

• Anschluss des MTouchPlus-EXT

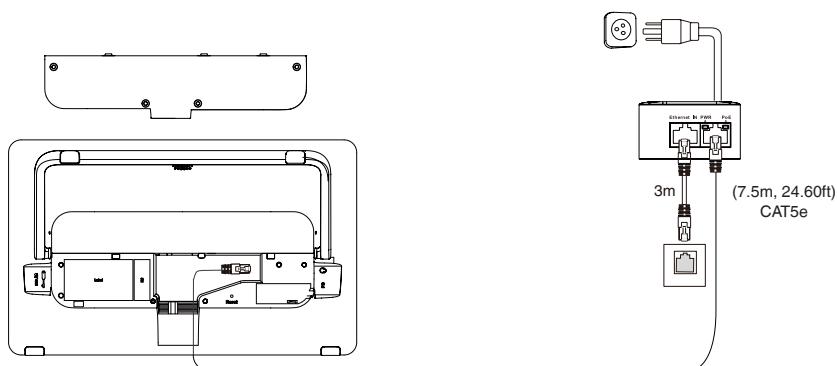

MTouchPlus-EXT muss mit demselben LAN wie MTouch Plus verbunden sein.

- **Das MTouchPlus-EXT mit dem endpoint koppeln**

Für MVC-endpunkte:


Geben Sie die IP-Adresse und den PIN-Code des MTouch Plus entsprechend den Bildschirmanweisungen im MTouchPlus-EXT ein, dann wird das System automatisch mit dem MTouchPlus-EXT gekoppelt.




Klicken Sie auf **Gerätestatus > IP** auf Yealink RoomConnect und du kannst die IP von MTouch Plus abrufen.

Installation auf dem Tisch

- **Auf einen tisch stellen**

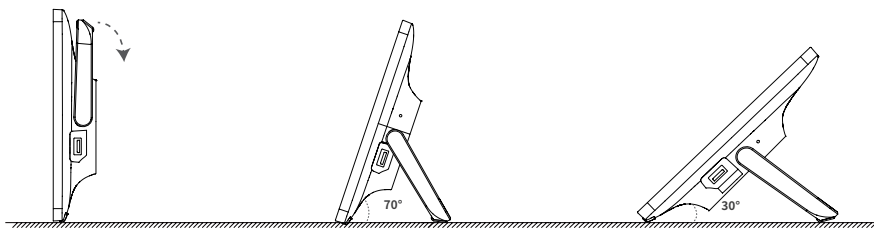


- **Auf einem tisch fixieren**

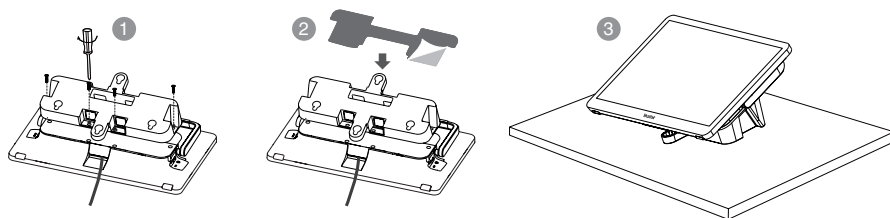


Bitte wählen Sie die vorhandenen Bohrungen nach Bedarf aus.

• Auf einem tisch befestigt

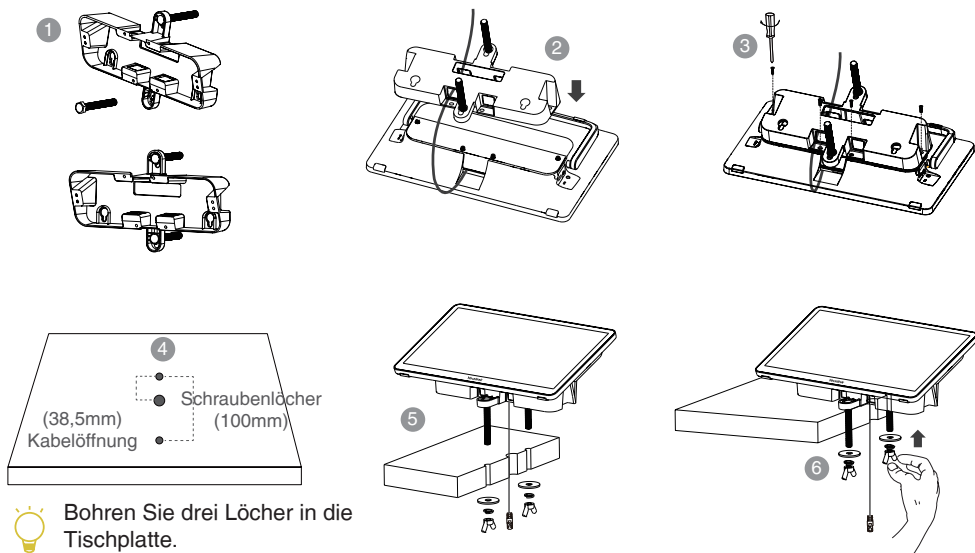


Installation an der Wand

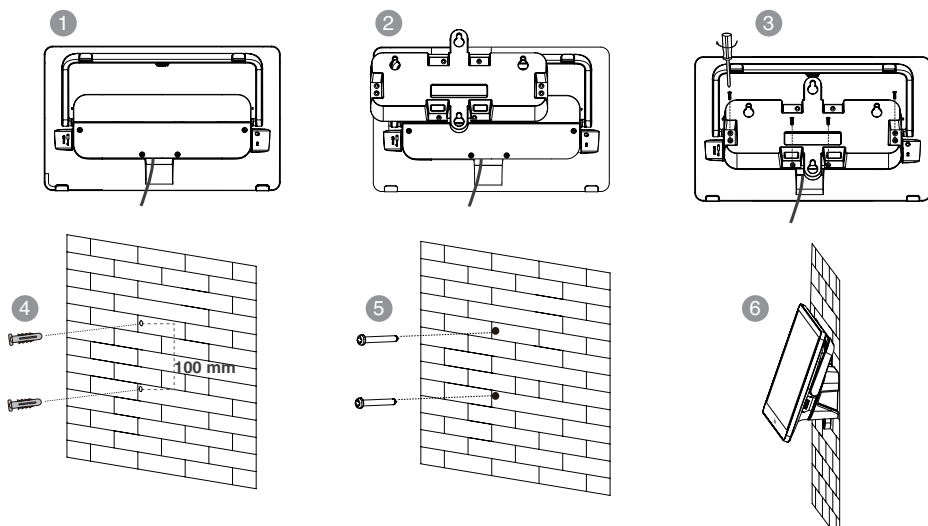

Wir empfehlen eine Installationshöhe von 1-1,5 m.

Bitte wählen Sie die vorhandenen Bohrungen nach Bedarf aus. Wenn es die Konferenzraumumgebung zulässt, können Sie Drahtgebundenes auch durch die Wand leiten.

Contenu de la boîte

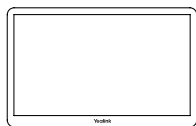


MTouchPlus-EXT




(7,5m, 24,6ft)


Câble Cat5e UTP (RJ45 - RJ45)



PSE




Câble Ethernet
(câble 3m CAT5E FTP)



Cordon d'alimentation

Adaptateur Ethernet

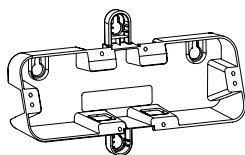

(207.44 mm * 126.99 mm)

Support de fixation



× 4

φ6 * 30 mm, blanc, polyamide



× 4

4*30 FAHOZN3+ (+)



× 2

M8*60mm,SUS304



(M8,φ30*T2mm, SUS304)

Rondelle



× 2



× 4

2.5*9.0FMHZN(+)



(M8,SUS304)

Écrous papillons

× 2




(L200*W62.5*T1.2mm)

Bande adhésive double-face



(WH-85*3.0mm)


Tournevis




Guide de démarrage rapide

Connexion

• Montez votre MTouchPlus-EXT

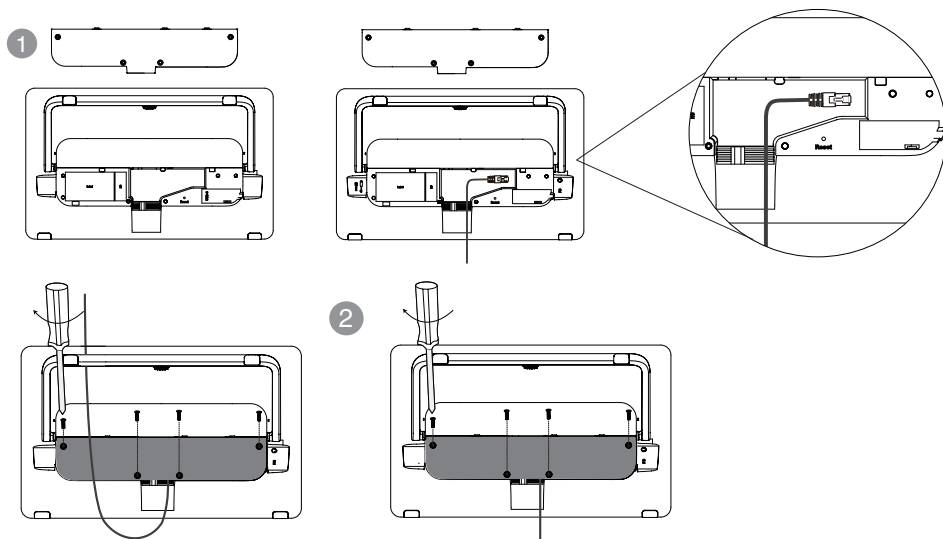

• Connecter votre MTouchPlus-EXT

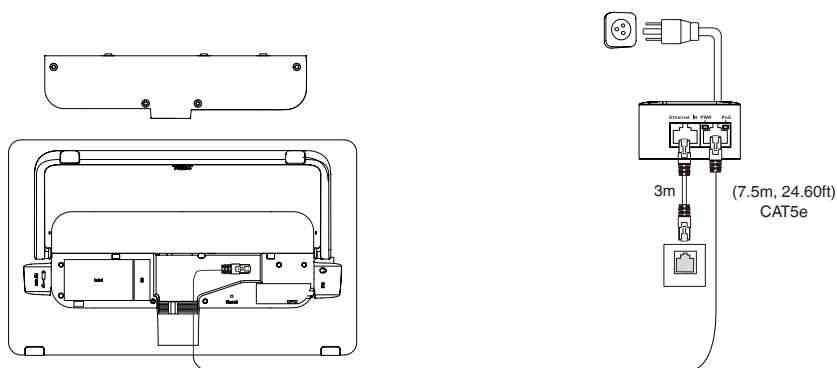

Le MTouchPlus-EXT doit être connecté au même réseau local que MTouch Plus.

- **Apparez le MTouchPlus-EXT avec le point de terminaison**


Pour les points de terminaison MVC

Entrez l'adresse IP du point de MTouch Plus et le code PIN en suivant les invites à l'écran dans le MTouchPlus-EXT. Le système exécute alors automatiquement l'appariement du MTouchPlus-EXT.


💡 Cliquez sur **État appareil > Device IP** sur Yealink RoomConnect, et vous pouvez obtenir l'adresse IP de MTouch Plus.

Installation de la table

- **Posez-le sur une table**

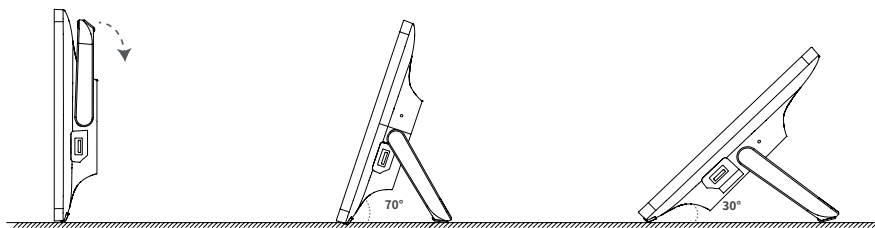


- **Collage sur une table**

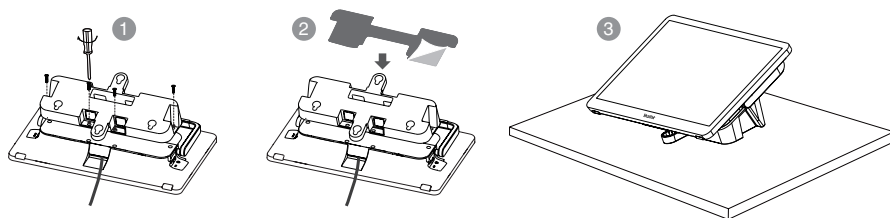


💡 Veuillez choisir l'orifice de sortie en fonction de vos besoins.

• Fixation sur une table

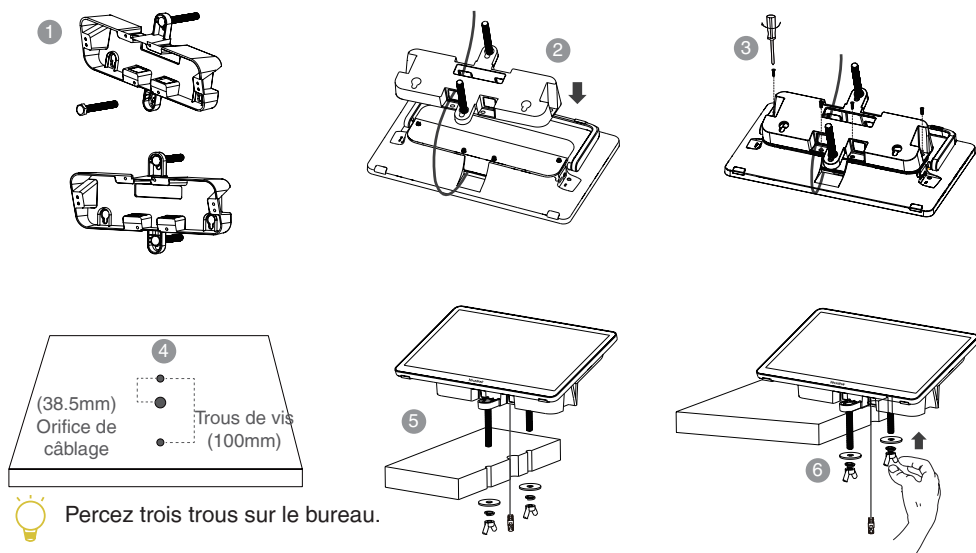


Installation murale

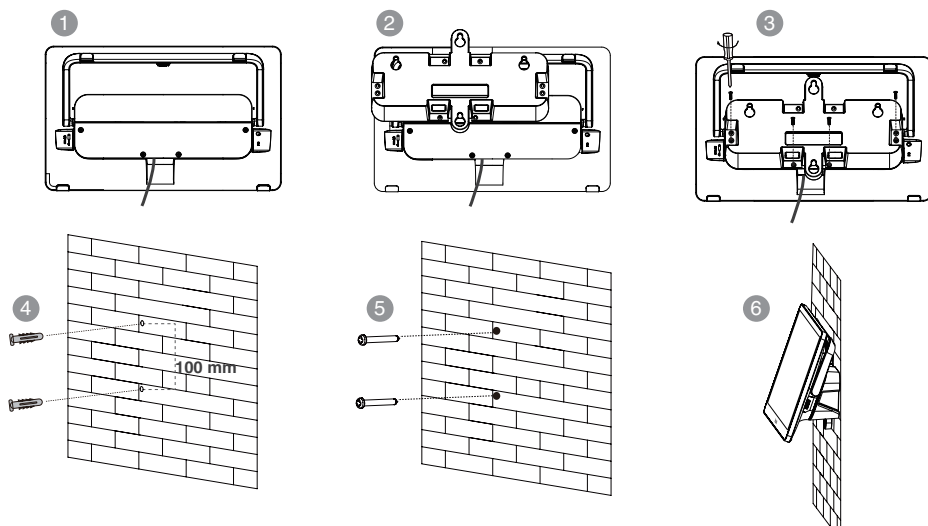


Nous recommandons une hauteur d'installation murale de 1m- 1,5 m au-dessus du sol.
Veuillez choisir l'orifice de sortie en fonction de vos besoins. Si l'environnement de la salle de conférence le permet, vous pouvez également faire passer les câbles à travers le mur.

Contenido de la caja

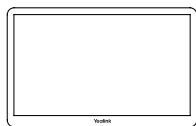


MTouchPlus-EXT




(7,5m, 24,60ft)

Cable Cat5e UTP (RJ45 - RJ45)




PSE

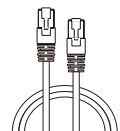


Cable Ethernet
(3m CAT5E FTP cable)

Adaptador PoE



Power Cord

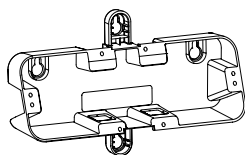

(207.44 mm * 126.99 mm)

Soporte de montaje



× 4

Φ6 x 30 mm, blanco, poliamida



× 4

4*30 FAHOZN3+ (+)



× 2

M8*60mm,SUS304



(M8,φ30*T2mm,
SUS304)

Arandela



× 2



× 4

2.5*9.0FMHZN(+)



× 2

(M8,SUS304)

Tuercas de aleta




(L200*W62.5*T1.2mm)

Cinta de doble cara adhesiva



(WH-85*3.0mm)


Destornillador




Guía de inicio rápido

Conexión

• Instale su MTouchPlus-EXT

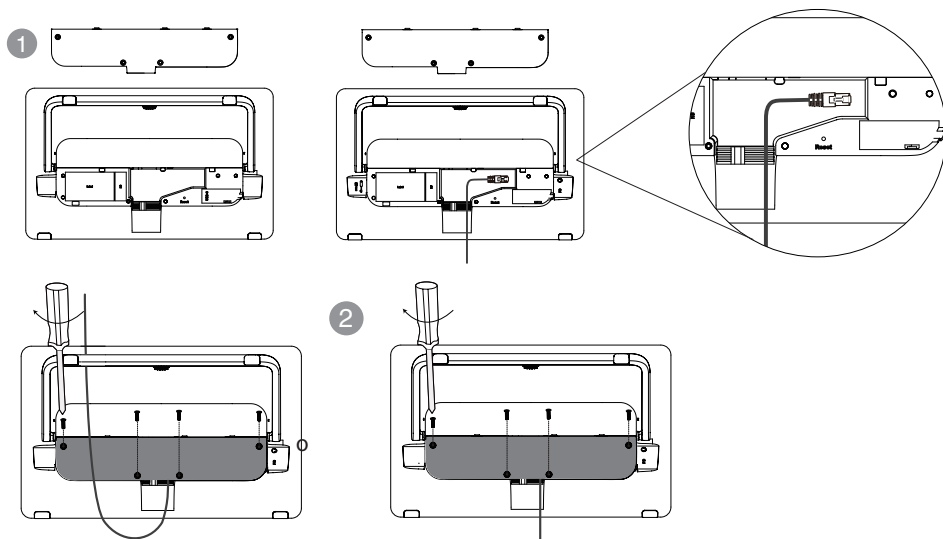

• Conectar su MTouchPlus-EXT

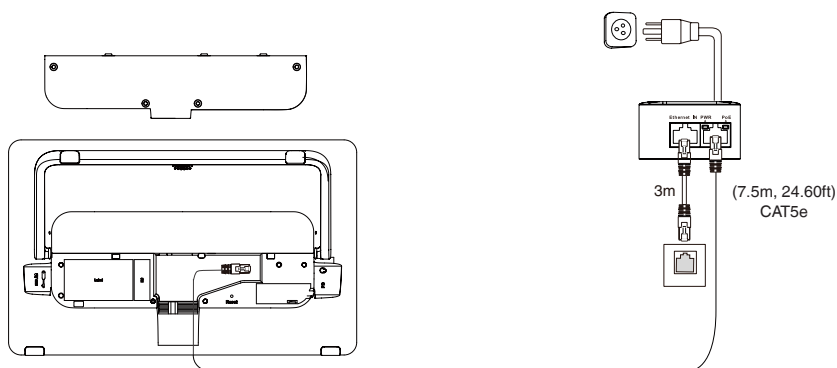

MTouchPlus-EXT debe estar conectado a la misma LAN que MTouch Plus.

• Empareje el MTouchPlus-EXT con el Endpoint


Para terminales MVC:

Ingresa la dirección IP del MTouch Plus y el código PIN de acuerdo con las indicaciones en pantalla en la MTouchPlus-EXT, luego el sistema se emparejará automáticamente con la MTouchPlus-EXT.


💡 Haz clic en **Estado Dispositivo > IP** en Yealink RoomConnect y podrás obtener la IP de MTouch Plus..

Instalación en una mesa

• En una mesa

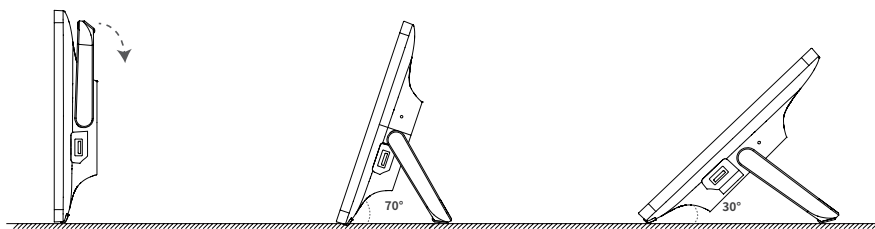


• Colocar sobre una mesa

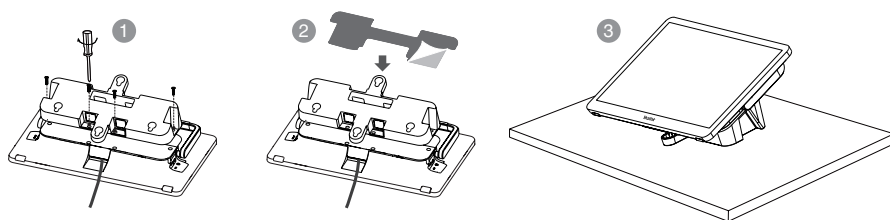


💡 Seleccione el orificio de salida para la toma de corriente en función de sus necesidades.

• Fijar sobre una mesa

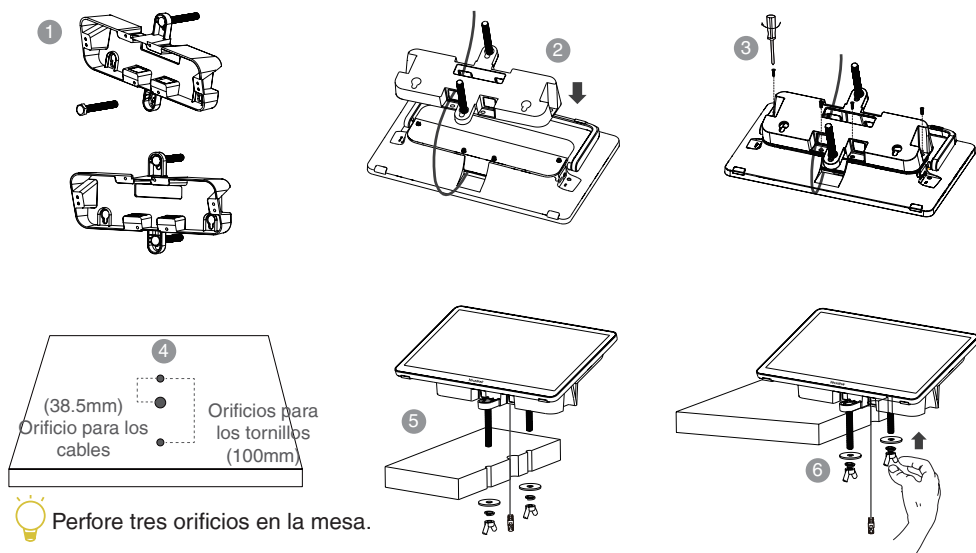

Instalación en la pared

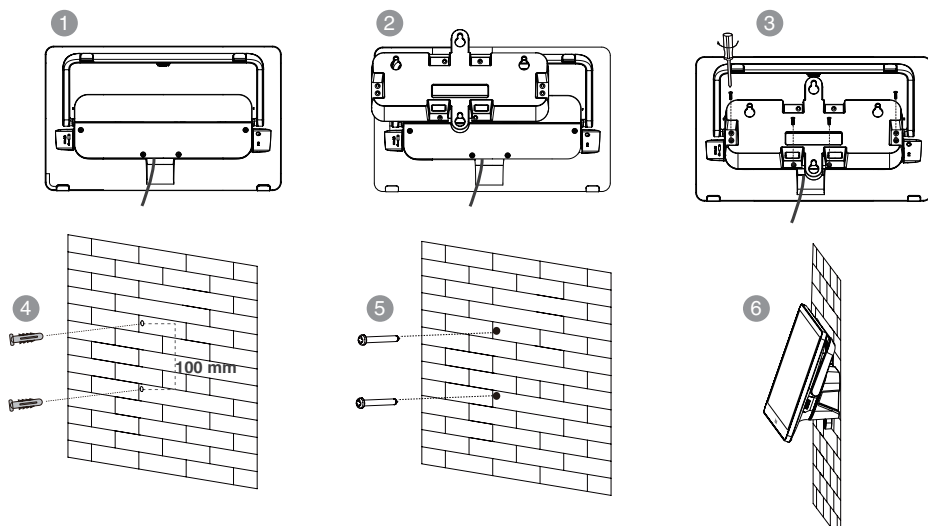

Es recomendable que la altura de la instalación en la pared sea de 1-1,5 metros por encima del suelo.

Selecione el orificio de salida para la toma de corriente en función de sus necesidades. Si el entorno de la sala de conferencias lo permite, también puede instalar el cableado a través de la pared.



Declaration of Conformity

We,

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD

Address: No.666 Hu'an Rd. Huli District Xiamen City, Fujian, P.R. China

Manufacturer: YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD

Address: No.666 Hu'an Rd. Huli District Xiamen City, Fujian, P.R. China

DATE: 15/September/2023

declare that the product

Type: Collaboration Touch Panel

Model: MTouchPlus-EXT

meets the essential requirements and other relevant provisions according to the following EC directive

Directive: 2014/30/EU, 2014/35/EU

Conformity

The product complies with the following standards:

Safety: EN IEC 62368-1:2020+A11:2020

EMC: EN 55032:2015/A11:2020; EN 55035:2017/A11:2020;

EN IEC 61000-3-2:2019+A1:2021; EN 61000-3-3:2013/A2:2021

Harmonized: UN-EN62321

Directive 2011/65/EU and (EU) 2015/863 of the European Parliament and of the Council of 8 June 2011 and 4 June 2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS2.0)

Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on Waste electrical and electronic equipment (WEEE)

Regulation (EC) No.1907/2006 of the European Parliament and of the Council of 18 December 2006 on Registration, Evaluation, Authorization, and Restriction of Chemicals (REACH)

The declaration of conformity is issued under the sole responsibility of the manufacturer

NAME: Huahu Wang

DATE:

TITLE: Manager

Huahu Wang
15 / Sep. / 2023

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +14 to 113°F (-10 to 45°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

DC symbol

— is the DC voltage symbol.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

The following basic safety precautions should always be followed to reduce risk of fire, electrical shock, and other personal injury.



Environmental Requirements

- Place the product on a stable, level and non-slip surface.
- Do not place the product close to heat sources, in direct sunlight or next to any house hold appliance with strong magnetic field or electromagnetic field, such as a microwave oven or a refrigerator.
- Do not allow the product to come into contact with water, dust and chemicals.
- Protect the product from aggressive liquids and vapors.
- Do not place the product on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Do not install the product in rooms with high humidity, for example, in bathrooms, laundry rooms and wet basements.



Safety Notes During Operation

- Use only spare parts and accessories supplied or authorized by Yealink. The operation of non-authorized parts cannot be guaranteed.
- Do not place heavy objects on top of the handset or the base station in case of damage and deformation caused by the heavy load.
- Do not open the handset or the base station by yourself for repair purpose, which could expose you to high voltages. Have all repairs carried out by authorized service personnel.
- Do not let a child operate the product without guidance.
- Keep the small accessories contained in your product out of reach of small children in case of accidental swallowing.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not hold the handset up to your ear when speakphone is on or when the ringer is ringing as the volume can be very loud, which may be harmful to your hearing.
- During a thunderstorm, stop using the product and disconnect it from the power supply to avoid lightning strike.
- If the product is left unused for a rather long time, disconnect the base station from the power supply and unplug the power adapter.
- When there is smoke emitted from the product, or some abnormal noise or smell, disconnect the product from the power supply, and unplug the power adapter immediately.
- Remove the electrical cord from an outlet by pulling gently on the power adapter, not by pulling the cord.



Products with Li-ion Battery or the Li-ion Battery

- Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.
- Do power the handset off before removing the battery.
- Do not try to use the battery for the power supply of any device other than this handset.
- Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to your eyes or skin.
- Use only the rechargeable battery pack delivered with the handset or those rechargeable battery packs expressly recommended by Yealink.
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.



Notices of Cleaning

- Before cleaning the base station, stop using it and disconnect it from the power supply.
- Remove the battery before cleaning the handset to reduce risk of electric shock.
- Only clean your product with a piece of slightly moist and anti-static cloth.
- Keep the power plug clean and dry. Using a dirty or wet power plug may lead to electric shock or other perils.



ENVIRONMENTAL RECYCLING



Never dispose of the device with domestic waste

Ask your Town Council about how to dispose of it in an environmentally friendly way. The cardboard box, plastic packaging and player components may be recycled in accordance with prevailing recycling regulations in your country.

Always adhere to prevailing regulations

Those who fail to do so may be fined or prosecuted in accordance with the law. The crossed out garbage can that appears on the device means that when it has reached the end of its useful life, it should be taken to a special waste disposal center and treated separately to general urban waste.

Li-ion Battery: Be sure that the batteries have been placed in the right position. This phone uses rechargeable batteries only. Compulsory information according to regulations for battery-operated devices. Caution: Risk of explosion if battery is replaced with a battery of a wrong kind. Dispose of batteries in accordance with the instructions.

Troubleshooting

The unit cannot supply power to Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth.
2. Connect it to another wall outlet.

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.
You cannot connect the cable properly.
 1. You may have connected a wrong Yealink device.
 2. Use the correct power supply.
Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC CAUTION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED WARNING:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

For more information about Yealink, click <https://www.yealink.com>.

Copyright

Copyright © 2023 Yealink(Xiamen) Network Technology CO., LTD.

Copyright © 2023 Yealink(Xiamen) Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Yealink(Xiamen) Network Technology CO., LTD.

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



430104002468



YEALINK NETWORK TECHNOLOGY CO.,LTD.
No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R. C
Web: www.yealink.com
Copyright©2023 YEALINK(XIAMEN) NETWORK
TECHNOLOGY CO., LTD.All rights reserved.

