

## **OWNER'S MANUAL**

# LG Digital Signage

(MONITOR SIGNAGE)

Please read the user manual before using this product to ensure safe and convenient use

75XS4P-B

## **TABLE OF CONTENTS**

BASIC	3
- Checking the Accessories	3
- Parts and Buttons	
GETTING READY Connecting the IR Sensors	
CHECKING BEFORE	
INSTALLATION	6
- Installation Orientation	
- Installation Location	7
- Wall Mount Holder	8
- Safety and Precaution Guide for	
Installation	9
PRECAUTIONS FOR USE	10
- Dust	10
- Afterimage	10
PRODUCT	
SPECIFICATIONS	12
LICENCE	17

WARNING - This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.


## **BASIC**



## NOTE

- The accessories provided with your product may vary depending on the model or region.
- Product specifications or contents in this manual may be changed without prior notice due to upgrade of product functions.
- · SuperSign Software & Manual
  - Visit https://partner.lge.com to download the latest SuperSign software and manual.


## **Checking the Accessories**

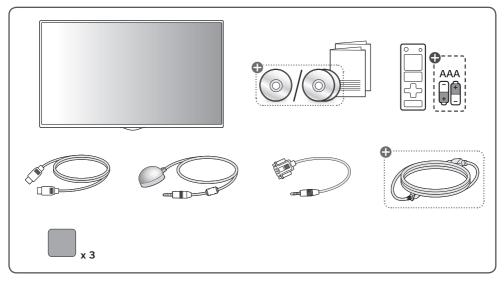


Depending on country

### **Parts and Buttons**

The image may be different according to the model.

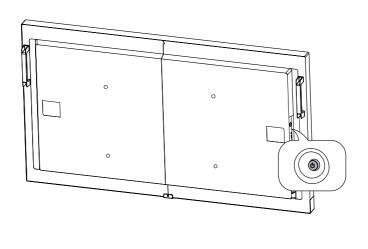

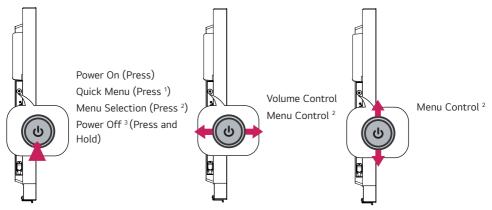

- 1 When the monitor is turned on, press the 🖰 button one time.
- 2 You can use the function when you control menu.
- 3 All running apps will close.

#### Quick Menu

(1) Turns the power off.

Changes the input source.



Accesses the main menu.


X

Close the quick menu.

## **GETTING READY**

## **Connecting the IR Sensors**

When an IR receiver is connected to the product, it enables a feature to receive signals from the remote control.

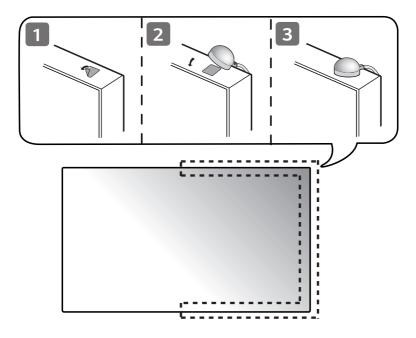

## **CHECKING BEFORE INSTALLATION**

We are not responsible for product damage caused by failure to follow the guide.

#### **Installation Orientation**

#### **Using Vertically**


When installing vertically, rotate the monitor 90 degrees anti-clockwise while facing the front of the screen.



#### Tilt Angle



### Ceiling, Floor Orientation

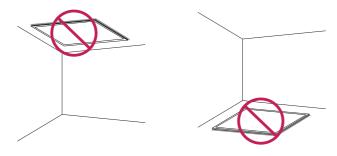


### **Installation Location**

We are not responsible for product damage caused by failure to follow the guide.

#### Indoor

#### Installing on a Wall

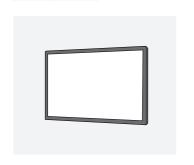




A: 100 mm or more

 The product warranty will be void if it is used with the front panel exposed to direct sunlight.

#### Installing on a Recessed Wall

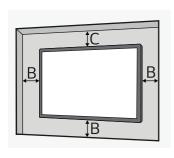



A: 100 mm or more B: 100 mm or more

C: 100 mm or more

 The product warranty will be void if it is used with the front panel exposed to direct sunlight.

#### Outdoor


#### **Outdoor Enclosed**



### Wall Mount Holder

To install the monitor on a wall, attach a wall mount holder (optional) to the back of the monitor. Take caution, and ensure that the wall mount holder (optional) is securely fixed to the monitor and to the

The VESA dimensions of the wall mount by model are as follows.

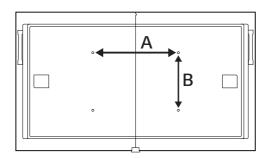

Model	VESA Dimensions (A x B) (mm)	Standard Dimensions	Length (Maximum) (mm)	Quantity
75XS4P	600 x 400	M8	14	4



#### **!** CAUTION

- · Disconnect the power cord first, and then move or install the monitor. Otherwise, it may result in electric shock.
- If the monitor is installed on a ceiling or inclined wall, it may fall and result in injury.
- Damage to the monitor by tightening the screws too tightly may void your warranty.
- · Use screws and wall mount plates conforming to VESA standards. Breakage or personal injury due to use or misuse of inappropriate components is not covered by the warranty of this product.



#### NOTE

- · Using screws longer than the indicated depth may damage the inside of the product. Be sure to use the proper length.
- · For more information on installation, please refer to the user manual for the wall mount.


## Safety and Precaution Guide for Installation

#### **Direct Sunlight**

- Make sure to keep sufficient space between the product and the window glass. (100 mm or more)
- · Proper ventilation is recommended.
- Attach a film with UV-blocking properties to the window glass.
  - Protect the display with cloth or a box when storing the device after it has been powered off.
  - This can prevent faults such as black spots, creases, and yellowing.

#### **Temperature**

- Make a cooling system for the enclosure so that the operating temperature of the product can be maintained.
  - 0 °C ~ 40 °C (without Direct Sunlight)
  - 0 °C ~ 30 °C (Direct Sunlight)

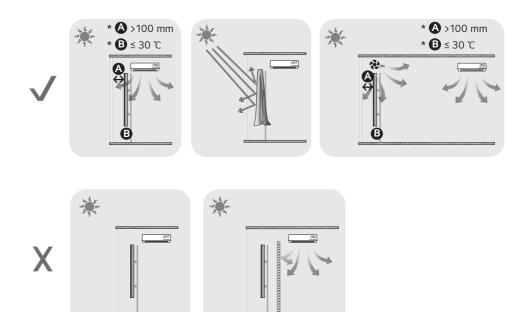

## PRECAUTIONS FOR USE

#### **Dust**


The warranty will not cover any damage caused by using the product in an excessively dusty environment.

## **Afterimage**

- · After-image appears when the product is turned off.
- Pixels may be damaged rapidly if a still image is displayed on the screen for a long period of time. Use the screen-saver function.
- Switching from a screen with high differences in luminance (black and white or grey) to a darker screen may cause an afterimage. This is normal due to the display characteristics of this product.
- When the LCD screen is in a still pattern for extended periods of use, a slight voltage difference may
  occur between the electrodes that operate the liquid crystal (LC). The voltage difference between the
  electrodes increases over time and tends to keep the liquid crystal aligned in one direction. At this time,
  the previous image remains, which is called an afterimage.
- Afterimages do not occur when continuously changing images are used but take place when a certain screen is fixed for a long time. The following are operational recommendations for reducing the occurrence of afterimages when using a fixed screen. The maximum recommended time for switching the screen is 12 hours. Shorter cycles are better for preventing afterimages.

- Recommended Usage Condition
  - 1 Change the background colour and text colour at equal intervals.
  - Afterimages occur less when the colours to be changed are complementary to one another.



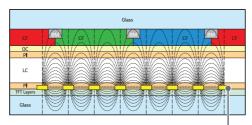

ITO or MoTi Pixel Layer

- 2 Switch the screen at equal time intervals.
- Take caution, and ensure that text or images from before the screen change are not left in the same location after the screen change.



## **PRODUCT SPECIFICATIONS**

Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.

Input / Output ports	RS-232C IN/OUT, SPEAKER OUT, HDMI IN 1, HDMI IN 2, DP IN/OUT, USB 2.0 IN, LAN IN/OUT, IR & LIGHT SENSOR, AC IN	
Embedded battery	Applied	
Resolution	Recommended resolution	HDMI 1 / HDMI 2 / DisplayPort: 3840 × 2160 @ 60 Hz  - This may not be supported on some OS or graphics card types.
	Maximum resolution	
Power Voltage	100-240 V~ 50/60 Hz 9.3 A	
	Operating Temperature	0 °C to 40 °C (without Direct Sunlight) 0 °C to 30 °C (Direct Sunlight)
Environmental Conditions	Operating Humidity	10 % to 80 %
	Storage Temperature	-20 °C to 60 °C
	Storage Humidity	5 % to 85 %

75XS4P-B	
Dimensions (Width x Height x Depth) / Weight	1679.2 mm x 957.6 mm x 104 mm / 39.6 kg

### HDMI 1 / HDMI 2 / DisplayPort (PC) Support Mode

Resolution	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 x 480	31.469	59.94
800 x 600	37.879	60.317
1024 x 768	48.363	60
1280 x 720	44.772	59.855
1366 x 768	47.712	60
1280 x 1024	63.981	60.02
1680 x 1050	65.29	59.954
1920 x 1080	67.5	60
3840 x 2160	67.5	30
3840 x 2160	135	60

### HDMI 1 / HDMI 2 / DisplayPort (DTV) Support mode

Resolution	Horizontal frequency (kHz)	Vertical frequency (Hz)
480/60p	31.5	60
576/50p	31.25	50
720/50p	37.5	50
720/60p	45	60
1080/50i	28.1	50
1080/60i	33.75	60
1080/50p	56.25	50
1080/60p	67.5	60
2160/30p	67.5	30
2160/50p	112.5	50
2160/60p	135	60

#### NOTE

- Resolutions available for the Input Label option in HDMI 1/ HDMI 2/ DisplayPort input modes.
  - PC resolutions: 1280 x 720 / 60 Hz, 1920 x 1080 / 60 Hz, 3840 x 2160 / 60 Hz
  - DTV resolutions: 480p, 720p, 1080p and 2160p
- · Vertical frequency: The product display functions by the screen image changing dozens of times every second like a fluorescent lamp. The vertical frequency or refresh rate is the number of image displays per second. The unit is Hz.
- Horizontal frequency: The horizontal interval is the time taken to display one horizontal line. When 1 is divided by the horizontal interval, the number of horizontal lines displayed every second can be tabulated as the horizontal frequency. The unit is kHz.

Wireless module (LGSBWAC92) Specifications		
Wireless LAN (IEEE 802.11a/b/g/n/ac)		
Frequency range (MHz) Output power (Max.) (dBm)		
2400 to 2483.5	18	
5150 to 5725	18	
5725 to 5850	12	
Bluetooth		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	8	
<u>'</u>		

- As band channels can vary per country, the user cannot change or adjust the operating frequency. This
  product is configured for the regional frequency table.
- For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

#### (Only Nigeria)

Connection and use of this communication equipment is permitted by the Nigerian Communications Commission.

#### (Only Hong Kong)

Wireless module (LGSBWAC92) Specifications		
Wireless LAN (IEEE 802.11a/b/g/n/ac)		
Frequency range (MHz) Output power (Max.) (dBm)		
2400 to 2483.5	18	
5150 to 5350	18	
5725 to 5850	12	
Bluetooth		
Frequency range (MHz) Output power (Max.) (dBm)		
2400 to 2483.5	8	

- As band channels can vary per country, the user cannot change or adjust the operating frequency. This
  product is configured for the regional frequency table.
- For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

#### (Only Vietnam)

Wireless LAN (IEEE 802.11a/b/g/n/ac)		
Output power (Max.) (dBm)		
17.5		
17.5		
12		
Bluetooth		

Bluetooth	
Frequency range (MHz)	Output power (Max.) (dBm)
2400 to 2483.5	8

- As band channels can vary per country, the user cannot change or adjust the operating frequency. This
  product is configured for the regional frequency table.
- For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

#### (Only Philippines)

Wireless module (LGSBWAC92) Specifications		
Wireless LAN (IEEE 802.11a/b/g/n/ac)		
Frequency range (MHz) Output power (Max.) (dBm)		
2400 to 2483.5	18	
5150 to 5725	18	
5725 to 5850	18	
Bluetooth		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	8	
As hand changels can vary per country the user cappet change or adjust the operating frequency. This		

- As band channels can vary per country, the user cannot change or adjust the operating frequency. This
  product is configured for the regional frequency table.
- For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.
- FCC ID: BEJLGSBWAC92 / IC: 2703H-LGSBWAC92

## **LICENCE**

Supported licenses may differ by model. Visit www.lg.com for more information on licenses.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Vision IQ, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.



The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

MODEL

SERIAL NO.

Temporary noise is normal when powering ON or OFF this device.