

ACCESSORIES

1
YEAR
WARRANTY

The shoulder strap keeps your device within easy reach while maintaining freedom of movement, so you avoid dropping and losing your device.

Positioned on your chest, you can use the Push-to-Talk (Walkie-Talkie) functionality of your device. This gives you quick & easy access to the microphone and speakers, making it easy to talk to your team on a regular basis.

You can also easily attach and remove your device from the shoulder strap. You can scan or input data and charge your device quickly.



CHEST STRAP CLIPFAST + UNIVERSAL SILICON HOLDER HHD 5-7"

Ref. 001086



EASY ACCESS

Push-to-talk / Walkie-Talkie function

EASY IN / EASY OUT

ClipFast system

UNIVERSAL

For 5-7" terminal

Weight : 168 g | Dimensions : Ajustable length 80 à 105 cm - Ajustable width (under the arm) 60 à 90 cm

ACCESSORIES

CHEST STRAP CLIPFAST + UNIVERSAL SILICON HOLDER HHD 5-7"

1
YEAR
WARRANTY

PLUS-PRODUCTS

Front / Back



Clip buckle closure



2 adjusters allow you to then adjust the shoulder strap to your morphology

Ergonomic ring



Ergonomic ring for optimal comfort

Anti-slip tape




Anti-slip band on the shoulder for optimal support

EASY IN / EASY OUT



ClipFast system for quick and secure installation

Universal

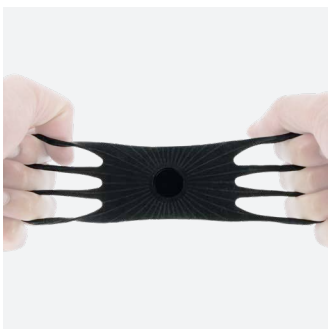

Silicone holder for terminal from 5 to 7"

SPECIFICATIONS

Ref	Product	EAN Code
001086	Chest Strap ClipFast + Universal Silicon Holder HHD 5-7"	3700992528830

Package content



1 Chest Strap with ClipFast interface



1 Universal holder
for 5-7" device with
riveted ClipFast

www.mobiliscase.com



MOBILIS
CARE & CARRY

001086 - CHEST STRAP CLIPFAST + UNIVERSAL SILICON HOLDER HHD 5-7"

INSTALLATION DE LA BANDOULIÈRE INSTALLATION OF THE CHEST STRAP

1

PASSER VOTRE BRAS GAUCHE ENTRE LA SANGLE ÉLASTIQUE ET LA PARTIE AVANT
PASS YOUR LEFT ARM BETWEEN THE ELASTIC STRAP AND THE FRONT PART



2

POSITIONNER LA PARTIE ANTI-DÉRAPANTE SUR VOTRE ÉPAULE ET LE BÂTI SUR VOTRE POITRINE
POSITION THE NON-SLIP PART ON YOUR SHOULDER AND THE FRAME ON YOUR CHEST



3

SAISIR LA BOUCLE DANS VOTRE DOS ET CLIPSER-LA SUR L'AVANT
GRAB THE LOOP IN YOUR BACK AND CLIP IT ON THE FRONT



2 RÉGLEURS VOUS PERMETTENT D'AJUSTER ENSUITE LA BANDOULIÈRE À VOTRE MORPHOLOGIE
2 ADJUSTERS ALLOW YOU TO THEN ADJUST THE SHOULDER STRAP TO YOUR MORPHOLOGY

INSTALLATION DU TERMINAL SUR LA BANDOULIÈRE INSTALLATION OF THE TERMINAL ON THE SHOULDER STRAP

1 INSTALLATION DE VOTRE TERMINAL DANS LE SUPPORT UNIVERSEL SILICONE HHD-5-7" INSTALLATION OF THE TERMINAL IN THE UNIVERSAL SILICON HOLDER HDD 5-7"




2 INSTALLATION DU TERMINAL SUR LA BANDOULIÈRE INSTALLATION OF THE TERMINAL ON THE SHOULDER STRAP



L'INSTALLATION SUR LE SUPPORT PEUT SE FAIRE QUELQUE SOIT L'ANGLE DU TERMINAL
INSTALLATION ON THE SUPPORT CAN BE DONE AT ANY ANGLE OF THE TERMINAL

ROTATION À 360° UNE FOIS EN PLACE
360° ROTATION ONCE IN PLACE

3 RETIRER LE TERMINAL DE LA BANDOULIÈRE REMOVE THE TERMINAL FROM THE SHOULDER STRAP

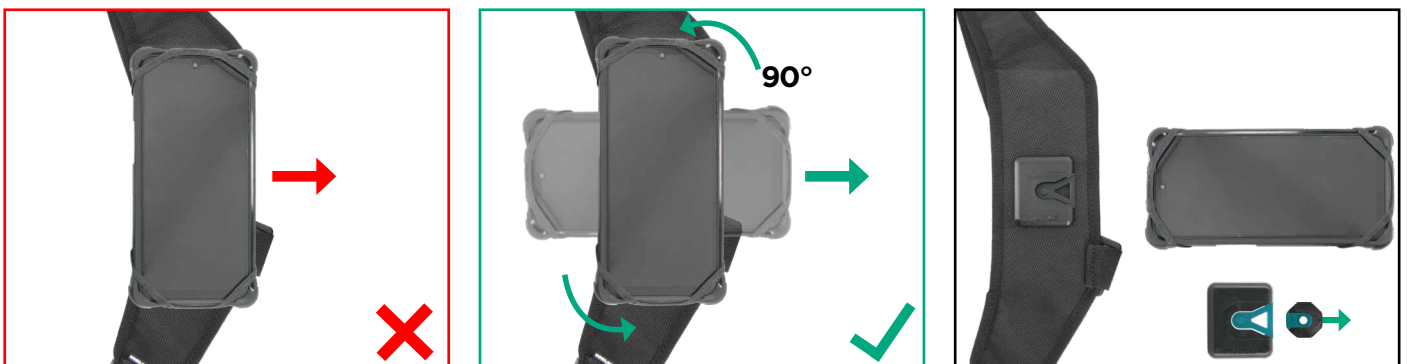

EN POSITION VERTICALE IL N'EST PAS POSSIBLE DE RETIRER LE TERMINAL
IN VERTICAL POSITION IT IS NOT POSSIBLE TO REMOVE THE TERMINAL

TOURNER OBLIGATOIREMENT LE TERMINAL À L'HORIZONTALE POUR LE RETIRER
MUST TURN THE TERMINAL HORIZONTALLY TO REMOVE IT