

# Intelligent 12-Unit Charging Tray/Carrying Case


## Quick Reference Guide

### Setup & Dispensing


This quick reference card is intended to provide setup and dispensing instructions for:

- LA-381 Intelligent 12-Unit Charging Tray
- LA-380 Intelligent 12-Unit Charging/Carrying Case

For additional assistance, please refer to the User Manual.

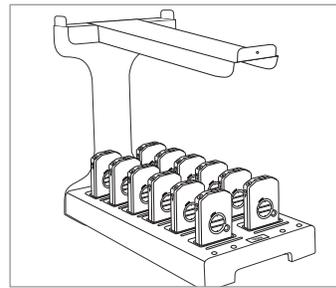


Charging Tray

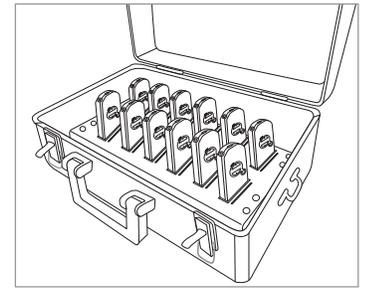


Charging/Carrying Case


### Setup Instructions

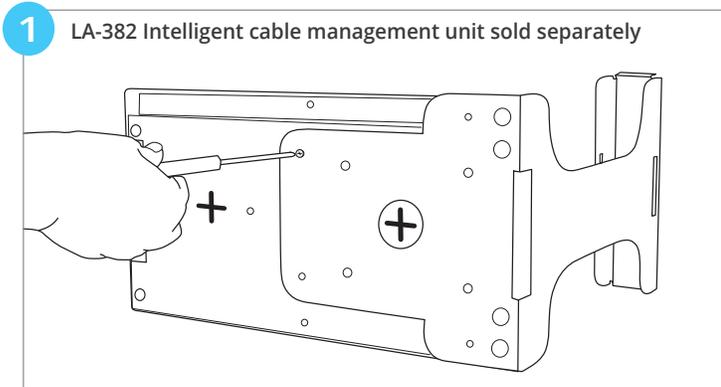


Attach cable management base to charging tray

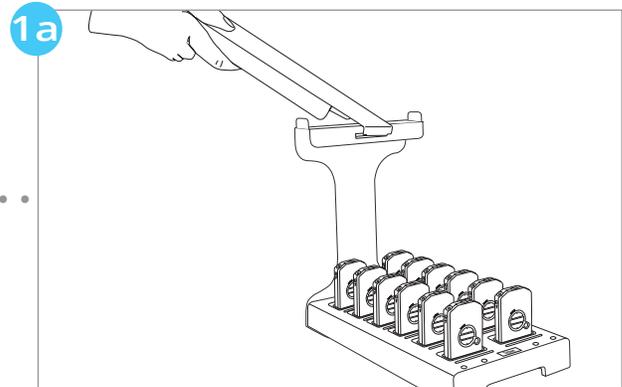

Attach cable management arm

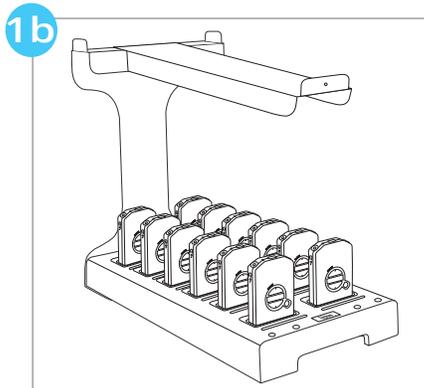


Arm facing inward

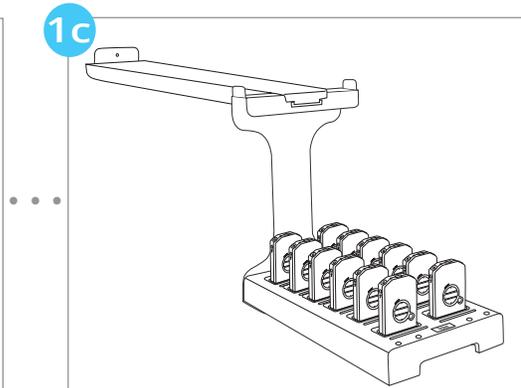


Arm facing outward


OR

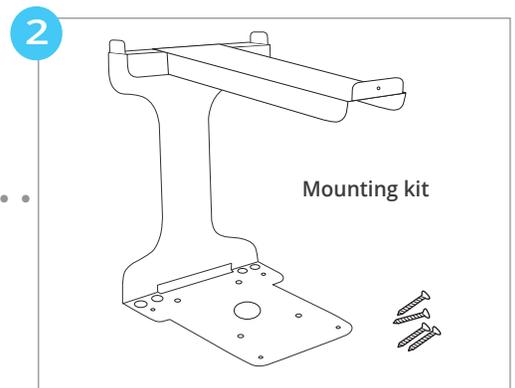


Arm can optionally be mounted to a flat surface such as a counter top or table

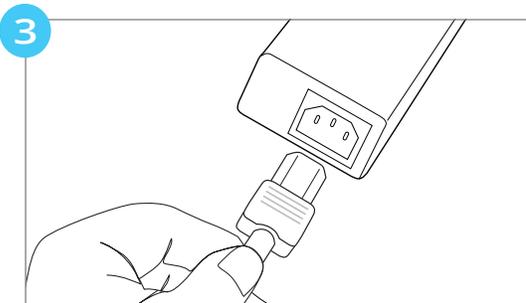

Connect the power cord to the charging unit and connect to power source

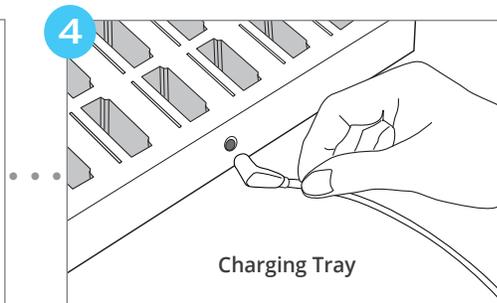


Connect the power supply  
Charging status is indicated by a flashing LED (See check-in step 5)

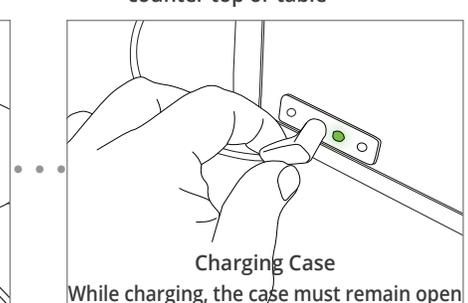


Charging Case  
While charging, the case must remain open

# Dispensing Instructions


## Check-out Units

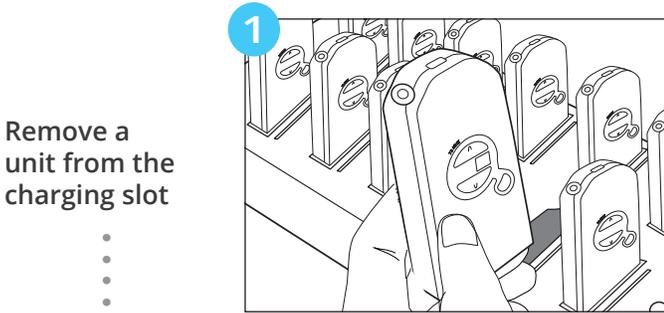


Remove a unit from the charging slot

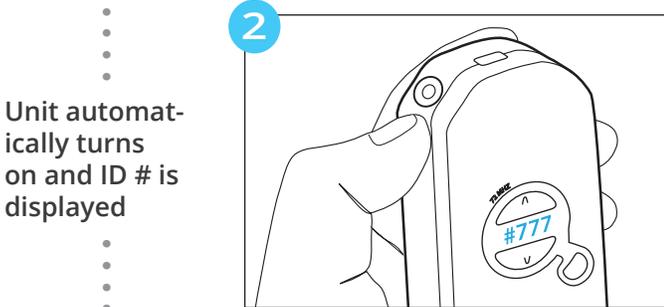

Unit automatically turns on and ID # is displayed

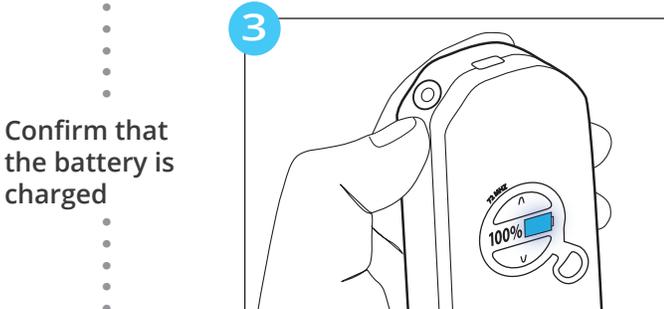

Confirm that the battery is charged

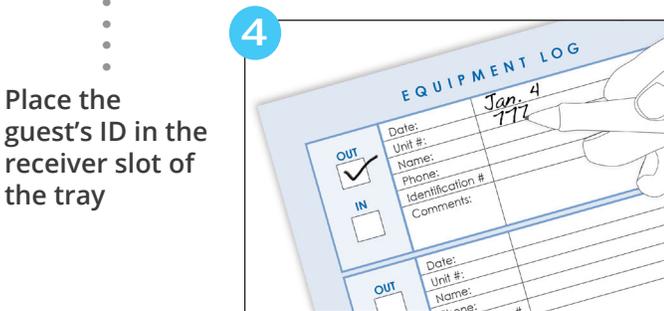


Place the guest's ID in the receiver slot of the tray

Software can also be used to manage inventory  
\*Download software at [www.listen.tech.com/support/software](http://www.listen.tech.com/support/software)

For further details regarding use or programming of your Listen Technologies products visit our website at [www.listen.tech.com/support-manuals](http://www.listen.tech.com/support-manuals) or contact Listen Technologies at +1.801.233.8992 or 1.800.330.0891


## Check-in Units

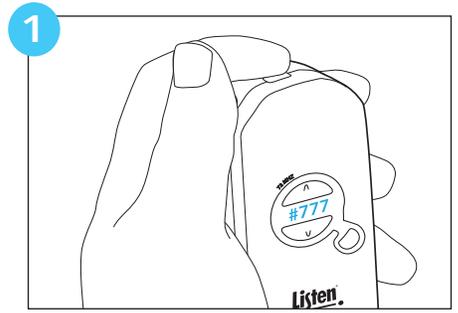


Momentarily press POWER to display the unit ID number




Check-in the unit using the log book, software\*, or return the guest's ID

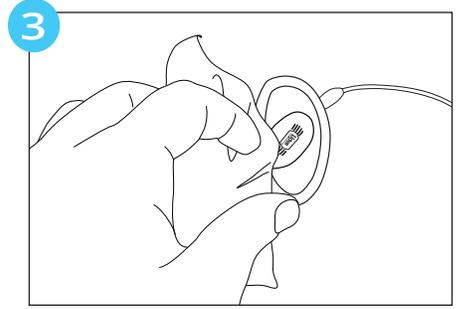

Use disinfecting wipes to clean the earphone and unit

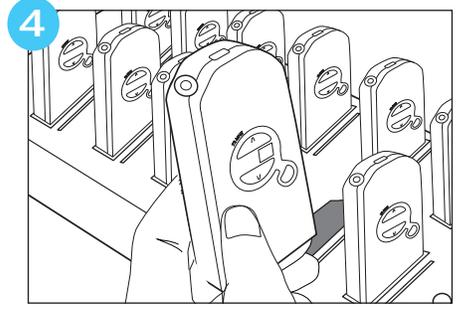

Place the unit in a charging slot

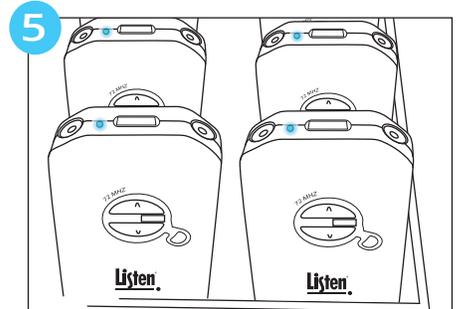

Unit turns off automatically and begins charging

LED status: flashing- charging, solid- fully charged