

USER MANUAL

ProLite

LCD Monitor

ENGLISH

ProLite T4329AS
ProLite T5529AS
ProLite T6529AS

Thank you very much for choosing the iiyama LCD monitor for signage.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



Scan the QR code to find out additional software/services available for your IIYAMA product or go to:
iiyama.com/signup



Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at <https://iiyama.com>

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

- | model number *
- | purchase receipt and serial number *
- | name and address for collection
- | telephone/fax number, for availability during the day
- | convenient collection date (date, time)
- | short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

Feedback on health and safety issues

If you have any health and safety concerns or questions about the product (including when using the product), please contact iiyama support through our website. You can also contact us by calling +31 204460404. After receiving your feedback, we will ask the responsible unit to handle it as soon as possible and a dedicated person will get back to you. Your feedback will also be recorded and incorporated into our evaluation for improvements.

* see the identification plate on the back of the case.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/53/EU "RED Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

Radiation Exposure Statement:

This equipment complies with CE radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & body.

Operating Frequency range and the maximum output power (EIRP) are listed below:

PLT4329, PLT5529, PLT6529

Function	Frequency	Maximum Output Power (EIRP)
WiFi	2412-2472 MHz	19.28 dBm
	5180-5320 MHz	20.88 dBm
	5500-5700 MHz	19.26 dBm
	5745-5825 MHz	13.49 dBm

IYYAMA CORPORATION: Wijkemeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PLT4329, PLT5529, PLT6529



WARNING



THIS PRODUCT CONTAINS two AAA Alkaline Batteries.

- Do not heat batteries.
- Do not deform battery.
- Do not recharge battery.
- Do not dispose of battery in fire.
- Keep battery away from direct sunlight and heat sources, do not storage in high temperature and humidity environment.
- Do not ingest battery, Chemical Burn Hazard.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Battery Model : LR03

Battery Voltage / Typical Capacity : 1.5V, 1200 mAh

Battery Manufacturer : TP Vision Europe B.V.

Prins Bernhardplein 200, 1097 JB Amsterdam,
The Netherlands



Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old products helps to prevent potential negative consequences for the environment and human health. Your product contains batteries covered by the European Regulation (EU) 2023/1542, which cannot be disposed with normal household waste. Alternatively, please visit https://iiyama.com/gl_en/support/#recycling



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: <https://iiyama.com>

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- Eprel registration number

T4329AS-B1AG : 2235455

T4329AS-B1AG A : 2452451

T5529AS-B1AG : 2255437

T5529AS-B1AG A : 2452945

T6529AS-B1AG : 2255593

T6529AS-B1AG A : 2452972

TABLE OF CONTENTS

FOR YOUR SAFETY.....	1
SAFETY PRECAUTIONS.....	1
SPECIAL NOTES ON LCD MONITORS.....	3
CUSTOMER SERVICE	5
CLEANING	6
BEFORE YOU OPERATE THE MONITOR.....	7
FEATURES.....	7
CHECKING THE CONTENTS OF THE PACKAGE	7
UNPACKING	8
SPECIAL NOTES ON THE TOUCH PANEL	8
CONTROLS AND CONNECTORS.....	9
INSTALLATION	12
FUNCTIONS OF THE REMOTE CONTROL	16
PREPARING THE REMOTE CONTROL.....	17
ID REMOTE CONTROL.....	18
BASIC OPERATION.....	19
CONNECTING YOUR MONITOR.....	21
COMPUTER SETTING	25
OPERATING THE MONITOR.....	26
ADJUSTMENT MENU CONTENTS	28
STANDBY FEATURE	57
TROUBLE SHOOTING	58
RECYCLING INFORMATION.....	59
APPENDIX	60
SPECIFICATIONS : ProLite T4329AS-B1AG / B1AG A.....	60
SPECIFICATIONS : ProLite T5529AS-B1AG / B1AG A.....	61
SPECIFICATIONS : ProLite T6529AS-B1AG / B1AG A.....	62
DIMENSIONS : ProLite T4329AS	63
DIMENSIONS : ProLite T5529AS	63
DIMENSIONS : ProLite T6529AS	64
DIMENSIONS : WALL MOUNTING.....	65
COMPLIANT TIMING.....	66

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10 cm (or 4 inches) from any walls. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

DO NOT USE ALCOHOL OR DISINFECTANTS ON THE MONITOR

Do not spray alcohol or disinfectants directly onto the monitor or use them near the monitor. Also, do not wipe the monitor with a cloth or sheet that contains alcohol or disinfectants. These may cause discoloration, deterioration, or cracking of the cabinet, damage to the surface treatment of the LCD panel, and deterioration of components.

SPECIAL NOTES ON LCD MONITORS

- The following symptoms are normal with LCD monitors and do not indicate a problem.

NOTE

- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.
- This LCD cannot be used outdoors.
 - This LCD cannot be used with the screen facing upwards.
 - If you use a cable longer than the supplied one, the picture quality is not guaranteed.

USAGE CONFIRMATION

Product maximum non-stop usage hours following the installation guidelines in a clean and temperature-controlled environment: 24/7

The monitor is compatible for usage in Landscape/Portrait applications.

IMAGE PERSISTENCE / IMAGE STICKING

Please be aware that all LCD screens can experience Image Persistence or Image Sticking. This occurs when a residual image remains visible on a screen when static images are displayed for long periods of time. LCD Image Persistence is not permanent but constant images being displayed for a long period of time should be avoided.

To counteract Image Persistence, turn off the monitor for as long as the previous image was displayed, so if an image was on the monitor for 1 hour and there is evidence of a residual or “ghost” image, you should turn off the monitor for 1 hour in order to clear the residual image.

For all LFD products, iiyama recommends displaying moving images and utilising a moving screen saver at regular intervals whenever the screen is idle. You could also turn off the monitor when not in use to assist the prevention.

Other ways to reduce the risk of Image Persistence will be to utilise the FAN-on function (if available), Low Backlight and Low Brightness settings.

FOR EXTENDED USE AS A PUBLIC MONITOR

■ Image Sticking on LCD Panel

When a static image is displayed for hours, an electric charge trace remains near the electrode inside the LCD producing a “ghost” image. (Image Persistence).

Image Persistence is not a permanent feature.

■ Recommendations

To prevent Image Sticking and promote longer life expectancy of monitor, we recommend the following:

1. Avoid static images displayed for long periods – change static images on continuous loop.
2. Turn off monitor when not in use, either by remote control or use Standby or Schedule functions.
3. Check the Monitor Menu Settings for “Pixel Shift” etc. and activate it when available. This will reduce the Image Sticking Effect.
4. When monitor is installed in high ambient temperature environment(s) or in an enclosed position, utilise the Cooling Fan, Screen Saver and Low Brightness functions.
5. Suitable ventilation for any monitor is an expectation of any installation – climate control systems may need to be employed.
6. We strongly recommend utilisation of active cooling with fans for long operation times or high ambient temperature environments.

CUSTOMER SERVICE

NOTE

- If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

WARNING

If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

- For safety reasons, turn off the power switch and unplug the monitor before you clean it.

CAUTION

- Do not spray alcohol or disinfectants directly onto the monitor or use them near the monitor. Also, do not wipe the monitor with a cloth or sheet that contains alcohol or disinfectants. These may cause discoloration, deterioration, or cracking of the cabinet, damage to the surface treatment of the LCD panel, and deterioration of components.
- To avoid potential damage on the monitor (LCD panel / cabinet / connector terminals) or accessories, never use the following strong solvents or cleaning sheets. These may cause discoloration, deterioration, or cracking of the cabinet, damage to the surface treatment of the LCD panel, and deterioration of components.

Benzine	Hypochlorous acid water
Thinner	Acidic or alkaline solvents
Alcohol	Wax
Bleach	Abrasives
Peroxide	Office equipment cleaner
Acetone	Glass cleaner
Methylene chloride	Tissue paper
Toluene	Wet tissue
Ammonia	Chemical cloth
Sodium hypochlorite solution (Chlorine bleach)	Cleaning paper
	etc.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Do not leave the LCD panel wet. If water droplets or the like get on it, immediately wipe it off with a dry, soft cloth. Leaving it on may cause discoloration or stains on the LCD panel. In addition, if moisture gets inside the monitor, it may cause damage.
- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

Regular care

Gently wipe the cabinet with a soft, dry and clean cloth. If your monitor is particularly dirty, soak the cloth in a mild detergent thoroughly diluted with water, wring it out tightly, and then wipe the dirt off. Then immediately wipe it with a soft, dry cloth.

Alcohol disinfection

Alcohol disinfection may cause discoloration, deterioration, or cracking of the cabinet, damage to the surface treatment of the LCD panel, and deterioration of components. Instead, we recommend disinfecting your hands away from the monitor before and after use.

If you absolutely must disinfect the monitor with alcohol, please understand above warnings and cautions in advance. Also, avoid frequent alcohol disinfection.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- ◆ Supports Resolutions up to 3840 × 2160
- ◆ High Contrast 4000:1 (Typical)
- ◆ Brightness 500cd/m² (Typical without touch panel) :
ProLite T4329AS / ProLite T6529AS
- ◆ Brightness 570cd/m² (Typical without touch panel) :
ProLite T5529AS
- ◆ Digital Character Smoothing
- ◆ Stereo Speakers
2 × 10W Stereo Speakers
- ◆ Standby Feature
- ◆ VESA Mounting Standard (300mm×300mm) Compliant : ProLite T4329AS
- ◆ VESA Mounting Standard (300mm×400mm) Compliant : ProLite T5529AS
- ◆ VESA Mounting Standard (400mm×400mm) Compliant : ProLite T6529AS
- ◆ Glass with AG coating

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- | | | |
|-----------------------|------------------|---------------------------------|
| ■ Power Cable (2pcs)* | ■ HDMI Cable | ■ RS-232C Cable |
| ■ Remote Control | ■ Battery (2pcs) | ■ Touch Pen (Dual head : 2 pcs) |
| ■ Wall Mounting Kit | ■ Safety Guide | ■ Quick Start Guide |

CAUTION

* All guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama

An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.

UNPACKING

CAUTION


Moving the monitor requires at least two people. If not, it may drop and could result in a serious injury.


SPECIAL NOTES ON THE TOUCH PANEL

CAUTION

Permanent damage can occur if Sharp Edged, Pointed or Metal items are used to activate Touch. This could invalidate any remaining warranty.
We recommend you use a plastic stylus (tip $\varnothing 2\text{mm}$ or over) or finger.

<Front>

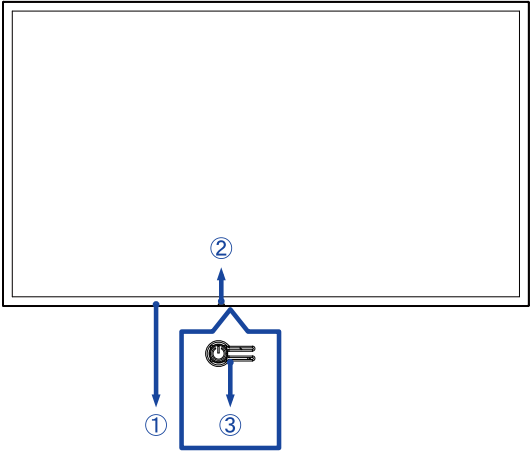

①	Remote Sensor		
②	Power Indicator	Off	Normal Operation
		Red	Lighting : Standby Mode Flash : 3-second intervals : Signal Standby Mode 5-second intervals : Network Standby Mode 7-second intervals : When SCHEDULE is enabled.
③	Power Button 	Short press: Turns the monitor on/off, opens the quick menu, and navigates through the quick menu. Long press (3 seconds): Confirms the selection in the quick menu.	


LED color	Status	Description
Red	Fast blinking (three seconds on, three seconds off)	The monitor is in signal standby mode, waiting for input signals while saving power.
Red	Slow blinking (five seconds on, five seconds off)	The monitor is in network standby mode, staying connected for quick response while saving power.
Lights off		The monitor is activated.
Red	Slow blinking (seven seconds on, seven seconds off)	Blinking red light indicates the activation of scheduled operations.
Red	Solid	The monitor is in standby mode, using minimal power until active.

NOTE


If standby modes overlap, the light color reflects the priority order: Signal standby mode → Network standby mode → Standby mode

■ ProLite T4329AS

ENGLISH

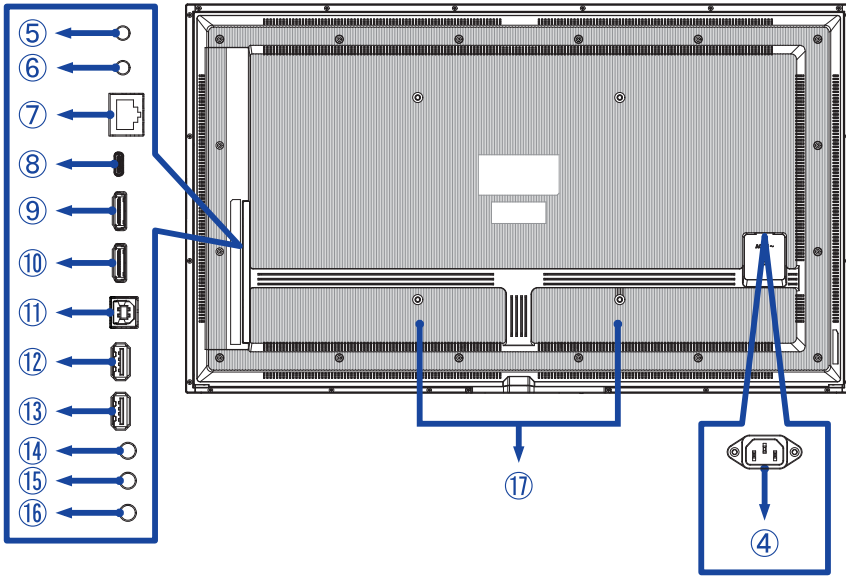

■ ProLite T5529AS / T6529AS

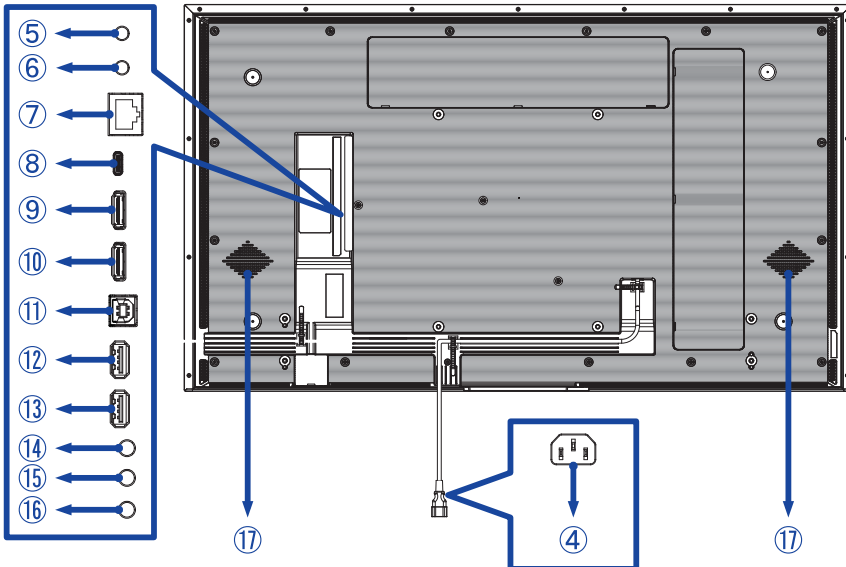

④	AC IN	AC-INLET	AC Connector(~ : Alternating current) (~) (AC-IN)
⑤	RS232C IN	ø 2.5mm Sub-mini Jack	RS232C Connector
⑥	RS232C OUT	ø 2.5mm Sub-mini Jack	RS232C Connector
⑦	LAN	RJ45	RJ45 Connector
⑧	USB-C2.0 IN	USB-C 2.0 (5V, 3A)	USB-C Connector
⑨	HDMI1 IN	HDMI	HDMI Connector
⑩	HDMI2 IN	HDMI (HDMI ARC support)* ¹	HDMI Connector
⑪	TOUCH (USB-B upstream)	USB-B 2.0	USB-B Connector
⑫	USB	USB2.0 (5V, 500mA)	USB Connector
⑬	USB	USB2.0 (5V, 500mA)	USB Connector
⑭	AUDIO OUT	ø 3.5mm Mini Jack	Headphone Connector* ²
⑮	IR IN	ø 3.5mm Mini Jack	IR Connector
⑯	IR OUT	ø 3.5mm Mini Jack	IR Connector
⑰	Speakers		

*¹ The HDMI ARC function is only available when you enable HDMI with One Wire.
The connected device (e.g. soundbar) needs to have/support HDMI ARC.


*² Proper operation of connected external devices other than headphones is not guaranteed.

INSTALLATION

CAUTION

- Follow the manual instructions for the type of mount you have selected. Refer all servicing to qualified service personnel.
- Moving the monitor requires at least two people.
- Before installing, please make sure the wall is strong enough to hold the necessary weight of the monitor and the mount.
- This product cannot be used with the monitor screen facing downward/upward.
- Regularly check the tightness of the screws. If the screws are not tight enough, the monitor may come off and cause injury or damage.

[WALL MOUNTING]

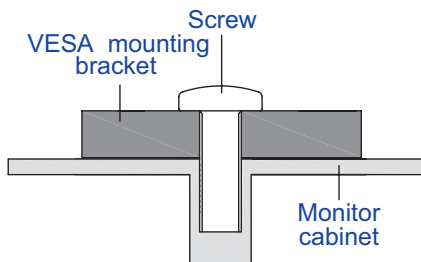

CAUTION

Use four M6 x 16/18 mm* screws to fix a VESA mounting bracket to the monitor. Make sure that all screws are tightened and secured properly.

When using the wall mounting, consideration of thickness of the VESA mounting bracket needs to be taken. The thickness of the VESA mounting bracket is assumed to be approx. 2.5 mm.


Using a screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

* M6(L=18mm) : ProLite T4329AS


M6(L=16mm) : ProLite T5529AS / ProLite T6529AS

• **ProLite T4329AS**


- ① Use 4pcs of M6x18mm screws to fix two brackets at the back of monitor.

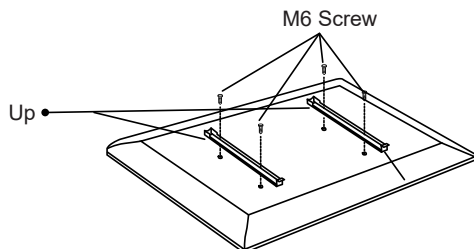

- ② Position the wall plate and secure it with 4pcs of ST7x55mm screws and anchors; drill holes if needed.

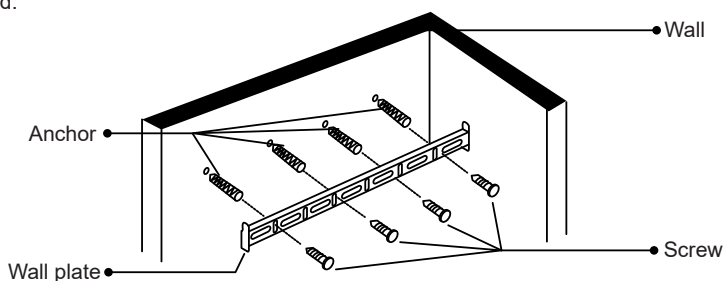


- ③ Hang the pre-assembled monitor unit onto the wall plate and push the bottom of the monitor to secure the brackets. To remove the monitor, simply pull down the straps to release the brackets. After assembly is complete, neatly organize all wires and cables.

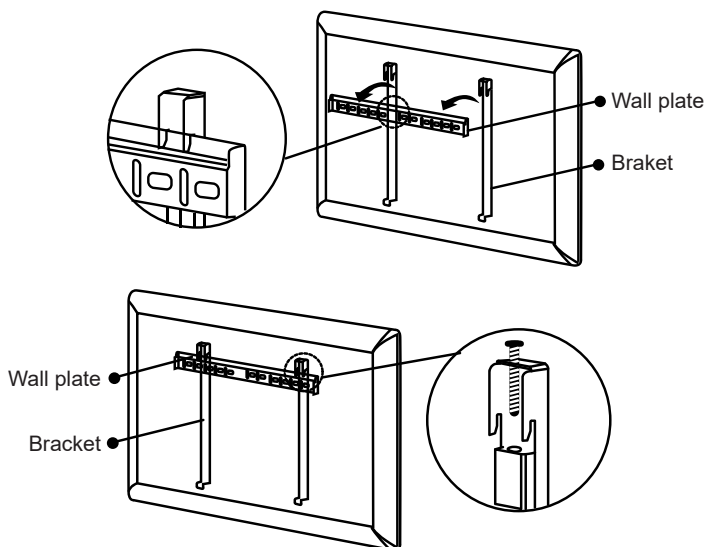


• **ProLite T5529AS / ProLite T6529AS**


- ① Use 4pcs of M6x16mm screws to fix two brackets at the back of monitor.

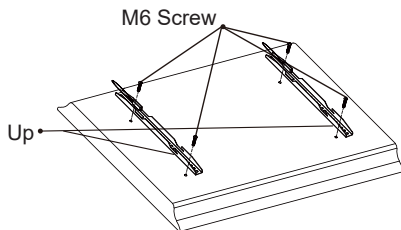

- ② Position the wall plate and secure it with 6pcs of ST7x55mm screws and anchors; drill holes if needed.

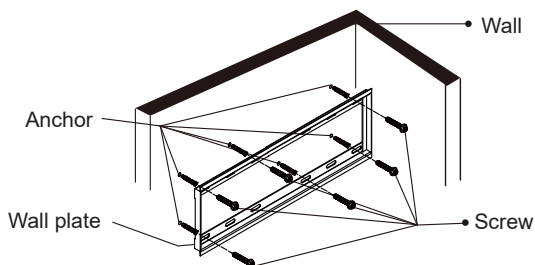

- ③ Hang the pre-assembled monitor unit onto the wall plate and push the bottom of the monitor to secure the brackets. To remove the monitor, simply pull down the straps to release the brackets. After assembly is complete, neatly organize all wires and cables.

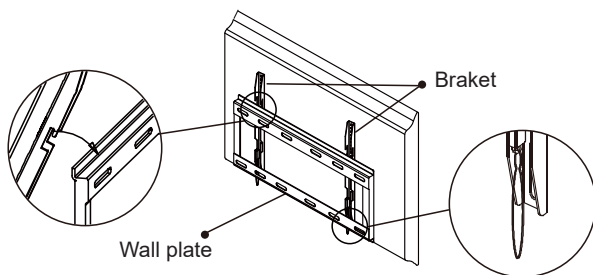


[INSTALLATION NOTE]

The touch kit of this monitor is an optical device that utilizes infrared light source and sensitive sensors for touch detection.

Notice the incident light that contains large quantities of infrared light may affect touch screen operation and performance.


Please install it with care as follows to ensure reliable touch performance.

Intense light / Specular light / Focus spotlight / Wide spread light / Direct sunlight / Indirect sunlight from the window and/or the glass door. / Not install the touch monitor right under the light source.

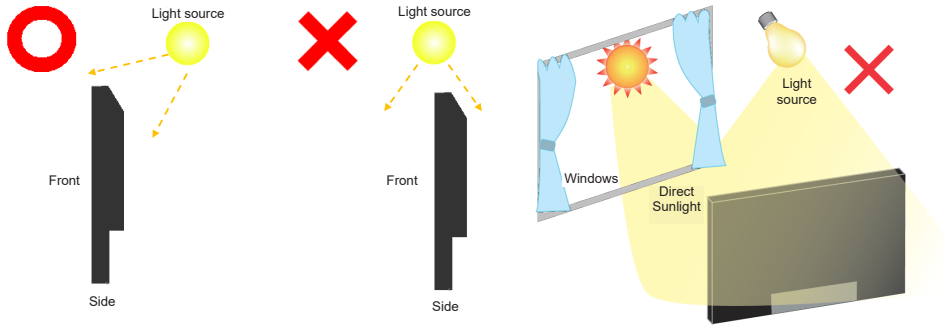


[ROTATING THE MONITOR]

The monitor is designed to be compatible with both landscape and portrait modes.

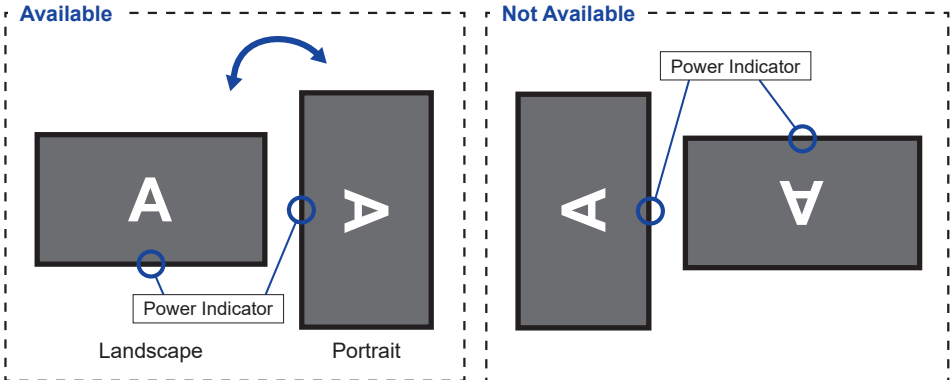

FUNCTIONS OF THE REMOTE CONTROL

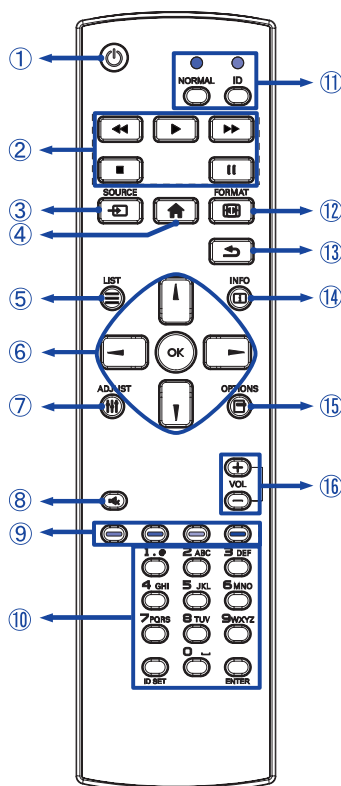

①		Turns the display ON and OFF. Quickly start "Meeting room".
②	[PLAY]	Control playback of media files. ▶ : Play ■ : Stop ⏸ : Pause ◀◀ : Fast-Rewind ▶▶ : Fast-Forward
③	SOURCE	Selects the source. Press ▲ / ▼ button to select from HDMI1, HDMI2, TYPE C, or CMS. Press [OK] button to confirm and exit.
④	HOME	Opens the display's on-screen menu systems.
⑤	LIST	Return to the launcher page.
⑥		Navigates through menus and settings. ▲ : Up Button ▼ : Down Button ◀ : Left Button ▶ : Right Button In Media Player: ◀ : Previous file ▶ : Next file In PDF Player: ◀ : Previous page ▶ : Next page
	OK	Confirms your selection or save changes.
⑦	ADJUST	Not available on this model.
⑧	MUTE	Turns on or off the mute function when the Menu is not displayed.
⑨	COLOR	Not available on this model.
⑩	NUMBER/ ID SET/ ENTER	Enter text for network setting or ID setting.
⑪	ID Mode	ID: To enter ID Mode NORMAL: To leave ID Mode
⑫	FORMAT	Change picture format.
⑬	BACK	Returns to a previous menu or closes the OSD Menu.
⑭	INFO	Provides source and resolution information. Press and hold the button for 6 seconds to unlock both the remote control and the touch lock.
⑮	OPTIONS	Operates media files in Media Player.
⑯	VOLUME - / +	VOLUME- : Decreases the sound volume. VOLUME+ : Increases the sound volume.


PREPARING THE REMOTE CONTROL

To use the remote control, insert the two dry batteries.


CAUTION

- Do not use any other batteries other than those specified in this manual for the Remote Control.
- Do not insert old and new batteries together in the Remote Control.
- Make sure that the terminals match the "+" and "-" indications in the battery compartment.
- Remove the dead batteries immediately to prevent them from liquid leaking into the battery compartment.
- Burst batteries or the electrolyte from these batteries may cause stains, fire or injury.


- ① Press and then slide the battery cover to open it.

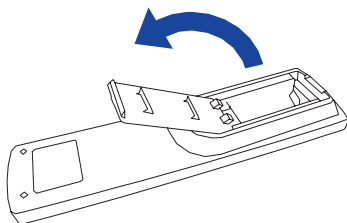

- ② Align and insert two AAA batteries according to their plus and minus ports (as indicated in the remote control).

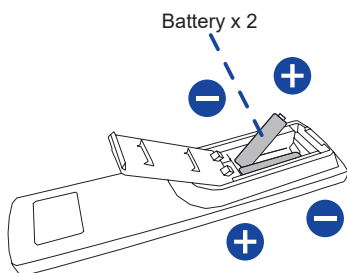

- ③ Replace the battery cover.

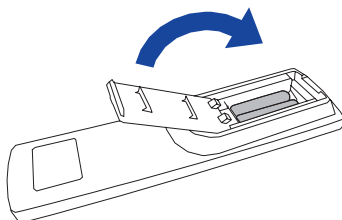

NOTE

- Refer to the above instructions when taking out the batteries.
- Replace with new batteries when the Remote Control does not work close to the monitor. Use AAA dry batteries. Risk of explosion if battery is replaced by an incorrect type.
- Operate the Remote Control by pointing it toward the Remote Sensor on the monitor.
- Other manufacturers remote control will not work with this monitor. Use the provided Remote Control ONLY.
- Used batteries needed to follow the city rule to be discarded. (suggestion: to dispose of used batteries please follow correct policy as per your council regulations)
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- If you do not intend to use the remote control for a long period, remove the batteries.

ID REMOTE CONTROL

You can set the remote control ID when you want to use the remote control on specific monitors.

ID Mode (To enter ID Mode) :

Press and hold the ID button until the red LED blinks twice.

Normal Mode (To leave ID Mode) :

Press and hold the Normal button until the green LED blinks twice.

■ Programming ID Mode

To assign an ID to a remote control.

1. Enter ID Mode.
2. Press and hold the ID SET button until the red LED blinks twice.
3. Using the number button, input the desired ID. (01 - 255)
4. Press the ENTER button to confirm ID.
5. The red LED will blink twice when ID has been confirmed.

NOTE

- Not pressing any button within 10 seconds will exit the ID Mode.
- If an error pressing of buttons other than the digits occurred, wait 1 second after the red LED lights off and then lights up again, then press the correct digits again.
- To cancel or stop programming an ID, press the ID SET button.
- It is necessary to set up the ID number for each monitor before selecting its ID number.

■ Use ID Mode

1. Enter ID Mode.
2. Input the ID of the monitor which would like to control by number button.
3. Press the INPUT button.

■ Turning the monitor ON



The monitor is turned On and the Power Indicator turns Transparent when you press the POWER button on the monitor or the Remote Control. The monitor is turned Off and the Power Indicator turns to Red when you press the POWER button on the monitor or the Remote Control. Press again to turn On the monitor.


NOTE

Even when using the standby mode or turning OFF the Power Switch, the monitor will consume a small amount of electricity. Disconnect the Power Cable from the power supply whenever the monitor is not in use or during the night, to avoid unnecessary power consumption






■ Display the adjustment menu page

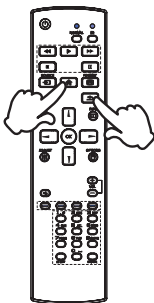The menu page appears on the screen when you press the  HOME button on the Remote Control. The menu page disappears when you press the  BACK button on the Remote Control again.




■ Move the cursor vertically

Select adjustment by pressing the  /  button on the remote control while the menu page is displayed on the screen.

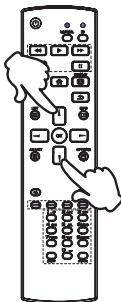


■ Move the cursor horizontally

Select menu or setting, or perform the adjustment by pressing the ◀ / ▶ button on the remote control while the menu page is displayed on the screen.

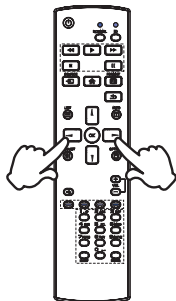


■ Adjust the volume of sound

Press the + / - button on the remote control to adjust the volume of sound when the menu page is not displayed on the screen.

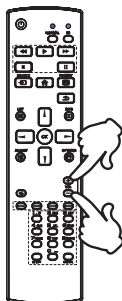

■ Switch the input signal

This is activated when you successively press the SOURCE button on the remote control.

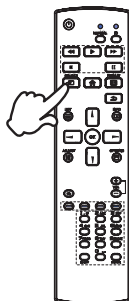

CONNECTING YOUR MONITOR

- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the computer with the RS-232C Cable from the monitor.
- ④ Connect the computer to the monitor with the USB Type-C Cable when viewing images on your monitor through the USB Type-C Connector or when using the monitor's USB hub function.*
- ⑤ Connect the Power Cable to the monitor first and then to the power source.
- ⑥ Turn on your monitor (Main Power Switch and Power Switch) and computer.
- ⑦ Follow the OOB's instructions and finish the screen setup.

- * ● When charging connected device via USB Type-C Connector, check if the device is equipped with a USB Type-C Connector that supports charging function via USB PD (=Power Delivery).
- The USB power delivery is up to 15W. If the connected device required more than 15W for operation or for boot up (when the battery is drained), use the original power adapter that came with the device.
- If a separately purchased USB Type-C Cable is used, make sure the cable is certified by USB-IF and is full-featured with power delivery and video / audio / data transfer functions.
- USB C to A cable is not included with the monitor. If you use a USB C to A cable, please note that you can only transfer data.
- Compatibility with all connected devices is not guaranteed due to different user environments.


NOTE

- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- The touch function is ready for use about 8 seconds after connecting the USB cable and can be operated with a pen, finger or any other pointer.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]


• ProLite T4329AS

<Back>

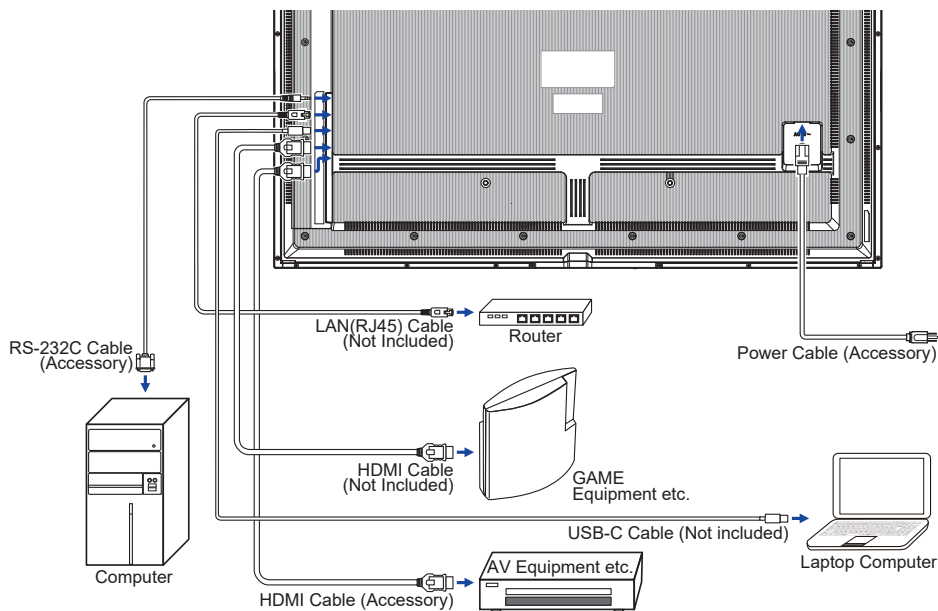

• ProLite T5529AS / ProLite T6529AS

<Back>

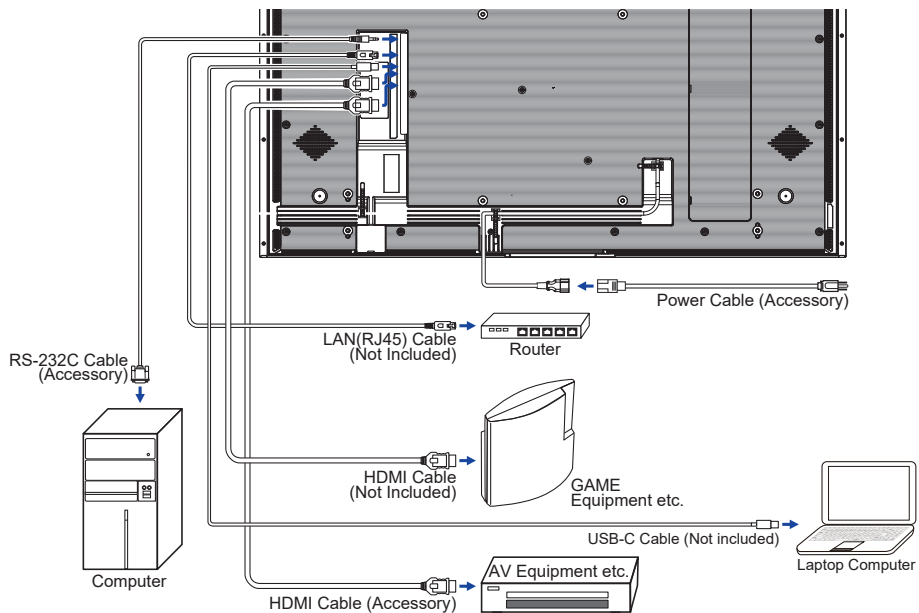

[Connection example with the peripheral device]


CAUTION

Turn off the power switch and unplug the monitor and peripherals before connection to avoid electric shock or damage.


NOTE

- Refer to the user manual of peripherals at the same time.
- Ensure you have the necessary cables as required.

■ ProLite T4329AS

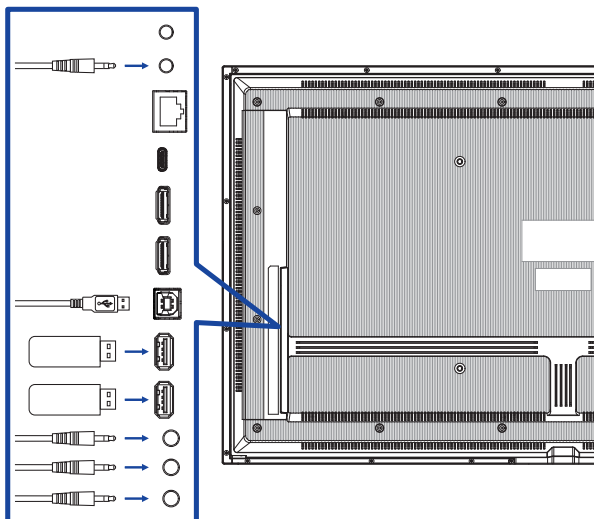


■ ProLite T5529AS ProLite T6529AS

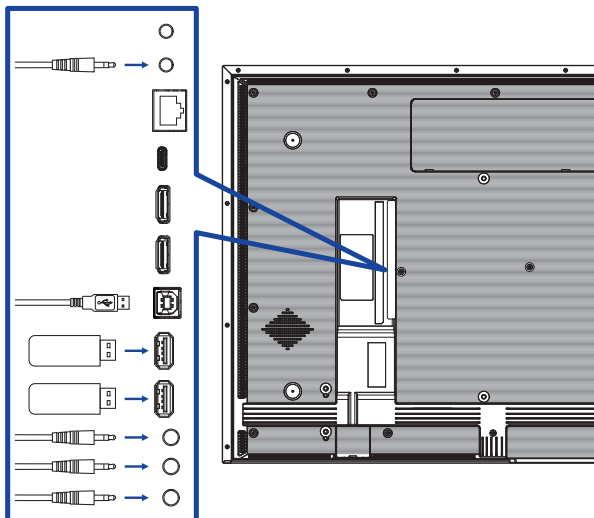


[About the daisy chain]

■ Monitor control connection RS-232C

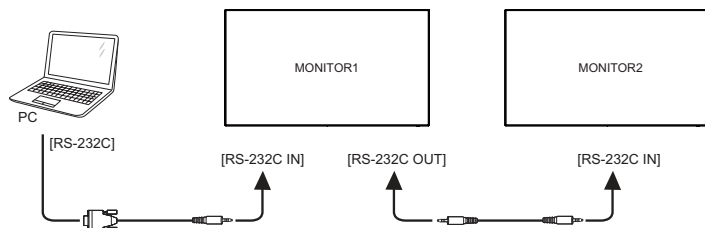


[To setup the network]

1. Switch on the router and switch on its DHCP setting.
2. Connect the router to this monitor with an Ethernet cable.
3. Press  HOME button on the remote control to open the menu.
4. Select "Network", then press OK button.
5. Select "Ethernet", then press OK button.
6. Follow the on-screen instructions to install the network.

NOTE

Connecting with a shielded CAT-5 Ethernet cable to comply with the EMC directive.

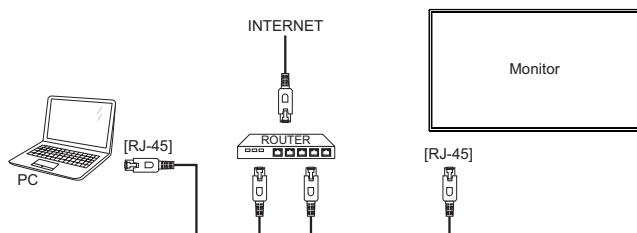

COMPUTER SETTING

■ Signal Timing

Change to the desired signal timing listed on page 66: COMPLIANT TIMING.

■ Windows 7/8/10/11 Plug & Play

The iiyama LCD monitor complies with DDC2B of VESA standard. The Plug & Play function runs on Windows 10/11 by connecting the monitor to DDC2B compliant computer with the Signal Cable supplied.

NOTE

- For additional information on how to download the driver for your touch screen monitor, please access the internet site: <https://iiyama.com>
- Monitor Drivers are not required in most cases for Macintosh or Unix operating systems. For further information, please contact your computer dealer first for advice.

■ Power-on sequence

Turn ON the monitor first, and then the computer

■ TOUCH support operation system:

OS Version (Windows)	Windows		
	Win8/10/11	Win7	XP
Support touches	Multi-touch		1
Supported Platform & IO Interface	I2C/USB	USB	
Note	Windows inbox driver (No driver needed)		Single-touch (Need driver)





OS Version (Linux Distribution)	Android	Ubuntu	Fedora	Debian	RHEL	SUSE
	7.0~14	18.04~24.04	22~38	9~11	8~9.1	15-SP3~15-SP5
Support touches	Multi-touch					
Supported Kernel version	4.4~6.2	4.15~6.8	4.0~6.2	4.19~5.10	4.18~5.10	3.10~5.14
Supported Platform & IO Interface	USB/I2C		x86(USB)			
Note	Driver supports Multi-touch*					


OS Version (Mac OS)	Mac OS 10.14~14
Support touches	Multi-touch
Supported Platform & IO Interface	USB
Note	Driver supports Multi-touch*







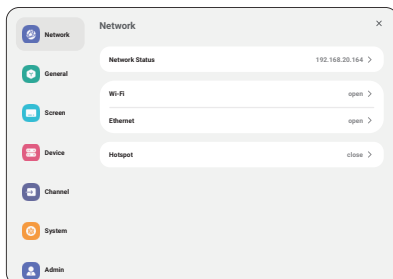

* For Multi-touch driver, please visit our web site (<https://iiyama.com>)






OPERATING THE MONITOR



To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 66. You are also able to adjust the picture by following the button operation shown below.


- 1 Press the  HOME button on the remote control or select System Settings on the desktop to start the On Screen Display feature. You can also access the Menu by clicking  on the navigation toolbar. There are additional Menu items which can be switched by using the  /  Buttons on the remote control or with the touch pen.




- 2 Select the menu item you want to adjust. Press the  button on the remote control or with the touch pen, and use the  /  buttons to highlight the desired adjustment item. Then, press the OK button to enter the menu page.
- 3 Use the  /   /  Buttons on the remote control or with the touch pen to make the appropriate adjustment or setting.
- 4 Press the  BACK button on the remote control or tap a blank area outside the menu with the touch pen to exit the menu. The settings you just made will be saved automatically.


For example, to correct for sharpness, select Menu item of "General". Press the  button on the remote control, then use the  /  buttons to select "Picture". Press OK, and then use the  /  buttons to select "Sharpness".

Use the  /  buttons on the remote control to change the sharpness settings. The sharpness of the overall monitor should be changing accordingly while you are doing this.

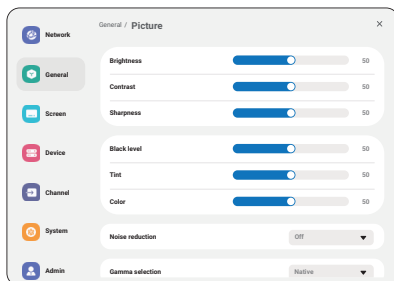


Press the  Back Button on the remote control or click blank area outside menu with the touch pen, it ends, all changes are saved in the memory.

NOTE

- The  BACK button on the remote control can be used to return previous menu item.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- All adjustments have only one setting which applies to all signal timings.

Quick Menu


Press the Power button on the monitor to open the Quick Menu.

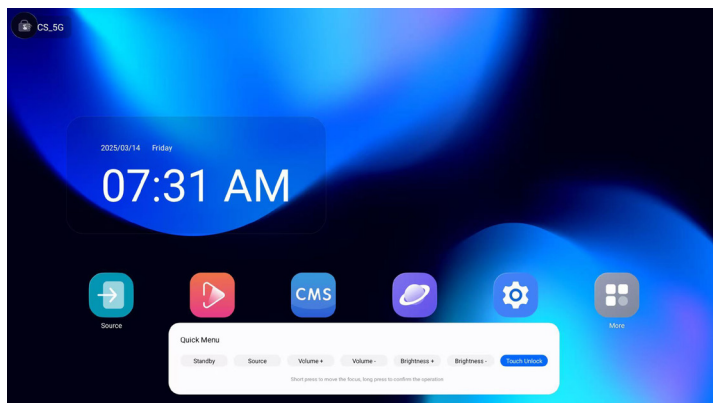

- Standby : Enter standby mode.
- Source : Access the input source menu.
- Volume + : Increases the volume.
- Volume - : Decreases the volume.
- Brightness + : Increases the screen brightness.
- Brightness - : Decreases the screen brightness.
- Touch Unlock : Unlocks the touch function.


ADJUSTMENT MENU CONTENTS

Network

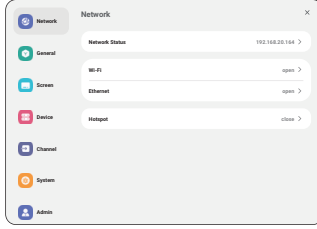





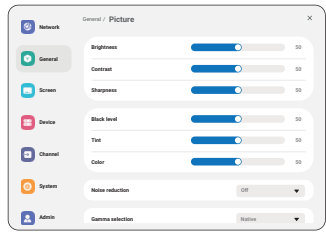







Adjustment Item	Problem / Option	
Network Status	Once you are connected, the IP Address, Default gateway, Subnet mask and DNS are displayed automatically.	
WiFi	Set the wifi function Enable / disable and pairing to WiFi device.	
Ethernet	Set the wired network. On / Off	
	Acquire IP address	Auto acquire
		Configure manually
Hotspot	Set the Hotspot function.	


General



ENGLISH


Adjustment Item	Problem / Option		Button to Press	
Picture	Brightness* ¹ Direct	Too dark Too bright	 	
	Contrast* ²	Too dull Too intense	 	
	Sharpness* ²	Too soft Too sharp	 	
	Black level* ²	Black is too dark Black is too bright	 	
	Tint* ²	Purplish Greenish	 	
	Color* ²	Too weak Too strong	 	
	Noise reduction* ²	Off	Noise Reduction is turned off.	
		Low	Electronic image noise caused by different media players is reduced.	
		Middle	Electronic image noise caused by different media players is reduced more than Low.	
		High	Electronic image noise caused by different media players is reduced more than Medium.	
	Gamma selection* ²	You can set the Gamma. Native / 2.2 / 2.4 / Sgamma / D-image		
	Low blue light	Off	Return to normal.	
		On	Blue light is reduced.	
	Color temperature	3000°K	9300°K	
		4000°K	10000°K	
		5000°K	Native	Original color temperature
		6500°K	User1	User preset 1
		7500°K	User2	User preset 2
	Color control)* ³	Set user color.		
		User1	R	Too weak Too strong
			G	
			B	
		User2	2000K-10000K	

General

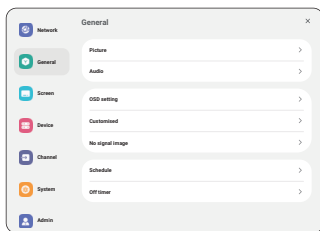

Adjustment Item	Problem / Option		Button to Press
Picture	Picture reset	Cancel	Return to Menu.
		Reset	Picture setting will be restored to factory-preset data.
Audio	Balance	Left side speaker is louder. Right side speaker is louder.	
	Treble	Too weak	
		Too strong	
	Bass	Too weak	
		Too strong	
	Volume Direct	Too soft	
		Too loud	
	Audio out (Line out)	Adjust audio output volume.	
		Too soft Too loud	
	Maximum volume	Set the maximum volume.	
	Minimum volume	Set the minimum volume.	
	Mute	Off	Return the sound volume to the previous level.
		On	Turn off the sound temporarily.
	Audio out sync	Off	The speaker volume is different from the audio out (line-out) volume.
		On	The speaker volume is consistent with the audio out (line-out) volume.
OSD setting	Speaker setting	Off	Disable the built-in speaker.
		On	Enable the built-in speaker.
	Audio reset	Cancel	Return to Menu.
		Reset	Audio setting will be restored to factory-preset data.
	OSD timeout	You can set the OSD display duration time between 5 and 120 seconds. Off / 5 - 120 seconds	
	OSD H position	OSD is too left	
		OSD is too right	
	OSD V position	OSD is too low	
		OSD is too high	
	OSD Transparency	The background of OSD is made transparent. Off / 5 - 100	

General

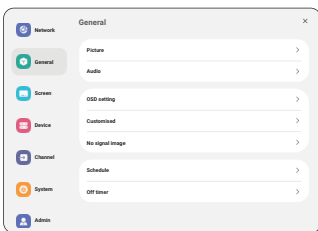

Adjustment Item	Problem / Option		Button to Press	
OSD setting	Information OSD	Set the period of time the information OSD is displayed on the upper right corner of the screen. Off / 1 - 60 seconds		
	Side bar	Select the side bar display setting.		
		3s touch hold	Touch the screen for 3 seconds to display it.	
		Always off	Always hide	
		Always on	Always show	
Customised	Logo and animation	Off	iiyama Logo and animation does not display when the monitor is turned on.	
		On	iiyama Logo and animation display when the monitor is turned on.	
		Logo setting	Select boot logo.	
		Animation setting	Select boot animation.	
	Wallpaper	Set the Wallpaper.		
No signal image	Customize the image for the no signal screen. Off / On / User			
Schedule	Schedule list	Up to 7 schedules can be set.		
	Start time* ⁴	Set start time.		
	End time* ⁴	Set end time.		
	Input	Select default input source to use when the monitor is automatically turned on next time. HDMI1 / HDMI2 / USB-C / Web Player / CMS / File Manager* ⁵ / Media Player / PDF Playeer / Custom		
	Playlist	Choose playlist for the mediaplayer, PDF player and browser.		
	Days of the week	Set the day of the week. Mon. / Tues. / Wed. / Thur. / Fri. / Sat. / Sun.		
	Only execute for one week	Set whether to repeat every week. Off / On		
	Enable* ⁶	Enable / disable schedule.		
Off timer	Set when turn off the monitor. Off / 1 - 24 hours			

*¹ Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright. Brightness adjustment is disabled when Brightness of Panel saving is on.

*² Not available for Media Player, Browser, CMS, PDF Player and Custom inputs.

*³ It can be chose only when Color temperature is set to "User1/User2".


*⁴ The start time in the Schedule must be less than the end time.

*⁵ The photo or video files in the iiyama_play folder inside the USB flash drive can be automatically played using the Schedule setting.

Play order is alphabetical, 0 ~ 9 ,aA~ zZ, case-insensitive.

*⁶ Adjustments to "Enable" should be made only after Start time, End time, Input and week have been correctly set.

Screen

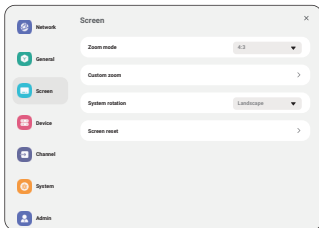


Adjustment Item	Problem / Option	
Zoom mode* ¹	Full	Enlarge the picture horizontally to fill the screen if the picture source is 4:3 (standard definition). When the picture source is 16:9 (high definition), it is not scaled.
	4:3	Display all pictures in 4:3 aspect ratio.
	Real	Display the picture dot by dot.
	21:9	Display all pictures in 21:9 aspect ratio.
	Custom	Customize zoom screen.
Custom zoom* ²	Zoom	Zoom the horizontal and vertical size of the image simultaneously.
	H zoom	Zoom the horizontal size of the image.
	V zoom	Zoom the vertical size of the image.
	H position* ³	Zoom / H Zoom values.
	V position* ³	Zoom / V Zoom values.
System rotation	Landscape	Display the OSD in Landscape mode.
	Portrait	Display the OSD in Portrait mode.
Screen reset	Cancel	Return to Menu.
	Reset	Screen setting will be restored to factory-preset data.

*¹ Not available for Media Player, Browser, CMS, PDF Player and Custom inputs.


*² It can be chose only when Zoom mode is set to "Custom".

*³ When the value of Zoom, H zoom and V zoom is "0", H position and V position cannot be adjusted.

Device

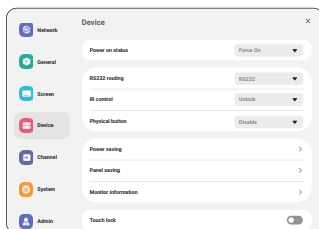


Adjustment Item	Problem / Option		
Power on status	Forced on	The monitor will turn on when the power cord is connected to a wall outlet.	
	Power off	The monitor will remain off when the power cord is connected to a wall outlet.	
	Last status	The monitor will return to the previous power status (on/off/standby) when removing and replacing the power cord.	
RS232 routing	Select the RS232 control port. RS232 / LAN RS232		
IR control	Select the operation mode of the remote control when multiple monitors are connected via an RS232C connection.		
	Lock All	Lock all of the remote control.	
	Lock all but Power	Lock all except the power of the remote control.	
	Lock all but Volume	Lock all except the volume of the remote control.	
	Lock all except PWR & VOL	Lock all except the volume and power of the remote control.	
	Unlock* ¹	Unlock the remote control.	
Physical button	Enable	Allows the use of physical buttons on the monitor.	
	Disable	Disables the physical buttons to prevent accidental use.	
Motorized stand* ²	When using a motorized stand, you can adjust and customized the height.		
	Up	Raise the motorized stand.	
	Down	Lower the motorized stand.	
	Slot 1 / Slot 2	Memorize your preferred height in Slot 1 or Slot 2.	
Power saving	WOL	Off	Disable wake on LAN function.
		On	Enable wake on LAN function.
	Source input wake up	Off	Disable Source input wake up function.
		On	Enable to wake the monitor from standby when an active signal is detected.
	Auto power off * ³	Off	Disable Auto power off function.
		On	Enable Auto power off the display after certain period 60mins / 90mins / 120mins / 150mins / 180mins / 210mins / 240mins
Panel saving	Brightness	Off	Backlight adjustment is off.
		On	The image brightness will be reduced to 40% of the maximum.

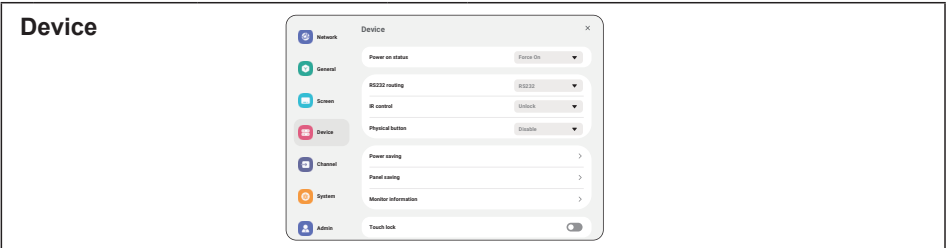

Adjustment Item	Problem / Option		
Panel saving	White wash	Helps reduce image retention or burn-in by displaying a full white image or performing a pixel refresh to recalibrate pixel voltage levels and improve display performance.	
Monitor information	Shows information about your monitor, including Model name, Serial No., Operation hours and SW version.		
Touch lock* ¹	Off	Enable touch screen operation.	
	On	Disable touch screen operation.	
Other	Monitor ID	Set ID to the monitor. 1 - 255	
	Power LED light	Off	The Power Indicator is turned Off.
		On	The Power Indicator is turned On.

*¹ To unlock, press and hold the INFO button on the remote control for 6 seconds.
 *² Disabled if not connected to a motorized stand.
 *³ Auto power off default timing is 180mins, the function can be disabled or change to different timing at display first boot up or OSD advance option menu.

Channel

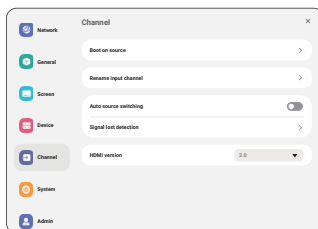

Adjustment Item	Problem / Option	
Boot on source ^{*1}	Last input	When the power is turned on, it starts with the same setting as when the power was last turned off. Off / On
	Input	Select input source when boot up. HDMI1 / HDMI2 / USB-C / Web Player / CMS / File Manager / Media Player / PDF Player / Custom
	Playlist	Select playlist index for Browser, Mediaplayer and PDF player.
Rename input channel	Customize the names of each signal source.	
Auto source switching ^{*2}	Off	Disable the Auto signal detection.
	On ^{*3}	Detects all sources automatically if there is no signal on the default input and selects the available signal automatically.
Signal lost detection	Switch when signal lost	Detects sources automatically by selecting the most recently used source, locking to a specified input, or following a user-defined order if there is no signal on the default input.
		Off / Recent input / Fixed source / By order
HDMI version ^{*4}	Set the version of the HDMI. 2.0 / 1.4	


^{*1} No failover function, system will keep source even the source is no signal input.

^{*2} The display detects and select available signal source automatically.

^{*3} Order of detection: HDMI1 → HDMI2 → USB-C → Web Player → CMS → File Manager → Media Player → PDF Player → Custom


^{*4} Suitable for HDMI input only.

System

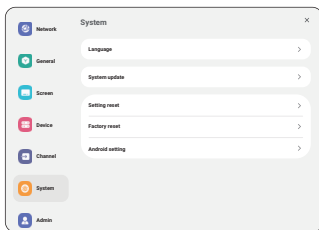

Adjustment Item	Problem / Option			
Language	English	English	Deutsch	German
	Français	French	Italiano	Italian
	Español	Spanish	Русский	Russian
	Polski	Polish	Nederlands	Dutch
	Dansk	Danish	Svenska	Swedish
	Suomi	Finnish	Norsk bokmål	Norwegian
	Čeština	Czech		
System update	OTA	Firmware update.		
	Local update			
Setting reset	Cancel	Return to Menu.		
	Reset	System setting will be restored to factory-preset data.		
Factory reset	Cancel	Return to Menu.		
	Reset	Factory-preset data is restored.		
Android setting	Enable Android launcher in settings to access feature.			

Admin

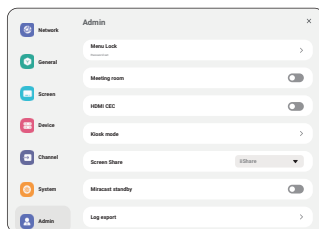


Adjustment Item	Problem / Option	
Menu Lock	The administrator can set a six-digit password when entering for the first time, and after setting it, users need to enter the corresponding password to enter the administrator page again.	
Meeting room	When it is turned on, no signal only resting screen, users can wake up the screen at any time using the remote control, buttons, or any signal-carrying cable to connect the screen and the system.	
HDMI CEC	Off	Disable link according to HDMI CEC.
	On	Enable link according to HDMI CEC.
Kiosk mode*	Restrict the functionality of the monitor so that it can only be used for specific purposes. Enter the password you set on the first screen setup. Password (Cancel / OK)	
Screen Share	Select the system for screen sharing. iiShare / EsharePro	
Miracast standby	Off	Disables Miracast reception during standby mode.
	On	Enables Miracast reception during standby mode.
Log export	Exports system logs for troubleshooting or review.	

* Functions disabled in Kiosk mode


General	Logo and animation
	No signal image
System	Android setting

INITIAL SETUP


① Select display language.

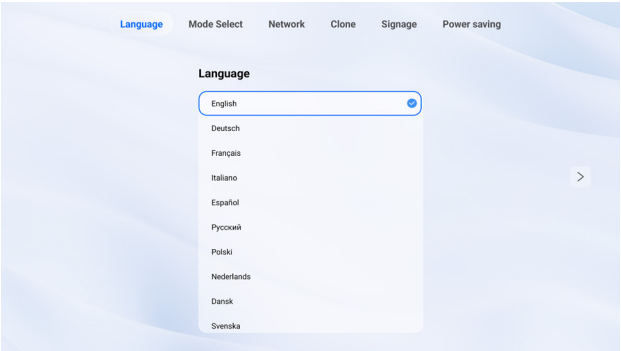


② Select the display mode.

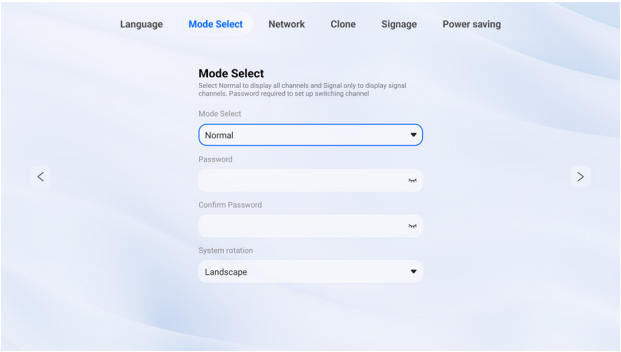


③ Select Network Connection.

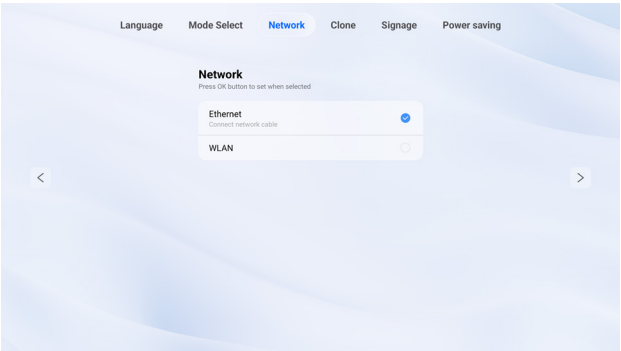


④ Select clone source.

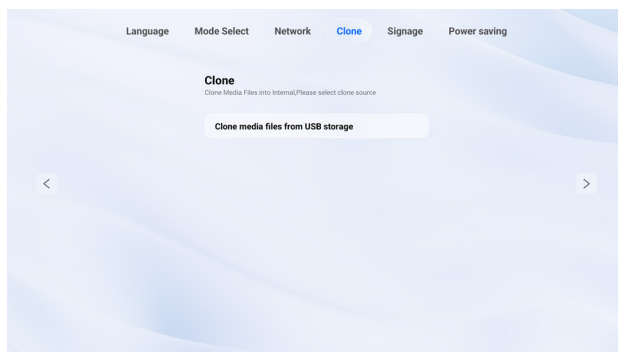

⑤ Set parameters for your monitor.

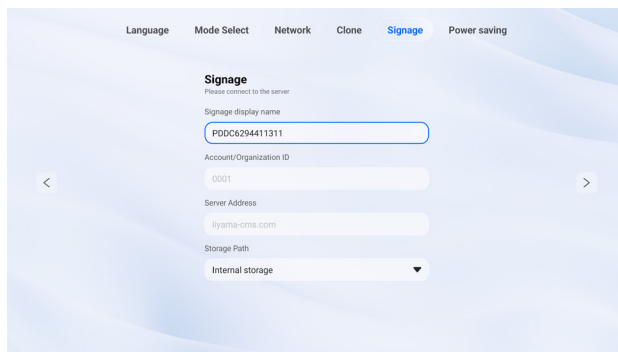


⑥ Setting up your energy strategy.

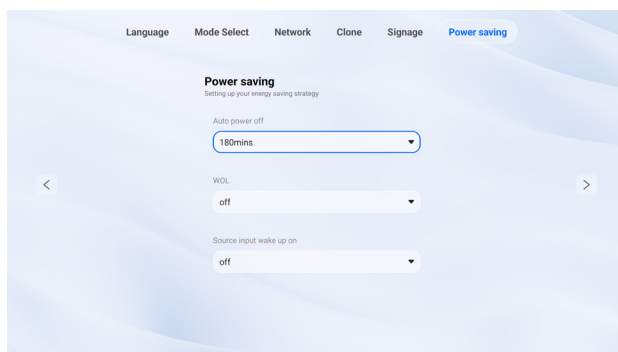


NAVIGATION TOOLBAR

The navigation toolbar can be displayed on either left side or right side of the screen. Touch the screen with your finger anywhere for 3 seconds and the Sidebar appears.

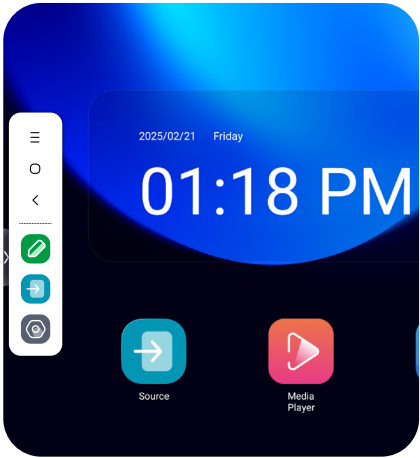

- : Back Stage
- : Menu
- : Back
- : Mark




- Select : Choose and manipulate objects on the monitor.
- Pen : Annotate
- Eraser : Clean the annotations, Gesture eraser
- Save : Save current annotations in the screen content to picture in the storage.
- History : View previously saved annotations and snapshots of the screen content.
- Snapshot : Capture and save the current whiteboard screen as an image.
- Close : Exit

- : Source
- : System Settings


APPLICATION

Press the  LIST button on the remote control.

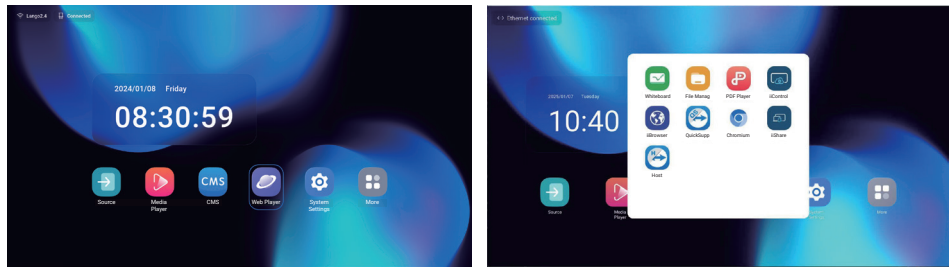

[Source]


Select an input source for connection.

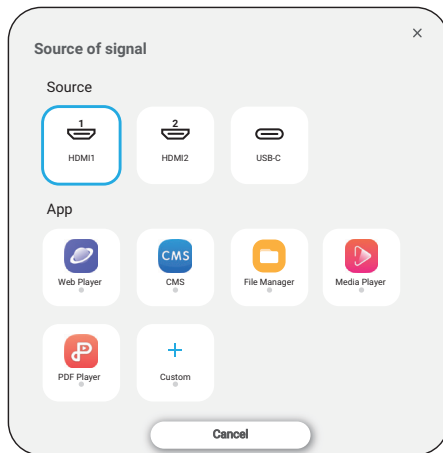


[Android Setting]

Access the Android settings through the OSD menu by selecting the 'Android Setting' option.

ENGLISH


Network & internet		
		
Adjustment Item	Problem / Option	
Wi-Fi	Set the wifi function Enable / disable and pairing to WiFi device.	
	Wifi list	Display a list of WiFi networks
	Add network	Network name
		Security
		Advanced options
	Network preferences	Turn on wifi automatically
		Notify for public networks
		Install certificates
		Wi-Fi Direct
	Saved networks	Save wifi networks on this monitor.
Ethernet* ¹	Set the wired network. On / Off	
	MAC* ²	Assign MAC for this monitor.
	IP address	Assign IP address for this monitor.
	Netmask	Assign Netmask for this monitor.
	Gateway	Assign Gateway for this monitor.
	DNS1	Assign DNS server address.
	DNS2	
	IPv6 address	Assign IPv6 adress for this monitor.
	IPv6 Default gateway	Assign IPv6 Default gateway for this monitor.
	IPv6 DNS Server	Assign IPv6 DNS server address.
	Ethernet IP mode	Static
		DHCP
	Proxy	Set the proxy server. None / Manual / Proxy Auto-Config
Hotspot & tethering	Wifi hotspot	Set the Hotspot function.
	Ethernet tethering	Set the tethering function

*1 The MAC address/Ethernet address can be found on the label located on the back of the monitor.

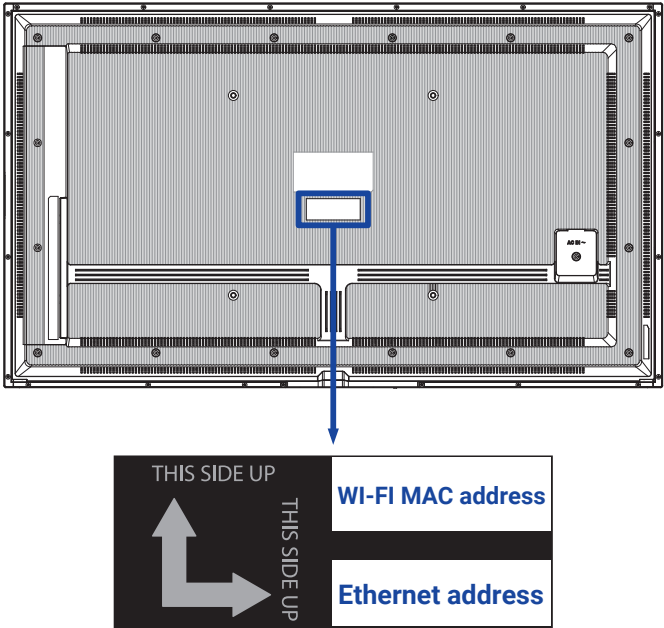

*2 If needed to use the Wi-Fi MAC address for some specific Network settings, please ensure that the Wi-Fi MAC address setting to "Use device MAC".

Apps & Notification

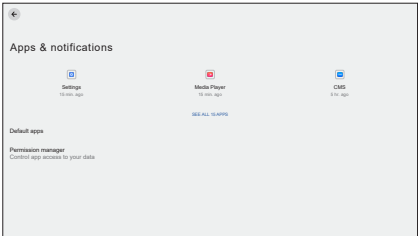


Adjustment Item	Problem / Option	
App info	Display all applications.	
Default apps	Browser app	Set the default apps.
	Home app	
	Opening links	
Permission manager	App permissions	Set app permissions.

Display



Adjustment Item	Problem / Option	
Font size	Small	Set the font size.
	Default	
	Large	
	Largest	


Signage display

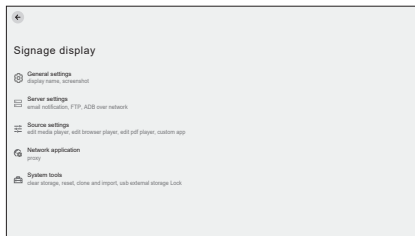

Adjustment Item	Problem / Option	
General settings	Signage display name	Set the monitor name.
	Screenshot	Disable / Enable(Interval, Start time, End time, Repeat, Save to, Purge Screenshots, Send screenshots via email)
Server settings	Email Notification	Disable / Enable(SMTP, Manager Email, Test)
	FTP	Disable / Enable(Account, Password, Storage Path, Port)
	ADB over network	Access network connection with port 5555.
Source settings	Edit Media Player	Edit Media Player playlist and effect settings.
	Edit Browser Player	Edit Browser list and effect settings.
	Edit PDF Player	Edit PDF Player playlist and effect settings.
	Storage path	Set the Media player, PDF player, Browser storage location.
	Custom app	Edit the Custom app.
Network application	Proxy	Set the proxy server. Disable / Enable (Hostname: Proxy server IP Adress, Port: Proxy server port number, Type: Proxy server type) Authentication / Username / Password
System tools	Clear Storage	Clear all data in signage folders. All / Internal storage / USB storage
	Reset	Erase all data Factory-preset data is restored.
	Clone and Import	Clone Copy the OSD setting, playlist and media files*.
		Import Import from signage folder under USB. Internal storage
	USB external storage Lock	Disable USB External Storage unlock.
		Enable USB External Storage lock.


- * Media files are the media contents that are copied to this device while creating playlists in Browser, Media Player and PDF player source.

Security

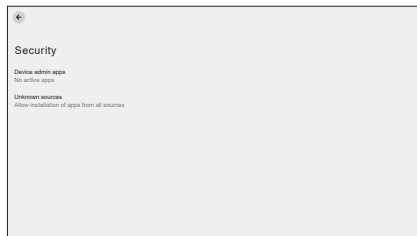


Adjustment Item	Problem / Option
Device admin apps	Display credential storage information.
Unknown sources	Disable / Enable installation of apps from unknown sources.

System

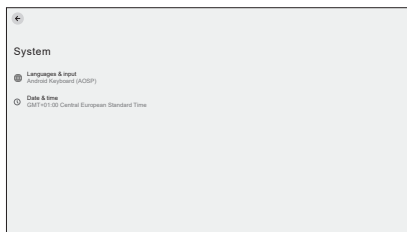

Adjustment Item	Problem / Option	
Language & Input	Languages	Set display language, keyboard and input method.
	On-screen keyboard	Language: English / Deutsch / Français / Italiano / Español / Русский / Polski / Nederlands / Český / Dansk / Svenska / Suomi / Norsk bokmål
Date & time	Set time automatically	Set the Date and Time.
	Time zone	Set Time zone.
	Ntp server	

About device

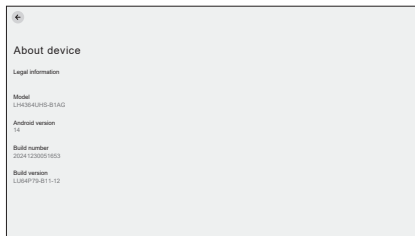


Adjustment Item	Problem / Option	
Legal information	Third-party licenses	Main info in About: Legal / Model / Android version / Build number / Build version Automatically search update .zip from USB or SD card. When you select the updated .zip file, the monitor will restart and the update will start.
	System Webview licenses	
Model	Model	
	Serial number	
	Hardware version	
Android version	Android version	
	Android security update	
	Kernel version	
	Build number	
Build number		
Build version		

■ Quick Info

Press the Info button and number 77 on the remote control.
Display the Network and Monitor etc. information.

[Media Player]

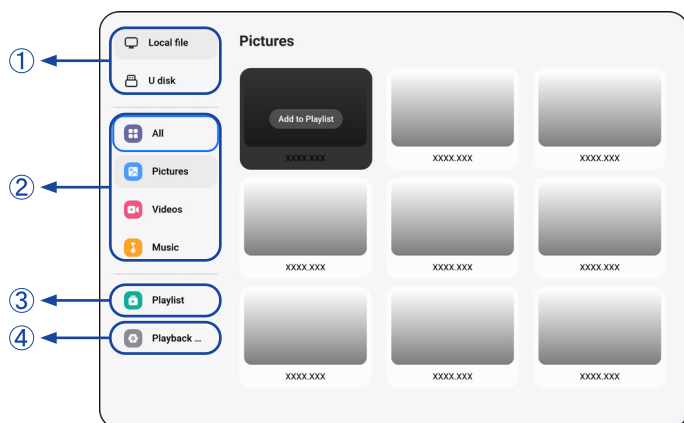

① Browse the files stored in the internal storage device and the USB storage.

② Play file

1. Navigate through different types of media files: All, Pictures, Videos, and Music.
2. Select the file and press OK button to play.

NOTE

■ Supported file system:
FAT32

■ Supported file format:

Landscape Mode

- **Picture:** JPG, BMP, PNG, GIF, WebP, HEIF(HEIC), AVIF
- **Video:** AVI, ASF, AVS, AVS2, FLV, MP4, MKV, 3GPP, OGM, VCI, WEBM, WMV, H264, H265, RM
- **Music:** MP3, EAC3, AC3, AVI, ASF, WMV, WAV, WMW, MKV, 3GPP, MP4, FLV, OGM, RM, AAC, WEBM, OGG

■ Media Hotkey

- ► : To play the media file.
- || : To pause the media file.
- ►| : Play the next file.
- |◀ : Play the previous file.
- ↺ : Repeat Playback.
- ⇄ : Sequential Playback.
- ⇄ : Reverse Playback.
- ✂ : Random Playback.








■ Arrow Hotkey

- ◀ : Previous file
- ▶ : Next file

■ Edit Options

Press "Option" to display the edit options.

- **Add to playlist:** Select the file and add to the list.

- Remote control
-  **Option key:** Display edit options
-  **OK key:** Select / deselect file
-  **Back key:** Return
-  **Play:** To play the media file.
-  **Pause:** To pause the media file.
-  **Fast forward:** To skip forward 10 seconds.
-  **Rewind:** To skip backward 10 seconds.
- ■ **Stop:** To stop the playing file and return to Menu

③ Playlist

Display the current playlist or create new ones.




1. Select "Add" on the page.
2. Enter the name of the playlist.

■ Edit Options

Press "Option" to display the edit options.

- **Play:** Play files from the list.
- **Remove:** Delete the list.
- **Move up:** Move the files to the top of the list.
- **Move down:** Move the files to the bottom of the list.
- **Remove:** Delete files.

■ Remote control

-  **Option key:** Display edit options
-  **OK / Play key:** Play files from the list.
-  **Back key:** Return

④ Playback settings

■ Play order


- **Sequences:** Play files in sequences.
- **Reverse:** Play files in reverse.
- **Random:** All files in the list play randomly.
- **Cycle:** All files in the list play repeatedly.

■ Play mode

- **Auto:** Autoplay duration(s) Auto 5s / Auto 15s / Auto 30s / Auto 60s
- **Manual:** Play the file manually.

■ Play style

- **Full:** Enlarge the image to full screen.
- **Scale:** Display the image in its original aspect ratio.

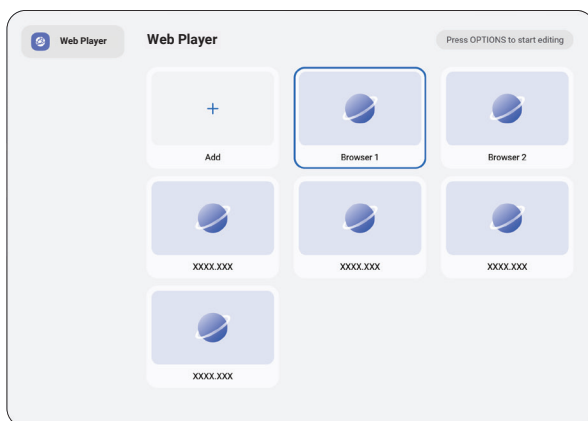

① Playlist




Set frequently used URL.

1. Select "Add" on the page.
2. Enter URL and press Confirm to access.

■ Edit Options

- **Play:** Open the web page
- **Remove:** Delete a URL.

■ Remote control

-  **Option key:** Display edit options
-  **OK / ► Play key:** Open the web page
-  **Back key:** Return



① Browse the files stored in the internal storage device and the USB storage.

② Play file

1. Select the file and press OK button to view it.

■ Arrow Hotkey

- ◀ : Previous page
- ▶ : Next page

■ Edit Options

Press "Option" to display the edit options.

- **Add to playlist:** Select the file and add to the list.

■ Remote control

- **Option key:** Display edit options
- **OK key:** Select / deselect file
- **Back key:** Return
- **Play:** To play the media file.
- **Pause:** To pause the media file.
- **Stop:** To stop the playing file and return to Menu

③ Playlist




Display the current playlist or create new ones.

1. Select "Add" on the page.
2. Enter the name of the playlist.

■ Edit Options

Press "Option" to display the edit options.


- **Play:** Open the PDF file from the list.
- **Remove:** Delete the list.
- **Move up:** Move the files to the top of the list.
- **Move down:** Move the files to the bottom of the list.
- **Remove:** Delete files.

- Remote control
-  **Option key:** Display edit options
-  **OK / ► Play key:** Open the PDF file from the list.
-  **Back key:** Return

④ Playback settings

- Play order
 - **Sequences:** Play files in sequences.
 - **Reverse:** Play files in reverse.
 - **Random:** All files in the list play randomly.
 - **Cycle:** All files in the list play repeatedly.
- Play mode
 - **Auto:** Autoplay duration(s) Auto 5s / Auto 15s / Auto 30s / Auto 60s
 - **Manual:** Play the file manually.

[File Manager]

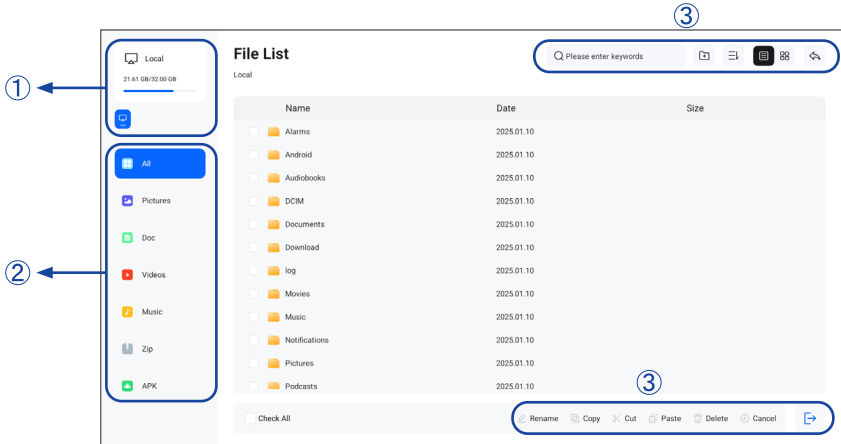


① Browse the files stored in the internal storage device and the USB storage.

② Manage file

1. Navigate through different types of files: All, Pictures, Doc, Videos, Music, Zip and APK.
2. Select the file to organize and view.

③ Tools

- : Rename
- : Copy
- : Cut
- : Paste
- : Delete
- : Cancel
- : Exit
- : Search
- : Create
- : Sort (Date, Size, Name)
- : List
- : Grid
- : Return

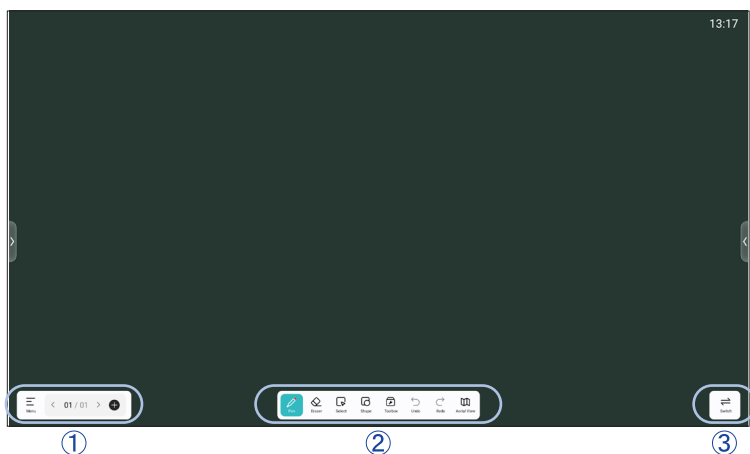

This is a digital whiteboard software that allows users to create, edit, and collaborate on virtual whiteboards.

① ≡ Menu

New: Create new Whiteboard.

Open: Open an existing whiteboard file.

Save: Save the current whiteboard.

Save as: Save the current whiteboard with a new name or location.

Scan: Share the whiteboard. Users can scan the QR code with a smartphone to download the image directly to their device.

Email: Send the captured image by Email.

Settings

Prevent accidental touch: When enabled, ignores the palm resting on the screen.

Display time: When enabled, the current time is displayed in the upper right corner of the whiteboard.

Multi Finger Mode: Multi Finger is allowed when turn on, and multi- finger is preview when turned off.

Background: Set the whiteboard background color and grid style.

Threshold: Adjust the trigger values for thick and thin pens and gesture erasers.

Toolbar: Customize the toolbar layout and available tools.

Exit: Return to main screen.

< : To the previous page.

> : To the next page.

01 / 01 : Page number

+ : Add new page after the last page.

② Tools



Pen : Customize the color of your pen while handwriting.

Change the width and color of the stroke. (Pen / Handwriting size / Handwriting color)



Eraser : Erase the specified object.



Select : Select the object being edit, can move, can zoom.



Shape : Draw the shape



Toolbox

Image: Insert and manipulate images

Table: Table creation

Ruler: Ruler function

MindMap: Visual thinking tool

Browser: Open a web browser within the whiteboard.

FourLineGrid: Apply a four-line grid background.

Site: Insert and display web links or site previews.

StickyNotes: Brainstorming tool

PDF: Import and annotate PDF files.

PeriodicTab.: Display the periodic table for quick reference.



Undo : Cancel



Redo: Redo



Aerial View : Display a miniature overview of the entire whiteboard.

③ ⇌ Switch : Switch: Quickly switch between different whiteboards.

[CMS]

Manage the digital signage content.

To be able to use functionality, please download the CMS Software and User Manual from our Website <https://iiyama.com/iiisignage>

CMS software is using the network Port: 9989, future information are available in the iiSignage User Manual.

[iiControl]

This software provides organizations with a convenient and fast unified management solution for terminal equipment, builds an efficient and real-time equipment management system, helps digitize the campus environment and makes campus management more convenient.

[iiBrowser]

Connect to the network and browse the web.

[QuickSupport]

TeamViewer QuickSupport mobile app allows you to quick receive remote support on your smartphone or tablet.

[Chromium]

Connect to the network and browse the web.

[iiShare]

This is the software that can wirelessly share the screen with other notebook etc..

[Host]

The TeamViewer Host app for Android allows for remote control of unattended Android devices. A connection is possible even when the device is not being actively used.


STANDBY FEATURE

This product features the standby function. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

■ Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to red. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

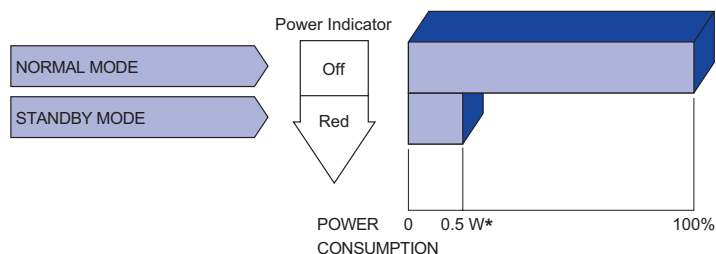

* When the USB devices are not connected.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem	Check
① The picture does not appear. (Power indicator does not light up.)	<input type="checkbox"/> The Power Cable is firmly seated in the socket. <input type="checkbox"/> The Power Switch is turned ON. <input type="checkbox"/> The AC socket is live. Please check with another piece of equipment.
(Power indicator is green.)	<input type="checkbox"/> Increase the Contrast and/or Brightness. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
(Power indicator is red.)	<input type="checkbox"/> If the monitor is in standby mode, press the POWER button on the remote control. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
② The screen is not synchronized.	<input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
③ The screen position is not in the center.	<input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
④ The screen is too bright or too dark.	<input type="checkbox"/> The video output level of the computer is within the specification of the monitor.
⑤ The screen is shaking.	<input type="checkbox"/> The power voltage is within the specification of the monitor. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
⑥ No sound.	<input type="checkbox"/> The audio equipment (computer etc.) is ON. <input type="checkbox"/> The Audio Cable is properly connected. <input type="checkbox"/> The Volume is turned up. <input type="checkbox"/> The Mute is OFF. <input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.
⑦ The sound is too loud or too quiet.	<input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.
⑧ A strange noise is heard.	<input type="checkbox"/> The Audio Cable is properly connected.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor.
Please visit our web site: <https://iiyama.com> for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : ProLite T4329AS-B1AG / B1AG A

Touch Screen	Technology	Projected capacitive 20 points	
	Light transmission	≥82%	
	Hardness	8H	
	Thickness	3.72mm	
	Response time	≤25ms	
Size Category		43"	
LCD Panel	Panel technology	VA	
	Size	Diagonal: 42.5" (108cm)	
	Pixel pitch	0.0817mm H × 0.2451mm V	
	Brightness	500cd/m ² (Typical without touch panel) 420cd/m ² (Typical with touch panel) 260cd/m ² (Default / Energy Saving)	
	Contrast ratio	4000 : 1 (Typical: without glass)	
	Viewable angle	Horizontal : 89 degrees, Vertical: 89 degrees (Typical)	
	Response time	6.5ms (Typical, Gray to Gray)	
Display Colors		Approx.1.07G	
Sync Frequency		Horizontal: 28.0-160.0kHz, Vertical: 57-62Hz	
Native Resolution		3840 × 2160, 8.3 MegaPixels	
Support Max. Resolution		3840 × 2160 60Hz	
Input Video Signal		HDMI, USB-C 2.0 (DisplayPort 1.2)	
LAN		RJ45	
Serial Port		RS-232C In/Out ø 2.5mm sub-mini jack	
IR Extender Connector		IR In/Out	
USB Standard		USB2.0(DC5V, 500mA) (USB Media Player) × 2 USB-C 2.0(5V, 3A) (DisplayPort 1.2 ALT mode) × 1	
Number of USB Ports Connector shape		1 Upstream : Type C 2 Downstream : Type A	
Headphone Connector*1		ø 3.5mm mini jack (Stereo)	
Speakers		Internal: 10W×2 (Stereo speakers)	
RAM		4GB DDR4	
ROM		32GB eMMC	
WIFI		2.4-2.5 GHz / 5.15-5.825 GHz / 802.11a/b/g/n/ac	
Maximum Screen Size		941.18mm W × 529.42mm H / 37.1" W × 20.8" H	
Power Source		100-240VAC, 50/60Hz, 2.1A	
Power Consumption*2		98W typical, Standby mode: 0.5W maximum, Off mode: 0.3W maximum	
Dimensions / Net Weight		989.5 × 578.0 × 72.0mm / 39.0 × 22.7 × 2.8" (W×H×D) 13.7kg / 30.2lbs	
Environmental Considerations		Operating: Temperature Humidity	0 to 40°C / 32 to 104°F 20 to 80% (No condensation)
		Storage: Temperature Humidity	-20 to 60°C / 4 to 140°F 10 to 90% (No condensation)
Approvals		CE, UKCA, EAC, TÜV-Bauart	

NOTE

*1 Proper operation of connected external devices other than headphones is not guaranteed.

*2 When the USB devices are not connected.

SPECIFICATIONS : ProLite T5529AS-B1AG / B1AG A

ENGLISH

Touch Screen	Technology	Projected capacitive 20 points
	Light transmission	≥82%
	Hardness	8H
	Thickness	3.72mm
	Response time	≤25ms
Size Category		55"
LCD Panel	Panel technology	VA
	Size	Diagonal: 54.6" (139cm)
	Pixel pitch	0.105mm H × 0.315mm V
	Brightness	570cd/m ² (Typical without touch panel) 450cd/m ² (Typical with touch panel) 320cd/m ² (Default / Energy Saving)
	Contrast ratio	4000 : 1 (Typical: without glass)
	Viewable angle	Horizontal : 89 degrees, Vertical: 89 degrees (Typical)
	Response time	6.5ms (Typical, Gray to Gray)
Display Colors		Approx.1.07G
Sync Frequency		Horizontal: 28.0-160.0kHz, Vertical: 57-62Hz
Native Resolution		3840 × 2160, 8.3 MegaPixels
Support Max. Resolution		3840 × 2160 60Hz
Input Video Signal		HDMI, USB-C 2.0 (DisplayPort 1.2)
LAN		RJ45
Serial Port		RS-232C In/Out ø 2.5mm sub-mini jack
IR Extender Connector		IR In/Out
USB Standard		USB2.0(DC5V, 500mA) (USB Media Player) × 2 USB-C 2.0(5V, 3A) (DisplayPort 1.2 ALT mode) × 1
Number of USB Ports		1 Upstream : Type C
Connector shape		2 Downstream : Type A
Headphone Connector ^{*1}		ø 3.5mm mini jack (Stereo)
Speakers		Internal: 10W×2 (Stereo speakers)
RAM		4GB DDR4
ROM		32GB eMMC
WIFI		2.4-2.5 GHz / 5.15-5.825 GHz / 802.11a/b/g/n/ac
Maximum Screen Size		1209.6mm W × 680.4mm H / 47.6" W × 26.8" H
Power Source		100-240VAC, 50/60Hz, 1.9A
Power Consumption ^{*2}		104W typical, Standby mode: 0.5W maximum, Off mode: 0.3W maximum
Dimensions / Net Weight		1258.0 × 729.0 × 42.5mm / 49.5 × 28.7 × 1.7" (W×H×D) 26.8kg / 59.1lbs
Environmental Considerations		Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 20 to 80% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)
Approvals		CE, UKCA, EAC, TÜV-Bauart

NOTE

^{*1} Proper operation of connected external devices other than headphones is not guaranteed.

^{*2} When the USB devices are not connected.

SPECIFICATIONS : ProLite T6529AS-B1AG / B1AG A

ENGLISH


Touch Screen	Technology	Projected capacitive 20 points
	Light transmission	≥82%
	Hardness	8H
	Thickness	3.72mm
	Response time	≤25ms
Size Category		65"
LCD Panel	Panel technology	VA
	Size	Diagonal: 64.5" (164cm)
	Pixel pitch	0.124mm H × 0.372mm V
	Brightness	500cd/m ² (Typical without touch panel) 420cd/m ² (Typical with touch panel) 260cd/m ² (Default / Energy Saving)
	Contrast ratio	4000 : 1 (Typical: without glass)
	Viewable angle	Horizontal : 89 degrees, Vertical: 89 degrees (Typical)
	Response time	6.5ms (Typical, Gray to Gray)
Display Colors		Approx.1.07G
Sync Frequency		Horizontal: 28.0-160.0kHz, Vertical: 57-62Hz
Native Resolution		3840 × 2160, 8.3 MegaPixels
Support Max. Resolution		3840 × 2160 60Hz
Input Video Signal		HDMI, USB-C 2.0 (DisplayPort 1.2)
LAN		RJ45
Serial Port		RS-232C In/Out ø 2.5mm sub-mini jack
IR Extender Connector		IR In/Out
USB Standard		USB2.0(DC5V, 500mA) (USB Media Player) × 2 USB-C 2.0(5V, 3A) (DisplayPort 1.2 ALT mode) × 1
Number of USB Ports Connector shape		1 Upstream : Type C 2 Downstream : Type A
Headphone Connector* ¹		ø 3.5mm mini jack (Stereo)
Speakers		Internal: 10W×2 (Stereo speakers)
RAM		4GB DDR4
ROM		32GB eMMC
WIFI		2.4-2.5 GHz / 5.15-5.825 GHz / 802.11a/b/g/n/ac
Maximum Screen Size		1428.48mm W × 803.52mm H / 56.2" W × 31.6" H
Power Source		100-240VAC, 50/60Hz, 2.0A
Power Consumption* ²		118W typical, Standby mode: 0.5W maximum, Off mode: 0.3W maximum
Dimensions / Net Weight		1477.5 × 852.5 × 43.0mm / 58.2 × 33.6 × 1.7" (W×H×D) 38.5kg / 84.9lbs
Environmental Considerations		Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 20 to 80% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)
Approvals		CE, UKCA, EAC, TÜV-Bauart

NOTE


*1 Proper operation of connected external devices other than headphones is not guaranteed.

*2 When the USB devices are not connected.

DIMENSIONS : ProLite T4329AS

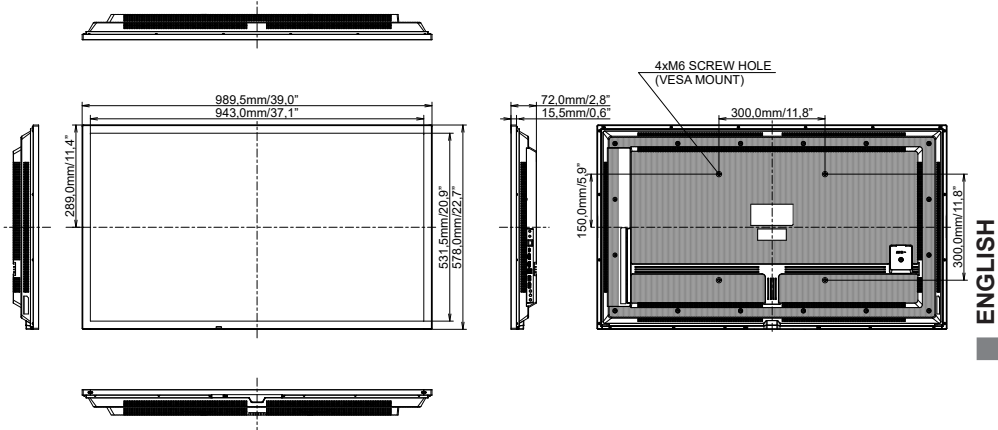


DIMENSIONS : ProLite T5529AS

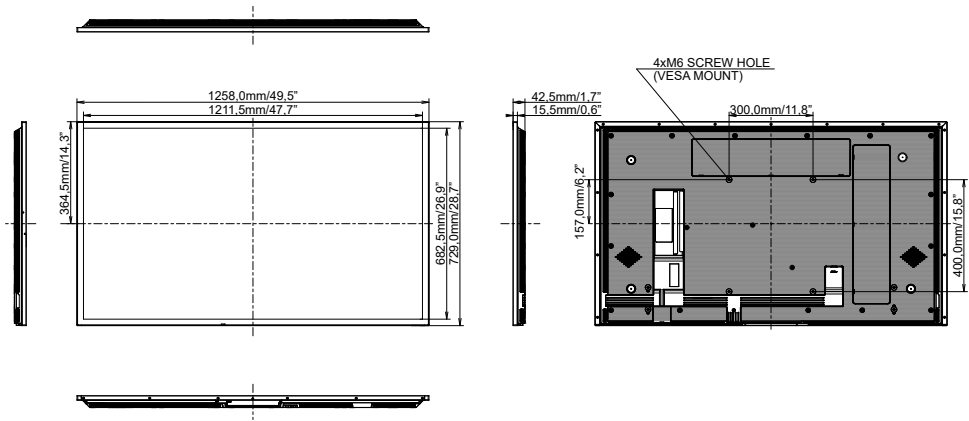


DIMENSIONS : ProLite T6529AS

ENGLISH

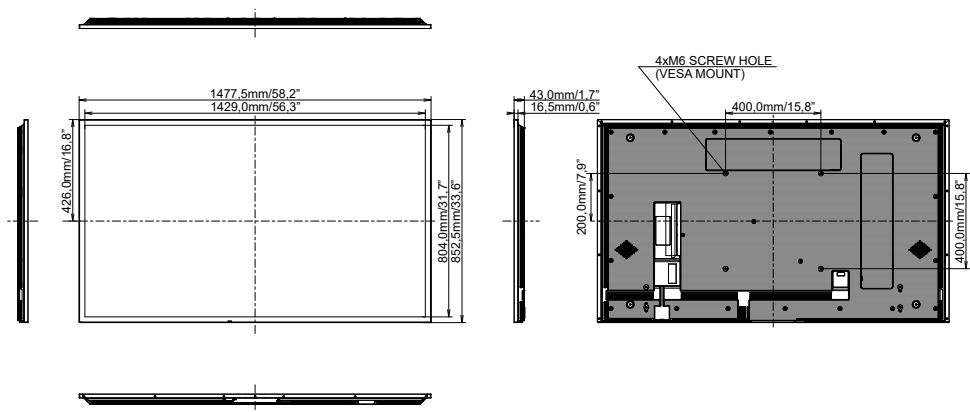


DIMENSIONS : WALL MOUNTING

• ProLite T4329AS

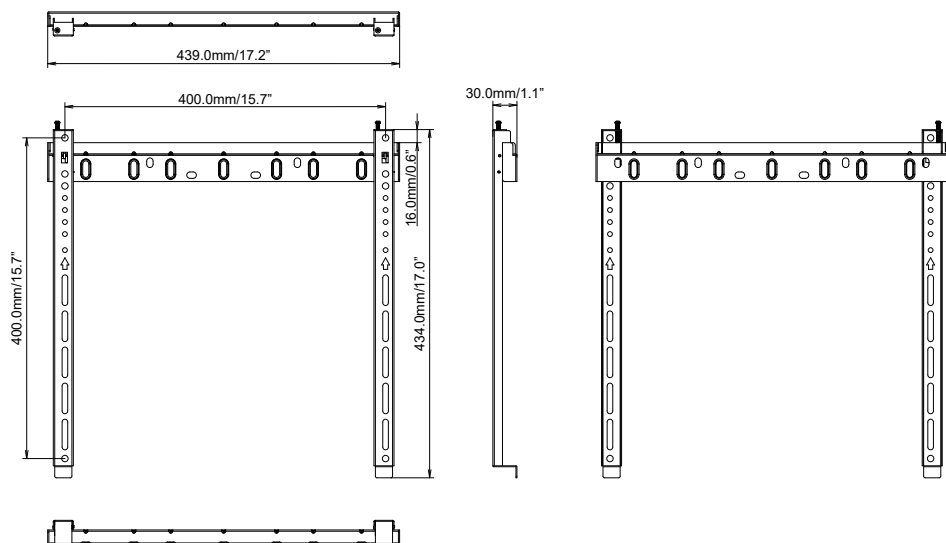

• ProLite T5529AS / ProLite T6529AS

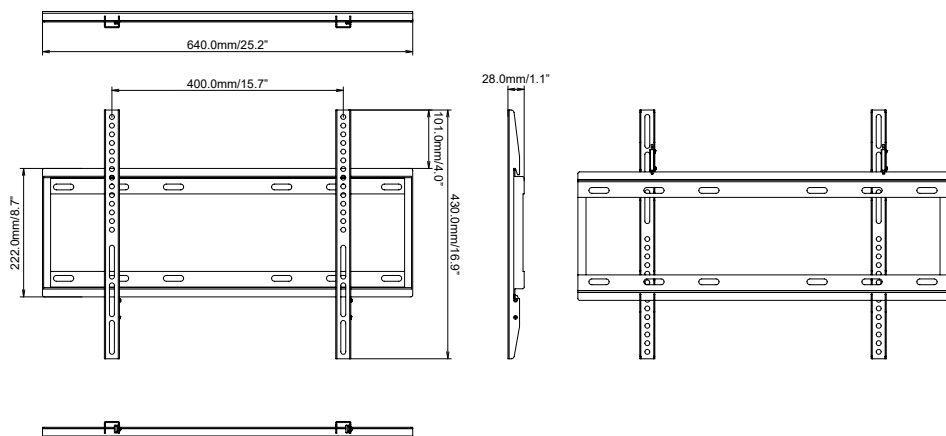

COMPLIANT TIMING

ENGLISH

Timing		f _H (kHz)	F _V (Hz)	Dot clock (MHz)	HDMI1	HDMI2	Type-C
VESA	VGA 640x480	31.5	60.0	25.175	○	○	○
	SVGA 800x600	37.9	60.0	40.000	○	○	○
	XGA 1024x768	48.4	60.0	65.000	○	○	○
	QVGA 1280x960	64.0	60.0	108.000	○	○	○
	SXGA 1280x1024	64.0	60.0	108.000	○	○	○
	WXGA 1366x768	47.7	60.0	85.500	○	○	○
	CVT 1440x900	55.9	60.0	106.500	○	○	○
	UXGA 1680x1050	65.3	60.0	146.250	○	○	○
	FHD 1920x1080	67.5	60.0	148.500	○	○	○
	2048x1152	70.9	60.0	156.750	○	○	○
	2560x1080	66.0	60.0	198.000	○	○	○
	2560x1440	88.8	60.0	241.700	○	○	○
	2560x1600	98.7	60.0	268.500	○	○	○
	3200x1800	111.1	60.0	391.140	○	○	○
	4K 3840x2160	67.5	30.0	297.000	○	○	○
		135.0	60.0	594.000	○	○	○
IBM	720x400	31.5	70.0	28.320	○	○	○
SD	480i	15.7	60.0	27.000	○	○	
	576i	15.6	50.0	13.500	○	○	
	480p	31.5	60.0	27.000	○	○	○
	576p	31.3	50.0	27.000	○	○	○
HD	720p	37.5	50.0	27.000	○	○	○
		45.0	60.0	74.250	○	○	○
	1080i	28.1	50.0	74.250	○	○	○
		33.7	60.0	74.250	○	○	○
	1080p	56.3	50.0	148.500	○	○	○
		67.5	60.0	148.500	○	○	○

* ○ means supported the timing.