

Hardware Installation Guide

Gigabit Ethernet SmartPro Switch

Information in this document is subject to change without notice. Reproduction in any manner whatsoever, without the written permission of D-Link Corporation, is strictly forbidden.

Trademarks used in this text: D-Link and the D-LINK logo are trademarks of D-Link Corporation; Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. D-Link Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

© 2024 D-Link Corporation. All rights reserved.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE Mark Warning

This equipment is compliant with Class A of CISPR 32. In a residential environment, this equipment may cause radio interference.

Avertissement Concernant la Marque CE

Cet équipement est conforme à la classe A de la norme CISPR 32. Dans un environnement résidentiel, cet équipement peut provoquer des interférences radio.

VCCI Warning

この装置は、クラス A 機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。VCCI-A

BSMI Notice

For the DGS-1510 Series (HW: A1):

警告使用者：此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

For the DGS-1510-52XMP (HW: A2):

警告：為避免電磁干擾，本產品不應安裝或使用於住宅環境。

Safety Compliance

Warning: Class 1 Laser Product: When using a fiber optic media expansion module, never look at the transmit laser while it is powered on. In addition, never look directly at the fiber TX port and fiber cable ends when they are powered on.

Avertissement: Produit Laser de Classe 1: Ne regardez jamais le laser tant qu'il est sous tension. Ne regardez jamais directement le port TX (Transmission) à fibres optiques et les embouts de câbles à fibres optiques tant qu'ils sont sous tension.

Table of Contents

Intended Readers	v
Typographical Conventions	v
Notes, Notices, and Cautions	v
Switch Description	6
Package Contents	6
Features	6
Front-Panel Components	8
Ports	9
Reset Button	10
LED Indicators	10
Rear Panel Components	13
Side Panel Components	14
Smart Fans	16
Installation Guidelines	18
Installing the Switch without a Rack	18
Attaching Brackets to a Switch for Rack Mounting	18
Installing the Switch in a Standard 19" Rack	19
Installing Transceivers into the Transceiver Ports	20
Power On (AC Power)	20
Power Failure (AC Power)	21
Installing Power Cord Clip	21
Installing the RPS into a Rack-mount Chassis	24
DPS-700	24
Switch to End Node	26
Switch to another Switch	26
Switch to a Server	27
Management Options	28
Connecting the Console Port	28
Connecting to the Switch for the First Time	30
Creating a User Account	31
Configuring the IP Address	31
SNMP Settings	32
Traps	33
Management Information Base (MIB)	33
Introduction	34
Logging onto the Web Manager	34
Web-based User Interface	35
Areas of the User Interface	35
General	37
Physical and Environmental	37
Performance	40
LED Indicators	41
Per Switch	41
Per RJ45 Port	41
Per SFP Port	42
Per SFP+ Port	42
Port Functions	42
Ethernet Cable	45
Console Cable	46

Redundant Power Supply (RPS) Cable	47
Safety Instructions	50
Safety Cautions	50
Consignes de sécurité	51
Précautions de sécurité	51
General Precautions for Rack-Mountable Products	53
Protecting Against Electrostatic Discharge	54

Intended Readers

Intended Readers
Typographical Conventions
Notes, Notices, and Cautions

The **DGS-1510 Series Hardware Installation Guide** contains information about the configuration and management of the switch. This manual is intended for network administrators familiar with network management concepts and terminology. For all practical reasons all the switches in this series will simply be referred to as the **Switch** throughout this manual. All example screenshots are taken from the **DGS-1510-28XMP** switch.

Typographical Conventions

Convention	Description
[]	In a command line, square brackets indicate an optional entry. For example: [copy filename] means that optionally you can type copy followed by the name of the file. Do not type the brackets.
Bold Font	Indicates a button, a toolbar icon, menu, or menu item. For example: Open the File menu and choose Cancel . Used for emphasis. May also indicate system messages or prompts appearing on screen. For example: You have mail .
<i>Courier New Font</i>	Indicates commands and responses to prompts that must be typed exactly as printed in the manual.
Initial capital letter	Indicates a window name. Names of keys on the keyboard have initial capitals. For example: Click Enter .
<i>Italics</i>	Indicates a window name or a field. Also can indicate a variables or parameter that is replaced with an appropriate word or string. For example: type <i>filename</i> means that the actual filename should be typed instead of the word shown in italic.
Menu Name > Menu Option	Menu Name > Menu Option indicates the menu structure. Device > Port > Port Properties means the Port Properties menu option under the Port menu option that is located under the Device menu.

Notes, Notices, and Cautions



NOTE: A note indicates important information that helps you make better use of your device.



NOTICE: A notice indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A caution indicates a potential for property damage, personal injury, or death.

ATTENTION: Une précaution indique un risque de dommage matériel, de blessure corporelle ou de mort.

1. Introduction

Switch Description

Package Contents

Features

Front-Panel Components

Rear Panel Components

Side Panel Components

This **Hardware Installation Guide** is a detailed document explaining information about the hardware installation, configuration, specifications, guidelines, and maintenance of a D-Link switch.

Switch Description

The **DGS-1510 Series** is D-Link's next generation SmartPro Switch. It features built-in 10Gbps SFP+ ports targeted for SME/SMB core deployment to improve connectivity between core switches and edge switches. The DGS-1510 Series also implements D-Link's innovative 3rd generation Green Ethernet technology (IEEE 802.3az) by not only saving power over inactive links, but also turning off LEDs on a customized schedule and allowing ports to automatically enter the hibernated state.

In the **DGS-1510 Series**, the following switches are available: **DGS-1510-20**, **DGS-1510-28**, **DGS-1510-28P**, **DGS-1510-28X**, **DGS-1510-28XMP**, **DGS-1510-52**, **DGS-1510-52X**, and **DGS-1510-52XMP**. Some features, throughout this guide, will apply to all the switches within the **DGS-1510 Series**. When referring to these universal features, we will simply refer to the product as the **Switch**.

Package Contents

When purchasing a D-Link DGS-1510 Series Switch, a list of items will be included in the package of the Switch. Open the shipping carton of the Switch and carefully unpack its contents. The carton should contain the following items:

- One D-Link DGS-1510 Series Switch.
- One Quick Installation Guide.
- One AC power cord.
- One console cable.
- One power cord cable clip.
- One mounting kit (two brackets and screws).
- Four rubber feet with adhesive backing.
- One CD that includes a digital copy of the CLI Reference Guide, Web UI Reference Guide, Hardware Installation Guide, D-View module, D-Link Network Assistant, and D-Link Network Assistant Guide.



NOTE: If any item is missing or damaged, please contact your local D-Link Reseller for replacement.

Features

The list of features below highlights the significant features of the Switch.

- Supports Virtual Stacking. D-Link Single IP Management (SIM).
- Supports Physical Stacking, using the SFP+ ports with 40G (Full Duplex) in topologies Linear and Ring.

- Supports a 16,384 MAC address table.
- Supports Flow Control (802.3x) in full-duplex compliant.
- Supports Jumbo Frames of up to 9,216 bytes
- Supports Spanning Tree with 802.1D 2004 STP/RSTP and 802.1Q 2005 MSTP.
- Supports Loopback Detection (LBD).
- Supports Link Aggregation (802.3ad and 802.3AX) with a maximum of 32 groups per Switch.
- Supports Port Mirroring.
- Supports Layer 2 Multicast Filtering.
- Supports IGMP Snooping (v1, v2, v3 awareness) with up to 512 snooping groups and 128 static multicast addresses. MLD Snooping (v1, v2 awareness) with up to 512 snooping groups and 128 static multicast addresses. IGMP Snooping and MLD Snooping share 128 static groups and 512 snooping groups.
- Supports Virtual LAN (802.1Q) with up to 4K static VLAN groups and 4K dynamic VLAN groups.
- Supports Port-based VLAN.
- Supports MAC-based VLAN.
- Supports 802.1v Protocol-based VLAN.
- Supports Asymmetric VLAN.
- Supports Auto Voice and Surveillance VLAN.
- Supports IP Interfaces with up to 16 IP interfaces.
- Supports Gratuitous ARP.
- Supports IPv6 Ready Phase 2 compliancy.
- Supports Static Routing.
- Supports Quality of Service (QoS) with Queue Handling and Class of Service (CoS).
- Supports Access Control List (ACL) with Ingress ACL, Time-based ACL, and ACL Statistics.
- Supports Secure Shell (SSHv2) with IPv4/IPv6 access.
- Supports Secure Sockets Layer (SSL) versions 1, 2, and 3 with IPv4/IPv6 access.
- Supports Port Security of up to 128 MAC addresses.
- Supports Broadcast and Multicast Storm Control.
- Supports Traffic Segmentation
- Supports D-Link SafeGuard Engine.
- Supports ARP Spoofing Prevention.
- Supports IP-MAC-Port Binding (IMPB). This feature includes DHCP Snooping, IP Source Guard, Dynamic ARP Inspection, DHCPv6 Guard, RA Guard, IPv6 Snooping, IPv6 Source Guard, and IPv6 ND Snooping.
- Supports DoS Attack Prevention.
- Supports Port-based Network Access Control (PNAC) better known as 802.1X. This feature includes Local and RADIUS database, Port-based Access Control, and MAC-based Access Control (MAC).
- Supports Web-based Access Control (WAC).
- Supports Japanese Web-based Access Control (JWAC).
- Supports Guest VLAN.
- Supports 15 User Account Privilege Levels.
- Supports Compound Authentication.
- Supports Link Layer Discovery Protocol (LLDP) with LLDP-MED.
- Supports Accessibility using multiple interfaces like the Command Line Interface (CLI), Web-based Graphical User Interface (Web-based GUI), and more.
- Supports Telnet Server and Client from IPv4 and IPv6.
- Supports Trivial File Transfer Protocol (TFTP) Client.
- Supports Simple Network Management Protocol (SNMP) version 1, 2c, and 3. Also supports SNMP Traps.

- Supports DHCP Client.
- Supports Dynamic Host Configuration Protocol (DHCP) Relay.
- Supports Traps and Logs.
- Support Multiple Images.
- Supports Password Encryption (MD5/SHA1).
- Supports Simple Network Time Protocol (SNTP).
- Support Power Saving using the Link Status Mode.
- Support Time-based Power-over-Ethernet (PoE).
- Supports IEEE 802.3az compliance.
- Supports Optical Transceiver Digital Diagnostic Monitoring (DDM).
- Supports D-Link Discovery Protocol (DDP).
- Supports Ethernet Ring Protection Switching (ERPS). For more information, refer to **Appendix C – ERPS Information**.
- Supports Network Time Protocol (NTP).
- Supports Telnet Client.
- Supports MIBs like MIBII, Bridge MIB, SNMPv2 MIB, RMON MIB, RMONv2 MIB, Ether-like MIB, 802.3 MAU MIB, 802.1p MIB, RADIUS Authentication Client MIB, Ping MIB, L2 Specific MIB, Private MIB, Entity MIB, and ZoneDefense MIB.

Front-Panel Components

On the front panel of the Switch there are Ethernet RJ45/SFP/SFP+ ports, a Console port, a Reset button, a Mode button (only of PoE supported switches), and LED indicators.

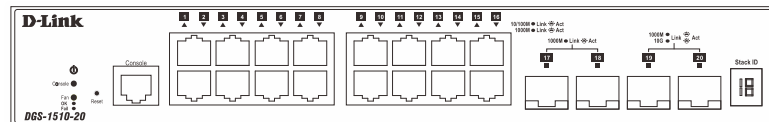


Figure 1-1 Front panel view of a DGS-1510-20 Switch

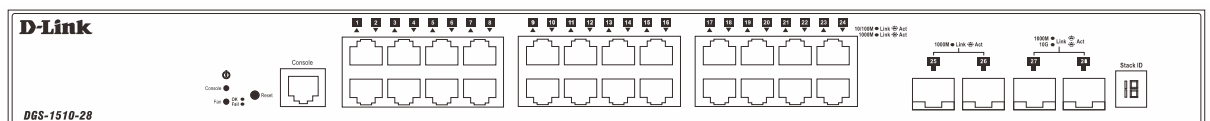


Figure 1-2 Front panel view of a DGS-1510-28 Switch

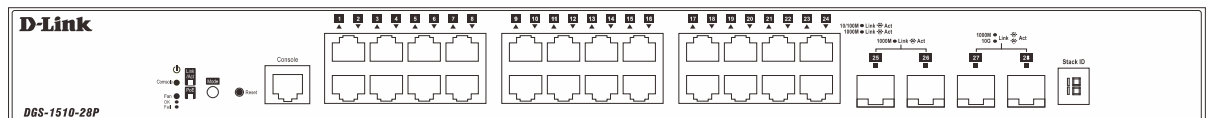


Figure 1-3 Front panel view of a DGS-1510-28P Switch

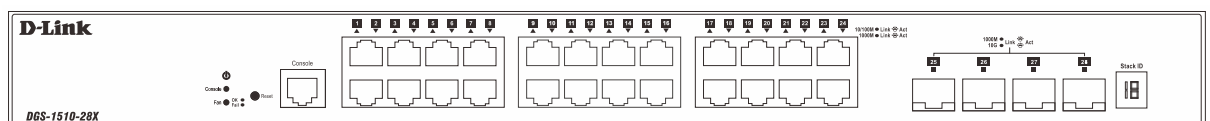


Figure 1-4 Front panel view of a DGS-1510-28X Switch

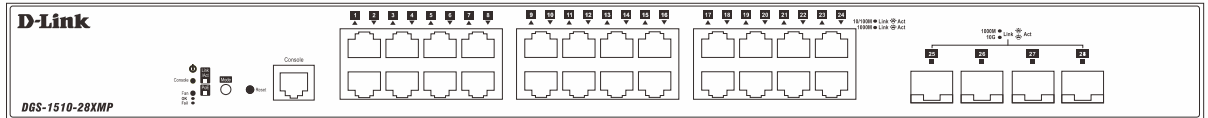


Figure 1-5 Front panel view of a DGS-1510-28XMP Switch

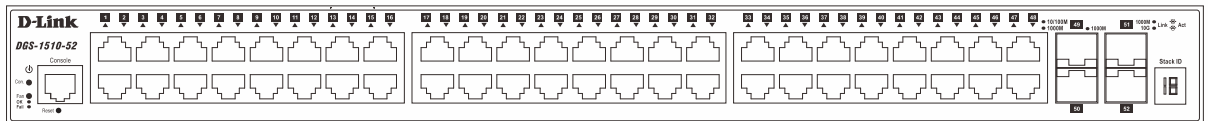


Figure 1-6 Front panel view of a DGS-1510-52 Switch

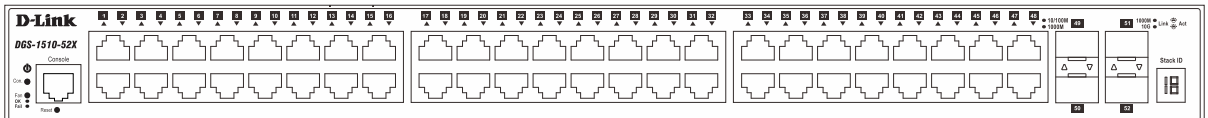


Figure 1-7 Front panel view of a DGS-1510-52X (HW: A1) Switch

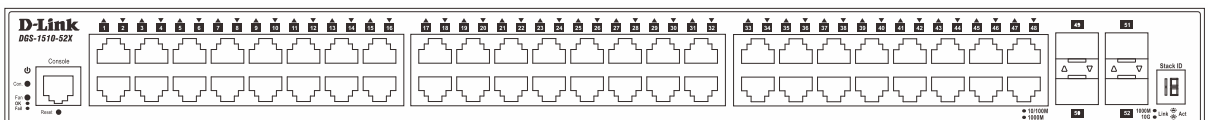


Figure 1-8 Front panel view of a DGS-1510-52X (HW: A2) Switch

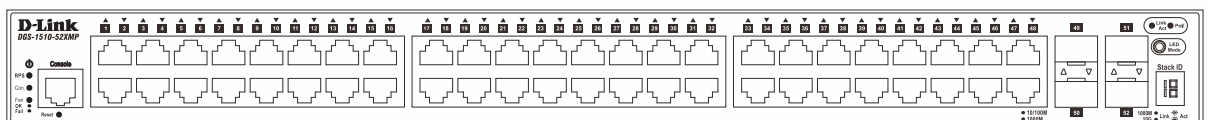


Figure 1-9 Front panel view of a DGS-1510-52XMP Switch

Ports

The Type and Number of ports available on the Switch are listed out below:

- **DGS-1510-20:**
 - Sixteen Copper Ports (10BASE-T/100BASE-TX/1000BASE-T),
 - Two SFP Ports (1000BASE),
 - Two Dual Speed SFP+ Ports (1000BASE/10GBASE),
 - One Console Port (RJ-45),
- **DGS-1510-28:**
 - Twenty-four Copper Ports (10BASE-T/100BASE-TX/1000BASE-T),
 - Two SFP Ports (1000BASE),
 - Two Dual Speed SFP+ Ports (1000BASE/10GBASE),
 - One Console Port (RJ-45),
- **DGS-1510-28P:**
 - Twenty-four Copper PoE Ports (10BASE-T/100BASE-TX/1000BASE-T),
 - Two SFP Ports (1000BASE),
 - Two Dual Speed SFP+ Ports (1000BASE/10GBASE),
 - One Console Port (RJ-45),
- **DGS-1510-28X:**
 - Twenty-four Copper Ports (10BASE-T/100BASE-TX/1000BASE-T),
 - Four SFP/SFP+ Ports (1000BASE/10GBASE),

- One Console Port (RJ-45),
- **DGS-1510-28XMP:**
 - Twenty-four Copper PoE Ports (10BASE-T/100BASE-TX/1000BASE-T),
 - Four SFP/SFP+ Ports (1000BASE/10GBASE),
 - One Console Port (RJ-45),
- **DGS-1510-52:**
 - Forty-eight Copper Ports (10BASE-T/100BASE-TX/1000BASE-T),
 - Two SFP Ports (1000BASE),
 - Two Dual Speed SFP+ Ports (1000BASE/10GBASE),
 - One Console Port (RJ-45),
- **DGS-1510-52X:**
 - Forty-eight Copper Ports (10BASE-T/100BASE-TX/1000BASE-T),
 - Four SFP/SFP+ Ports (1000BASE/10GBASE),
 - One Console Port (RJ-45),
- **DGS-1510-52XMP:**
 - Forty-eight Copper PoE Ports (10BASE-T/100BASE-TX/1000BASE-T),
 - Four SFP/SFP+ Ports (1000BASE/10GBASE),
 - One Console Port (RJ-45),



CAUTION: This equipment is to be connected only to PoE networks without routing to the outside plant.

Reset Button

On the front panel of the Switch is a **Reset** button. The Switch will reboot or reset to factory default settings depending on how long this button is pressed.

- Press and hold the **Reset** button for less than 5 seconds (release before 5 seconds) to reboot the Switch. All unsaved configurations will be lost.
- Press and hold the **Reset** button for more than 5 seconds (release between 6 and 10 seconds) to reset the software configuration of the Switch to the factory default settings. All the port LEDs will light up (solid amber) for 2 seconds to indicate the start of the factory reset procedure.

LED Indicators

The Switch's front panel presents LED indicators for Power, Console, Master (Stack Control), Stack ID and Link/Act indicators for all the ports. The **DGS-1510-28P**, **DGS-1510-28XMP**, and **DGS-1510-52XMP** switches are equipped with an additional PoE light, to indicate whether the ports are running in Power over Ethernet mode.

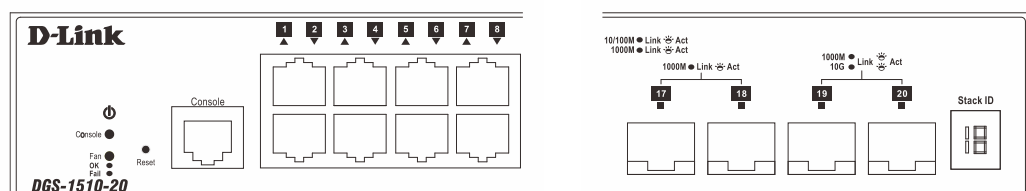


Figure 1-10 LED indicators for a DGS-1510-20 Switch

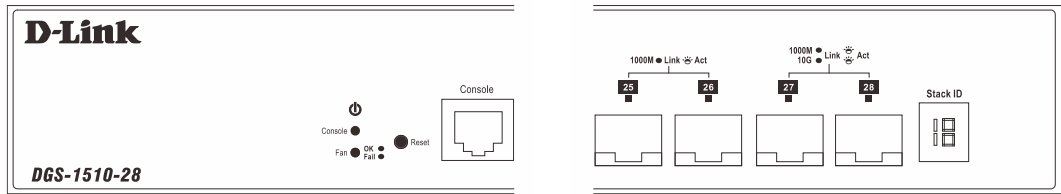


Figure 1-11 LED indicators for a DGS-1510-28 Switch

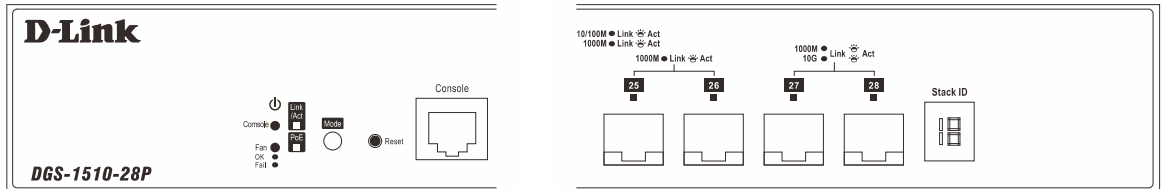


Figure 1-12 LED indicators for a DGS-1510-28P Switch

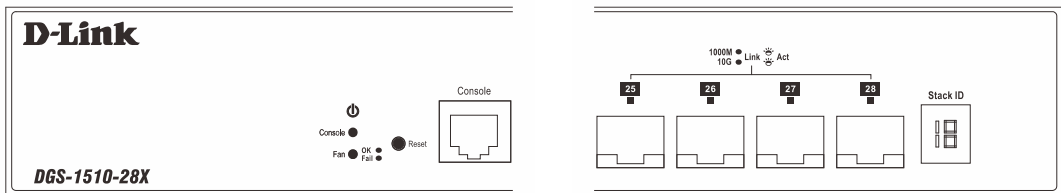


Figure 1-13 LED indicators for a DGS-1510-28X Switch

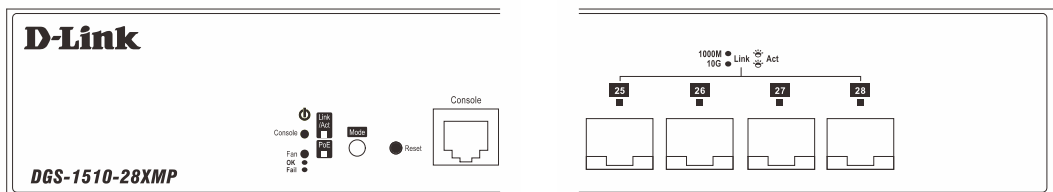


Figure 1-14 LED indicators for a DGS-1510-28XMP Switch

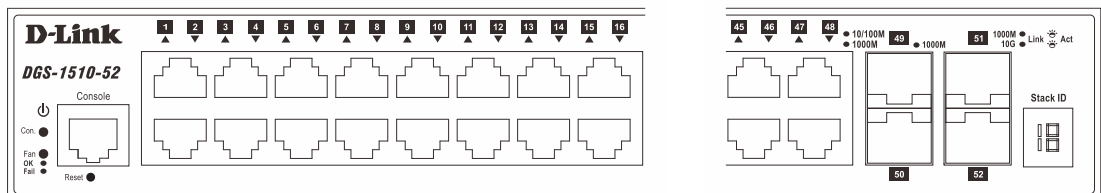


Figure 1-15 LED indicators for a DGS-1510-52 Switch

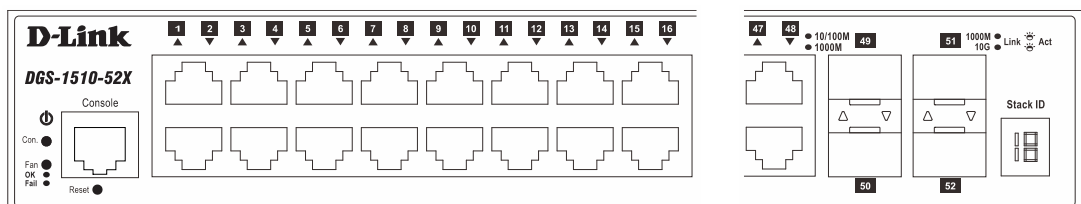


Figure 1-16 LED indicators for a DGS-1510-52X (HW: A1) Switch

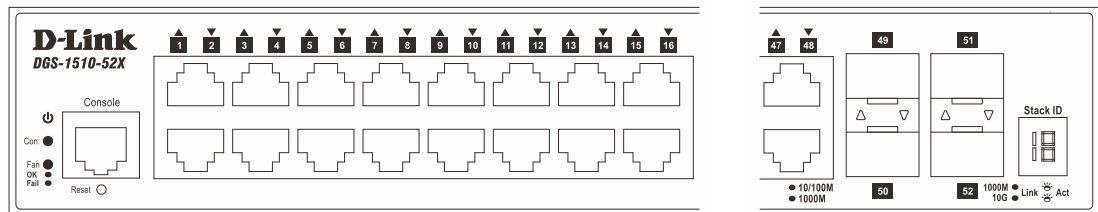


Figure 1-17 LED indicators for a DGS-1510-52X (HW: A2) Switch

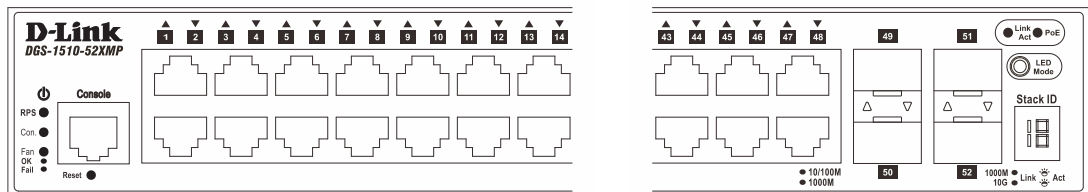



Figure 1-18 LED indicators for a DGS-1510-52XMP Switch

A separate table below describes LED indicators in more detail.

LED	Description
Power 	This LED will light green after powering the Switch on to indicate the ready state of the device. The indicator is dark when the Switch is no longer receiving power (i.e. powered off).
Console	This LED will blink green during the Power-On Self-Test (POST). When the POST is finished, the LED goes dark. The indicator will light steady green when a user is logged in through the console port.
Fan	This LED will light green after the diagnostics have passed with no errors. This LED will light red when any of the fans has failed.
Link/Act LEDs	The Switch has LED indicators for Link and Activity. Copper Ports: The LED will light steady green when there is a secure connection (or link) to a 1000Mbps Ethernet device or steady orange when there is a secure connection (or link) to a 10/100Mbps Ethernet device at any of the copper ports. The LED will blink green when a 1000Mbps port is active or blink orange when a 10/100Mbps port is active. The LED remains dark when there is no link or activity. SFP Ports: The LED will light steady green when there is a secure connection (or link) to a 1000Mbps Ethernet device at any of the SFP ports. The LED remains dark when there is no link or activity. SFP+ Ports: The LED will light steady green when there is a secure connection (or link) to a 10Gbps Ethernet device or steady orange when there is a secure connection (or link) to a 1Gbps Ethernet device at any of the SFP+ ports. The LED will blink green when a 10Gbps port is active or blink orange when a 1Gbps port is active. The LED remains dark when there is no link or activity.
PoE	Only the DGS-1510-28P , DGS-1510-28XMP , and DGS-1510-52XMP switches are equipped with a PoE LED. When this light is on with a solid green light, it means that the corresponding ports are feeding power to the PoE devices plugged in. When this light is on with a solid orange light, it means that the port is in an error condition state. When this light is off, it means that the ports are not supplying power to the devices plugged into the ports.
Stack ID	For standalone Switches, this will display number “1”. For stacked Switches, this indicates the position in the stacking box ID. The Stack ID is assigned either by the user (static mode) or by the system

LED	Description
	(automatic mode). When “1” to “6” is displayed, this indicates the stacking position of the switch. An “H” indicates the device was assigned as the stacking Master. “h” means the device was selected to be the Backup Master. A “G” is displayed when the Safeguard Engine feature enters the exhausted mode. An “E” is displayed when an error was found during the system self-test.

For more information about LED Indicators, refer to **LED Indicators**.

Rear Panel Components

On the rear panel of the Switch there are an AC power socket, an electrical grounding point, and a security lock.

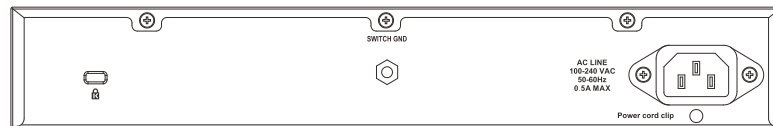


Figure 1-19 Rear panel view of a DGS-1510-20 Switch

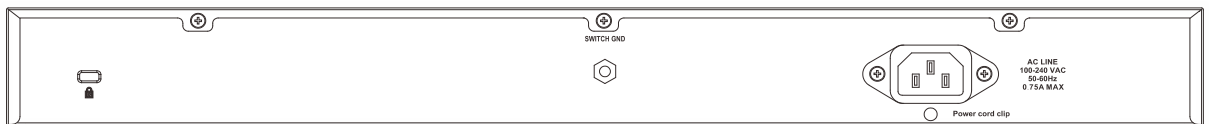


Figure 1-20 Rear panel view of a DGS-1510-28 Switch

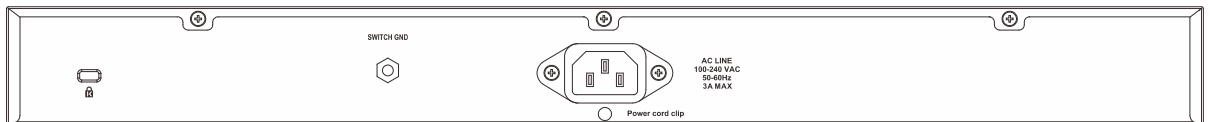


Figure 1-21 Rear panel view of a DGS-1510-28P Switch

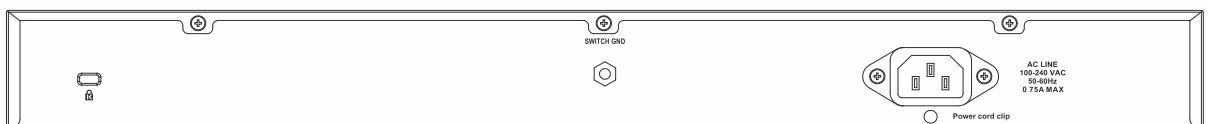


Figure 1-22 Rear panel view of a DGS-1510-28X Switch

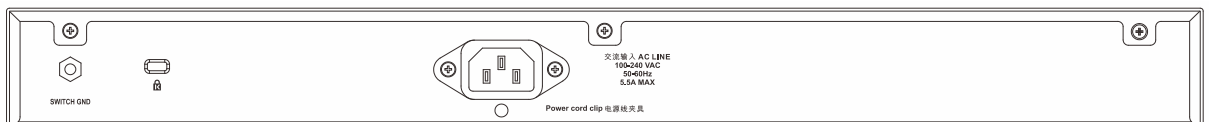


Figure 1-23 Rear panel view of a DGS-1510-28XMP Switch

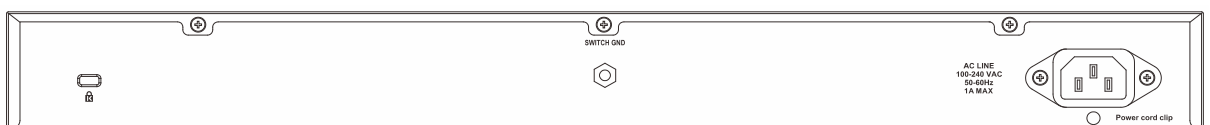


Figure 1-24 Rear panel view of a DGS-1510-52 Switch

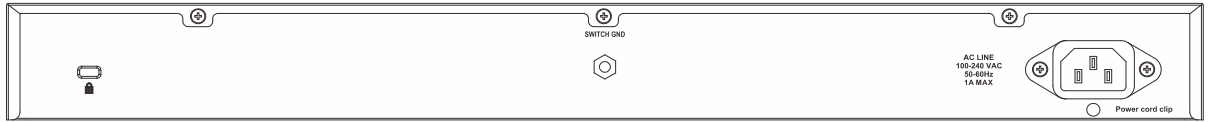


Figure 1-25 Rear panel view of a DGS-1510-52X (HW: A1) Switch

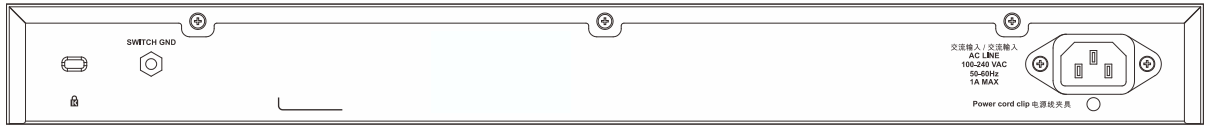


Figure 1-26 Rear panel view of a DGS-1510-52X (HW: A2) Switch

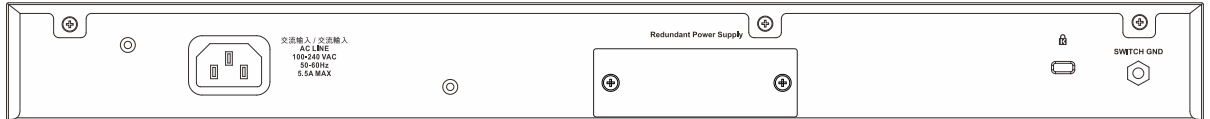


Figure 1-27 Rear panel view of a DGS-1510-52XMP Switch

The AC power connector is a standard three-pronged connector that supports the power cord. Plug-in the female connector of the provided power cord into this socket, and the male side of the cord into a power outlet. The Switch automatically adjusts the power setting to any supply voltage in the range from 100 to 240 VAC at 50 to 60 Hz.

Side Panel Components

On the side panels of the Switch there are heat vents and fans to dissipate heat. Do not block these openings. Leave at least 6 inches of space at the rear and sides of the Switch for proper ventilation. Without proper heat dissipation and air circulation, system components might overheat which could lead to system failure or even severely damaged components.

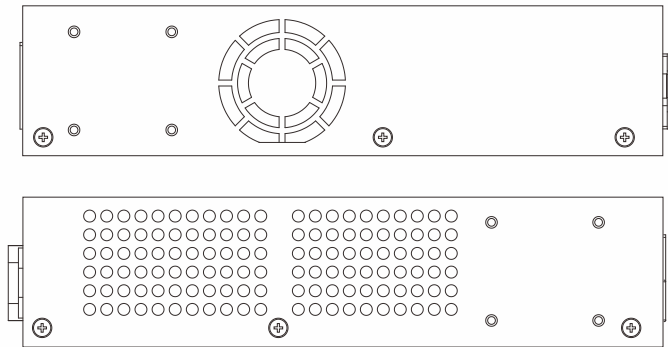


Figure 1-28 Side panels view of a DGS-1510-20 Switch

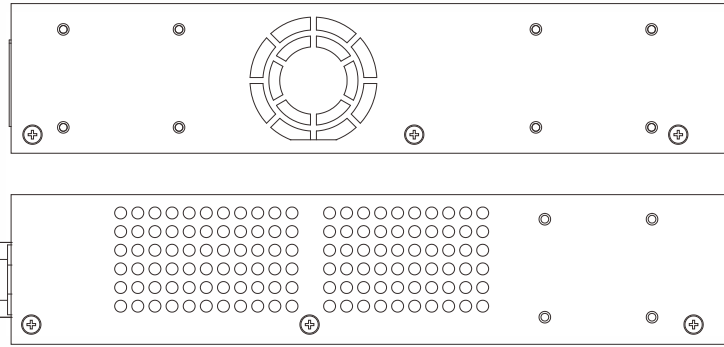


Figure 1-29 Side panels view of a DGS-1510-28 Switch

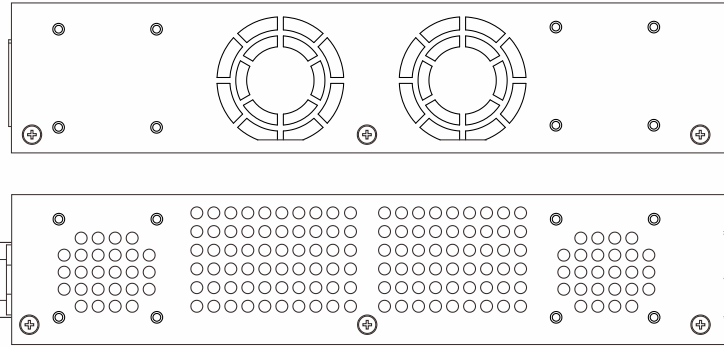


Figure 1-30 Side panels view of a DGS-1510-28P Switch

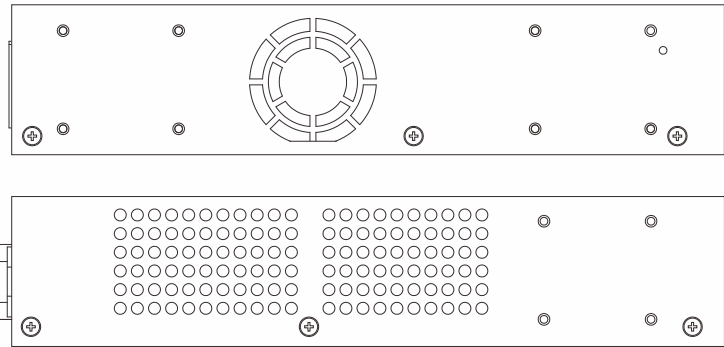


Figure 1-31 Side panels view of a DGS-1510-28X Switch

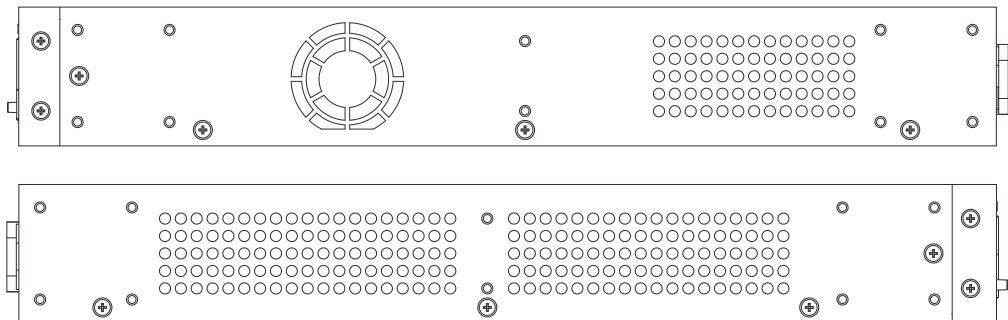


Figure 1-32 Side panels view of a DGS-1510-28XMP Switch

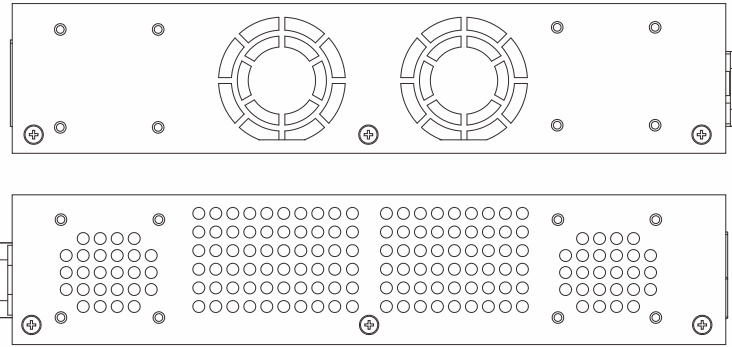


Figure 1-33 Side panels view of a DGS-1510-52 Switch

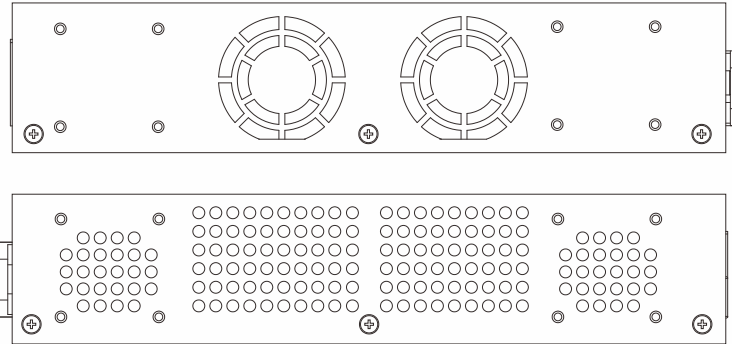


Figure 1-34 Side panels view of a DGS-1510-52X (HW: A1) Switch

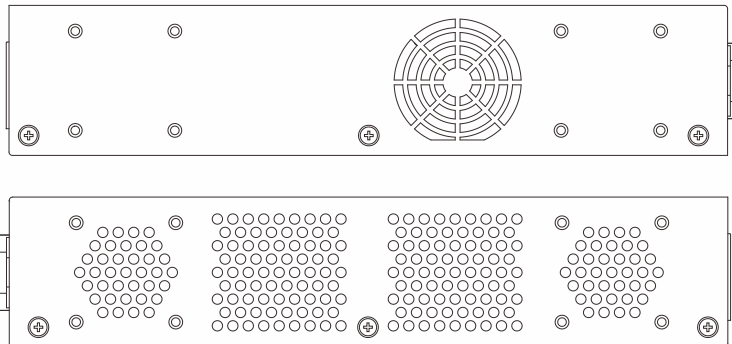


Figure 1-35 Side panels view of a DGS-1510-52X (HW: A2) Switch

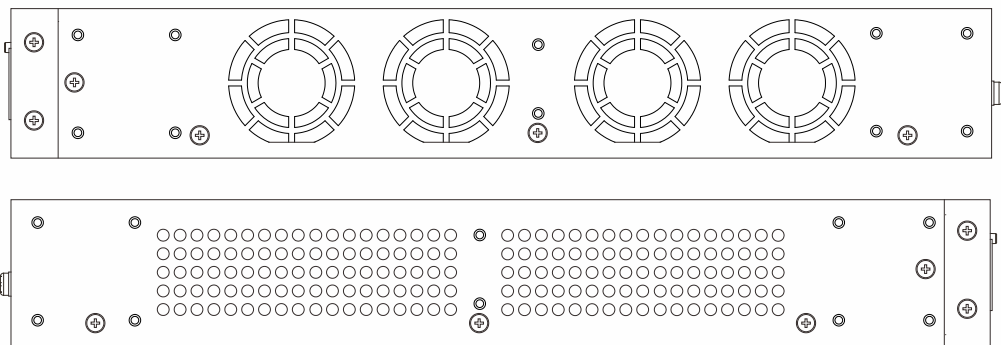


Figure 1-36 Side panels view of a DGS-1510-52XMP Switch

Smart Fans

The DGS-1510 Series Switches includes **smart fans** that will automatically change their speed depending on the internal temperature detected by the sensors built-in the Switch's hardware.

The following will explain at what temperature the speed of the fan(s) will change:

- **DGS-1510-20:** The fan speed will change from:
 - Low Speed to High Speed at 48.0°C.
 - High Speed to Low Speed at 43.0°C.
- **DGS-1510-28:** The fan speed will change from:
 - Low Speed to High Speed at 48.0°C.
 - High Speed to Low Speed at 43.0°C.
- **DGS-1510-28P:** The fan speed will change from:
 - Low Speed to High Speed at 36.0°C.
 - High Speed to Low Speed at 31.0°C.
- **DGS-1510-28X:** The fan speed will change from:
 - Low Speed to High Speed at 48.0°C.
 - High Speed to Low Speed at 43.0°C.
- **DGS-1510-28XMP:** The fan speed will change from:
 - Low Speed to High Speed at 36.0°C.
 - High Speed to Low Speed at 31.0°C.
- **DGS-1510-52:** The fan speed will change from:
 - Low Speed to High Speed at 47.0°C.
 - High Speed to Low Speed at 42.0°C.
- **DGS-1510-52X (HW: A1):** The fan speed will change from:
 - Low Speed to High Speed at 47.0°C.
 - High Speed to Low Speed at 42.0°C.
- **DGS-1510-52X (HW: A2):** The fan speed will change from:
 - Low Speed to Medium Speed at 34.7°C. Medium Speed to High Speed at 44.7°C.
 - High Speed to Medium Speed at 39.7°C. Medium Speed to Low Speed at 29.7°C.
- **DGS-1510-52XMP:** The fan speed will change from:
 - Low Speed to Medium Speed at 34.7°C. Medium Speed to High Speed at 44.7°C.
 - High Speed to Medium Speed at 39.7°C. Medium Speed to Low Speed at 29.7°C.

2. Installation

Installation Guidelines *Power On (AC Power)*

Installation Guidelines

Please follow these guidelines for setting up the Switch:

- Install the Switch on a sturdy, level surface that can support at least 6 kg (13.2 lb). Do not place heavy objects on the Switch.
- The power outlet should be within 1.82 meters (6 feet) of the Switch.
- Visually inspect the power cord and see that it is fully secured to the AC power port.
- Make sure that there is proper heat dissipation from and adequate ventilation around the Switch. Leave at least 10 cm (4 inches) of space at the front and rear of the Switch for ventilation.
- Install the Switch in a fairly cool and dry place for the acceptable temperature and humidity operating ranges.
- Install the Switch in a site free from strong electromagnetic field generators (such as motors), vibration, dust, and direct exposure to sunlight.
- When installing the Switch on a level surface, attach the rubber feet to the bottom of the device. The rubber feet cushion the Switch, protect the casing from scratches and prevent it from scratching other surfaces.

Installing the Switch without a Rack

First, attach the rubber feet included with the Switch if installing on a desktop or shelf. Attach these cushioning feet on the bottom at each corner of the device. Allow enough ventilation space between the Switch and any other objects in the vicinity.

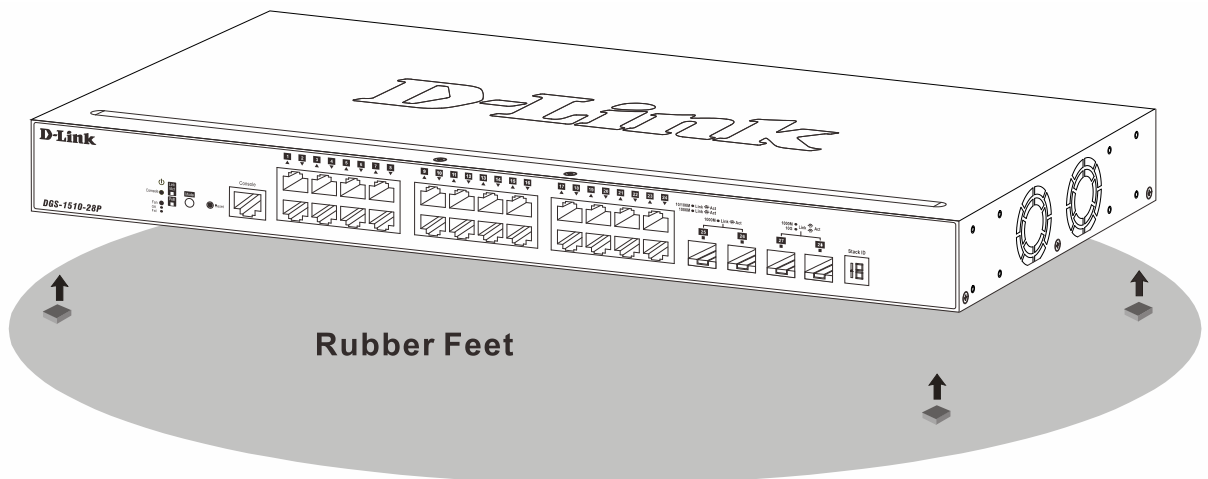


Figure 2-1 Attach rubber feet to the Switch

Attaching Brackets to a Switch for Rack Mounting

The Switch is mounted to a standard 19" rack using mounting brackets. Use the following diagrams as a guide.

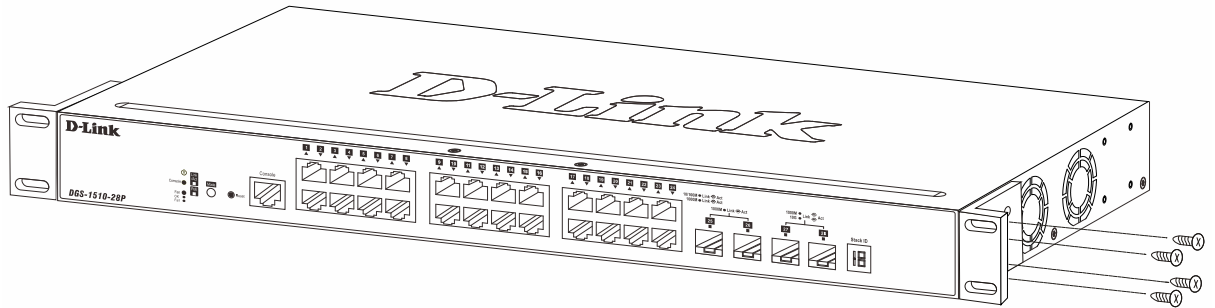


Figure 2-2 Attach mounting brackets to the Switch

Fasten the mounting brackets to the Switch using the screws provided. With the brackets attached securely, the Switch can be mounted in a standard rack, as shown below.



NOTE: Please review the Installation Guidelines above before installing the Switch in a rack. Make sure there is adequate space around the Switch to allow for proper airflow, ventilation and cooling.

Installing the Switch in a Standard 19" Rack

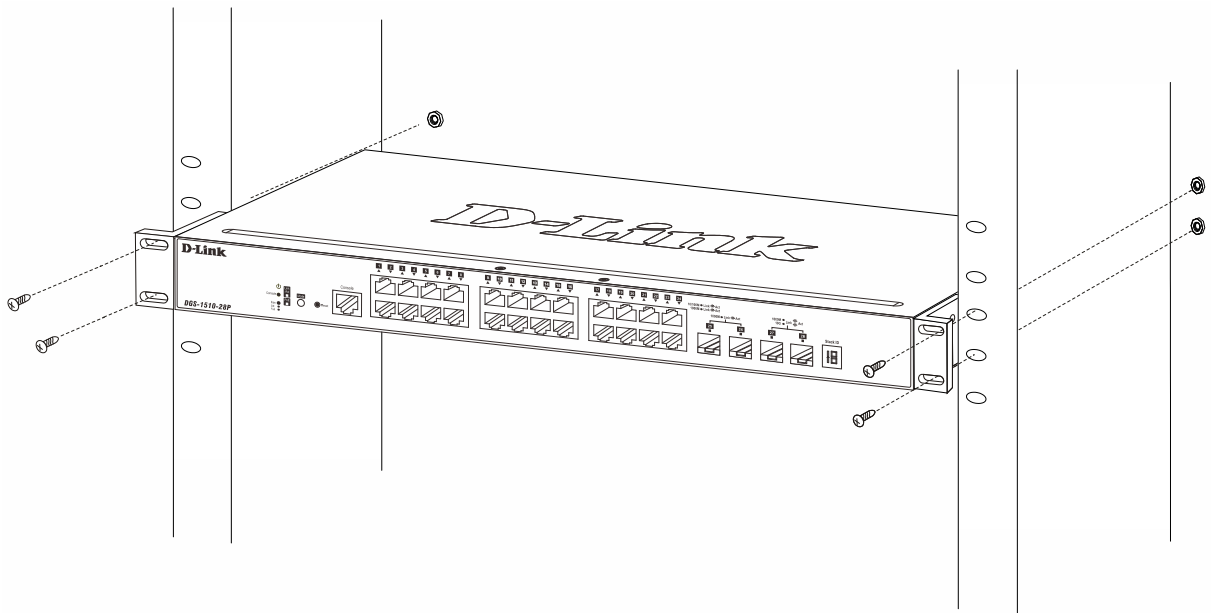


Figure 2-3 Mount the Switch in a rack



CAUTION: Installing systems in a rack without the front and side stabilizers installed could cause the rack to tip over, potentially resulting in bodily injury under certain circumstances. Therefore, always install the stabilizers before installing components in the rack. After installing components in a rack, do not pull more than one component out of the rack on its slide assemblies at one time. The weight of more than one extended component could cause the rack to tip over and may result in injury.



ATTENTION: Le montage de systèmes sur un rack dépourvu de pieds stabilisateurs avant et latéraux peut faire basculer le rack, pouvant causer des dommages corporels dans certains cas. Par conséquent, installez toujours les pieds stabilisateurs avant de monter des composants sur le rack. Après l'installation de composants dans un rack, ne sortez pas plus d'un composant à la fois hors du rack sur ses glissières. Le poids de plusieurs

composants sur les glissières en extension peut faire basculer le rack, pouvant causer des blessures.

Installing Transceivers into the Transceiver Ports

The Switch is equipped with SFP (Small Form Factor Portable) and SFP+ ports, which are used with fiber-optical transceiver cabling. SFP ports support full-duplex transmissions, auto-negotiation, and can be uplinked with various other switches across a gigabit network. The SFP ports support data rates of up to 1Gbit/s and the SFP+ ports support data rates of up to 10Gbit/s.

See the figure below for installing the transceiver in the transceiver port on the Switch.

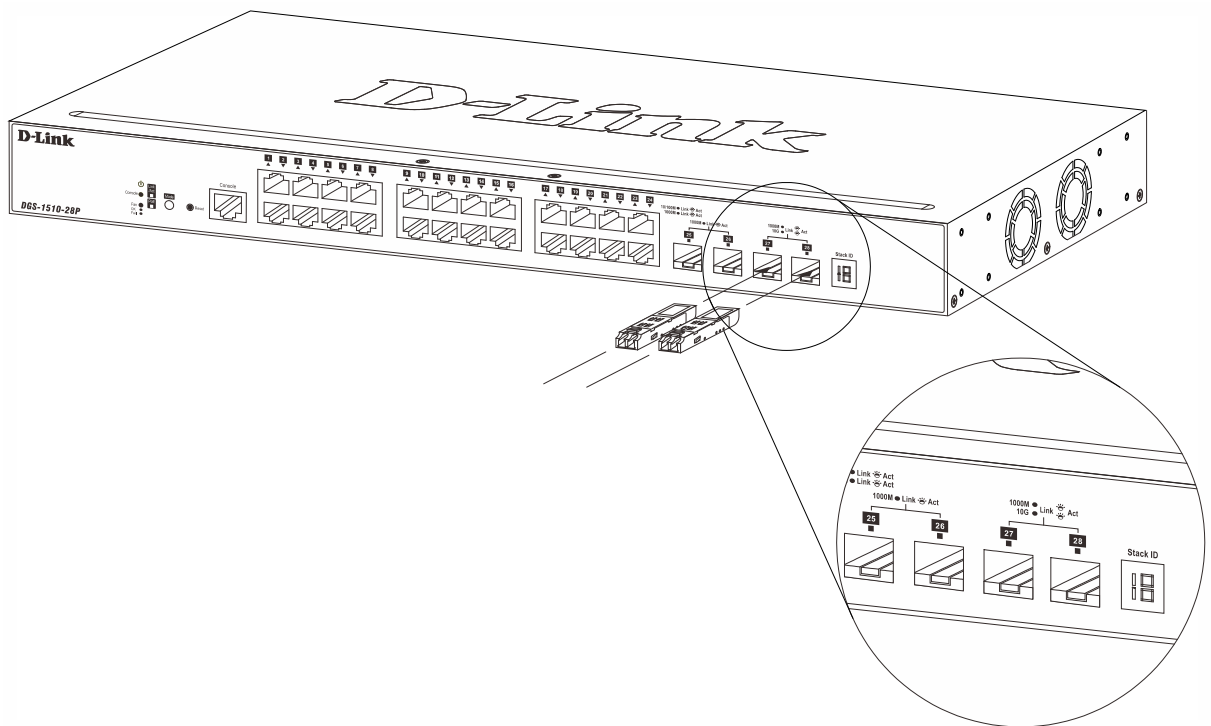


Figure 2-4 Inserting fiber-optic transceivers into a Switch

For a full list of supported transceivers, compatible with this switch series, refer to **Port Functions**.

NOTE: Only use pluggable optical modules and Direct-Attach Cables (DAC) that meet the following regulatory requirements:



- Class 1 Laser Product
- UL and/or CSA registered component for North America
- FCC 21 CFR Chapter 1, Sub-chapter J in accordance with FDA & CDRH requirements
- IEC/EN 60825-1/-2: 2007 2nd edition or later, European Standard

Power On (AC Power)

Plug one end of the AC power cord into the power socket of the Switch and the other end into the local power source outlet. After the system powered on, the LED's blink green to indicate that the system is booting up.

Power Failure (AC Power)

In the event of a power failure, just as a precaution, unplug the power cord from the Switch. After the power returns, plug the power cord back into the power socket of the Switch.

Installing Power Cord Clip

To prevent accidental removal of the AC power cord, it is recommended to install the power cord clip together with the power cord.



NOTE: The DGS-1510-52XMP does not support the installation of the power cord clip.

With the rough side facing down, insert the Tie Wrap into the hole below the power socket.

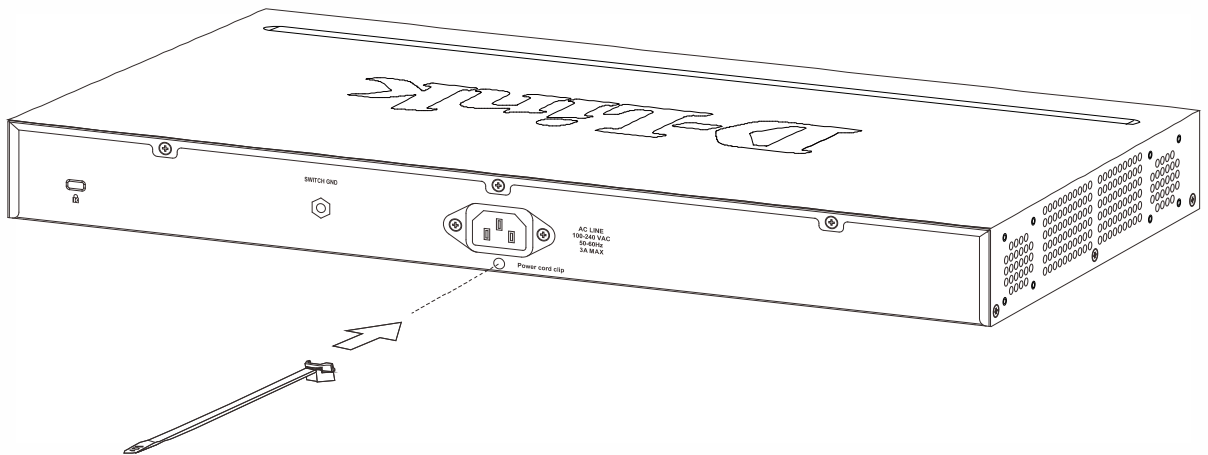


Figure 2-5 Insert Tie Wrap to the Switch

Plug the AC power cord into the power socket of the Switch.

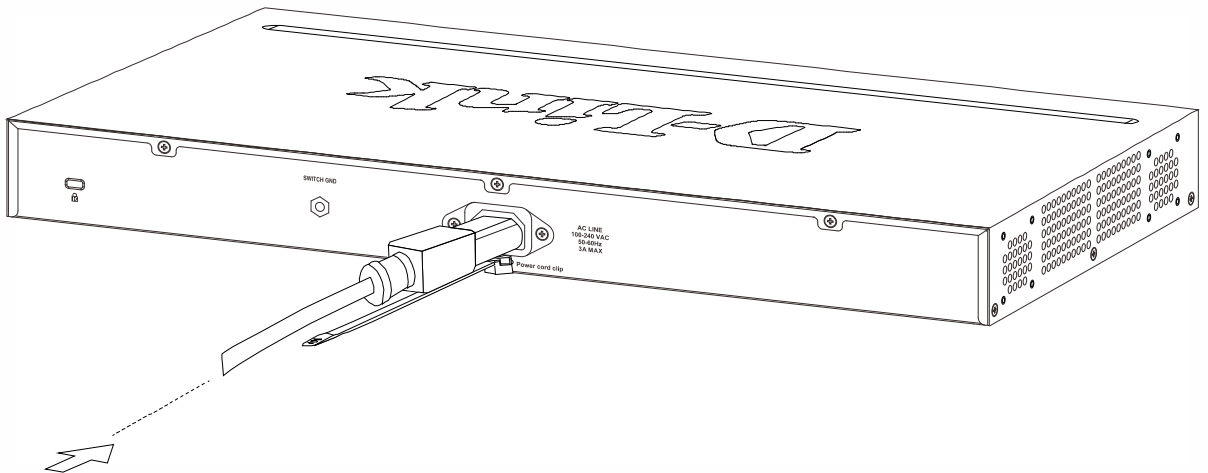


Figure 2-6 Connect the power cord to the Switch

Slide the Retainer through the Tie Wrap until the end of the cord.

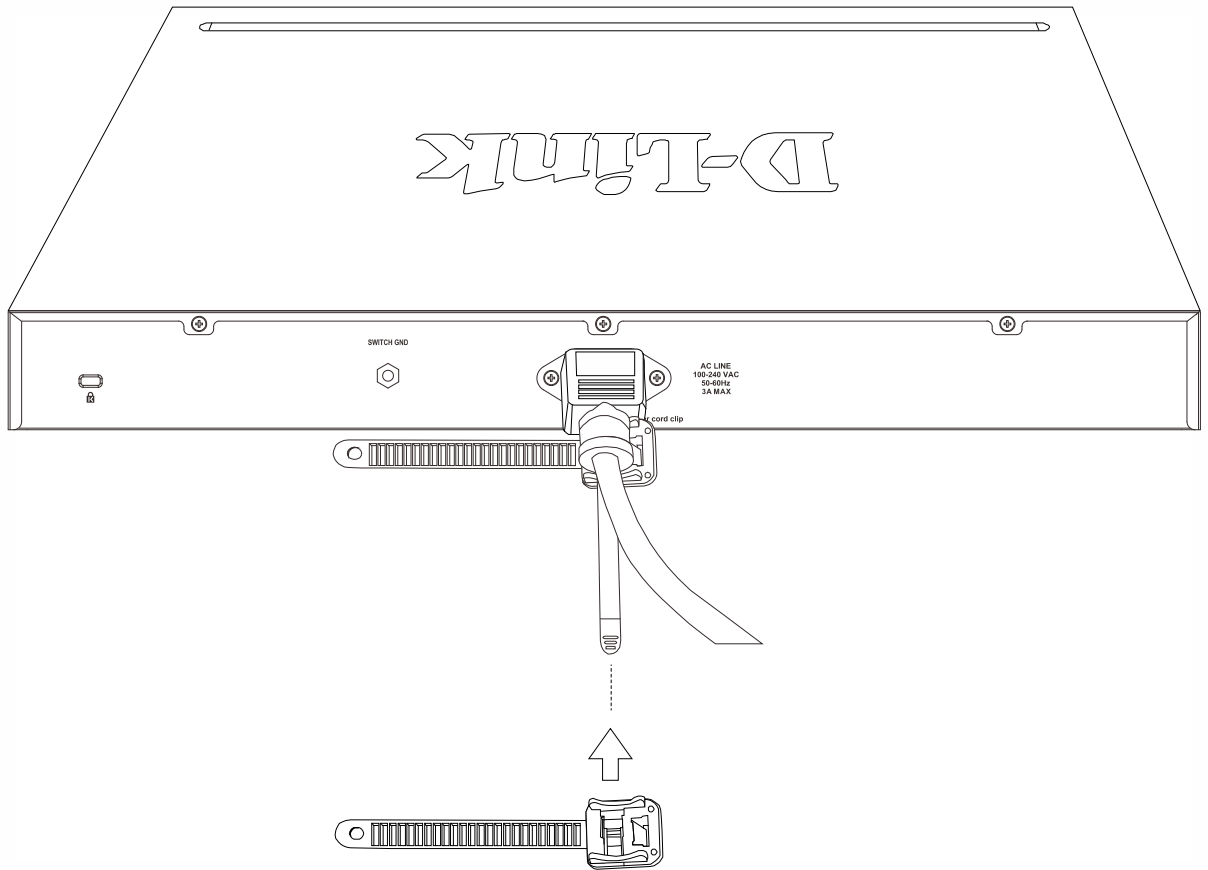


Figure 2-7 Slide the Retainer through the Tie Wrap

Circle the tie of the Retainer around the power cord and into the locker of the Retainer.

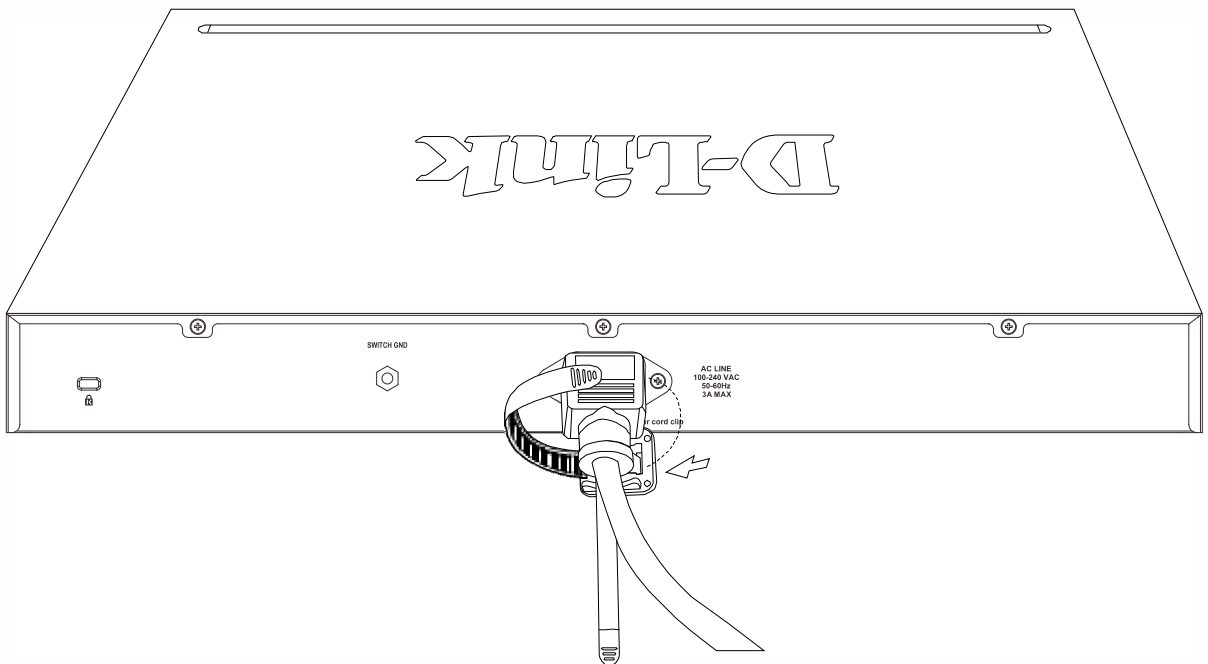


Figure 2-8 Circle around the power cord

Fasten the tie of the Retainer until the power cord is secured.

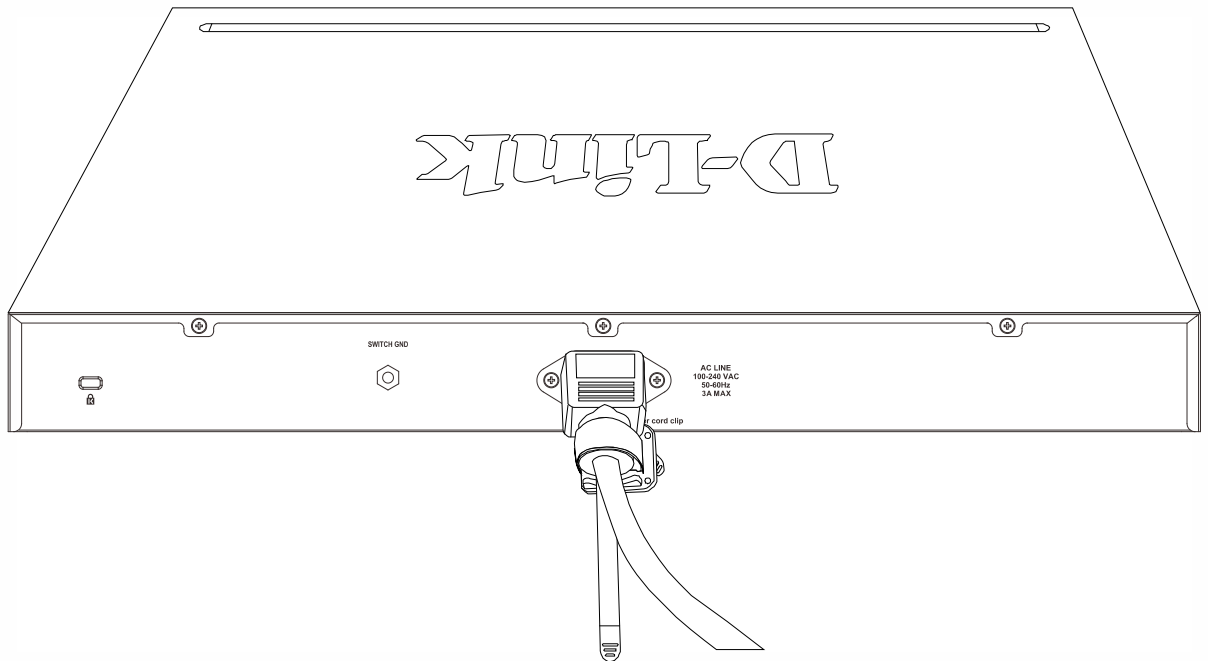


Figure 2-9 Secure the power cord

Installing the RPS into a Rack-mount Chassis

The DPS-700 is a redundant power supply unit designed to conform to the voltage requirements of the switches being supported.

The DPS-700 can only be used with the DGS-1510-52XMP.



CAUTION: DO NOT connect the RPS to AC power before the DC power cable is connected. This might damage the internal power supply.



ATTENTION: Ne branchez pas le RPS sur le courant alternatif avant que le câble d'alimentation en courant continu ne soit branché. Cela pourrait endommager l'alimentation électrique interne.

DPS-700

The DPS-700 is connected to the Master Switch using a 22-pin DC power cable. A standard, three-pronged AC power cable connects the redundant power supply to the main power source.

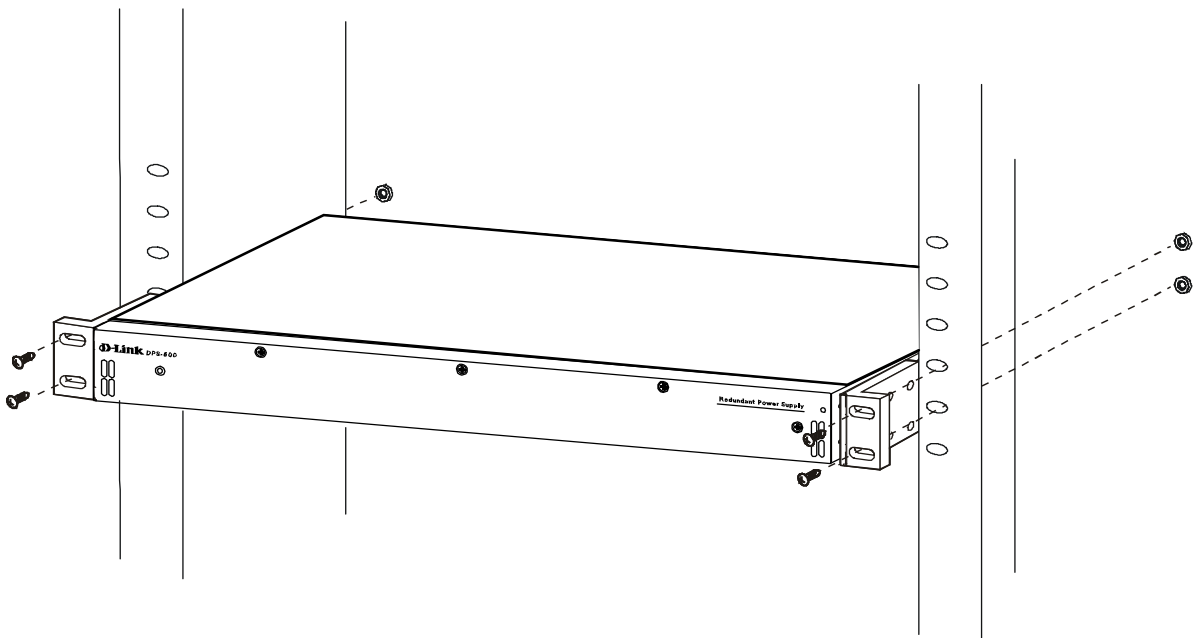


Figure 2-10 Front view of the DPS-700

1. Insert one end of the 22-pin DC power cable into the receptacle on the Switch and the other end into the Redundant Power Supply unit.
2. Using a standard AC power cable, connect the redundant power supply to the main AC power source. A green LED on the front of the DPS-700 will glow to indicate a successful connection.
3. Re-connect the Switch to the AC power source. The LED indicator will show that a redundant power supply is now in operation.
4. No configuration in the Switch's firmware is needed for this installation.



NOTE: See the RPS Quick Installation Guide for more information.

REAR PANEL OF DGS-1510-52XMP

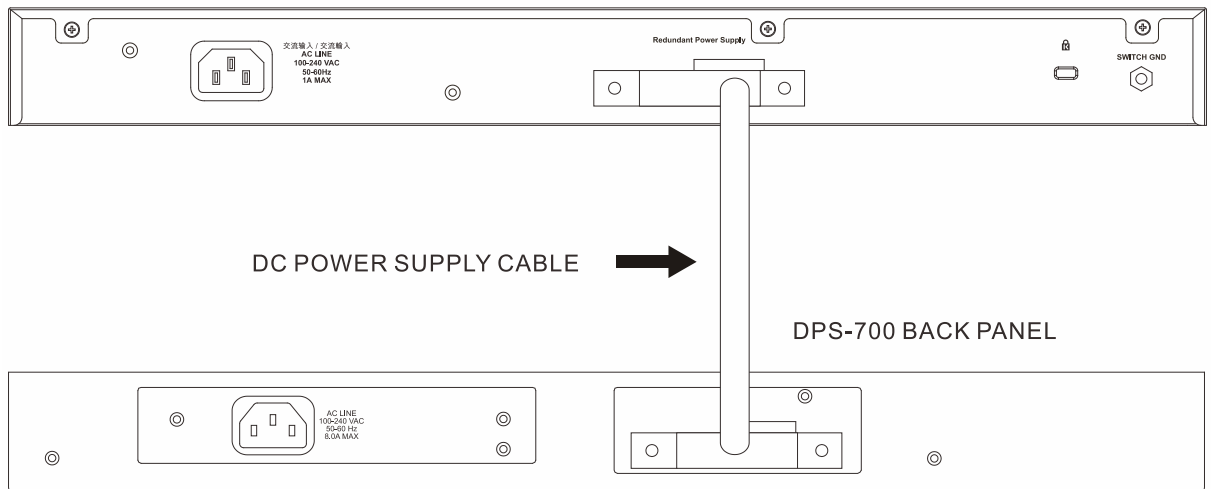


Figure 2-11 Rear view of the DPS-700 connected to a DGS-1510-52XMP



CAUTION: Do not connect the DPS-700 to the DGS-1510-52XMP by using the 14-pin DC power cable. It may cause damage when using the wrong DC power cable. ONLY use the 22-pin DC power cable.



ATTENTION: Ne connectez pas le DPS-700 au DGS-1510-52XMP en utilisant le câble d'alimentation CC à 14 broches. Cela pourrait causer des dommages en utilisant le mauvais câble d'alimentation CC. Utilisez UNIQUEMENT le câble d'alimentation CC à 22 broches.

3. Connecting the Switch

Switch to End Node
Switch to another Switch
Switch to a Server

Switch to End Node

An End Node can be any networking device, plugged into any of the networking ports of the Switch, where data transmission ends. Typical end nodes are computers. End nodes are generally outfitted with a 10/100/1000Mbps RJ-45 Ethernet Network Interface Card (NIC) that can connect to the Switch via a twisted-pair UTP/STP cable. Connect the end node to any of the copper ports of the Switch. The Link/Act LEDs for each Ethernet port turns green or amber when the link is active. A blinking LED indicates packet activity on that port.

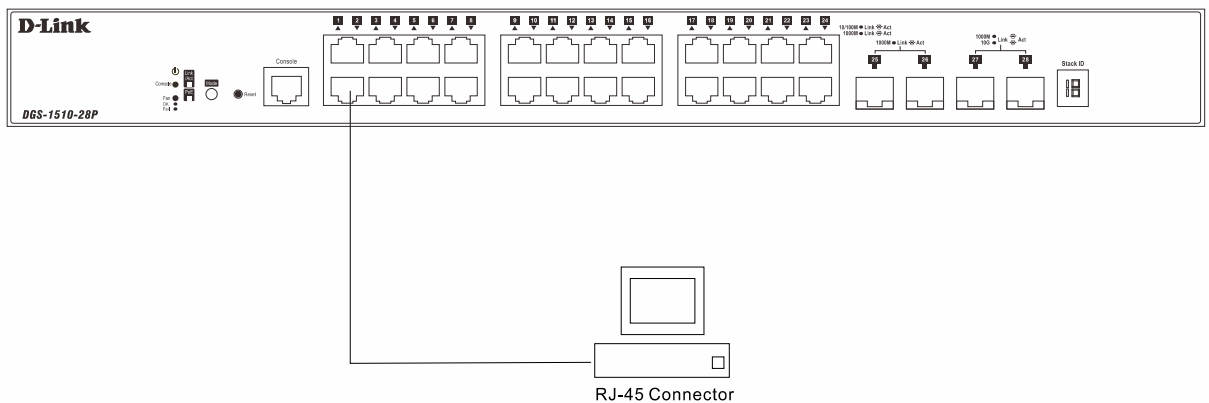


Figure 3-1 End Node to Switch Connection

Switch to another Switch

There is a great deal of flexibility on how connections are made using the appropriate cabling.

- Connect a 10BASE-T switch port to the Switch via a twisted-pair Category 3, 4 or 5 UTP/STP cable.
- Connect a 100BASE-TX switch port to the Switch via a twisted-pair Category 5 UTP/STP cable.
- Connect 1000BASE-T switch port to the Switch via a twisted pair Category 5e UTP/STP cable.
- Connect switch supporting a fiber-optic uplink to the Switch's SFP ports via fiber-optic cabling.

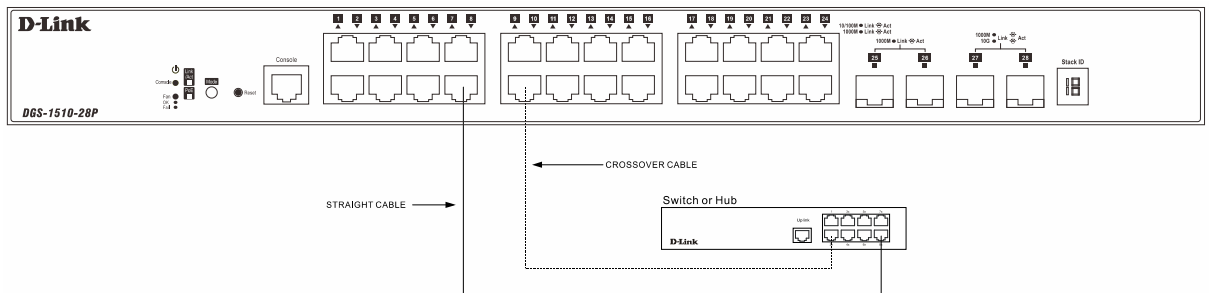


Figure 3-2 Switch to Switch Connection

Switch to a Server

The Combo Copper/SFP ports are ideal for connecting a network backbone, server or server farm to the Switch. The copper ports operate at a speed of 10/100/1000Mbps in half-duplex or full-duplex mode. The fiber-optic ports can operate at both 100/1000Mbps in full-duplex mode. The Link LED turns green when a connection is made.

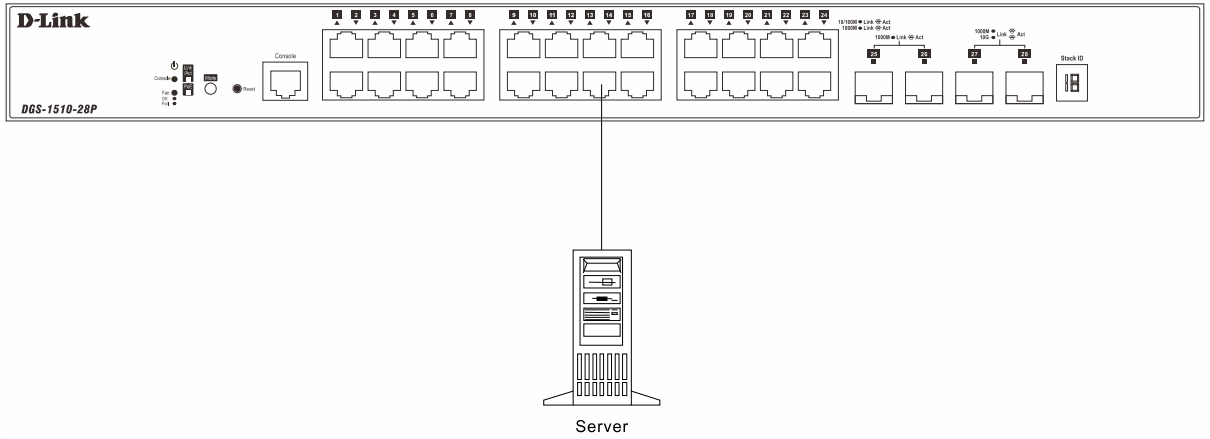


Figure 3-3 Server to Switch Connection

4. Introduction to Switch Management

Management Options
Connecting the Console Port
SNMP Settings

Management Options

This Switch can be managed, out-of-band, through the console port on the front panel or in-band using Telnet. Alternatively, the web-based management can be used, accessible through a web browser.

Command Line Interface (CLI) Management

The user can connect a computer or terminal to the serial console port to access the Switch. The Command Line Interface (CLI) provides complete access to all Switch management features. When connecting to the Switch by means of Telnet or SSH, the same CLI can be accessed for Switch management. For more detailed information about the CLI, refer to the *CLI Reference Guide*.

SNMP-based Management

The Switch can also be managed with an SNMP-compatible console program. The Switch supports SNMPv1, SNMPv2c, and SNMPv3. The SNMP agent decodes the incoming SNMP messages and responds to requests with MIB objects stored in the database. The SNMP agent updates the MIB objects to generate statistics and counters.

Web-based User Interface (Web UI) Management

The user can connect a computer to any one of the frontal ports of the Switch, other than the console port, to access the Web UI of the Switch by means of a Web browser and entering the IP address of the Switch. This management interface is a more graphically representation of the features that can be viewed and configured on this Switch. Most of the features available from the CLI can be accessed through the Web UI. Web browsers like Microsoft's Internet Explorer, Mozilla Firefox or Google Chrome can be used. For more detailed information about the Web UI, refer to the *Web UI Reference Guide*.

Connecting the Console Port

This section describes how to access the CLI through the serial port. To connect to the serial port, a special **Console Cable** must be used. This cable is included with this product's packaging. The cable referred to as an RS-232 to RJ-45 connector cable specifically pinned to connect to this switch's serial port by using the correct pin configuration.

For more information about the pin layout of this cable, refer to **Appendix B**.

To connect to the console port of the Switch, use the following steps:

- Connect the RS-232 end of the console cable to the **Serial Port** of the management PC.
- Connect the RJ-45 end of the console cable to the **Console Port** of the Switch.
- Open the **HyperTerminal** application (or any terminal emulation program capable of emulating a VT-100 terminal connection) on the management PC and configure the **Properties** of this connection.
 - The **Bits per second** should be **115200** baud.
 - The **Data bits** should be **8**.

- The **Parity** should be **None**.
- The **Stop bits** should be **1**.
- The **Flow control** should be **None**.

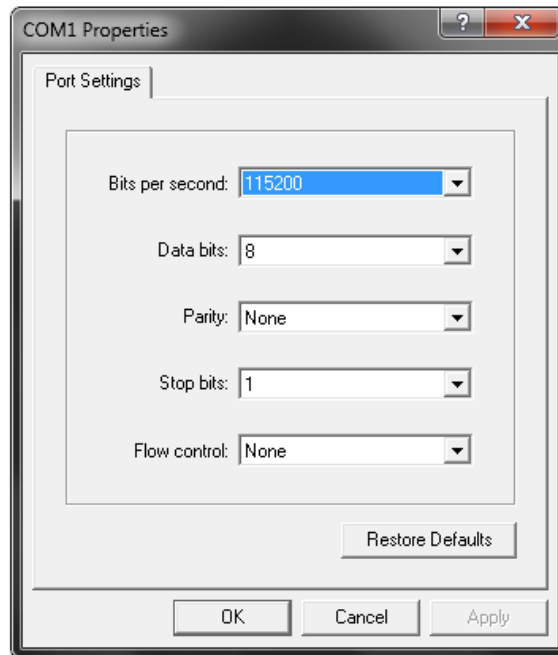


Figure 4-1 HyperTerminal Connection Properties

- Now the Switch can be turned on and access to the Switch's CLI will be available.



NOTE: Access to the console port can be made at any time while the Switch is on. There is no need to turn the Switch off when plugging the console cable into the console port.

Connecting to the Switch for the First Time

After successfully connecting to the Switch's console and the Switch was turned on, the boot-up procedure will be displayed, as shown below.

```
Boot Procedure V1.00.017
-----

Power On Self Test ..... 100 %

MAC Address   : 3C-1E-04-A1-B9-E0
H/W Version   : A1

Please Wait, Loading V1.81.004 Runtime Image ..... 100 %
UART init ..... 100 %
Starting runtime image
Device Discovery ..... 100 %
Configuration init ..... 100 %

Switch con0 is now available

Press any key to login...
```

During the boot-up procedure, we can find the PROM version, MAC address, Hardware Version, and Firmware Version used by this Switch.



NOTE: Both the default **username** and **password** is *admin*.

Enter the username and password when prompt to do so and press enter after each entry. The CLI prompt will immediately be available, as shown below.

```
DGS-1510-28XMP Gigabit Ethernet SmartPro Switch

Command Line Interface
Firmware: Build 1.81.004
Copyright(C) 2022 D-Link Corporation. All rights reserved.

User Access Verification

Username:admin
Password:*****

Switch#
```

Now the Switch can be configured.



CAUTION: For security reasons, it is highly recommended to configure a personal username and password for this Switch.



ATTENTION: Pour des raisons de sécurité, il est fortement recommandé de configurer un nom d'utilisateur et un mot de passe personnels pour ce commutateur.

Creating a User Account

This section will discuss how to create a login username and password on this Switch. This login details will be applied not only for access to the CLI, but also for access to the Web UI, Telnet, SSH, and SSL interfaces. The same username and password will be used for these connections.

To create a user account, enter the following commands.

```
Switch> enable
Switch# configure terminal
Switch(config)# username Administrator password 12345
Switch(config)# username Administrator privilege 15
Switch(config)# line console
Switch(config-line)# login local
Switch(config-line)#
```

In the above example,

- We accessed the **Privileged EXEC Mode** by entering the command **enable**.
- Then we entered the **Global Configuration Mode** by entering the command **configure terminal**.
- Then we created a user account with the username of '**Administrator**' and gave it the password of '**12345**' by entering the command **username Administrator password 12345**.
- Then we assigned the privilege level of 15 to this user account by entering the command **username Administrator privilege 15**. The highest level access is 15 and the lowest level access is 1.
- Then we entered the **LINE Configuration Mode** by entering the command **line console**.
- Then we configured the Switch to allow access to the management interface by using locally configured user accounts. The command is **login local**.



NOTE: CLI configuration commands only modify the running configuration file and are not saved when the Switch is rebooted. To save all your configuration changes in non-volatile storage, you must use the **copy running-configuration start-up-configuration** command to copy the running configuration file to the start-up configuration. For more information, refer to the *CLI Reference Guide*.

Configuring the IP Address

Each networking node, within a network, must use a unique IP Address. This IP address is used to communicate with other networking devices in the network. The IP address of the Switch is also important to be able to access the Web UI of this Switch.

There are two methods in which a Switch can obtain an IP address.

- The Switch can obtain an IP address from a DHCP server located within the local network. By default, this option is not enabled.
- The administrator can manually configure an IP address for this Switch.

To find out what the IP address of the Switch is, we again need to access the Switch management interface through the CLI. Take note of the following example.

```
Switch> show ip interface

Interface vlan1 is enabled, Link status is down
  IP Address is 10.90.90.90/8 (Manual)
  ARP timeout is 20 minutes.
  Proxy ARP is disabled
  IP Local Proxy ARP is disabled
  gratuitous-send is disabled, interval is 0 seconds

Total Entries: 1

Switch>
```

In the above example, the command **show ip interface** is used to display information about the IP interfaces created on this Switch. In this display we see that the IP address for this switch is **10.90.90.90** and the CIDR notation for the subnet mask is **/8** which translates to **255.0.0.0**. This information can however be modified, as show below.

```
Switch> enable
Switch# configure terminal
Switch(config)# interface vlan 1
Switch(config-if)# ip address 192.168.1.1 255.255.255.0
Switch(config-if)#
```

In the above example,

- We accessed the **Privileged EXEC Mode** by entering the command **enable**.
- Then we entered the **Global Configuration Mode** by entering the command **configure terminal**.
- Then we entered the **VLAN Configuration Mode** of the default VLAN, which is VLAN 1, by entering the command **interface vlan 1**.
- Then we changed the IP address of the Switch to 192.168.1.1 and the subnet mask to 255.255.255.0 by entering the command **ip address 192.168.1.1 255.255.255.0**.

SNMP Settings

The Simple Network Management Protocol (SNMP) is an OSI Layer 7 (Application Layer) designed specifically for managing and monitoring network devices. SNMP enables network management stations to read and modify the settings of gateways, routers, switches and other network devices. Use SNMP to configure system features for proper operation, monitor performance and detect potential problems in the Switch, switch group or network.

Managed devices that support SNMP include software (referred to as an agent), which runs locally on the device. A defined set of variables (managed objects) is maintained by the SNMP agent and used to manage the device. These objects are defined in a Management Information Base (MIB), which provides a standard presentation of the information controlled by the on-board SNMP agent. SNMP defines both the format of the MIB specifications and the protocol used to access this information over the network.

The Switch supports SNMPv1, SNMPv2c, and SNMPv3. The administrator may specify which SNMP version to use to monitor and control the Switch. The three SNMP versions vary in the level of security provided between the management station and the network device.

In SNMPv1 and SNMPv2, user authentication is accomplished using 'community strings', which function like passwords. The remote user SNMP application and the Switch SNMP must use the same community string. SNMP packets from any station that has not been authenticated are ignored (dropped).

The default community strings for the Switch used for SNMPv1 and SNMPv2 management access are:

- **public** - Allows authorized management stations to retrieve MIB objects.
- **private** - Allows authorized management stations to retrieve and modify MIB objects.

SNMPv3 uses a more sophisticated authentication process that is separated into two parts. The first part is to maintain a list of users and their attributes that are allowed to act as SNMP managers. The second part describes what each user on that list can do as an SNMP manager.

The Switch allows groups of users to be listed and configured with a shared set of privileges. The SNMP version may also be set for a listed group of SNMP managers. Thus, a group of SNMP managers can be created to view read-only information or receive traps using SNMPv1 while assigning a higher level of security to another group, granting read/write privileges using SNMPv3.

Using SNMPv3 individual users or groups of SNMP managers can be allowed to perform or be restricted from performing specific SNMP management functions. The functions allowed or restricted are defined using the Object Identifier (OID) associated with a specific MIB. An additional layer of security is available for SNMPv3 in that SNMP messages may be encrypted.

Traps

Traps are messages that alert network personnel of events that occur on the Switch. The events can be as serious as a reboot (someone accidentally turned OFF the Switch), or less serious like a port status change. The Switch generates traps and sends them to the trap recipient (or network manager). Typical traps include trap messages for Authentication Failure, Topology Change and Broadcast/Multicast Storm.

Management Information Base (MIB)

The Switch in the Management Information Base (MIB) stores management and counter information. The Switch uses the standard MIB-II Management Information Base module. Consequently, values for MIB objects can be retrieved from any SNMP-based network management software. In addition to the standard MIB-II, the Switch also supports its own proprietary enterprise MIB as an extended Management Information Base. The proprietary MIB may also be retrieved by specifying the MIB Object Identifier. MIB values can be either read-only or read-write.



NOTE: For customers interested in D-View, D-Link Corporation's proprietary SNMP management software, go to <http://dview.dlink.com.tw/> and download the software and manual.

5. Web-based Switch Configuration

Introduction

Logging onto the Web Manager

Web-based User Interface

Introduction

Most software functions of the Switch can be managed, configured, and monitored via the embedded Web User Interface (Web UI). Manage the Switch from remote stations anywhere on the network through a standard browser, such as Internet Explorer (version 7 and later), Mozilla Firefox, Chrome, or Safari. The browser acts as a universal access tool and can communicate directly with the Switch using the HTTP protocol.

Logging onto the Web Manager

To access the Web UI, simply open a standard web browser on the management PC, enter the Switch's default IP address into the address bar of the browser and press the **Enter** key.



NOTE: The default IP address of this switch is **10.90.90.90**, with a subnet mask of **255.0.0.0**.



Figure 5-1 IP address in Internet Explorer



NOTE: The default username is *admin* and the default password is *admin*.

This will open the user authentication window, as seen below.

Connect to 10.90.90.90	
User Name	<input type="text" value="admin"/>
Password	<input type="password" value="....."/>
Language	<input type="text" value="English"/> ▾
<input type="button" value="Login"/> <input type="button" value="Reset"/>	

Figure 5-2 Enter Network Password Window

Enter the **User Name** and **Password** in the corresponding fields and click **Login**. This will open the Web UI. Management features available in the Web UI of the Switch are explained below.

Web-based User Interface

The user interface provides access to various Switch configuration and management windows, it allows the user to view performance statistics, and permits graphical monitoring of the system status.

Areas of the User Interface

The Web UI on the Switch can be divided into distinct **Areas**. Different areas in the Web UI provide different manageability options to simplify configuration and feature monitoring.

After accessing the Web UI in the **Standard Mode**, the following will be displayed:

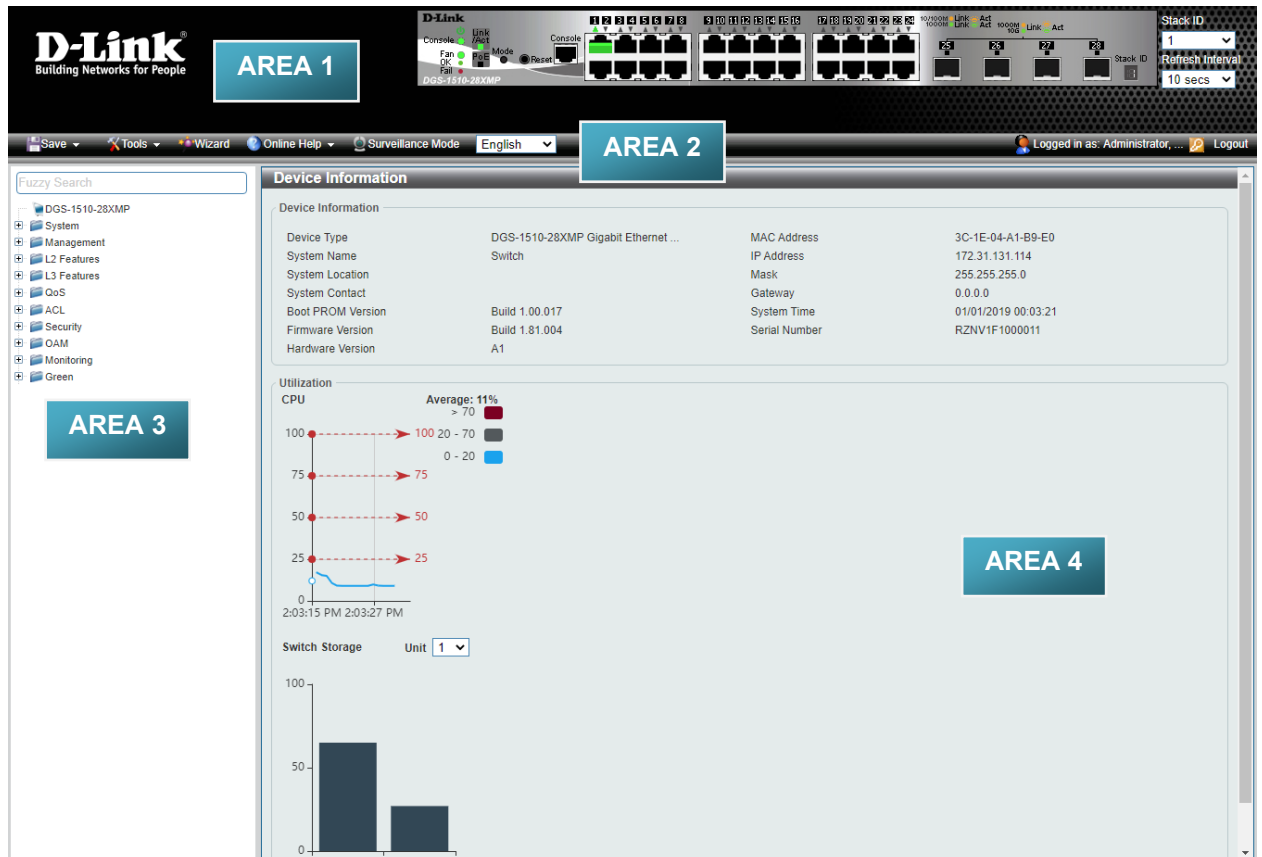


Figure 5-3 Web UI (Standard Mode)

The following **Areas** can be observed in the above window.

Area Number	Description
AREA 1	In this area, a graphical near real-time image of the front panel of the Switch is displayed with ports and expansion modules. Port activity is displayed, depending on the specified mode. Some management functions like port monitoring are also accessible here. Click the D-Link logo to go to the D-Link website.
AREA 2	In this area is a toolbar used to access functions like Save , Tools , the Wizard , Online Help , accessing the Web UI in the Surveillance Mode , customized Language preference, and a Logout option. The user account and IP address currently logged into the Web UI will also be displayed in this toolbar.
AREA 3	In this area, the software features available in the Web UI of the Switch are grouped into folders containing hyperlinks that will open window frames in area 4.

Area Number	Description
	There is also a search option in this area that can be used to search for specific feature keywords in the Web UI to easily find the link to the set of features.
AREA 4	In this area, configuration and monitoring window frames are available based on the selections made in area 3.

After accessing the Web UI in the **Surveillance Mode**, the following will be displayed:

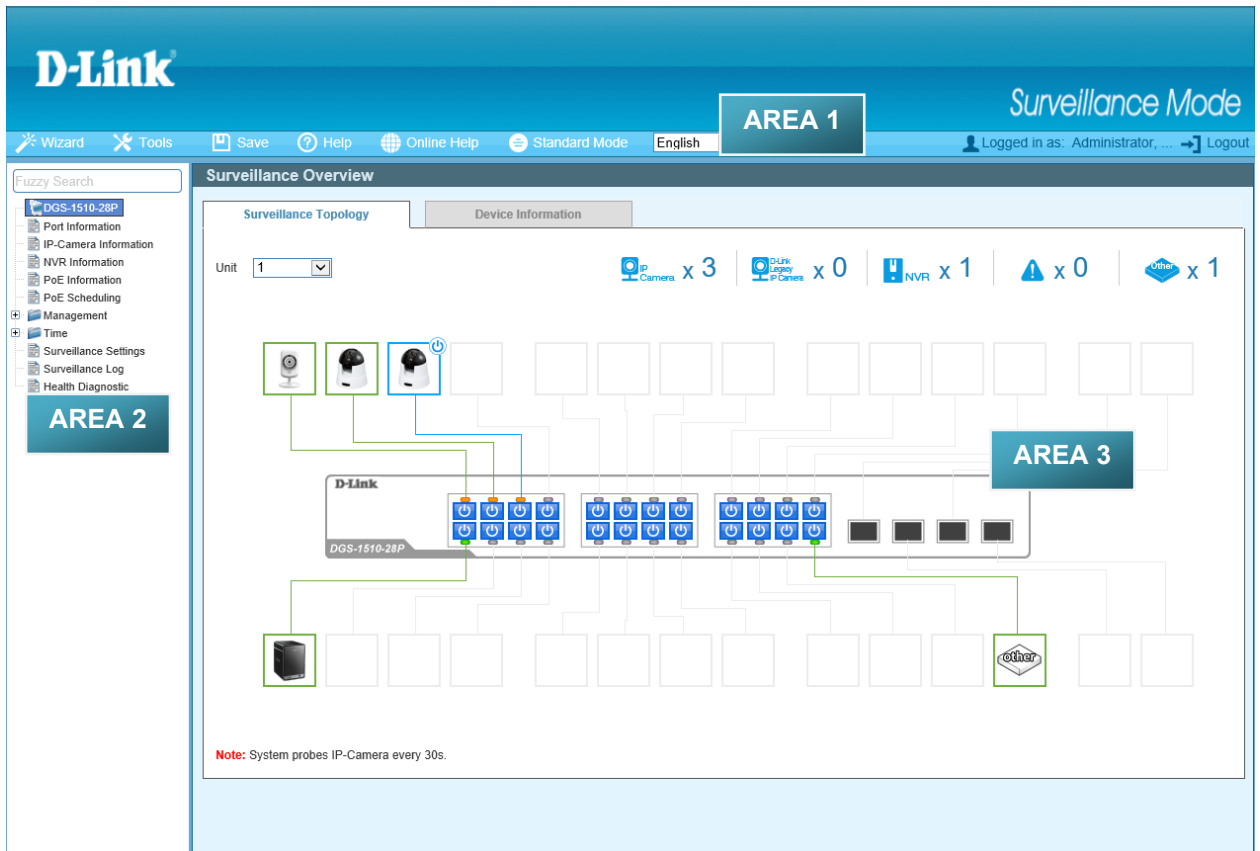


Figure 5-4 Web UI (Surveillance Mode)

The following **Areas** can be observed in the above window.

Area Number	Description
AREA 1	In this area is a toolbar used to access functions like the Wizard , Tools , Save , Help , Online Help , accessing the Web UI in the Standard Mode , customized Language preference, and a Logout option. The user account and IP address currently logged into the Web UI will also be displayed in this toolbar.
AREA 2	In this area, the software features available in the Web UI of the Switch are grouped into folders containing hyperlinks that will open window frames in area 3. There is also a search option in this area that can be used to search for specific feature keywords in the Web UI to easily find the link to the set of features.
AREA 3	In this area, configuration and monitoring window frames are available based on the selections made in area 2.

Appendix A – Technical Specifications

General

Feature	Detailed Description		
Standards	IEEE 802.1AB Link Layer Discovery Protocol IEEE 802.1D-2004 Spanning Tree Protocol IEEE 802.1p Priority Queues IEEE 802.1Q-2005 Virtual LAN IEEE 802.1S Multiple Spanning Tree Protocol IEEE 802.1W Rapid Spanning Tree Protocol IEEE 802.1X Port-based Authentication IEEE 802.3i 10BASE-T Ethernet IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3ab 1000BASE-T Gigabit Ethernet IEEE 802.3ad Link Aggregation IEEE 802.3ae 10GBASE-X/10GBASE-R/10GBASE-W IEEE 802.3af Power over Ethernet IEEE 802.3at Power over Ethernet IEEE 802.1az Energy-Efficient Ethernet IEEE 802.3x Flow Control support for Full-Duplex mode IEEE 802.3z 1000BASE-T Gigabit Ethernet		
Data Transfer Rates		Half-duplex	Full-duplex
	Ethernet	10 Mbps	20 Mbps
	Fast Ethernet	100 Mbps	200 Mbps
	Gigabit Ethernet	-	2 Gbps
	10 Gigabit Ethernet	-	20 Gbps
Stacking Topology	Duplex Ring, Duplex Chain		
Network Cables	UTP/STP Category 3, 4, 5 for 10BASE-T UTP/STP Category 5 Enhanced for 1000BASE-T UTP/STP Category.5, 5 Enhanced for 100BASE-TX EIA/TIA-568 100Ω screened twisted-pair (STP) (100m)		

Physical and Environmental

Feature	Detailed Description	
Internal Power Supply	DGS-1510-20:	100-240 VAC, 50/60 Hz, 24 Watt
	DGS-1510-28:	100-240 VAC, 50/60 Hz, 30 Watt
	DGS-1510-28P:	100-240 VAC, 50/60 Hz, 253 Watt
	DGS-1510-28X:	100-240 VAC, 50/60 Hz, 30 Watt
	DGS-1510-28XMP:	100-240 VAC, 50/60 Hz, 430 Watt
	DGS-1510-52:	100-240 VAC, 50/60 Hz, 54 Watt
	DGS-1510-52X:	100-240 VAC, 50/60 Hz, 54 Watt
	DGS-1510-52XMP:	100-240 VAC, 50/60 Hz, 589 Watt

Feature	Detailed Description	
Fans	The IC Sensor detects the temperature on the switch automatically, and adjusts the speed. The amount of fans that are installed per Switch are listed below:	
	DGS-1510-20:	1 fan
	DGS-1510-28:	1 fan
	DGS-1510-28P:	2 fans
	DGS-1510-28X:	1 fan
	DGS-1510-28XMP:	2 fans
	DGS-1510-52:	2 fans
	DGS-1510-52X (HW: A1):	2 fans
	DGS-1510-52X (HW: A2):	1 fan
DGS-1510-52XMP:	4 fans	
Maximum Power Consumption	DGS-1510-20:	20.3 Watt
	DGS-1510-28:	21.2 Watt
	DGS-1510-28P:	29.0 Watt (PoE off) and 238.7 Watt (PoE on)
	DGS-1510-28X:	22.3 Watt
	DGS-1510-28XMP:	38.4 Watt (PoE off) and 436.3 Watt (PoE on)
	DGS-1510-52:	38.4 Watt
	DGS-1510-52X (HW: A1):	44.22 Watt
	DGS-1510-52X (HW: A2):	48 Watt
	DGS-1510-52XMP (HW: A1):	53.9 Watt (PoE off) and 468.6 Watt (PoE on)
	DGS-1510-52XMP (HW: A2):	58.8 Watt (PoE off) and 486.9 Watt (PoE on)
Standby Power Consumption	DGS-1510-20:	11.4 Watt (100V) and 12.2 Watt (240V)
	DGS-1510-28:	14.6 Watt (100V) and 15.2 Watt (240V)
	DGS-1510-28P:	22.7 Watt (100V) and 21.0 Watt (240V)
	DGS-1510-28X:	14.6 Watt (100V) and 15.2 Watt (240V)
	DGS-1510-28XMP:	24.5 Watt (100V) and 28.2 Watt (240V)
	DGS-1510-52:	27.3 Watt (100V) and 27.6 Watt (240V)
	DGS-1510-52X (HW: A1):	28.6 Watt (100V) and 28.9 Watt (240V)
	DGS-1510-52X (HW: A2):	30.4 Watt (100V) and 30.3 Watt (240V)
	DGS-1510-52XMP (HW: A1):	38.0 Watt (100V) and 38.6 Watt (240V)
	DGS-1510-52XMP (HW: A2):	39.8 Watt (100V) and 40.1 Watt (240V)
Temperature	Operating:	-5 °C ~ 50 °C (23 °F ~ 122 °F)
	Storage:	-20 °C ~ 70 °C (-4 °F ~ 158 °F)

Feature	Detailed Description	
Humidity	Operating:	0 % ~ 95 % (non-condensing)
	Storage:	0 % ~ 95 % (non-condensing)
Dimensions	DGS-1510-20:	280 mm (W) 180 mm (D) 44 mm (H)
	DGS-1510-28:	441 mm (W) 210 mm (D) 44 mm (H)
	DGS-1510-28P:	441 mm (W) 210 mm (D) 44 mm (H)
	DGS-1510-28X:	441 mm (W) 210mm (D) 44mm (H)
	DGS-1510-28XMP:	441 mm (W) 310 mm (D) 44 mm (H)
	DGS-1510-52:	441 mm (W) 210 mm (D) 44 mm (H)
	DGS-1510-52X:	441 mm (W) 210 mm (D) 44 mm (H)
	DGS-1510-52XMP:	441 mm (W) 309 mm (D) 44 mm (H)
Weight	DGS-1510-20:	1.235 kg
	DGS-1510-28:	2.000 kg
	DGS-1510-28P:	2.536 kg
	DGS-1510-28X:	2.000 kg
	DGS-1510-28XMP:	4.246 kg
	DGS-1510-52:	2.400 kg
	DGS-1510-52X (HW: A1):	2.397 kg
	DGS-1510-52X (HW: A2):	3.1 kg
	DGS-1510-52XMP:	5.41 kg
MTBF	DGS-1510-20:	882152.3682 hours
	DGS-1510-28:	516593.2513 hours
	DGS-1510-28P:	243090.6950 hours
	DGS-1510-28X:	516593.2513 hours
	DGS-1510-28XMP:	274796.3861 hours
	DGS-1510-52:	433434.1606 hours
	DGS-1510-52X (HW: A1):	416789.0227 hours
	DGS-1510-52X (HW: A2):	423302.2461 hours
	DGS-1510-52XMP (HW: A1):	163605.8310 hours
	DGS-1510-52XMP (HW: A2):	163589.6857 hours
	EMI/EMC; Test Reports	CE Class A, FCC Class A, ISED Class A, VCCI Class A, RCM Class A, BSMI, CQC
Safety Certifications and Test Reports	UL/CSA 60950-1, IEC 60950-1:2001, BSMI.	

Performance

Feature	Detailed Description	
Transmission Method	Store-and-forward.	
Packet Buffer	DGS-1510-20/28/28P/28X/28XMP: 1.5 MB per device. DGS-1510-52/52X/52XMP: 3 MB per device.	
Wire Speed	Wire speed operation on all FE/GE/10GE ports.	
Switching Capacity	DGS-1510-20:	76 Gbps
	DGS-1510-28:	92 Gbps
	DGS-1510-28P:	92 Gbps
	DGS-1510-28X:	128 Gbps
	DGS-1510-28XMP:	128 Gbps
	DGS-1510-52:	140 Gbps
	DGS-1510-52X:	176 Gbps
	DGS-1510-52XMP:	176 Gbps
Packet Forwarding Rate (64 Byte System)	DGS-1510-20:	56.54 Mpps (Mega Packets Per Second)
	DGS-1510-28:	68.45 Mpps (Mega Packets Per Second)
	DGS-1510-28P:	68.45 Mpps (Mega Packets Per Second)
	DGS-1510-28X:	95.24 Mpps (Mega Packets Per Second)
	DGS-1510-28XMP:	95.24 Mpps (Mega Packets Per Second)
	DGS-1510-52:	104.16 Mpps (Mega Packets Per Second)
	DGS-1510-52X:	130.95 Mpps (Mega Packets Per Second)
	DGS-1510-52XMP:	130.95 Mpps (Mega Packets Per Second)
Priority Queues	8 Priority Queues per port.	
MAC Address Table	Supports the following: <ul style="list-style-type: none"> • Up to 16,384 MAC addresses • Up to 512 static MAC addresses 	
Physical Stacking	Supports the following: <ul style="list-style-type: none"> • Two dedicated stacking ports on the front panel of the Switch. The last two SFP+ ports are used for physical stacking. • Provides bi-directional redundant stacking topology • Linear and Ring stacking topologies • Up to 40 Gbps full-duplex bandwidth • Up to 6 units per stack • Backup master • Inter-stacking trunking and mirroring 	
Virtual Stacking / Clustering	Supports the following: <ul style="list-style-type: none"> • D-Link Single IP Management version 1.6 • Manage up to 32 devices in a virtual stack with a single IP address 	

LED Indicators

Per Switch

LED Indicator	Color	Status	Description
Power	Green	Solid light	Power on
		Blinking	Performing System Self-test
		Light off	Power off
Console	Green	Solid light	Console on
		Light off	Console off
Fan	Green	Solid light	Diagnostics passed and in normal operation
	Red	Solid light	Fan failure
Stack ID	Green	Capable 1-6, H, h, E, G	<p>One of the following will be displayed:</p> <ul style="list-style-type: none"> • 1-6: Indicates the Unit ID of the Switch • H: Indicates the Switch is the Primary Master • h: Indicates the Switch is the Backup Master • E: As error occurred during System Self-test • G: The Safeguard Engine is entering the exhausted mode <p>The Stack ID (Unit ID) is assigned either by the user (static mode) or by the system (automatic mode). When the Switch is assigned as the primary or backup master in the stack, the Stack ID will toggle between the letters 'H' or 'h' and the Unit ID.</p>
Port LED Mode Indicator (DGS-1510-28P, DGS-1510-28XMP, and DGS-1510-52XMP Only)	An LED Mode Select Button to switch two modes in turn for all 10/100/1000Mbps ports: <ul style="list-style-type: none"> • Link/Act/Speed Mode • PoE Mode 		
	Green	Solid light	An LED Mode Select Button to switch Link/Act/Speed Mode
		Solid light	An LED Mode Select Button to switch PoE Mode

Per RJ45 Port

LED Indicator	Color	Status	Description
Link/Act/Speed Mode	Green	Solid light	When there is a secure connection (or link) to 1000Mbps Ethernet device at any of the ports
		Blinking	When there is reception or transmission of data occurring at 1000Mbps
	Orange	Solid light	When there is a secure connection (or link) to 10/100Mbps Ethernet device at any of the ports
		Blinking	When there is reception or transmission of data occurring at 10/100Mbps
	Off	Light off	No link
PoE Mode	Green	Solid light	Power feeding
	Orange	Solid light	Error condition

LED Indicator	Color	Status	Description
(DGS-1510-28P, DGS-1510-28XMP, and DGS-1510-52XMP Only)	Off	Light off	No power feeding

Per SFP Port

LED Indicator	Color	Status	Description
Link/Act	Green	Solid light	When there is a secure connection (or link) to 1000Mbps Ethernet device at any of the ports
		Blinking	When there is reception or transmission of data occurring at 1000Mbps

Per SFP+ Port

LED Indicator	Color	Status	Description
Link/Act	Green	Solid light	When there is a secure connection (or link) to 10G bps Ethernet device at any of the ports
		Blinking	When there is reception or transmission (i.e. Activity--Act) of data occurring at a 10G bps port
	Orange	Solid light	When there is a secure connection (or link) to 1000Mbps Ethernet device at any of the ports
		Blinking	When there is reception or transmission (i.e. Activity--Act) of data occurring at a 1000Mbps port
	Off	Light off	Link down

Port Functions

Feature	Detailed Description
Console Port	RJ-45 interface for Out-Of-Band (OOB) CLI configuration
Copper Ports	Compliant with the following standards: <ul style="list-style-type: none"> IEEE 802.3 compliance IEEE 802.3u compliance IEEE 802.3ab compliance IEEE 802.3az compliance (100/1000Mbps)
	Supports the following full-duplex operations: <ul style="list-style-type: none"> IEEE 802.3x Flow Control support for Full-Duplex mode IEEE 802.3af compliance (DGS-1510-28P, DGS-1510-28XMP, and DGS-1510-52XMP Only) IEEE 802.3at compliance (DGS-1510-28P, DGS-1510-28XMP, and DGS-1510-52XMP Only)
SFP Ports	Compliant with the following standards: <ul style="list-style-type: none"> IEEE 802.3z compliance
	Supports to following SFP transceivers:

Feature	Detailed Description
	<ul style="list-style-type: none"> • DEM-302S-LX (1000BASE-LX, Single-mode, 2 km) • DEM-310GT (1000BASE-LX, Single-mode, 10 km) • DEM-311GT (1000BASE-SX, Multi -mode, 550 m) • DEM-312GT2 (1000BASE-SX, Multi-mode, 2 km) • DEM-314GT (1000BASE-LHX, Single-mode, 50 km) • DEM-315GT (1000BASE-ZX, Single-mode, 80 km) • DGS-712 (1000BASE-TX) <p>Supports to following WDM transceivers:</p> <ul style="list-style-type: none"> • DEM-302S-BXD/BCU (1000BASE-BX, Single-mode, 2 km) • DEM-330T/R (1000BASE-BX, Single-Mode, 10 km) • DEM-331T/R (1000BASE-BX, Single-Mode, 40 km)
SFP+ Ports	<p>Compliant with the following standards:</p> <ul style="list-style-type: none"> • IEEE 802.3ae compliance • IEEE 802.3z compliance <p>Supports to following SFP/WDM transceivers:</p> <ul style="list-style-type: none"> • All supported SFP/WDM transceivers will work in SFP+ ports <p>Supports to following SFP+ transceivers:</p> <ul style="list-style-type: none"> • DEM-431XT-DD (10GBASE-SR SFP+ Transceiver, 80 m: OM1 & OM2 MMF 300 m: OM3 MMF) • DEM-431XT (10GBASE-SR SFP+ Transceiver (w/o DDM), 80 m: OM1 & OM2 MMF 300 m: OM3 MMF) • DEM-432XT-DD (10GBASE-LR SFP+ Transceiver, 10 km) • DEM-432XT (10GBASE-LR SFP+ Transceiver (w/o DDM), 10 km) • DEM-433XT-DD (10GBASE-ER SFP+ Transceiver, 40 km) • DEM-433XT (10GBASE-ER SFP+ Transceiver (w/o DDM), 40 km) • DEM-434XT (10GBASE-ZR SFP+ Transceiver (w/o DDM), 80 km) • DEM-436XT-BXU (10GBASE-LR BiDi SFP+ Transceiver (w/o DDM), 20 km, TX: 1270 nm, RX: 1330 nm) • DEM-436XT-BXD (10GBASE-LR BiDi SFP+ Transceiver (w/o DDM), 20 km, TX: 1330 nm, RX: 1270 nm) <p>Supports to following SFP+ Direct Attached Cables (DAC):</p> <ul style="list-style-type: none"> • DEM-CB100S-10-GbE (SFP+, 1 m), for stacking • DEM-CB300S-10-GbE (SFP+, 3 m), for stacking • DEM-CB700S-10-GbE (SFP+, 7 m), for stacking
PoE Ports (DGS-1510-28P, DGS-1510-28XMP, and DGS-1510-52XMP Only)	<p>Supports the following:</p> <ul style="list-style-type: none"> • IEEE 802.3af PoE and IEEE 802.3at PoE+ compliance • Power (ports 1 to 24) to PD devices up to 15.4 Watt per port (802.3af) or 30 Watt per port (802.3at) and more sufficiently is able to provide power to PD devices • The auto-discovery feature automatically recognizes the connection of the PD device and immediately provides power • Automatically disable ports if the port current is over 600mA while. Other ports will remain active • Active circuit protection automatically disables the port if there is a short while other ports remain active • For 802.3af/at capable devices it will provide the power for the following classifications below:

Feature	Detailed Description		
	Class	Usage	Max Power used by PD
	0	Default	0.44 Watt to 12.95 Watt
	1	Optional	0.44 Watt to 3.84 Watt
	2	Optional	3.84 Watt to 6.49 Watt
	3	Optional	6.49 Watt to 12.95 Watt
	4	Optional (802.3at Only)	12.95 Watt to 25.5 Watt
	<ul style="list-style-type: none"> • Follow the PSE pin out standard. For an alternative solution, send the power over pins 1, 2, 3, and 6 of 8 wires. Use Category 3, 6A UTP cable for 802.3af or Category 5e, 6A UTP cable for 802.3at • The PoE switch works with all D-Link 802.3af and 802.3at capable devices and with all non-802.3af and non-802.3at capable D-Link Access Points, IP Cameras and IP Phones • The total PoE power budget of the: <ul style="list-style-type: none"> ○ DGS-1510-28P is 193 Watts ○ DGS-1510-28XMP is 370 Watts ○ DGS-1510-52XMP is 370 Watts or 740 Watts with DPS-700 		

Appendix B – Cables and Connectors

Ethernet Cable

When connecting the Switch to another switch, a bridge or hub, a normal cable is necessary. Please review these products for matching cable pin assignment. The following diagrams and tables show the standard RJ-45 connector and their pin assignments.

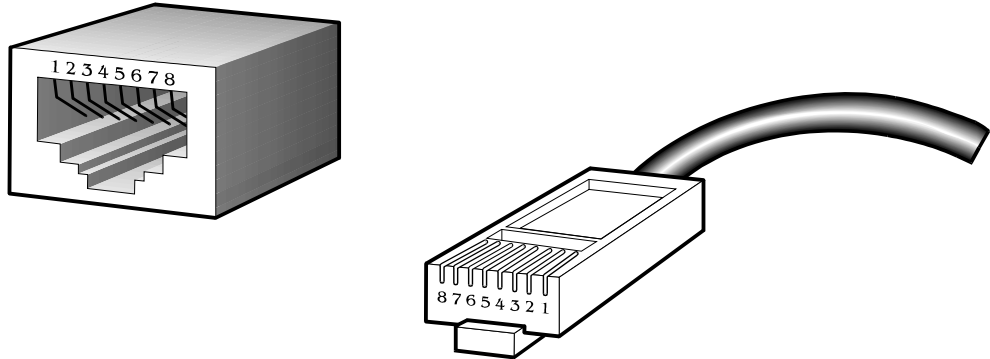


Figure B-1 Standard RJ-45 port and connector

RJ-45 PIN Assignments:

Pin	MDI-X Port	MDI-II Port
1	RD+ (receive)	TD+ (transmit)
2	RD- (receive)	TD- (transmit)
3	TD+ (transmit)	RD+ (receive)
4	1000BASE-T	1000BASE-T
5	1000BASE-T	1000BASE-T
6	TD- (transmit)	RD- (receive)
7	1000BASE-T	1000BASE-T
8	1000BASE-T	1000BASE-T

Console Cable

When connecting the Switch to a PC, a Console cable is necessary. The following diagrams and tables show the standard Console-to-DJ-45 receptacle/connector and their pin assignments.

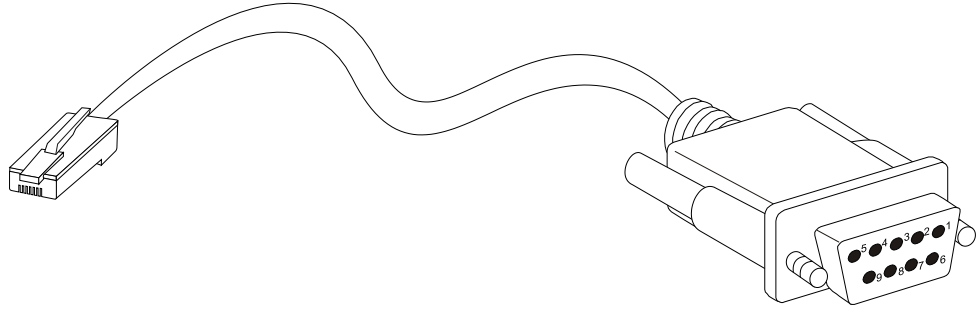


Figure B-2 Console-to-RJ-45 Cable

Console-to-RJ-45 PIN Assignments:

Pin	Console (DB9/RS232)	RJ-45
1	Not Used	Not Used
2	RXD	Not Used
3	TXD	TXD
4	Not Used	GND
5	GND (shared)	GND
6	Not Used	RXD
7	Not Used	Not Used
8	Not Used	Not Used

Redundant Power Supply (RPS) Cable

When connecting the Switch to a Redundant Power Supply, an RPS cable is necessary. Please review these products for matching cable pin assignment. The following diagrams and tables show the standard RPS receptacle/connector and their pin assignments.

22-pin DC power cable

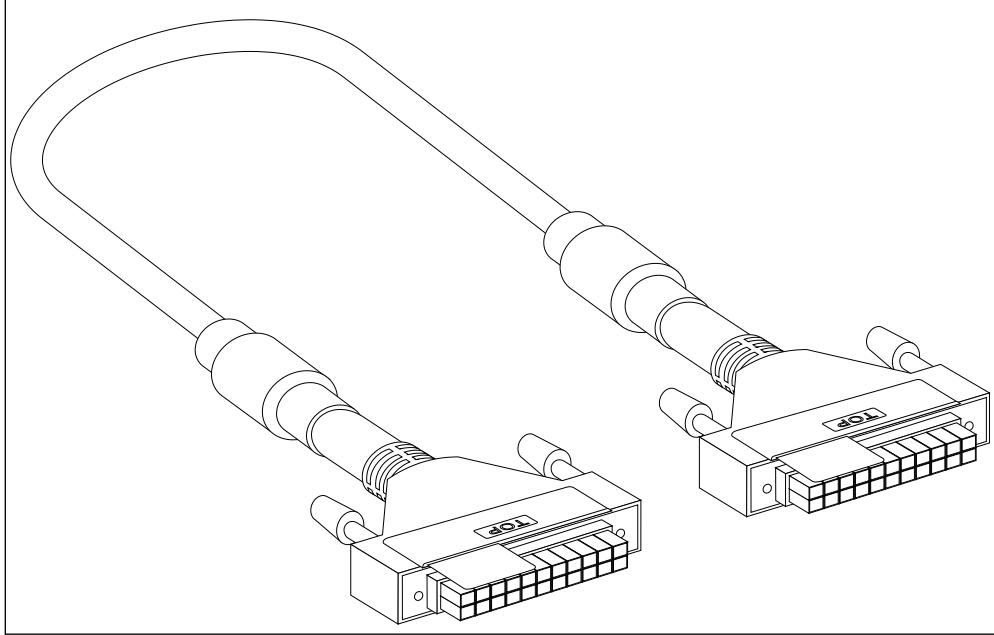


Figure B-2 Redundant Power Supply (RPS) 22-pin DC Power Cable

RPS 22-pin DC Power Cable Pin Assignments		
Pin	Device	DPS-700
1	-54Vrtn	-54Vrtn
2	-54V	-54V
3	+12V	+12V
4	+12V	+12V
5	+12V	+12V
6	+12V	+12V
7	NC/GND	GND
8	+12Ven	+12Ven
9	LS-54V	LS-54V
10	-54V	-54V
11	-54Vrtn	-54Vrtn
12	GND	NC/GND
13	GND	GND
14	RPS Present	Status_2
15	Status_1	RPS PG
16	Status_2	RPS Present
17	RPS PG	Status_1

18	GND	GND
19	+12VRTNsen	+12VRTNsen
20	LS+12V	LS+12V
21	-54Vsen	-54Vsen
22	-54VRTNsen	-54VRTNsen

Appendix C – ERPS Information

Only hardware-based ERPS (external PHY) supports the fast link drop interrupt feature with a recovery time of 50ms.

Model Name	ERPS	Port 1 to 20
DGS-1510-20	Hardware-based	
	Software-based	V

Model Name	ERPS	Port 1 to 8	Port 9 to 28
DGS-1510-28 DGS-1510-28P	Hardware-based	V	
DGS-1510-28X DGS-1510-28XMP	Software-based		V

Model Name	ERPS	Port 1 to 8	Port 9 to 24	Port 25 to 32	Port 33 to 52
DGS-1510-52	Hardware-based	V		V	
	Software-based		V		V

Model Name	ERPS	Port 1 to 8	Port 9 to 24	Port 25 to 32	Port 33 to 48	Port 49 and 50	Port 51 and 52
DGS-1510-52X (HW: A1)	Hardware-based	V		V		V	
	Software-based		V		V		V

Model Name	ERPS	Port 1 to 16	Port 17 to 24	Port 25 to 40	Port 41 to 48	Port 49 to 52
DGS-1510-52X (HW: A2) DGS-1510-52XMP	Hardware-based		V		V	
	Software-based	V		V		V

Safety/Sécurité

Safety Instructions
Consignes de sécurité
General Precautions for Rack-Mountable Products
Protecting Against Electrostatic Discharge

Safety Instructions

Please pay careful attention to the following safety guidelines to ensure your own personal safety and to help protect your system from potential damage.

Safety Cautions

To greatly reduce the risk of physical injury, electrical shock, fire, and damage to equipment, observe the following precautions.

Observe and follow service markings.

- Do not attempt to service any product, except when it is explained in the system's documentation.
- Opening or removing covers, marked with a high voltage sign, may expose the user to electrical shock.
- Only a trained service technician should service components inside these compartments.

If any of the following conditions occur, unplug the product from the electrical outlet and replace the part or contact your trained service provider:

- Damage to the power cable, extension cable, or plug.
- An object has fallen into the product.
- The product has been exposed to water.
- The product has been dropped or damaged.
- The product does not operate correctly when the operating instructions are correctly followed.

General safety cautions:

- **Electrical Hazard:** Only qualified personnel should perform installation procedures.
- Before servicing, disconnect all power cords to remove power from the device.
- Keep the system away from radiators and heat sources. Also, do not block cooling vents.
- Do not spill food or liquids on system components, and never operate the product in a wet environment. If the system gets wet, contact your trained service provider.
- Do not push any objects into the openings of the system. Doing so can cause fire or electric shock by shorting out interior components.
- Only use this product with approved equipment.
- Allow the product to cool before removing the cover or touching internal components.
- Operate the product only from the type of external power source indicated on the electrical ratings label. If unsure of the type of power source required, consult your service provider or local power company.
- Be sure that attached devices are electrically rated to operate with the power available in your location.
- Use only approved power cable(s). If you have not been provided with a power cable for your system or for any AC-powered option intended for your system, purchase a power cable that is approved for use in your country. The power cable must be rated for the product and for the

voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cable should be greater than the ratings marked on the product.

- To help prevent electric shock, plug the system and peripheral power cables into properly grounded electrical outlets. These cables are equipped with three-prong plugs to help ensure proper grounding. Do not use adapter plugs or remove the grounding prong from a cable. If using an extension cable is necessary, use a 3-wire cable with properly grounded plugs.
- Observe the extension cable and power strip ratings. Make sure that the total ampere rating of all products plugged into the extension cable or power strip does not exceed 80 percent of the ampere ratings limit for the extension cable or power strip.
- To help protect the system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- Position system cables and power cables carefully. Route cables so that they cannot be stepped on or tripped over. Be sure that nothing rests on any cables.
- Do not modify power cables or plugs. Consult a licensed electrician or your power company for site modifications. Always follow your local or national wiring rules.

When connecting or disconnecting power to and from hot-pluggable power supplies, observe the following guidelines:

- Install the power supply before connecting the power cable to the power supply.
- Unplug the power cable before removing the power supply.
- If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies.
- Move products with care and ensure that all casters and stabilizers are firmly connected to the system. Avoid sudden stops and uneven surfaces.

To help avoid damage to the system, be sure that the voltage selection switch, on the power supply, is set to match the power available at the Switch's location:

- 115V/60Hz is used mostly in North and South America as well as Far Eastern countries like as South Korea and Taiwan
- 100V/50Hz is used mostly in Eastern Japan and 100V/60Hz in Western Japan
- 230V/50Hz is used mostly in Europe, the Middle East, Africa and the Far East

Consignes de sécurité

Veillez prêter une attention particulière aux consignes de sécurité suivantes pour assurer votre sécurité personnelle et protéger votre système des dommages potentiels.

Précautions de sécurité

Pour réduire considérablement les risques de blessure physique, de choc électrique, d'incendie et de détérioration du matériel, observez les précautions suivantes.

Observez et respectez les marquages relatifs à l'entretien et/ou aux réparations.

- N'essayez pas de réparer un produit, sauf si cela est expliqué dans la documentation du système.
- L'ouverture ou le retrait des capots, signalés par un symbole de haute tension, peut exposer l'utilisateur à un choc électrique.
- Seul un technicien de maintenance qualifié est habilité à réparer les composants à l'intérieur de ces compartiments.

Si l'un des cas suivants se produit, débranchez l'appareil du secteur et remplacez la pièce concernée ou contactez votre prestataire de services agréé.

- Endommagement du câble d'alimentation, du câble de rallonge ou de la fiche.
- Un objet est tombé dans le produit.
- Le produit a été exposé à l'eau.
- Le produit est tombé ou a été endommagé.
- Le produit ne fonctionne pas correctement lorsque les instructions d'utilisation sont correctement suivies.

Précautions générales de sécurité:

- Danger électrique: Seul le personnel qualifié doit effectuer les procédures d'installation.
- Avant de procéder à l'entretien, débranchez tous les cordons d'alimentation pour mettre le périphérique hors tension.
- Eloignez le système des radiateurs et des sources de chaleur. Par ailleurs, n'obtenez pas les fentes d'aération.
- Ne versez pas de liquide sur les composants du système et n'introduisez pas de nourriture à l'intérieur. Ne faites jamais fonctionner l'appareil dans un environnement humide. Si le système est mouillé, contactez votre prestataire de services qualifié.
- N'insérez aucun objet dans les fentes de l'appareil. Vous risqueriez de provoquer un incendie ou un choc électrique en court-circuitant les composants internes.
- Utilisez ce produit uniquement avec un équipement approuvé.
- Laissez l'appareil refroidir avant de déposer le capot ou de toucher les composants internes.
- Faites fonctionner le produit uniquement avec la source d'alimentation indiquée sur l'étiquette signalétique où figurent les caractéristiques électriques nominales. Si vous ne savez pas avec certitude quel type de source d'alimentation est requis, consultez votre prestataire de services ou votre compagnie d'électricité.
- Assurez-vous que les caractéristiques nominales des appareils branchés correspondant à la tension du réseau électrique.
- Utilisez uniquement des câbles d'alimentation homologués. Si un câble d'alimentation n'est pas fourni pour le système ou pour un composant/accessoire alimenté par CA destiné au système, procurez-vous un câble d'alimentation homologué pour une utilisation dans votre pays. Le câble d'alimentation doit être adapté à l'appareil et ses caractéristiques nominales doivent correspondre à celles figurant sur l'étiquette du produit. La tension et le courant nominaux du câble doivent être supérieurs aux valeurs nominales indiquées sur l'appareil.
- Pour éviter tout risque de choc électrique, branchez les câbles d'alimentation du système et des périphériques à des prises électriques correctement mises à la masse. Ces câbles sont équipés de fiches à trois broches pour garantir une mise à la masse appropriée. N'utilisez pas d'adaptateur de prise, et n'éliminez pas la broche de mise à la masse du câble. Si un câble de rallonge est nécessaire, utilisez un câble à 3 fils avec des fiches correctement mises à la terre.
- Respectez les caractéristiques nominales de la rallonge ou du bloc multiprise. Assurez-vous que l'intensité nominale totale de tous les produits branchés à la rallonge ou au bloc multiprise ne dépasse pas 80 % de l'intensité nominale limite de la rallonge ou du bloc multiprise.
- Pour protéger le système contre les pics et les chutes de tension transitoires et soudains, utilisez un parasurtenseur, un filtre de secteur ou une alimentation sans interruption (ASI).
- Positionnez les câbles système et les câbles d'alimentation avec soin. Acheminez les câbles de manière à ce qu'ils ne puissent pas être piétinés ou trébuchés. Veillez à ce que rien ne repose sur les câbles.
- Ne modifiez pas les câbles ou les fiches d'alimentation. Contactez un électricien qualifié ou la compagnie d'électricité si des modifications sur site sont nécessaires. Respectez toujours la réglementation locale ou nationale en matière de câblage.

Lors de la connexion ou de la déconnexion de l'alimentation vers et depuis des blocs d'alimentation enfichables à chaud, respectez les consignes suivantes:

- Installez l'alimentation avant d'y brancher le câble d'alimentation.
- Débranchez le câble d'alimentation avant de couper l'alimentation.

- Si le système possède plusieurs sources d'alimentation, mettez-le hors tension en débranchant tous les câbles d'alimentation des prises.
- Déplacez les appareils avec précaution et assurez-vous que les roulettes et/ou que les pieds stabilisateurs sont bien fixés au système. Évitez les arrêts brusques et les surfaces inégales.

Pour éviter d'endommager le système, assurez-vous que le commutateur de sélection de tension de l'alimentation est réglé sur l'alimentation disponible à l'emplacement du commutateur:

- 115 V/60 Hz est principalement utilisé en Amérique du Nord et du Sud, ainsi que dans des pays d'Extrême-Orient tels que la Corée du Sud et Taïwan.
- 100 V/50 Hz est utilisé principalement dans l'est du Japon et 100 V/ 60 Hz dans l'ouest du Japon.
- 230 V/50 Hz est principalement utilisé en Europe, au Moyen-Orient, en Afrique et en Extrême-Orient.

General Precautions for Rack-Mountable Products

Please pay careful attention to the following precautions concerning rack stability and safety. Systems are considered to be components in a rack. Thus, a component refers to any system, as well as to various peripherals or supporting hardware:



CAUTION: Installing systems in a rack without the front and side stabilizers installed could cause the rack to tip over, potentially resulting in bodily injury under certain circumstances. Therefore, always install the stabilizers before installing components in the rack. After installing system/components in a rack, never pull more than one component out of the rack on its slide assemblies at one time. The weight of more than one extended component could cause the rack to tip over and may result in serious injury.



ATTENTION : Le montage de systèmes sur un rack dépourvu de pieds stabilisateurs avant et latéraux peut faire basculer le rack, pouvant causer des dommages corporels dans certains cas. Par conséquent, installez toujours les pieds stabilisateurs avant de monter des composants sur le rack. Après l'installation d'un système ou de composants dans un rack, ne sortez jamais plus d'un composant à la fois hors du rack sur ses glissières. Le poids de plusieurs composants sur les glissières en extension peut faire basculer le rack, pouvant causer de graves dommages corporels.

- Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- Always load the rack from the bottom up, and load the heaviest item in the rack first.
- Make sure that the rack is level and stable before extending a component from the rack.
- Use caution when pressing the component rail release latches and sliding a component into or out of a rack; the slide rails can pinch your fingers.
- After a component is inserted into the rack, carefully extend the rail into a locking position, and then slide the component into the rack.
- Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- Ensure that proper airflow is provided to components in the rack.
- Do not step on or stand on any component when servicing other components in a rack.



CAUTION: Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if uncertain that suitable grounding is available.



ATTENTION : Ne neutralisez jamais le conducteur de masse et ne faites jamais fonctionner le matériel en l'absence de conducteur de masse dûment installé. Contactez l'organisme de contrôle en électricité approprié ou un électricien qualifié si vous n'êtes pas sûr qu'un système de mise à la masse adéquat soit disponible.



CAUTION: The system chassis must be positively grounded to the rack cabinet frame. Do not attempt to connect power to the system until grounding cables are connected. Completed power and safety ground wiring must be inspected by a qualified electrical inspector. An energy hazard will exist if the safety ground cable is omitted or disconnected.



ATTENTION : La carcasse du système doit être positivement reliée à la masse du cadre du rack. N'essayez pas de mettre le système sous tension si les câbles de mise à la masse ne sont pas raccordés. Le câblage de l'alimentation et de la mise à la masse de sécurité doit être inspecté par un inspecteur qualifié en électricité. Un risque électrique existe si le câble de mise à la masse de sécurité est omis ou débranché.

Protecting Against Electrostatic Discharge

Static electricity can harm delicate components inside the system. To prevent static damage, discharge static electricity from your body before touching any of the electronic components, such as the microprocessor. This can be done by periodically touching an unpainted metal surface on the chassis.

The following steps can also be taken prevent damage from electrostatic discharge (ESD):

- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the antistatic packing material until ready to install the component in the system. Just before unwrapping the antistatic packaging, be sure to discharge static electricity from your body.
- When transporting a sensitive component, first place it in an antistatic container or packaging.
- Handle all sensitive components in a static-safe area. If possible, use antistatic floor pads, workbench pads and an antistatic grounding strap.